

Air Buds 6



Please refer to this manual before using the product

TABLE OF CONTENTS

• Package Contents and Features	01
• Specifications	02
• Power and Pairing	03
• Reset and Sizing	04
• Charging	05
• Controls	06
• Warranty	08
• Safety	09

PACKAGE CONTENTS



Noise Air Buds 6 x 1



Charging Cable x 1



Charging Case x 1



S X 1

L X 1

Ear-tips

User manual x 1

Thank you card x 1

SPECIFICATIONS

- Earbud weight: 4.1g (each)
- Speaker driver size: 12.4mm
- Supported profiles: A2DP/AVRCP/HFP/SPP/AVDTP
- Bluetooth version: 5.3
- Earbud charging time: Up to 60 minutes
- Working voltage: 5V
- Standby time: Up to 500 hours
- Playtime without ANC: Up to 7 hours at 60% volume
- Playtime with ANC: Up to 5.5 hours at 60% volume
- Bluetooth range: 10m
- Waterproof rating: IPX5
- Working temperature: 0-45

CHARGING CASE SPECIFICATIONS

- Charging case weight: 39.9g
- Charging port: Type-C
- The number of earbud charges from the case: 6.5 times
- Case charging time: Up to 90 minutes
- Total playtime with charging case (without ANC): Up to 50 hours
- Total playtime with charging case (with ANC): Up to 40 hours

POWER ON

The earbuds will automatically turn on when you open the charging case.

POWER OFF

The earbuds will automatically turn off once placed inside the charging case with the lid closed.

PHONE PAIRING

- Open the charging case, long press the charging case button for 5 seconds.
- Select 'Add Device' and select Noise Air Buds 6 from the list of devices.
- Your Noise Air Buds 6 are now paired with your device and ready to use.

Note: Your Noise Air Buds 6 will automatically connect to the last paired device as soon as you take them out of the charging case.



SETTING UP THE NOISE BUDSLINK APP

Before pairing with the Noise BudsLink App, make sure that your Noise Air Buds 6 is connected to your smartphone.

- On your smartphone, download the Noise BudsLink App from the Play Store or App Store and install it.
- Slide to agree to the terms and conditions.
- Allow requested permission in the app.
- Turn on the Bluetooth and location on your mobile device.

Note: Ensure that your smartphone is running on Android 9.0+ or iOS 11+ and is connected to mobile data or a Wi-Fi network.

PAIRING WITH NOISE BUDSLINK APP

- Connect your Noise Air Buds 6 with your smartphone by following the steps in the PHONE PAIRING section.
- Install and open the Noise BudsLink App. Go to the Bluetooth device search page on the app.
- “Noise Air Buds 6” will appear on the screen. Click on the Connect option.
- Once it is connected, the main dashboard window will appear.



Note- It might take up to 15 seconds to establish connection between the app and the Air Buds 6.

RESET

- Make sure your earbuds are fully charged.
- Delete/remove Noise Air Buds 6 from the list of paired devices in the Bluetooth menu.
- Insert both earbuds into the charging case, keep the lid open and long press the charging case button for 10 seconds.
- The white LED on the charging case will start blinking to indicate that the earbuds have been reset.

CHOOSING YOUR EAR-TIP SIZE

Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear tips.

Follow the images and chart to learn how to wear earbuds in the right manner.



CHARGING

Earbuds

Place both earbuds inside the case to charge them.

Indication (on case)

- White LED flashing for 2 seconds = Charging



Charging

Charging Case

Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.

Indication

- White LED flashing = Charging



Charging

- Solid white LED = Fully charged



Fully Charged

PRE-DEFINED CONTROLS



Play/Pause

Tap either earbud twice



Tap twice



Tap twice



Previous Song

Tap the left earbud thrice



Tap thrice



Next Song

Tap the right earbud thrice



Tap thrice



Volume Up

Tap the right earbud once



Tap once



Volume Down

Tap the left earbud once



Tap once



Answer Call

Tap either earbud twice



Tap twice



Tap twice



End Call

Tap either earbud twice



Tap twice



Tap twice



Reject Call

Touch and hold either earbud for 2 seconds



Touch and Hold



Touch and Hold



Voice Assistant

Tap the right earbud four times



Tap four times



Gaming mode

Long press left earbud for 2 seconds



Touch and Hold



ANC Mode

Long press right earbud for 2 seconds



Touch and Hold



Transparency Mode

Touch and hold right earbud for 2 seconds



Touch and Hold



Normal Mode

Touch and hold right earbud for 2 seconds



Touch and Hold

APP FEATURES LIST

- Action Button - Set the actions for each earbud.
- Voice Control - Control your device with voice prompts.
- Smart Calls - Set voice commands to control calls, turn on Side Tones to hear your voice and activate caller announcements.
- Superhearing - Control ANC and Transparency settings.
- Equalizer - Choose from preset modes or customise your own.
- Battery Prediction - Check how much charge is left for calls and media.
- Fast Mute - Quickly mute/unmute during calls by setting an action on either earbud.
- Multipoint - Enable this feature to simultaneously connect to two devices.
- Low Latency Audio - Enable for synchronised audio output.
- Assistant - Explore voice prompts and action buttons for voice assistance.

UPDATING THE NOISE AIR BUDS 6

- In the Noise BudsLink App, you will see a “New Update Available” banner under the product name on the dashboard.
- Tap on the banner and click on “Start Update”.
- Click on “Start” to begin the update. It may take about 5 minutes to update the product.

Disclaimer: Ensure your product is charged >50% before starting the update.

WARRANTY

The warranty covers your Noise product, including accessories, against manufacturing defects (if any) for 1 year from the date of purchase.

 
Things that are not covered in the warranty are listed below:

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not by the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on www.gonoise.com.

REGISTER YOUR WARRANTY

www.gonoise.com/pages/warranty-registration






SCAN ME

CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.in

SAFETY FOR YOU AND YOUR NOISE AIR BUDS 6

Follow these tips to get the best out of your new Noise Air Buds 6:

-  Do not expose the earbuds to liquids, moisture, or humidity as they have electronics and batteries inside.
-  Do not use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.
-  Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.
-  Only charge your earbuds from 5V USB ports such as phone chargers and laptop or PC chargers.
-  Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.
-  Do not throw the earbuds in a fire to dispose of them. The internal battery may explode.
-  Do not try to disassemble your earbuds. There are no user-serviceable parts inside it.
-  Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.
-  Only charge your earbuds from 5V USB ports such as phone chargers and laptop or PC chargers.
-  Never listen to music at high volume or you may permanently damage your hearing.
-  Pay attention to your surroundings and never wear any earphones while riding, driving or walking in traffic.

noise