

boat

ROCKERZ 200

USER MANUAL

(1) Previous Track: Tap the previous track, press and hold the volume "+" button for 3 seconds.

(2) Next Track: Tap the next track, press and hold the volume "-" button for 3 seconds.

(3) Near Device: Either Press Left/Right Press and hold the volume "+" and "-" buttons simultaneously for 5 seconds to enter the previous/next connected device. The red LED will flash for 3 seconds to indicate this.

(4) Dual Pairing: To connect Rockerz 200 to two devices simultaneously, first connect the earbuds to one of the devices. Then, switch both the earbuds and the device off. Thereafter, connect the earbuds to the second device and switch the first device on again. The earbuds will get connected to both devices. If you switch the first device manually when signal indicates dual pairing.

(5) BLEND+ Mode: Tap the MFB twice to switch between low latency BLEND+ Mode & Music Mode. A voice prompt will indicate both the activation and deactivation of BLEND+ Mode.

Music for the Device - (1) Device: BLEND+ mode reduces the latency signal and provides the overall gaming experience.

(6) BLEND+ Switch: (On/Off) Switch (On) will activate the background noise so that you can be heard clearly else an off. You don't have to activate this separately as the mic is integrated with the technology and automatically on/off.

Device prior voice without interruptions no matter where you are - compatible, sports, using games, music, clearly comprehend.

(10) Voice Assistant: Long touch the MFB for 1.5 seconds to activate the voice assistant.

boat

ROCKERZ 200

"Thank you for choosing Boat Rockerz 200. Let this manual be your guiding map as you harness the power of musical flow and of true wireless sound and music. Knowledge of Bluetooth and device connection is essential for the proper use of these connected appliances. Therefore, we strongly recommend that this manual be read thoroughly before use and you refer to it in times of difficulty."

TO CHARGE

Step 1: Charge the earbuds plug one end of the provided USB Type-C cable into the earbuds and connect the other end to a power supply or a power bank.

(1) Low Battery: When in charge of the earbuds, the red LED will flash in a twinkling of an eye every 10 minutes. The red LED will stop to indicate the same.

(2) Charging: Solid red LED indicates that the earbuds are being charged. Please note that the earbuds cannot be turned on until charging.

(3) Fully Charged: Once the earbuds are charged completely, the red LED will turn off.

DUAL PAIRING:

Step 1: BLEND+ Mode: Tap the MFB twice to switch between low latency BLEND+ Mode & Music Mode. A voice prompt will indicate both the activation and deactivation of BLEND+ Mode.

Music for the Device - (1) Device: BLEND+ mode reduces the latency signal and provides the overall gaming experience.

(6) BLEND+ Switch: (On/Off) Switch (On) will activate the background noise so that you can be heard clearly else an off. You don't have to activate this separately as the mic is integrated with the technology and automatically on/off.

Device prior voice without interruptions no matter where you are - compatible, sports, using games, music, clearly comprehend.

(10) Voice Assistant: Long touch the MFB for 1.5 seconds to activate the voice assistant.

PACKAGE CONTENTS

- 1 x Earbuds 200
- 1 x USB Type-C charging cable
- 1 x Pair of silicone earbuds (Small & Large)
- 1 x Manual
- 1 x Warranty Card

PRODUCT OVERVIEW

- Volume/Power Previous Track
- Volume/Next Track
- Multi-function Button (MFB)
- Microphone

SAFETY CAUTIONS

Please don't disassemble the product in any way or remove the product's battery by yourself, as this may lead to fire or electrical shock. Any unauthorized opening of the earbuds should be done only through a certified service provider and not by you.

Please do not use the earbuds with the alcohol or flammable liquids and oils. If cleaning is required, please do not use any oily or volatile liquid. In addition, ensure that the earbuds are kept away from exposure for an extended period.

If you damage the earbuds, that is, MFB or manufacturing issue will make the products warranty null and void.

Don't use earbuds when it is unsafe to be driving them back to safety, especially in vehicles, crossing a street, or during any activity where full awareness of your surroundings is required.

To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are putting on the earbuds. Exposure to high noise levels at or above 85 dB can gradually lead to hearing loss.

TO PAIR WITH BLUETOOTH

Step 1: When switched off, press and hold the MFB for 3 seconds to switch the earbuds on. The earbuds will automatically enter Bluetooth mode and will be ready to pair. The blue LED will flash alternately to indicate this.

Step 2: Open the Bluetooth function on your device and select the Boat Rockerz 200 as the device to be paired.

Step 3: Choose Rockerz 200 from the list. If asked, enter the pairing password: 0000 or 1234567890.

Step 4: Once successfully connected, a voice prompt will sound through the earbuds. The blue LED will remain switched on for 3 seconds to indicate the same.

Note: The device will automatically turn off if no pairing is established within 5 minutes.

SAFETY CAUTIONS

Please don't disassemble the product in any way or remove the product's battery by yourself, as this may lead to fire or electrical shock. Any unauthorized opening of the earbuds should be done only through a certified service provider and not by you.

Please do not use the earbuds with the alcohol or flammable liquids and oils. If cleaning is required, please do not use any oily or volatile liquid. In addition, ensure that the earbuds are kept away from exposure for an extended period.

If you damage the earbuds, that is, MFB or manufacturing issue will make the products warranty null and void.

Don't use earbuds when it is unsafe to be driving them back to safety, especially in vehicles, crossing a street, or during any activity where full awareness of your surroundings is required.

To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are putting on the earbuds. Exposure to high noise levels at or above 85 dB can gradually lead to hearing loss.

FUNCTIONS

(1) Power on: When switched off, press and hold the MFB Multi-function Button for 3 seconds. A voice prompt will indicate the same. Also, the LED will flash for 3 seconds to indicate this.

(2) Power off: In any music player, hold the MFB for 3 seconds. This is followed by a voice prompt and the red LED flashes for 3 seconds to indicate the same.

(3) Play/Pause: Single tap the MFB to play/pause music.

(4) Volume Up: Tap the volume "+" button 5 steps to increase the volume to your desired level. A voice prompt will indicate the same.

(5) Volume Down: Tap the volume "-" button 5 steps to decrease the volume to your desired level. A voice prompt will indicate the same.

(6) Answer/End call: Tap the MFB once to answer an incoming call or end an ongoing call.

(7) Repeat call: Press the MFB twice during an incoming call to repeat it.

(8) Hold: Double tap the MFB to redial the last contacted contact.

CHARGING NORMS & GUIDELINES:

Charging time at 100% and Standard Case: 2.5 hours (at 0.5A, 5V, 2.5W standard input)

Front

Back