

Hungama HiLife BOUNCE 301

Hungama HiLife Bounce 301 Wireless In-Ear Earbuds User Manual

Model: BOUNCE 301 | Brand: Hungama HiLife

INTRODUCTION

This manual provides instructions for the proper use and maintenance of your Hungama HiLife Bounce 301 Wireless In-Ear Earbuds. Please read this manual carefully before using the product to ensure optimal performance and longevity.

PACKAGE CONTENTS

Ensure all items are present in the package:

- Hungama HiLife Bounce 301 Wireless In-Ear Earbuds
- Charging Case
- Ear Cushions (various sizes)
- Protective Case
- User Manual (this document)

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the charging case to a power source using a compatible USB cable. The indicator lights on the case will show the charging status.

Music never stops with up to
40 hrs total music playback



 **40 HRS**

Image: Hungama HiLife Bounce 301 Earbuds in their charging case, illustrating the product design.

A full charge provides up to 40 hours of total music playback with the charging case.



Image: The earbuds in their charging case, highlighting the 40-hour playback battery life.

2. Pairing with a Device

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, laptop, etc.), enable Bluetooth.
3. Search for "Hungama HiLife Bounce 301" in the list of available Bluetooth devices.
4. Select the device name to connect. Once connected, you will hear an audio prompt.

The earbuds feature Bluetooth 5.0 for seamless and stable connectivity.

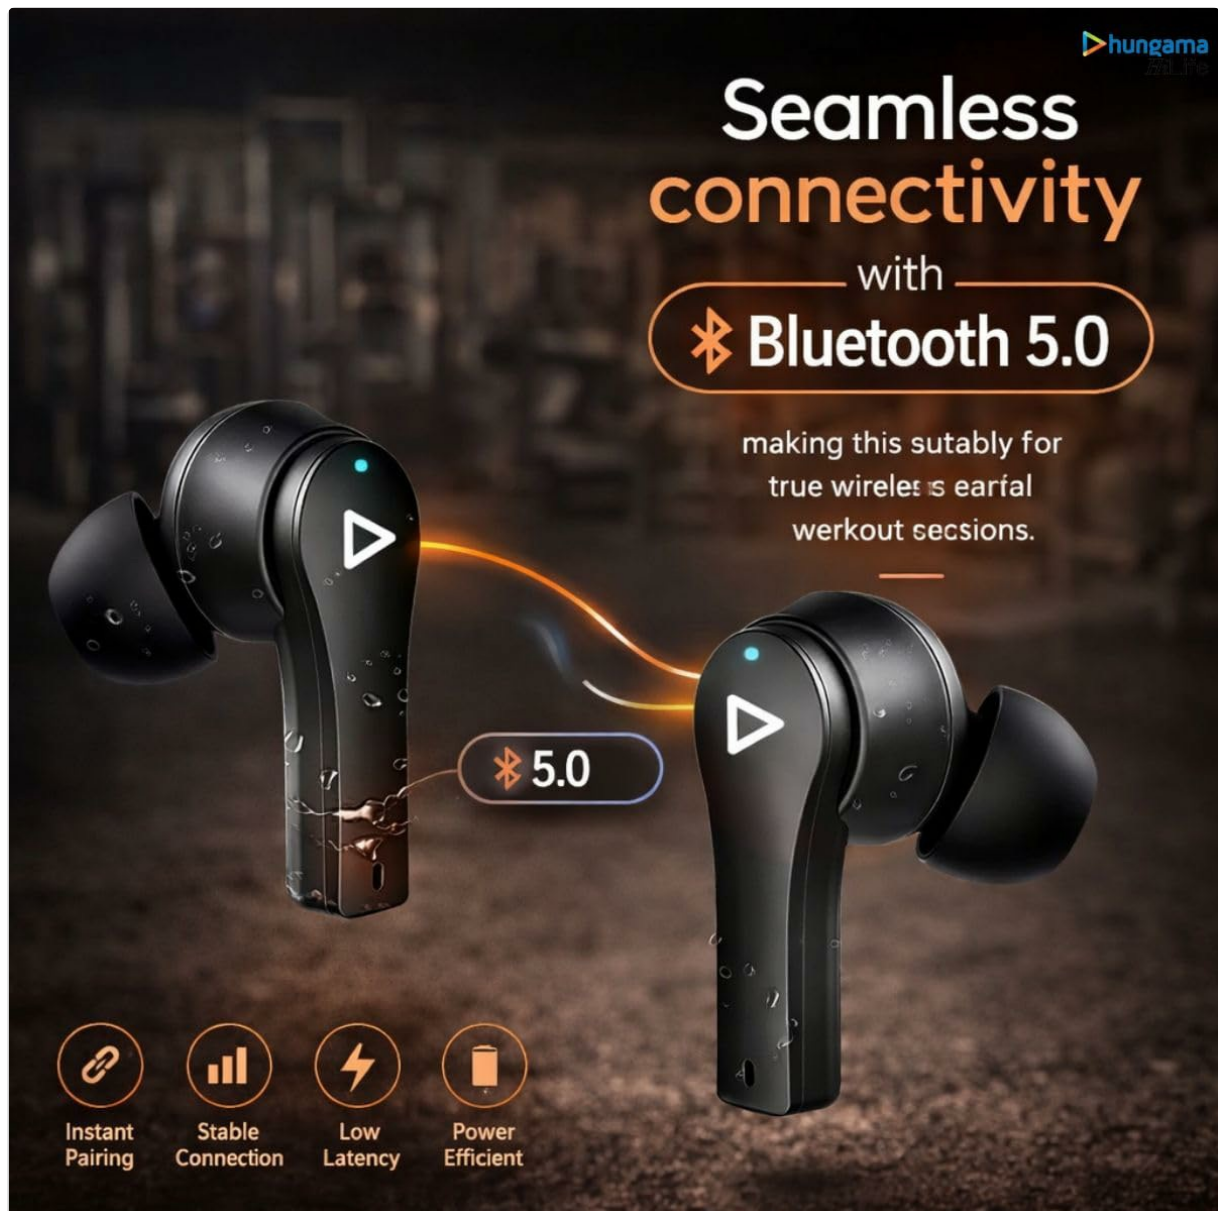


Image: Two earbuds with a graphic indicating Bluetooth 5.0 connectivity, emphasizing instant pairing, stable connection, low latency, and power efficiency.

OPERATING INSTRUCTIONS

Touch Sensor Controls

The Bounce 301 earbuds are equipped with touch sensors for easy control of music playback and calls. Specific touch gestures control various functions:

- **Play/Pause:** Tap once on either earbud.
- **Answer/End Call:** Tap once on either earbud.
- **Next Track:** Double-tap the right earbud.
- **Previous Track:** Double-tap the left earbud.
- **Activate Voice Assistant:** Triple-tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.

Navigate your audio effortlessly

with touch sensor controls



Image: A hand interacting with an earbud, illustrating the touch sensor controls for functions like Play/Pause, Answer Calls, Next Track, and Activate Voice Assistant.



Image: A detailed view of an earbud highlighting the touch sensor area for control.

Audio Quality

The earbuds are designed with Titanium Sound Drivers for clear audio and powerful bass. They also feature Passive Noise Cancellation for an immersive listening experience.



Image: An earbud highlighting the 13mm Titanium Sound Drivers for enhanced audio.



Image: An earbud illustrating the concept of Passive Noise Cancellation.


MAINTENANCE

Cleaning

Regularly clean your earbuds and charging case to ensure optimal performance and hygiene. Use a soft, dry, lint-free cloth. Do not use abrasive cleaners or immerse the earbuds or case in water.

Water Resistance

The Bounce 301 earbuds are rated IPX4 water resistant, meaning they are protected against splashing water from any direction. This makes them suitable for use during workouts or in light rain. They are not designed for swimming or submersion in water.

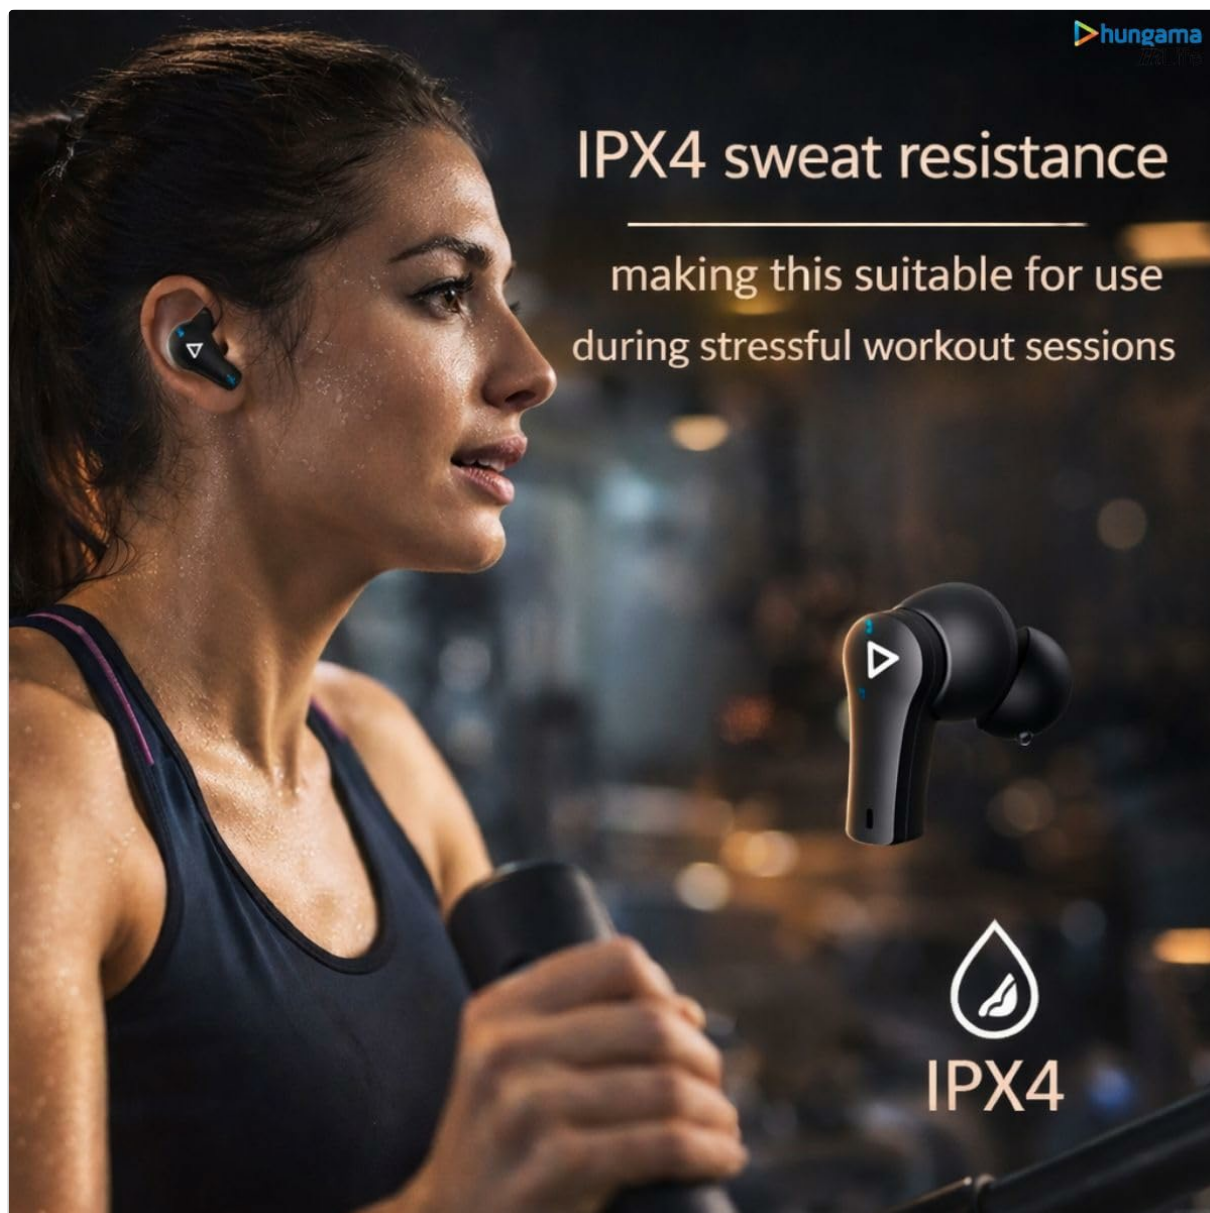

IPX4 sweat resistance

making this suitable for use
during stressful workout sessions

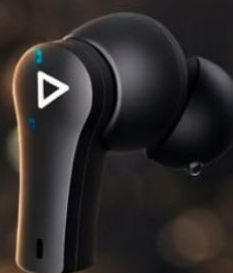


Image: A person exercising while wearing the earbuds, emphasizing their IPX4 sweat resistance for workout sessions.



Image: Earbuds being splashed with water, demonstrating their IPX4 water and sweat resistance.

TROUBLESHOOTING

If you encounter issues with your Bounce 301 earbuds, try the following solutions:

- **No Sound:**
 - Ensure earbuds are charged.
 - Check if the earbuds are properly paired with your device.

- Adjust volume on both your device and the earbuds.
- Try re-pairing the earbuds.

- **Connectivity Issues:**

- Ensure Bluetooth is enabled on your device.
- Move closer to your device to avoid interference.
- Turn off and on your device's Bluetooth.
- Forget the device in your Bluetooth settings and re-pair.

- **Earbuds Not Charging:**

- Ensure the charging cable is securely connected to both the case and the power source.
- Check if the charging case has power.
- Ensure the earbuds are correctly seated in the charging case.
- Clean the charging contacts on both the earbuds and the case.

- **Touch Controls Not Responding:**

- Ensure your fingers are clean and dry.
- Restart the earbuds by placing them in the case and taking them out again.

SPECIFICATIONS

Feature	Detail
Brand	Hungama HiLife
Model Name	BOUNCE 301
Model Number	8903242000109
Colour	BLACK
Ear Placement	In Ear
Form Factor	In Ear
Impedance	140 Ohms
Bluetooth Version	5.0
Water Resistance Level	IPX4 Water Resistant
Control Method	Touch
Audio Driver Type	Dynamic Driver (Titanium Sound Drivers)
Noise Control	Passive Noise Cancellation
Item Weight	35 Grams
Compatible Devices	Cellphones, Laptops
Manufacturer	Hungama Hilife, HUNGAMA DIGITAL MEDIA PVT LTD

Country of Origin

India

WARRANTY AND SUPPORT

Warranty Description: CUSTOMER CAN DIRECTLY CALL THE CUSTOMER CARE AND CLAIM FOR RETURN OR SUPPORT.

For support or warranty claims, please contact Hungama HiLife customer care directly.

Manufacturer Contact Information: HUNGAMA DIGITAL MEDIA PVT LTD

Importer Contact Information: Alpha Digital Corp. C1 Khira Nagar Santacruz W Mumbai 400009

Please retain your proof of purchase for warranty purposes.