

[Manuals.plus](#) /

› [Foxin](#) /

› Foxin Foxbeat 144 In-Ear Bluetooth Neckband User Manual

Foxin FOXBEAT 144

Foxin Foxbeat 144 In-Ear Bluetooth Neckband User Manual

Model: FOXBEAT 144

INTRODUCTION

Thank you for choosing the Foxin Foxbeat 144 In-Ear Bluetooth Neckband. This manual provides essential information for setting up, operating, and maintaining your device. Please read it carefully before use to ensure optimal performance and longevity of your neckband.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- BT Headset: 1 Piece
- Charging USB Cable: 1 Piece
- Eartips: 1 Piece
- User Manual: 1 Piece

PRODUCT OVERVIEW

The Foxin Foxbeat 144 is a versatile in-ear Bluetooth neckband designed for comfort and high-quality audio. It features a lightweight design, magnetic earbuds, and a range of functionalities for an enhanced user experience.

FOX BEAT 144



Wireless Neckband

Foxin Foxbeat 144 Wireless Neckband. This image shows the overall design of the neckband with its in-ear earbuds.

Key Features:

- **Extended Playtime:** Up to 30 hours of working time with quick charge support.
- **Comfortable Design:** Magnetic earbuds and lightweight neckband for comfortable, secure usage.
- **Seamless Connectivity:** Bluetooth V5.0 for stable connection and a 10-meter working range.
- **Enhanced Audio:** Powerful 14.2mm driver for enhanced bass sound quality.
- **Voice Assistant & Storage:** Supports voice assistants (Google/Siri) and includes a memory card slot (up to 32GB micro SD).
- **Integrated Controls:** Call function with media/volume controls and crystal clear telephonic communication.
- **Additional Functionality:** Built-in torch light function.



Type C USB
Charging Interface

Upto **32 GB**
Memory Card Slot

Close-up view of the neckband's control unit, highlighting the Type-C USB charging port and the micro SD card slot.

Multi Control

Buttons

Torch

Function

Detailed view of the multi-control buttons for media and calls, along with the integrated torch light function.



Close-up of the magnetic metal earbuds and an illustration indicating Bluetooth 5.0 technology.

SETUP

1. Charging the Neckband

Before first use, fully charge the neckband.

1. Connect the provided USB charging cable to the Type-C port on the neckband.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status (e.g., red for charging, blue for fully charged).
4. A full charge typically takes approximately 1-2 hours.

30 Hrs*
Total Working Time



180 Hrs*
Standby Time

Illustration of the neckband's impressive battery performance, offering up to 30 hours of total working time and 180 hours of standby time.

2. Powering On/Off

- **To Power On:** Press and hold the Multi-function button (usually the play/pause button) for a few seconds until the LED indicator flashes blue and you hear a power-on prompt.
- **To Power Off:** Press and hold the Multi-function button again for a few seconds until the LED indicator flashes red and you hear a power-off prompt.

3. Bluetooth Pairing

Pair your neckband with your smartphone or other Bluetooth-enabled device.

1. Ensure the neckband is fully charged and powered off.
2. Press and hold the Multi-function button for approximately 5-7 seconds until the LED indicator flashes red and blue alternately, indicating pairing mode.
3. On your device, enable Bluetooth and search for available devices.
4. Select "FOXBEAT 144" from the list of found devices.
5. Once connected, the LED indicator will flash blue slowly, and you will hear a connection confirmation.
6. If prompted for a password, enter "0000".

Clear

Call Conversation

Supports

Android & iOS



A user enjoying the neckband, illustrating its compatibility with both Android and iOS devices, and its capability for clear call conversations.

4. Inserting a Micro SD Card

The neckband supports micro SD cards up to 32GB for direct music playback.

1. Locate the micro SD card slot on the control unit.
2. Gently insert the micro SD card into the slot until it clicks into place.
3. The neckband will automatically switch to micro SD card playback mode if a card with audio files is detected.

OPERATING INSTRUCTIONS

Call Functions

- **Answer Call:** Press the Multi-function button once.
- **End Call:** Press the Multi-function button once during a call.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds.
- **Redial Last Number:** Double-press the Multi-function button.

Music Playback

- **Play/Pause:** Press the Multi-function button once.
- **Next Track:** Press and hold the "+" (Volume Up) button.
- **Previous Track:** Press and hold the "-" (Volume Down) button.
- **Volume Up:** Short press the "+" button.
- **Volume Down:** Short press the "-" button.

Voice Assistant

- **Activate Voice Assistant (Google/Siri):** Triple-press the Multi-function button.

Torch Function

- **Turn On/Off Torch:** Locate the dedicated torch button (if present, otherwise refer to the multi-control buttons image for specific button). Press it once to turn on, press again to turn off.

MAINTENANCE

Proper care ensures the longevity of your Foxin Foxbeat 144 neckband.

- **Cleaning:** Use a soft, dry cloth to clean the neckband and earbuds. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the neckband in a cool, dry place, away from direct sunlight and extreme temperatures. The magnetic earbuds help prevent tangling.
- **Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Water Resistance:** The neckband is water resistant. Avoid submerging it in water or exposing it to heavy rain. Dry thoroughly if it gets wet.

TROUBLESHOOTING

If you encounter issues with your neckband, refer to the following common solutions:

Problem	Solution
Cannot power on	Ensure the battery is charged. Connect to a charger and try again.
Cannot pair with device	Ensure the neckband is in pairing mode (flashing red/blue). Turn off and on Bluetooth on your device. Move closer to the neckband.
No sound	Check volume levels on both the neckband and your connected device. Ensure the neckband is properly connected.
Poor sound quality	Move closer to your connected device to avoid interference. Ensure no obstacles are between the neckband and device.
Charging issue	Verify the charging cable and adapter are working correctly. Ensure the charging port is clean and free of debris.

SPECIFICATIONS

Technical details of the Foxin Foxbeat 144 neckband:

Feature	Detail
Model Name	FOXBEAT 144
Model Number	FOXNBD0011
Brand	Foxin
Colour	Black
Ear Placement	In Ear
Bluetooth Version	5.0
Bluetooth Range	Up to 10 meters
Battery Average Life	30 Hours (Working Time)
Audio Driver Size	14.2 Millimetres
Frequency Range	20Hz - 20KHz
Memory Card Support	Up to 32GB micro SD
Water Resistance Level	Water Resistant
Control Type	Voice Control, Multi-Control Buttons
Material	Metal (Earbuds)
Item Weight	14 Grams

WARRANTY INFORMATION

The Foxin Foxbeat 144 In-Ear Bluetooth Neckband comes with a **180-day warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your purchase receipt for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

CUSTOMER SUPPORT

For any support, service, or warranty-related inquiries, please contact the manufacturer:
Balaji Solutions Limited
Anmol South City Infra Park, Plot No. B4 And B5,
Mouza Jagdishpur, JI No. 2, Dist. Howrah,
P.S. Liluah, Howrah - 711115,
West Bengal, India

Please visit the official Foxin website for additional support resources or updated contact information.