

Buds X Ultra



Please refer to this manual before using the product

TABLE OF CONTENT

• Package Content	01
• Features	02
• Specifications	03
• Power ON/OFF	04
• Reset	05
• Charging	06
• Controls	07
• Warranty	09
• Safety	10

PACKAGE CONTAINS



Noise Buds X Ultra



Charging Case



USB Type-C charging Cable x 1



Extra Ear-tips (S x 1/L x 1)

FEATURES



Touch Area



Charging Indicator



Type-C Port

EARBUD SPECIFICATIONS

Earbud weight: 4.6g (each)

Speaker driver size: 11 mm

Supported profiles: HSP/HFP/A2DP/AVRCP

Bluetooth version: 5.3

Earbud charging time: Up to 40 minutes

Working voltage: 5V

Standby time: Up to 500 hours

Playtime without ANC: Up to 6 hours at 60% volume

Playtime with ANC: Up to 7 hours at 60% volume

Bluetooth range: 10m

Waterproof rating: IPX5

Working temperature: 0–45 °C

CHARGING CASE SPECIFICATIONS

Charging case weight: 30.8g

Charging port: Type-C

The number of earbud charges from the case: 7 times

Case charging time: Up to 90 minutes

Total playtime with charging case (without ANC): Up to 50 hours

Total playtime with charging case (with ANC): Up to 40 hours

POWER ON

The earbuds will automatically turn on, on opening the charging case.

POWER OFF

The earbuds will automatically turn off once placed inside the charging case with the lid closed.

PAIRING

- Open the charging case and buds will be in pairing mode automatically
- Select 'Add Device' and select Noise Buds X Ultra from the list of devices.
- Your Noise Buds X Ultra are now paired with your device and ready to use.

Note: Your Noise Buds X Ultra will automatically connect to the last paired device as soon as you take them out of the charging case.



POWER ON



POWER OFF

 
RESET

To reset your earbuds, please follow these steps:

First, ensure that the earbuds are charged and powered on. Then, press and hold both earbuds simultaneously for 10 seconds. Alternatively, you can reset earbuds by pressing one earbud for 10 seconds. During this time, you may notice the LED indicator light flashing, which indicates that the reset process is in progress. Once the 10 seconds have elapsed, release the earbuds and put it back to case and use it again. Your buds reset successfully.

CHOOSING YOUR EAR TIP SIZE

Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear tips. Follow the images and chart to learn how to wear earbuds in the right manner.



CHARGING

Earbuds

Place both earbuds inside the case to charge them.

Indication (on case)

○ Solid White LED  **Charging**

Charging Case

Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.

Indication (on case)

○○○○○ Flashing White LED  **Charging**

○ Solid White LED  **Fully Charged**

CONTROLS



Play/Pause

Tap either earbud twice



Tap twice



Tap twice



Previous Song

Tap the left earbud thrice



Tap thrice



Next Song

Tap the right earbud thrice



Tap thrice

CONTROLS



Volume Up

Tap the right earbud once



Tap once



Volume Down

Tap the left earbud once



Tap once



Answer Call / End Call

Tap either earbud twice



Tap twice



Tap twice



Reject Call

Touch and hold either earbud for 2 seconds



Touch and hold



Touch and hold



Voice Assistant

Tap the right earbud four times



Tap four times

CONTROLS



Gaming Mode

Tap the left earbud four times



Tap four times



Mode Switching

Touch and hold right earbud for 2 seconds



EQ mode switching- TruBalance & TruBass

Touch and hold left earbud for 2 seconds



Touch and hold



In-ear detection On / Off

Tap the left earbud five times



Tap five times



Spatial Audio On/Off

Tap the right earbud five times



Tap five times

WARRANTY

The warranty covers your Noise product, including accessories against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund related queries, please refer to the terms and conditions mentioned in our online return policy section on www.gonoise.com.

REGISTER YOUR WARRANTY

www.gonoise.com/pages/warranty-registration



SCAN ME

CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.com

SAFETY FOR YOU AND YOUR NOISE BUDS X ULTRA

Follow these tips and you & your Noise Buds X Ultra will be happy together for a very longtime.



Do not expose the earbuds to liquids, moisture or humidity as they have electronics and battery inside.



Don't try to disassemble your earbuds. There are no user serviceable parts inside it.



Don't use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.



Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.



Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.



Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PCs



Do not expose the earbuds to extremely high or low temperature as this may damage the battery or even deform the plastic parts.



Never listen to music at high volume or you may permanently damage your hearing.



Don't throw the earbuds in a fire to dispose it. The internal battery may explode. .



Pay attention to your surroundings and never wear any earphones while riding, driving or walking in traffic

noise