


### **ROCKERZ 210 ANC SMART GUIDE**


## CONTENTS

**PACKAGE** 

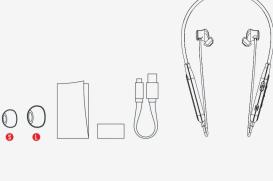

# (8)

**PRODUCT** LABELLING

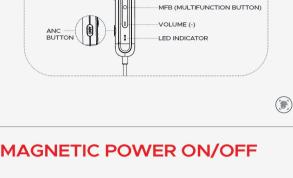

ON





Finally, switch on the Bluetooth of the first media device again.

Note: 1. By default, before using the neckband for the very first time it stays in Norr 2. The operational cycle is Normal mode → Ambient Mode → ANC Mode

**DUAL PAIRING** 

**FUNCTIONS** 

(CALL/MUSIC)




(Pm)

(8%)

(Pm)

Press Once Press Twice Press & Hold (2 Sec)



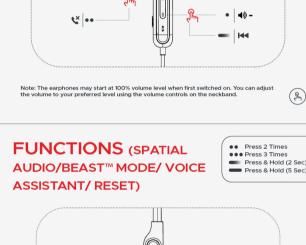

Note: The earphones may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the neckband.

**HEARABLES APP** COMPATIBILIT

ᢞ ዀ



**LED STATUS GUIDE** 

TONE PROMPT

LED TURNS OFF

₩ SOLID RED LED

100% :

**SPECIFICATIONS** 

30 dB

20 Hz-20 kHz

270 mAh

Up to 40 hours

13 mm\*2

Yes; Al-ENx™ Technology Yes; 60 ms low latency Yes; 10 mins Charge = 10 hrs Playback

Up to 40 hours (without ANC);

₩

Bluetooth Version

Operating Range Frequency

Music Playtime

Driver Size

Battery

Talk Time

Active Noise Cancellation ENx™ Tech BEAST™ Mode ASAP™ Charge

<20%: RED LED FLASHES

EVERY 30 SECONDS WITH

LOW


BATTERY

CHARGING

FULLY

CHARGED

(:**•**:)

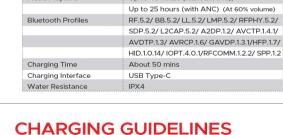

Charging norms & Precautionary Guidelines: -





