

[Manuals.plus](#) /

› [XIAOMI](#) /

› Xiaomi Redmi Buds 4 Active TWS Wireless Earbuds User Manual

XIAOMI M2232E1

Xiaomi Redmi Buds 4 Active TWS Wireless Earbuds User Manual

Model: M2232E1

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Xiaomi Redmi Buds 4 Active TWS Wireless Earbuds. Please read this manual carefully before using the product to ensure proper and safe operation.



The Redmi Buds 4 Active earbuds are shown in their open charging case, highlighting their compact design and black finish.

PACKAGE CONTENTS

- Redmi Buds 4 Active Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- Ear Tips (various sizes)
- User Manual

SETUP

1. Initial Charging

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case and connect the charging case to a power source using a USB-C cable. The indicator light on the case will show charging status.



The charging case is shown connected to a power source, emphasizing the earbuds' impressive 28-hour ultra-long battery life when combined with the case.

2. Pairing with Your Device

The Redmi Buds 4 Active support Bluetooth 5.3 for stable and efficient connection, and Google Fast Pair for quick setup with Android devices.

1. First-time Pairing:

- Open the charging case. The earbuds will automatically enter pairing mode.
- On your device (smartphone, tablet, etc.), enable Bluetooth.
- Search for "Redmi Buds 4 Active" in the list of available Bluetooth devices and select it to connect.

2. Google Fast Pair (for Android devices):


- Ensure your Android device's Bluetooth and Location are enabled.

- Open the charging case near your Android device.
- A pop-up notification will appear on your device's screen. Tap to connect.

Google Fast Pair

Open the cover for pop-up
and simply tap to connect

In one tap, the Redmi Buds 4 Active enables quick, effortless Bluetooth pairing with your Android* devices. You can even check to see where you last placed it.

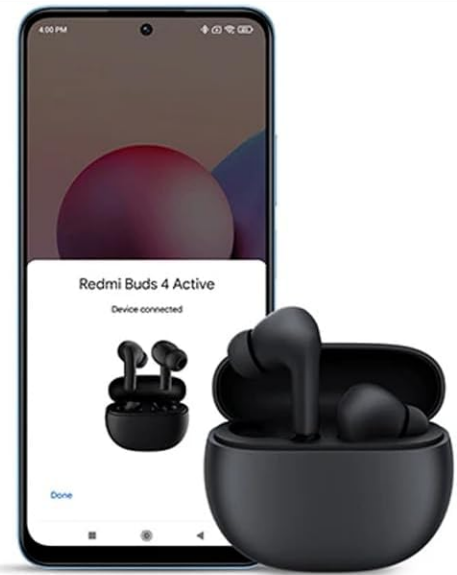

IPX4 water-resistance*

Thoughtful protection

The earbuds now feature a sleek and professional structural design that has passed the IPX4* water resistance test. Whether you're heading outdoors or hitting the gym and breaking a sweat, rest assured that they'll always keep up with the task at hand.

A smartphone screen displays the Google Fast Pair prompt, demonstrating the seamless and quick pairing process for the Redmi Buds 4 Active with Android devices.

Noise cancellation for calls

Outstanding performance in noisy environments

Each earbud comes equipped with a high-sensitivity microphone that leverages to mitigate ambient background noise interruptions, ensuring optimal clarity of speech for effective communication even in noisy environments.



A hand gently holds the Redmi Buds 4 Active charging case, emphasizing the product's upgraded Bluetooth 5.3 technology for enhanced connectivity and reduced power consumption.

OPERATING INSTRUCTIONS

Touch Controls


The Redmi Buds 4 Active feature intuitive touch controls on each earbud. The following actions can be performed:

Action	Function
Tap twice	Play/Pause music, Answer a call
Tap three times	Skip to next track, Reject/End a call
Press and hold earbud	Enable/Disable low-latency mode

Touch control

Control from anywhere

The touch control operations* allow you to smoothly and easily switch between different modes using light touches.

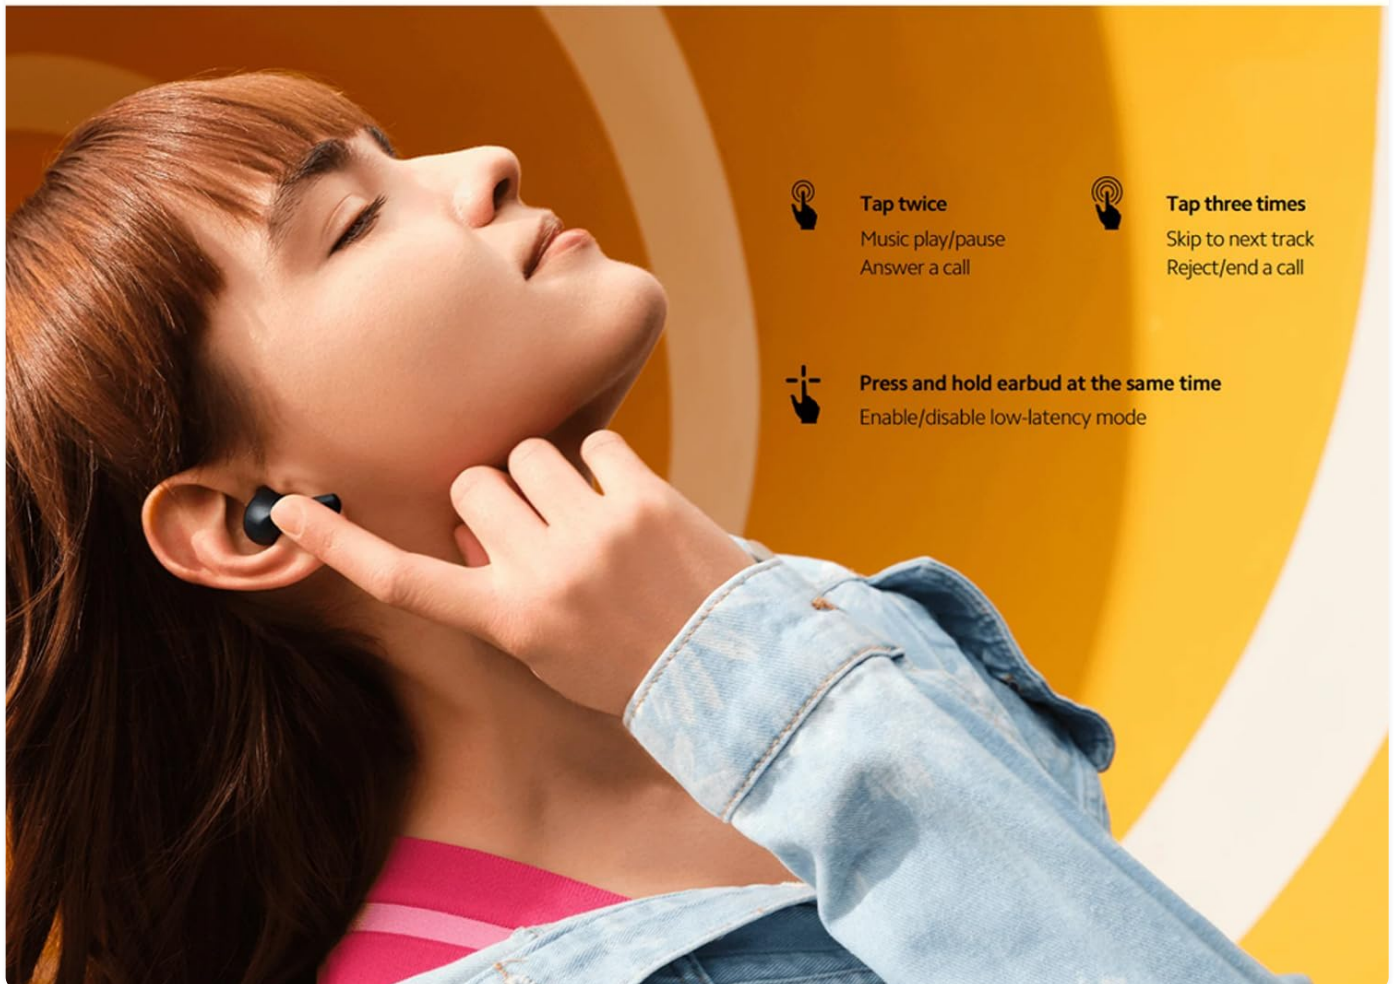

A person is shown interacting with the earbud, illustrating the intuitive touch controls for managing music playback, calls, and activating special modes.

Low-Latency Mode

For an enhanced gaming or video watching experience, activate the low-latency mode. This mode minimizes audio delay, ensuring better synchronization between audio and video. Activate by pressing and holding the earbud as per the touch control table.

28-hour ultra-long battery life

Let good music keep you company longer


The earbuds' battery life lasts up to 5 hours on a single charge and up to 28 hours* with the portable charging case, so you can enjoy great music day and night.

5 hours

Battery life on a single charge

28 hours

Battery life with charging case

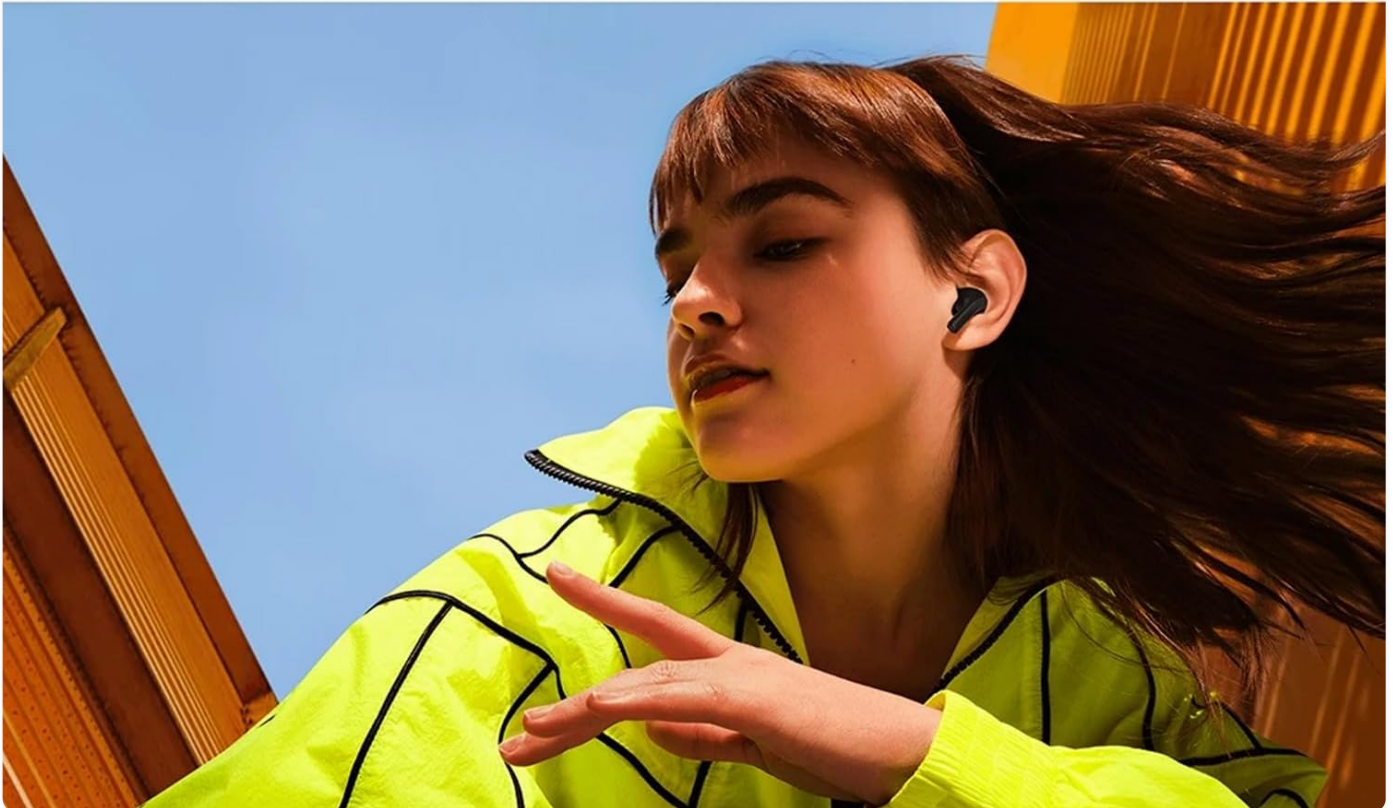

A person is shown enjoying a mobile game while wearing the Redmi Buds 4 Active, demonstrating the earbuds' low-latency mode for a smooth and synchronized gaming experience.

Noise Cancellation for Calls

 
Each earbud is equipped with a high-sensitivity microphone designed to reduce ambient background noise during calls. This feature ensures clear communication even in noisy environments.

Redmi Buds 4 Active


**Advanced
Bluetooth® 5.3 for
stable connection**



**Convenient connectivity
with Google Fast Pair***

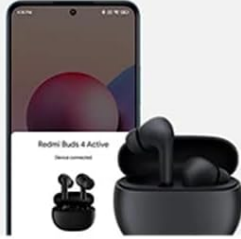

 
**12mm dynamic
driver for
powerful bass**

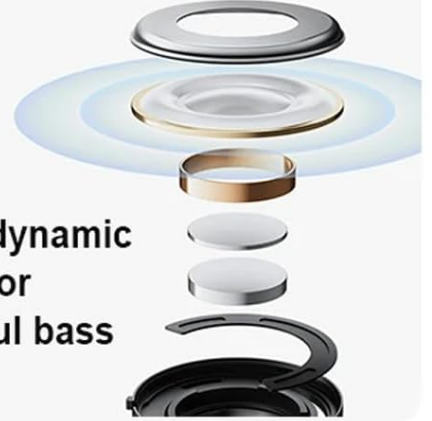

**Up to 28 hours* long
listening time with case**



**Charge 10 minutes
for up to 110
minutes music***

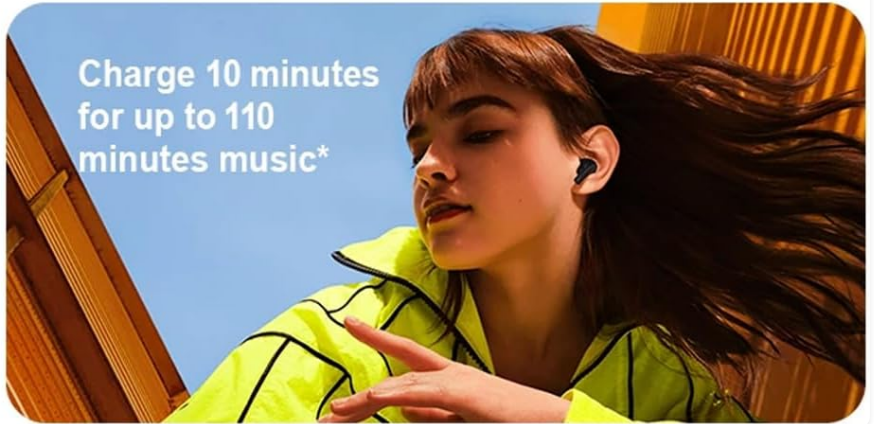

This image highlights key features, including the noise cancellation for calls, which ensures optimal clarity of speech by mitigating ambient background noise.

MAINTENANCE

Cleaning

Regular cleaning helps maintain optimal performance and hygiene. Use a soft, dry, lint-free cloth to wipe the earbuds and charging case. Do not use abrasive cleaners or immerse the product in water.

Water Resistance (IP54)

The Redmi Buds 4 Active are rated IP54 for dust and splash resistance. This means they are protected against limited dust ingress and water splashes from any direction. While suitable for workouts and light rain, they are not designed for swimming or showering. Avoid exposing them to high-pressure water or submerging them.

12mm dynamic driver

The 12mm dynamic driver is even larger than before. With expert tuning by the Xiaomi Acoustic Lab, it delivers enhanced bass and heightened acoustics, providing a pleasing listening experience for users worldwide.



The Redmi Buds 4 Active earbuds are depicted with water droplets, illustrating their IP54 water resistance, making them suitable for various environments including workouts.

Battery Care

To prolong battery life, avoid extreme temperatures. Store the earbuds and case in a cool, dry place when not in use. Charge regularly, even if not used frequently, to prevent deep discharge.

TROUBLESHOOTING

If you encounter issues with your Redmi Buds 4 Active, refer to the following common solutions:

- **No Sound/Connectivity Issues:**

- Ensure earbuds are charged.
- Check if Bluetooth is enabled on your device.
- Move earbuds closer to your device.
- Forget "Redmi Buds 4 Active" from your device's Bluetooth settings and re-pair.

- **Only One Earbud Working:**

- Place both earbuds back into the charging case, close the lid, wait a few seconds, then open again.
- Ensure both earbuds are charged.

- **Charging Issues:**

- Ensure the charging cable is securely connected to both the case and the power source.
- Try a different USB-C cable and power adapter.
- Clean the charging contacts on the earbuds and inside the case with a dry cotton swab.

- **Earbuds Not Responding to Touch Controls:**

- Ensure your finger covers the entire touch area.
- Restart the earbuds by placing them in the case and closing the lid.

Factory Reset

If issues persist, a factory reset may resolve them. Consult the official Xiaomi support resources for the specific reset procedure for Redmi Buds 4 Active, as it may involve a button combination on the case.

SPECIFICATIONS

Below are the technical specifications for the Xiaomi Redmi Buds 4 Active:

Low-latency mode

Smooth gaming experience

With Bluetooth® 5.3, you can easily initiate low-latency mode for an immersive gaming experience with exceptional precision. Ensuring you don't miss any crucial moments in the game and enabling you to efficiently control it with accuracy.



This diagram provides a detailed view of the 12mm dynamic driver's components, highlighting its design for powerful bass and heightened acoustics.

Feature	Detail
Model Name	Redmi Buds 4 Active
Model Number	M2232E1
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Bluetooth Range	10 Meters
Audio Driver Type	Dynamic Driver
Audio Driver Size	12 Millimeters

Feature	Detail
Battery Life (Earbuds)	Up to 5 Hours (single charge)
Total Playtime (with case)	Up to 28 Hours
Water Resistance	IP54
Noise Control	AI Call Noise Cancelling
Control Method	Touch
Weight	2.08 ounces
Included Components	Redmi Buds 4 Active

WARRANTY AND SUPPORT

Warranty Information

Xiaomi products typically come with a limited manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Xiaomi website for detailed warranty terms and conditions specific to your region and purchase date.

Customer Support

For further assistance, technical support, or service inquiries, please visit the official Xiaomi support website or contact their customer service. You can find contact information and FAQs on their official website: www.mi.com/global/support