

[Manuals.plus](#) /

› [GOBOULT](#) /

› GOBOULT Z40 Pro TWS Earbuds User Manual

GOBOULT Z40 Pro

GOBOULT Z40 Pro TWS Earbuds User Manual

Model: Z40 Pro

1. INTRODUCTION

Thank you for choosing the GOBOULT Z40 Pro TWS Earbuds. This manual provides essential information for setting up, operating, and maintaining your earbuds to ensure optimal performance and longevity. Please read it carefully before use.

Package Contents

- GOBOULT Z40 Pro Earbuds (Left and Right)
- Charging Case
- USB Type-C Charging Cable
- Eartips (various sizes)
- User Manual
- Warranty Card



Image: GOBOULT Z40 Pro Earbuds in their Lavender charging case.

2. GETTING STARTED

Initial Charging

Before first use, fully charge the earbuds and the charging case. Connect the provided USB Type-C cable to the charging port on the case and a power source. The indicator light on the case will show charging status. A full charge takes approximately 90 minutes.

 


Image: Illustration of the GOBOULT Z40 Pro charging case connected via a Type-C cable, highlighting fast charging capabilities (10 minutes charge for 120 minutes playtime).

Powering On/Off

- **Power On:** Open the charging case lid. The earbuds will automatically power on. Alternatively, long press the touch area on each earbud for 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off.

Alternatively, long press the touch area on each earbud for 5 seconds.

Bluetooth Pairing

1. Ensure the earbuds are charged and inside the charging case.
2. Open the charging case lid. The earbuds will enter pairing mode, indicated by a flashing LED on the earbuds.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "GOBOULT Z40 Pro" from the list of devices.
5. Once connected, a voice prompt will confirm successful pairing.

The earbuds feature Bluetooth 5.3 for a stable and efficient connection with faster pairing and extended range.

 


Image: GOBOULT Z40 Pro earbuds demonstrating Bluetooth 5.3 connectivity with a smartphone, highlighting Blink & Pair for fastest pairing and enhanced power efficiency.

3. CONTROLS AND FUNCTIONS

The GOBOULT Z40 Pro earbuds feature intuitive feather-touch controls for managing various functions.

 


Image: Detailed diagram showing touch control functions for the left and right GOBOULT Z40 Pro earbuds, including music playback, call management, volume control, and mode activation.

Music Playback

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the Right earbud.
- **Previous Track:** Double tap on the Left earbud.
- **Volume Up:** Three taps on the Right earbud.
- **Volume Down:** Three taps on the Left earbud.

Call Management

- **Receive Call:** Single tap on either earbud.
- **Reject/End Call:** Double tap on either earbud.

The Zen Quad Mic ENC (Environmental Noise Cancellation) technology ensures crystal-clear call quality by minimizing background noise.

 


Image: Close-up view of a GOBOULT Z40 Pro earbud, illustrating the internal components and the Zen Quad Mic ENC technology for crystal clear calling.

Voice Assistant

- **Activate Voice Assistant (Google Assistant/Siri):** Long press on either earbud for 2 seconds.

Zen™ Quad mic ENC



Image: GOBOULT Z40 Pro earbuds and case, demonstrating activation of voice assistants like Google Assistant and Siri with a long press.

Gaming Mode (Combat Mode)

- **Activate Gaming Mode:** Four taps on either earbud.

This mode provides an ultra-low latency of 45ms, optimizing audio synchronization for gaming.

Image: GOBOULT Z40 Pro earbuds and charging case positioned on a keyboard, highlighting the 'Combat Mode' for gaming with 45ms adaptive lowest latency, activated by four taps.

4. CARE AND MAINTENANCE

Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

- Gently remove any earwax or debris from the eartips and speaker mesh using a small, soft brush or cotton swab.

Water Resistance

The GOBOULT Z40 Pro earbuds are IPX5 water-resistant, meaning they are protected against sweat, splashes, and light rain. They are not designed for submersion in water or use during swimming.

- Do not intentionally submerge the earbuds in water.
- Ensure the earbuds are dry before placing them back into the charging case to prevent damage.

 


Image: GOBOULT Z40 Pro earbuds shown with water droplets, illustrating their IPX5 splashproof and sweat-resistant design.

Storage

- Store the earbuds in their charging case when not in use to protect them and keep them charged.
- Avoid exposing the earbuds to extreme temperatures, direct sunlight, or high humidity.

5. TROUBLESHOOTING

If you encounter any issues with your GOBOULT Z40 Pro earbuds, refer to the following common solutions:

Earbuds Not Pairing

- Ensure both earbuds are charged.
- Turn off Bluetooth on your device and turn it back on.
- Forget/delete "GOBOULT Z40 Pro" from your device's Bluetooth list and attempt to pair again.
- Place earbuds back in the case, close the lid, wait 5 seconds, then open to re-enter pairing mode.

No Sound or Low Volume

- Check the volume level on both your device and the earbuds.
- Ensure the earbuds are properly seated in your ears.
- Clean any debris from the speaker mesh and eartips.
- Try re-pairing the earbuds with your device.

Microphone Issues

- Ensure the microphone holes are not obstructed.
- Check if the earbuds are properly connected during a call.
- Test the microphone in a quiet environment.

Earbuds Not Charging

- Ensure the charging cable is securely connected to both the case and the power source.
- Verify the power source is active.
- Clean the charging contacts on both the earbuds and inside the case.

6. SPECIFICATIONS

Feature	Specification
Model Name	AirBass (Z40 Pro)
Connectivity Technology	Wireless (Bluetooth 5.3)
Bluetooth Range	10 Metres
Audio Driver Size	13mm Dynamic Drivers
Frequency Response	20 Hz - 20 KHz
Sensitivity	115 dB
Impedance	32 Ohm
Battery Life (Earbuds)	Up to 8 hours (single charge)
Total Playtime (with Case)	Up to 100 hours
Charging Time	Approx. 90 minutes
Charging Port	USB Type-C
Audio Latency	45 Milliseconds (Gaming Mode)
Microphone	Quad Mic with ENC
Water Resistance	IPX5 (Sweat and Splash Resistant)
Control Type	Touch, Voice
Item Weight	50 Grams
Product Dimensions	6 x 2.7 x 4.8 cm
Material	Plastic
Manufacturer	Exotic Mile Pvt. Ltd.
Country of Origin	India

7. WARRANTY AND SUPPORT

Warranty Information

Your GOBOULT Z40 Pro earbuds come with a manufacturer's warranty. Please refer to the included Warranty Card for specific terms, conditions, and duration of the warranty. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support

For any technical assistance, troubleshooting not covered in this manual, or warranty-related inquiries, please contact GOBOULT customer support. Contact details can typically be found on the Warranty Card or the official GOBOULT website.

Manufacturer: Exotic Mile Pvt. Ltd., B67 Wazirpur Industrial Area, New Delhi 110052



© 2023 GOBOULT. All rights reserved.