

PHILIPS TAT1169BK/94

PHILIPS Audio TAT1169BK/94 True Wireless Earbuds User Manual

Model: **TAT1169BK/94** | Brand: **PHILIPS**

1. INTRODUCTION

This manual provides detailed instructions for the PHILIPS Audio TAT1169BK/94 True Wireless In-Ear Earbuds. Please read this manual carefully before using your earbuds to ensure proper operation and to maximize your listening experience. Keep this manual for future reference.

What's in the Box

- 1 pair of PHILIPS TAT1169BK/94 True Wireless Earbuds
- 1 Pocket-sized Charging Case
- Ear Cushions (various sizes)
- 1 USB Charging Cable
- User Manual (this document)

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your PHILIPS TAT1169BK/94 earbuds and charging case.



Touch controls and built in mic



Image 2.1: PHILIPS TAT1169BK/94 True Wireless Earbuds and Charging Case. This image displays the black earbuds and their compact charging case from a front-facing perspective.

Key Features

- **Extended Playtime:** Up to 55 hours of total playtime with the charging case.
- **Dynamic Sound:** 12mm dynamic drivers deliver warm, natural sound with deep bass.
- **Touch Controls:** Intuitive on-ear touch controls for music and calls.
- **Integrated Microphone:** Built-in microphone for clear call quality.
- **Durable Design:** IPX4 splash and sweat resistant, suitable for workouts and outdoor use.
- **Comfortable Fit:** Interchangeable silicone ear tips for a secure and comfortable fit.
- **Bluetooth 5.3:** Stable and efficient wireless connection.



Image 2.2: PHILIPS TAT1169BK/94 Earbuds highlighting key features. This image shows the black earbuds alongside text indicating 55 hours of playtime, ENC mic technology, IPX4 resistance, 12mm drivers, and integrated controls.

3. SETUP

3.1 Initial Charging

1. Open the charging case and place both earbuds inside.
2. Connect the USB charging cable to the charging port on the case and to a USB power source (e.g., wall adapter, computer USB port).
3. The indicator lights on the charging case will illuminate to show charging status. A full charge typically takes approximately 2 hours for the case and earbuds.
4. Once fully charged, disconnect the charging cable.

3.2 Bluetooth Pairing

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing LED on one

of the earbuds.

3. On your device (smartphone, tablet, laptop), enable Bluetooth.
4. Search for available Bluetooth devices. You should see "PHILIPS TAT1169BK/94" in the list.
5. Select "PHILIPS TAT1169BK/94" to connect. Once connected, a voice prompt will confirm the successful pairing, and the LED indicator on the earbud will turn off or show a steady light.
6. If pairing fails, turn off Bluetooth on your device, place the earbuds back in the case, close it, then reopen and try again.


3.3 Wearing the Earbuds

- Choose the ear tips that provide the most comfortable and secure fit for your ears. A good seal is crucial for optimal sound quality and bass performance.
- Insert the earbuds into your ear canals and gently twist them until they feel snug and stable.
- Ensure the microphone is facing downwards for clear call reception.

4. OPERATING INSTRUCTIONS

4.1 Touch Controls

The PHILIPS TAT1169BK/94 earbuds feature intuitive touch controls on each earbud. The functions may vary slightly depending on the earbud (left/right) and the number of taps.

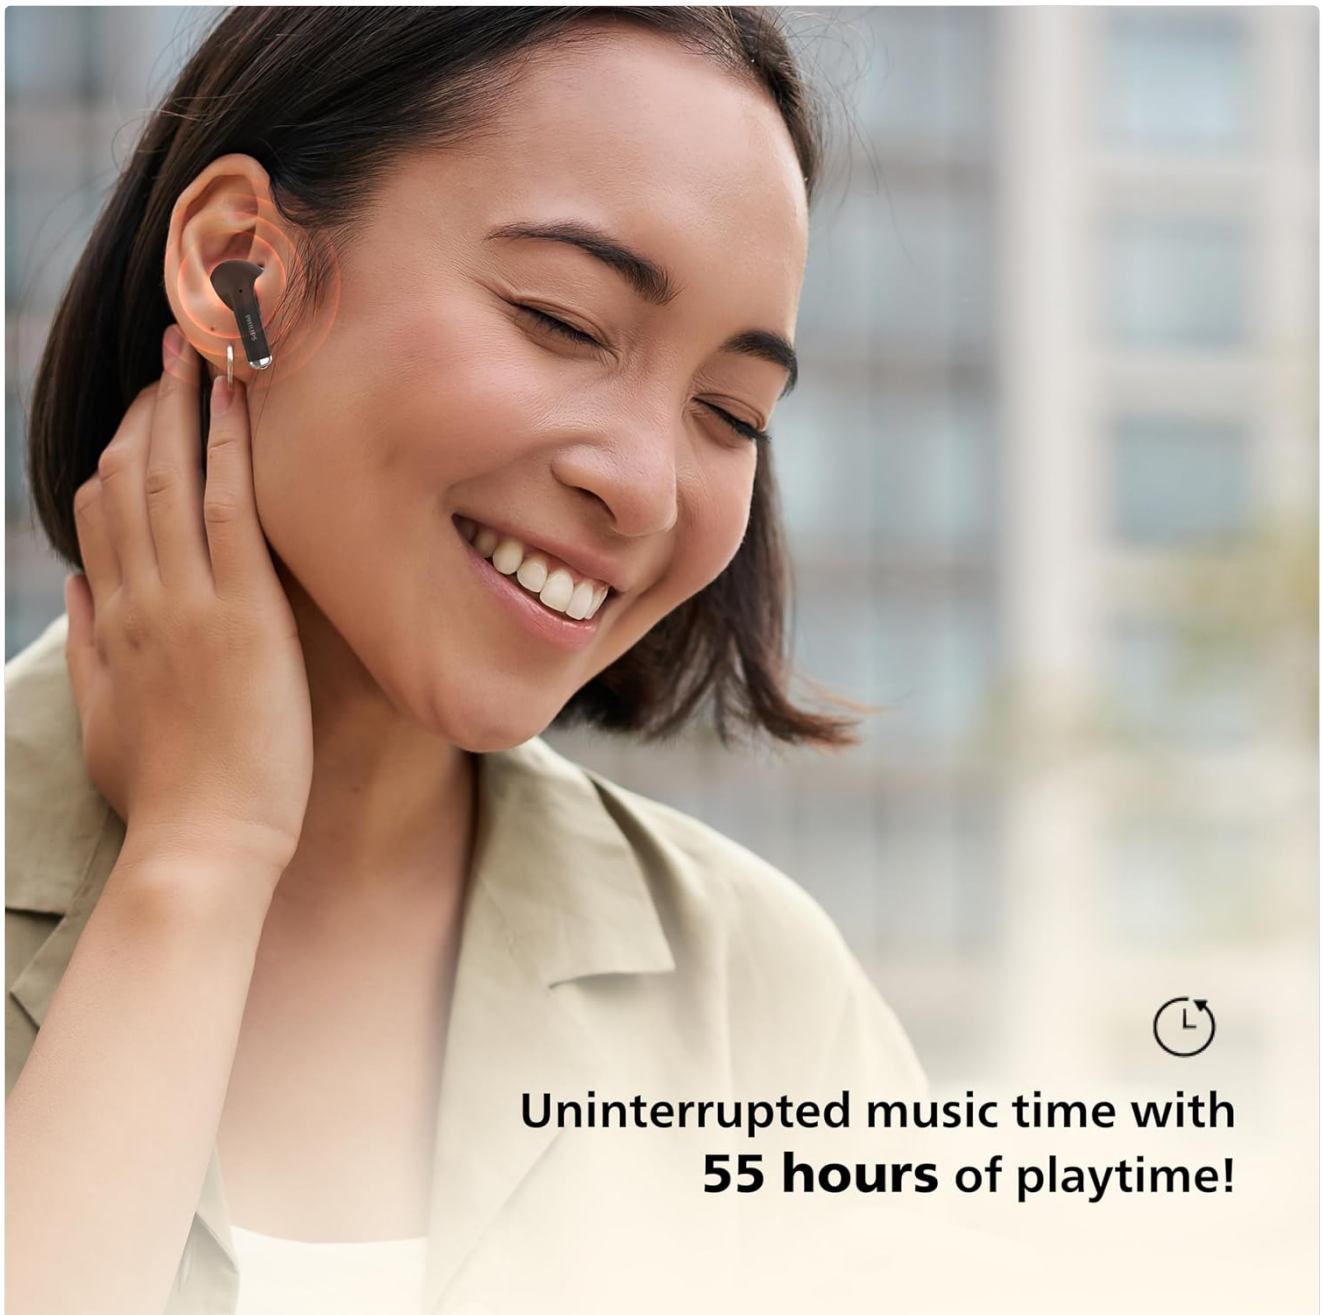

**Uninterrupted music time with
55 hours of playtime!**

Image 4.1: A person demonstrating the use of touch controls on the PHILIPS TAT1169BK/94 earbud. The image shows a user gently tapping the side of the earbud.

Action	Function
Single Tap (Left/Right)	Play/Pause music, Answer/End call
Double Tap (Right Earbud)	Next track
Double Tap (Left Earbud)	Previous track
Triple Tap (Left/Right)	Activate Voice Assistant (Siri, Google Assistant)
Press and Hold (2 seconds)	Reject incoming call

Note: Volume control is typically managed via your connected device.

4.2 Making and Receiving Calls

- **Answering a Call:** Single tap either earbud.

- **Ending a Call:** Single tap either earbud during a call.
- **Rejecting a Call:** Press and hold either earbud for 2 seconds.

4.3 Listening to Music

- **Play/Pause:** Single tap either earbud.
- **Next Track:** Double tap the right earbud.
- **Previous Track:** Double tap the left earbud.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your earbuds.

5.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure charging contacts on both earbuds and case are clean and free of debris.

5.2 Storage

- Always store the earbuds in their charging case when not in use to protect them and keep them charged.
- Store the device in a cool, dry place, away from extreme temperatures and direct sunlight.

6. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions.

Problem	Solution
Earbuds not pairing	◦ Ensure earbuds are charged. ◦ Place earbuds back in the case, close, then reopen to re-enter pairing mode. ◦ Turn off and on Bluetooth on your device. ◦ Forget "PHILIPS TAT1169BK/94" from your device's Bluetooth list and try pairing again.
No sound or low volume	◦ Check volume levels on both your device and the earbuds. ◦ Ensure earbuds are properly seated in your ears and ear tips provide a good seal. ◦ Reconnect the earbuds to your device. ◦ Clean any debris from the earbud speakers.
Earbuds not charging	◦ Ensure the charging cable is securely connected to both the case and the power source. ◦ Verify the power source is active. ◦ Clean the charging contacts on both the earbuds and inside the case.

Problem	Solution
Poor call quality	◦ Ensure the microphone is not obstructed. ◦ Move closer to your connected device to improve Bluetooth signal. ◦ Try making a call in a quieter environment.

7. SPECIFICATIONS

Detailed technical specifications for the PHILIPS Audio TAT1169BK/94 True Wireless Earbuds.

Feature	Detail
Model Number	TAT1169BK/94
Ear Placement	In Ear
Driver Size	12 mm Dynamic Drivers
Frequency Range	20 Hz - 20,000 Hz
Bluetooth Version	5.3
Bluetooth Range	Up to 10 meters (33 feet)
Total Playtime (with case)	Up to 55 hours
Control Type	Touch Control
Water Resistance	IPX4 (Splash and Sweat Resistant)
Microphone	Built-in
Material	Acrylonitrile Butadiene Styrene (ABS)
Item Weight	38 Grams (total)
Charging Case Dimensions (L x W x H)	6.1 cm x 2.3 cm x 4.6 cm
Compatible Devices	Desktops, Gaming Consoles, Laptops, Smart Watch, Tablets

8. WARRANTY INFORMATION

Your PHILIPS Audio TAT1169BK/94 True Wireless Earbuds come with a standard manufacturer's warranty.

- **Warranty Period:** 1 Year from the date of purchase.
- This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.
- Please retain your proof of purchase for warranty claims.

9. SUPPORT INFORMATION

For further assistance, technical support, or warranty claims, please contact PHILIPS customer service.

Contact Details

- **Phone:** 18004256396
- **Email:** India.Callcentre@tpv-tech.com
- **Working Hours (Mon-Sat):** 10:00 AM – 09:00 PM
- **Working Hours (Sunday):** 10:00 AM – 06:00 PM



Image 9.1: Map illustrating over 400 PHILIPS service centers across India. This image provides a visual representation of the widespread service network.