

Sennheiser 700174

Sennheiser ACCENTUM Wireless Bluetooth Headphones - User Manual

Model: ACCENTUM Black (700174)

Brand: Sennheiser

[Box](#) [Setup](#) [Operating](#) [Maintenance](#) [Overview](#) [What's in the](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The Sennheiser ACCENTUM Wireless Bluetooth Headphones offer a premium audio experience with advanced features designed for comfort and convenience. Enjoy extended listening pleasure with a long-lasting battery, immerse yourself in sound with hybrid active noise cancellation, and experience crystal-clear communication.



Figure 1: Sennheiser ACCENTUM Wireless Headphones in Black.

2. WHAT'S IN THE BOX

Your Sennheiser ACCENTUM Wireless Bluetooth Headphones package includes the following items:

- Sennheiser ACCENTUM Wireless Bluetooth Headphones
- USB-C Charging Cable
- User Manual

3. SETUP AND INITIAL USE

3.1. Charging the Headphones

Before first use, fully charge your headphones. Connect the provided USB-C charging cable to the USB-C port on the headphones and the other end to a compatible USB power source. The charging time is approximately 3 hours for a full charge.

3.2. Powering On/Off

- To power on: Press and hold the Power button until the LED indicator lights up.
- To power off: Press and hold the Power button until the LED indicator turns off.

3.3. Bluetooth Pairing

To pair your headphones with a Bluetooth-enabled device:

1. Ensure the headphones are powered off.
2. Press and hold the Power button for 5 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device, enable Bluetooth and search for "Sennheiser ACCENTUM".
4. Select the headphones from the list of available devices to complete pairing. A voice prompt will confirm successful connection.

The headphones support Bluetooth 5.2 for stable connectivity across multiple devices.

4. OPERATING THE HEADPHONES

4.1. Controls

The ACCENTUM headphones feature physical buttons for intuitive control of playback, calls, and modes.

4.2. Hybrid Active Noise Cancellation (ANC) and Transparency Mode

Immerse yourself in your audio or stay aware of your surroundings with the Hybrid ANC and Transparency Mode features.

- **Hybrid ANC:** Reduces ambient noise, ideal for work, gym, or travel.
- **Transparency Mode:** Allows you to hear your surroundings without removing the headphones, useful for conversations or announcements.



**Every day, any
environment**



**Hybrid
ANC**



**Transparency
mode**

Figure 2: Hybrid ANC and Transparency Mode allow for versatile listening in any environment.

4.3. Battery Life

The headphones boast an impressive 50-hour battery life with ANC enabled, ensuring extended listening pleasure.



**Audio all day
and more**



**Battery
life**

Figure 3: Enjoy audio all day and more with up to 50 hours of battery life.

4.4. Sound Customization

Personalize your listening experience with the built-in 5-band EQ and customizable sound modes via the Sennheiser Smart Control App.



Set the tune of your day



**Built-in
equalizer**



**Sound
modes**

Figure 4: Set the tune of your day with customizable sound settings.

4.5. Official Product Video

Your browser does not support the video tag.

Video 1: This video provides a comparison of the Sennheiser ACCENTUM, ACCENTUM Plus, and MOMENTUM 4 headphones, highlighting key features and differences across the models.

5. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your Sennheiser ACCENTUM headphones, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the earcups and headband. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** These headphones are not water resistant. Avoid exposure to moisture, rain, or sweat.

6. TROUBLESHOOTING

If you encounter any issues with your Sennheiser ACCENTUM headphones, refer to the following common troubleshooting steps:

- **No Power:** Ensure the headphones are fully charged. Connect them to a power source and allow them to charge for at least 10 minutes before attempting to power on.
- **No Sound:**
 - Check if the headphones are properly paired with your device.
 - Ensure the volume on both the headphones and your device is turned up.
 - Try restarting both the headphones and your audio source device.
- **Poor Bluetooth Connection:**
 - Ensure your device is within the Bluetooth range (10 meters).
 - Avoid obstacles between the headphones and your device that might interfere with the signal.
 - Disconnect and re-pair the headphones with your device.
- **ANC Not Working Effectively:**
 - Ensure the earcups are properly sealed around your ears. Adjust the fit if necessary.
 - Check the ANC settings in the Sennheiser Smart Control App.

For further assistance, please refer to the official Sennheiser support website or contact customer service.

7. SPECIFICATIONS

Feature	Detail
Brand	Sennheiser
Model Name	ACCENTUM Black (ACAEBT Black)
Item Model Number	700174
Connectivity Technology	Wireless (Bluetooth 5.2)
Ear Placement	Over Ear
Form Factor	Over Ear
Noise Control	Hybrid Noise Cancellation
Battery Life	50 Hours
Charging Time	3 Hours
Audio Driver Type	Dynamic Driver

Feature	Detail
Frequency Range	20 Hz - 20,000 Hz
Control Method	App
Material	Plastic
Item Weight	7.7 ounces (0.48 Pounds)
Product Dimensions	6.49 x 1.88 x 7.67 inches
Water Resistance Level	Not Water Resistant
Included Components	User Manual

8. WARRANTY AND SUPPORT

Sennheiser products are designed for durability and performance. For information regarding your product's warranty, please refer to the warranty card included in your product packaging or visit the official Sennheiser website. For technical support, troubleshooting, or service inquiries, please contact Sennheiser Customer Service through their official channels.