


Noise Buds Vector

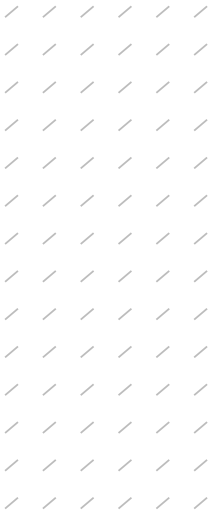

Please refer to this manual before using the product

TABLE OF CONTENTS

• Package Contents and Features	01
• Specifications	02
• Power, Pairing & Reset	03
• Choosing your Ear-Tip size	04
• Charging	05
• Controls	06
• Warranty	08
• Safety	09


PACKAGE CONTENTS



Noise Buds Vector



USB Type-C charging cable x 1

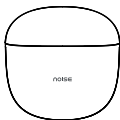

Charging case x 1



Ear-tips

User manual x 1

SPECIFICATIONS

- Earbud weight: 4g each earbud
- Speaker driver size: 11 mm
- Supported profiles: A2DP/AVRCP/SPP/AVDTP
- Bluetooth version: 5.3
- Earbud charging time: Up to 60 minutes
- Working voltage: 5V
- Standby time: Up to 300 hours
- Buds Playtime: Up to 5 hours at 50% Volume
- Bluetooth range: 10 m
- Waterproof rating: IPX4

CHARGING CASE SPECIFICATIONS

- Charging case weight: 36g
- Charging port: Type-C
- Case charging time: Up to 90 minutes
- Total playtime with charging case: Up to 40 hours

POWER ON & OFF

The earbuds will automatically turn on when the charging case is opened.

The earbuds will automatically turn off once placed inside the charging case with the lid closed

PAIRING

- Open the charging case.
- Turn on the Bluetooth of your device.
- Select 'Add Device', and from the list of devices, select 'Noise Buds Vector'.
- Your Noise Buds Vector are now paired with your device and ready to use.

Note: Your Noise Buds Vector will automatically connect to the last paired device as soon as you take them out of the charging case.

RESET

- Make sure your earbuds are fully charged.
- Delete/remove the Noise Buds Vector from the paired devices section in the BT menu.
- Insert both earbuds into the charging case with the lid open. Press the charging case button for 7 seconds.
- The Red LED on both the earbuds will blink 3 times and white LED on the case will blink 4 times, this indicates that the earbuds have been reset.

CHOOSING YOUR EAR-TIP SIZE

Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear-tips.

Follow the images and chart to learn how to wear earbuds in the right manner.



CHARGING

Case

Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.

Indication (on case)

○ Flashing white LED



Charging

Solid white LED



Fully Charged

CONTROLS



Play/Pause
Tap either earbud twice



• •
Tap twice



• •
Tap twice



Previous Song
Tap the left earbud thrice



• • •
Tap thrice



Next Song
Tap the right earbud thrice



• • •
Tap thrice



Volume Up
Tap the right earbud once



•
Tap once



Volume Down
Tap the left earbud once



•
Tap once



Answer Call

Tap either earbud twice



Tap twice



Tap twice



End Call

Tap either earbud twice



Tap twice



Tap twice



Reject Call

Touch and hold either earbud for 2 seconds



Touch and hold



Touch and hold



Voice Assistant

Tap the right earbud 4 times



Tap 4 times



Gaming Mode

Tap the left earbud 4 times



Tap 4 times

WARRANTY

The warranty covers your Noise product, including accessories, against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty are listed below:

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not by the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on **www.gonoise.com**.

REGISTER YOUR WARRANTY

www.gonoise.com/pages/warranty-registration



SUPPORT AND SERVICE



1 YEAR LIMITED WARRANTY



SCAN ME

CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.in

SAFETY FOR YOU AND YOUR NOISE BUDS VECTOR.

Follow these tips to get the best out of your new Noise Buds Vector:



Do not expose the earbuds to liquids, moisture or humidity as they have electronics and batteries inside.



Do not try to disassemble your earbuds. There are no user-serviceable parts inside it.



Don't use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.



Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.



Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.



Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PC chargers.



Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.



Never listen to music at a high volume or you may permanently damage your hearing.



Do not throw the earbuds in a fire to dispose them. The internal battery may explode.



Pay attention to your surroundings and never wear any earbuds while riding, driving or walking in traffic.

noise