

[Manuals.plus](#) /

› [Nothing](#) /

› Nothing Phone (4a) Pro User Manual

Nothing Nothing Phone (4a) Pro

Nothing Phone (4a) Pro User Manual

Model: Nothing Phone (4a) Pro (Silver, 8GB RAM, 128GB Storage)

INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your Nothing Phone (4a) Pro. Please read this guide thoroughly before using your device to ensure optimal performance and safety. For the most up-to-date information and support, please visit the official Nothing website.

WHAT'S IN THE BOX

Upon unboxing your Nothing Phone (4a) Pro, verify that all components are present:



Image: Contents of the Nothing Phone (4a) Pro box. This includes the phone, a USB Type-C charging cable, a SIM ejector tool, a clear protective case, and user documentation.

- Nothing Phone (4a) Pro device
- USB Type-C Cable
- SIM Ejector Tool
- Protective Case (Clear)
- Quick Start Guide and Safety Information
- Headset

SETUP

1. Inserting the SIM Card

Locate the SIM card tray on the side of the phone. Use the provided SIM ejector tool to gently press into the small hole on the tray until it ejects. Insert your Nano-SIM card(s) into the tray with the gold contacts facing down. Ensure the tray is fully and securely reinserted into the phone.

2. Initial Power On

Press and hold the power button, located on the right side of the phone, until the Nothing logo appears on the screen. Follow the on-screen prompts to select your preferred language, connect to a Wi-Fi network, and set up your Google account. This process will guide you through essential initial configurations.

3. Charging the Device

Connect the USB Type-C cable to the phone's charging port at the bottom. Connect the other end of the cable to a compatible power adapter (sold separately) or a computer's USB port. The battery icon on the screen will indicate the charging status. For optimal charging, use a Nothing-approved power adapter.

OPERATING YOUR DEVICE

Display and Interface

The Nothing Phone (4a) Pro features an advanced AMOLED display with an adaptive refresh rate of up to 144 Hz, providing smooth visuals. Navigate the interface using standard touch gestures: **tap** to select items, **swipe** to scroll through content, and **pinch** to zoom in or out.

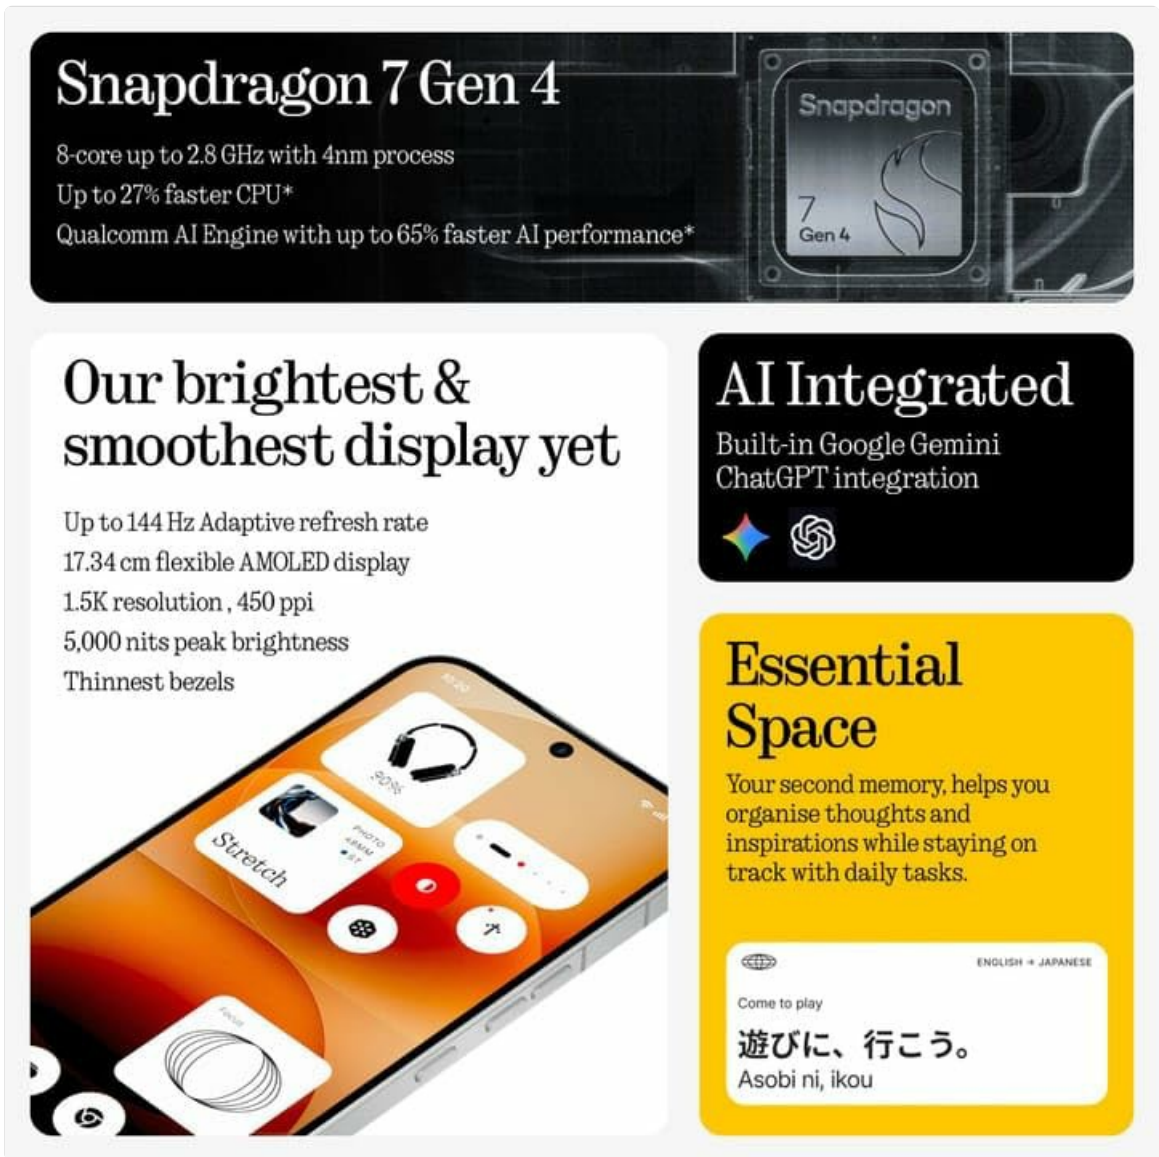


Image: The Nothing Phone (4a) Pro's display showcasing its user interface, alongside information on the Snapdragon 7 Gen 4 processor, AI integration, and 'Essential Space' feature.

Camera System

Your device is equipped with a versatile 3-camera system designed for high-quality photography. This includes a 50 MP Main Camera (Sony LYT700C with Optical Image Stabilization), a 50 MP 140x Telephoto Camera with OIS, and a 120° Ultra-Wide Camera. Open the Camera app to access various shooting modes, settings, and filters.

3-camera system with world's first 140x ultra zoom



Metal unibody

Our slimmest smartphone at 7.95 mm



Image: Close-up of the Nothing Phone (4a) Pro's rear camera module, detailing the 50 MP main camera, 50 MP 140x telephoto camera, and 120° ultra-wide camera.

Glyph Interface

The unique Glyph Interface on the rear of the phone utilizes customizable light patterns to provide visual cues for notifications, incoming calls, charging status, and other alerts. You can personalize Glyph patterns, brightness, and functions within the phone's settings menu to suit your preferences.



Image: Rear view of the Nothing Phone (4a) Pro, highlighting the distinctive Glyph Interface with its illuminated patterns.

MAINTENANCE

Cleaning Your Device

To maintain the appearance and functionality of your phone, regularly clean the screen and body using a soft, lint-free cloth. Avoid using harsh chemicals, abrasive materials, or excessive moisture, as these can damage the device. For stubborn smudges, you may slightly dampen the cloth with water.

Software Updates

Your Nothing Phone (4a) Pro runs on Nothing OS, which is based on Android 14. It is crucial to keep your device updated to the latest software version to ensure optimal performance, security, and access to new features. To check for updates, navigate to **Settings > System > System update**. Nothing OS provides 3 years of major OS updates and 6 years of security updates.

Battery Care

The phone is equipped with a 5000 Milliamp Hours Lithium-Ion battery. To prolong its lifespan, avoid exposing the phone to extreme temperatures (both hot and cold). Charge the device using only compatible chargers and cables. Avoid completely draining the battery frequently.

TROUBLESHOOTING

Device Not Powering On

Ensure the battery is sufficiently charged. Connect the phone to a charger and allow it to charge for at least 15-30 minutes before attempting to power it on again. If the issue persists, perform a force restart by holding the power button for approximately 10-15 seconds until the device vibrates or the Nothing logo appears.

Screen Unresponsive

If the screen becomes unresponsive, try restarting the device using the force restart method described above. If a restart does not resolve the issue, consider performing a factory reset (note: this will erase all data on the device). Always back up your important data before performing a factory reset.

Connectivity Issues (Wi-Fi/Cellular)

First, toggle Wi-Fi or cellular data off and then on again from the quick settings panel. Restart your phone. Check if other devices can connect to the same network to rule out network-side issues. For cellular problems, ensure your SIM card is properly inserted and your mobile plan is active and has sufficient data/credit.

SPECIFICATIONS

Feature	Detail
Model	Nothing Phone (4a) Pro
Operating System	Android 14 (Nothing OS)
Processor	Snapdragon 7 Gen 4 (G4), 2.5 GHz
RAM	8 GB
Internal Storage	128 GB
Display	AMOLED, up to 144 Hz Adaptive Refresh Rate, 1.5K resolution, 450 ppi, 5,000 nits peak brightness
Rear Camera System	50 MP Main (Sony LYT700C, OIS), 50 MP 140x Telephoto (OIS), 120° Ultra-Wide
Battery	5000 Milliamp Hours (Lithium-Ion)
Connectivity	5G, GSM, LTE, USB Type C (USB 2.0)
Dimensions	16.4 x 7.8 x 0.8 Centimeters
Weight	250 Grams
Dust & Water Resistance	IP65 rated

WARRANTY INFORMATION

The Nothing Phone (4a) Pro comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by accidents, misuse,

unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for all warranty claims.

For detailed warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official Nothing support website.

SUPPORT

For further assistance, technical support, or service inquiries, please contact Nothing customer support:

Toll-free number: 18002021232

Email: support.india@nothing.tech

Nothing offers extensive support services, including over 350 service centers and 360° customer support across multiple channels, with a high customer satisfaction rate and efficient case closure.



Image: Nothing Support overview, detailing service center availability, customer support channels, and service efficiency metrics.

SAFETY INFORMATION

Always use your device responsibly and adhere to safety guidelines. Avoid exposing the phone to extreme temperatures, direct sunlight, or liquids. Do not attempt to disassemble or repair the device yourself, as this may void the warranty and cause damage. Dispose of the device and its battery according to local

environmental regulations. Keep the device away from children and pets.