
[Manuals.plus](#) /

› [URBN](#) /

› URBN 10000 mAh Nano Link Power Bank UPR112 User Manual

URBN UPR112

URBN 10000 mAh Nano Link Power Bank UPR112 User Manual

Model: UPR112

INTRODUCTION

Thank you for choosing the URBN 10000 mAh Nano Link Power Bank. This device is designed to provide portable and fast charging for your electronic devices. Please read this manual carefully before using the product to ensure proper operation and safety.



Image: Front view of the URBN 10000 mAh Nano Link Power Bank in Camo color.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x URBN 10000 mAh Nano Link Power Bank (Main Unit)
- 1 x USB Cable
- 1 x User Manual
- 1 x Warranty Card

PRODUCT FEATURES

- **10000mAh Capacity:** Provides ample power for multiple charges of smartphones and other devices.
- **Built-in USB-C Cable:** Convenient integrated Type-C cable for charging compatible devices.

- **22.5W Fast Charging:** Supports rapid charging for quick power delivery.
- **Type C PD (Power Delivery) Input & Output:** Enables fast charging for both the power bank and connected devices.
- **Two-Way Fast Charge:** Allows for fast charging of the power bank itself and fast charging of connected devices.
- **LED Indicator Lights:** Displays the remaining battery level and charging status.
- **Over Charging Protection:** Built-in safety features to prevent damage from overcharging.
- **Compact and Slim Design:** Easy to carry in a pocket or bag.

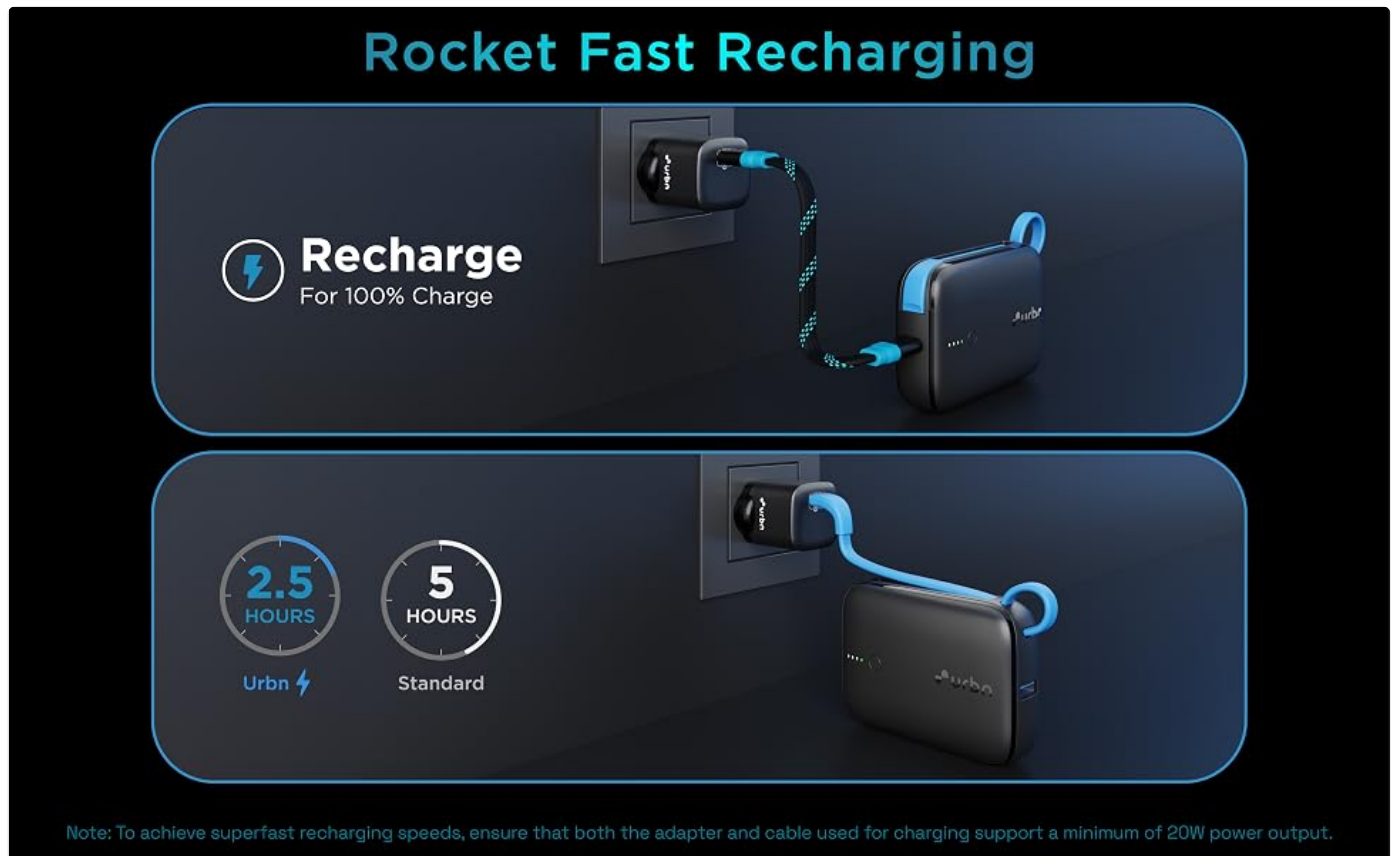


Image: The URBN Nano Link Power Bank held in hand, illustrating its compact and portable design.

SETUP: CHARGING THE POWER BANK

Before initial use, fully charge your URBN Nano Link Power Bank.

1. **Connect the Power Bank:** Use the provided USB-C cable or the built-in USB-C cable to connect the power bank's Type-C input port to a compatible USB wall charger (not included).
2. **Power Source:** Plug the wall charger into a power outlet.
3. **Monitor Charging:** The LED indicator lights on the power bank will illuminate to show the charging progress. All lights will be solid when fully charged.

A full charge typically takes approximately **4 hours** with a compatible fast charger.

The Pocket Rocket

10000mAh
NANO LINK
POWER BANK



Image: The URBN Nano Link Power Bank connected to a charging adapter, demonstrating the charging process.

OPERATING: CHARGING YOUR DEVICES

The URBN Nano Link Power Bank can charge various devices, including smartphones, tablets, smartwatches, and headphones.

1. **Check Power Bank Level:** Press the indicator button (if available) to check the power bank's battery level. Ensure it has sufficient charge.
2. **Connect Your Device:**
 - For USB-C devices: Use the built-in USB-C cable or connect your device's USB-C cable to the power bank's Type-C output port.
 - For other devices (e.g., iPhone, older Android): Connect your device's charging cable to the appropriate USB-A output port on the power bank.
3. **Begin Charging:** The power bank will automatically begin charging your device. The LED indicators will show the power bank's remaining charge.

The power bank supports **22.5W fast charging**, capable of charging devices up to 50% in approximately 30 minutes, depending on the device and its charging capabilities.



Image: The URBN Nano Link Power Bank connected to a smartphone, illustrating its function as a portable charger.

SAFETY INFORMATION

- Do not expose the power bank to extreme temperatures (above 45°C or below 0°C).
- Avoid dropping, disassembling, or attempting to repair the device yourself.
- Keep away from water, moisture, and flammable materials.
- Do not use if the power bank is damaged or swollen.
- Keep out of reach of children.
- Use only compatible charging cables and adapters.

MAINTENANCE

- Clean the power bank with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Store the power bank in a cool, dry place when not in use.
- For optimal battery life, fully charge the power bank at least once every three months if stored for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging	Loose cable connection, faulty charger, power bank fully charged.	Ensure cables are securely connected. Try a different charger or cable. Check LED indicators; if all are solid, the power bank is fully charged.

Problem	Possible Cause	Solution
Device not charging from power bank	Power bank low on charge, incompatible cable, device not connected properly.	Recharge the power bank. Use the correct cable for your device. Ensure a firm connection between the power bank and your device.
Slow charging	Non-fast charging cable/adaptor, device not supporting fast charge, multiple devices connected.	Use a fast-charging compatible cable and adaptor. Ensure your device supports 22.5W fast charging. Disconnect other devices if charging speed is critical.

SPECIFICATIONS

Model Name	Nano
Model Number	UPR112
Battery Capacity	10000 mAh
Battery Cell Type	Lithium Polymer
Connector Type	USB Type C
Power Output	22.5W (Max)
Input (Type C PD)	22.5W (Max)
Output Current	3.4 Amps
Voltage	5 Volts
Number of Ports	3 (including built-in cable)
Battery Charge Time	Approx. 4 Hours
Dimensions (L x W x Th)	6 x 9 x 2.5 Centimeters
Item Weight	192 Grams
Country of Origin	India

WARRANTY AND SUPPORT

Warranty: This URBN Power Bank comes with a**1 Year Replacement Warranty** from the date of purchase. Please refer to the included Warranty Card for detailed terms and conditions.

Manufacturer Contact Information:

ACETRON TECH VENTURES PVT LTD
Rajprabha Enclave, Building No. 6, Unit No. 111&112, 1st Floor,
Bhoidapada, Sativali Road, Vasai (E)
Pin code: 401208

For support or warranty claims, please contact the manufacturer directly using the information provided on your warranty card or visit the official URBN website.

