

NoiseFit Vortex Plus Please refer to this manual before using the product.	TABLE OF CONTENT • Where is the Box • Watch Overview • Charge the Watch • Turn the Watch on and off • Watch Navigation • Button • Home Screen Navigation • Setup & Pair the Watch • BT Call Connectivity & Removal • Watch Features • General Device Information and Tips • Safety & Handling Instructions • Medical Device Interference • Disposal Information • Customer Support	WATCH OVERVIEW • Workout • Workout record • Activity • Heart rate • SpO2 • Sleep • Breath • Call • Favourite contacts • Alarm • Weather • Stopwatch • Timer • Calculator • Music control • Remote camera • Find my phone • Flashlight • Settings	PACKAGE CONTAINS NoiseFit Vortex Plus Smartwatch x 1 Charging Cable x 1	CHARGING NOISEFIT VORTEX PLUS SMARTWATCH Before using your NoiseFit Vortex Plus for the first time, charge the battery to its full capacity. Use the charging cable provided with the watch to charge. On a single charge, NoiseFit Vortex Plus can last up to 7 days of use. 2 days with calling. Note: The battery life and time to fully charge your device may vary as per usage and other factors. CHARGE NOISEFIT VORTEX PLUS • Plug the USB cable into a power adaptor and the adaptor into an electrical socket. (Power adaptor not included). • Place the magnetic charger on the magnetic charging points of the watch. • While your watch is charging, the screen will show its progress. • Once the battery is fully charged, remove the charger.	POWER ON • Press and hold the upper side button for a few seconds to turn on the watch. POWER OFF • Press and hold the upper side button for a few seconds. • Select "Power Off" and confirm to power off. WAKING UP THE WATCH To preserve battery, the watch screen turns off when not in use. Turn the screen back on by: • Pressing the upper side button • Turning on/rise to wake	WATCH NAVIGATION Navigate the watch by tapping on the screen, swiping side to side, up and down and by pressing the upper and lower side button. BUTTON NAVIGATION • Press the upper side button to turn on the watch display • Press the upper side button to exit a feature. HOME SCREEN NAVIGATION The home screen is the watch face. From the home screen, • Swipe right to access Smart glance • Swipe left to check your activity levels • Swipe up to go to quick settings • Swipe down to check message notifications. • Press the lower side button to access your workout.	APP SETUP Before pairing, make sure that your smartphone and smartwatch are next to each other. The app will ask for personal information such as height, weight and ask to calculate your stride length, distance covered and calorie burn rate. • Turn on Bluetooth and the Location on your mobile device. • On your smartphone, download the NoiseFit app from the Play store or the App store and install it. • Create an account or log in using an existing account. Note: Ensure that your smartphone is running on Android 9.0 & + or iOS 11.0 & + and is connected to mobile data or a Wi-Fi network. PAIR THE WATCH • Open the NoiseFit app and allow the Bluetooth and GPS permission to be turned on. • Feed in your personal information and health goals in the app. • Go to "Device" page and select add device in the app, select the watch name and MAC address and link the watch. You can also scan the QR code on the NoiseFit Vortex Plus from the NoiseFit app.	BT CALL CONNECTIVITY To establish BT calling connectivity, follow these steps. For automatic connection After pairing the watch with the NoiseFit app, the watch's calling BT would be activated. Now connect it with your phone's BT to use the calling feature conveniently. Manual connection In case the BT calling connectivity has not been established earlier, you'll have to do the steps manually. Go to Settings, Search for device and pair your smartphone to attend calls from the watch. BT CALL CONNECTIVITY REMOVAL In Android devices, to remove the BT connection, you can unpair from the app and the phone's BT settings. Go to phone's BT settings and forget NoiseFit Vortex Plus. In iOS devices, to remove the BT connection, you can unpair from the app and the phone's BT settings. Go to phone's BT settings and forget NoiseFit Vortex Plus and NoiseFit Vortex Plus Calling.	WATCH FEATURES WORKOUT Select Workout & proceed to track your performance to the routine of your choice. WORKOUT RECORD Tap on Workout records to check on your recent performances. ACTIVITY Tap on Activity to get a detailed daily activity report on calories burned, steps taken and distance covered. You can set or edit your daily activity goals on the NoiseFit app while setting up the watch. HEART RATE Select the heart rate feature to start measuring. Ensure that there is no gap between the back panel of the watch and the wrist. Hold still while it measures your heart rate.	SPO2 The smartwatch supports viewing of the highest and lowest values of blood oxygen level of the day. Ensure that there is no gap between the back panel of the watch and the wrist. Hold still while it measures your Blood Oxygen level. SLEEP Tap Sleep to view your previous sleep duration. You can view your most recent sleep records and sleep quality in various sleep stages on the NoiseFit app. BREATH The "Breath" feature lets you adjust your breathing rhythm at your convenience. CALL To use this feature connect your phone's Bluetooth with your watch's Bluetooth. FAVOURITE CONTACTS You can save favourite contacts and access them directly from the watch. ALARM You can add an alarm & choose to turn it on or off. You can also manage alarms in the app.	
--	---	---	--	---	--	---	--	--	--	--	---

WEATHER NoiseFit Vortex Plus supports 5-day weather viewing in a location of your choice as long it is synced with the NoiseFit app. You can view today's current weather and for the next 4 days as well. Go to the NoiseFit app, select "Devices" click on "weather settings" to enable this feature. STOPWATCH You can use the watch as a stopwatch. You can also set lap times in the stopwatch. TIMER You can set a countdown with a pre-set duration on the watch or set your own time and it will remind you when the time is up. CALCULATOR Manage daily calculations by tapping on Calculator. MUSIC CONTROL You can control your favourite songs and podcasts that play from your phone, right on your wrist as long as the watch is connected with the NoiseFit app in your phone. You can play/pause music, go to the next/previous track and increase/decrease volume.	REMOTE CAMERA Tap on "Remote camera" to take a picture remotely from your phone. FIND MY PHONE This feature helps you find your mobile device by making it ring. Just tap on "Find my phone", and your phone will start to ring. FLASHLIGHT You can use this feature to turn on the screen brightness and see your surroundings better. Go to the Flashlight. Tap to turn on.	SETTINGS Watch face Tap on this feature to access your saved watch faces. Swipe left/right to navigate. You can customise your watch face on the NoiseFit app. Brightness You can set the brightness as per your preference. Screen Time Select the duration for which you want the screen to stay on. You can even choose to keep the screen always bright. Raise to wake Tap on Raise to wake. Activate this feature for a set amount of time or leave it on all-day. Always on display Tap on Always on display to keep your watch screen on at all times. You can also set the duration for AOD as per your convenience. REMINDER You can choose the "Reminder" to set reminders as per your convenience. DO NOT DISTURB Tap on Do not disturb and select the amount of time you want notifications to be turned off. You can also select Smart mode.	BATTERY Tap on Battery to know how much power you have left. GENERAL App view Tap on App view and make your selection from a grid or list view. Bluetooth calling Bluetooth calling (Built-in microphone & speakers, recent calls, dial pad, contacts) 100+ cloud based watch faces Health tracking with NoiseFit app (Activity tracking, SpO2, sleep tracker, 24/7 Heart Rate Monitor, Breath) Utility/productivity features (Stopwatch, alarm, timer, reminder, OBD, weather, compass/heart rate, flashlight, calculator) IP68 water resistance Power Off You can select this option to power-off the watch. Reboot You can choose this option to reboot the watch. Reset You can choose this option to reset the watch. Note - If you choose to reset, all your data and settings will be erased. ABOUT Tap on About to view the device information.	QUICK SETTINGS You can swipe up from the watch's home screen to gain quick settings access. DND POWER SAVING MODE CALL BRIGHTNESS RAISE TO WAKE ALWAYS ON DISPLAY SETTINGS	DEVICE INFORMATION AND TIPS DEVICE INFORMATION The NoiseFit Vortex Plus smartwatch contains the following: • 1.6" AMOLED display (466 x 466 px) • Bluetooth calling (Built-in microphone & speakers, recent calls, dial pad, contacts) • 100+ cloud based watch faces • Health tracking with NoiseFit app (Activity tracking, SpO2, sleep tracker, 24/7 Heart Rate Monitor, Breath) • Utility/productivity features (Stopwatch, alarm, timer, reminder, OBD, weather, compass/heart rate, flashlight, calculator) • IP68 water resistance TIPS You can update your NoiseFit Vortex Plus via the NoiseFit app. Go to My Device and select Check for updates. How do I find my watch's current firmware version? You can find the watch's current firmware on the watch. Go to "My Device" on the NoiseFit app. Select "Upgrade", choose Check for updates and update if any update is available.	How do I save battery? Follow these simple steps to save NoiseFit Vortex Plus battery: • Minimize the screen brightness • Limit the notification you receive from the NoiseFit app. How does the watch estimate how many calories have been burned? NoiseFit Vortex Plus estimates how many calories you've burned based on the physical data you entered when you set up your account. How do I change my activity goals? You can do it through the NoiseFit app. Go to "My Profile" and select "Goal". Change your goals and confirm. How do I log my weight? You can log in your weight the first time you setup your NoiseFit app. However, you can update the weight later via NoiseFit app. Go to My Profile and change or update your weight. You can update birthday, height, weight, and step length.	SAFETY AND HANDLING INSTRUCTIONS: • The device includes an in-built rechargeable battery. The battery life may degrade near the end-of-life of the battery. Do not attempt to change the battery yourself in any event as it may void up damaging the device and/or the batteries posing a safety hazard on equipment usage. • Please do not tamper with the battery terminals as it may result in battery leakage, overheating, explosion or a fire hazard. • Please do not pierce or disassemble the device as it may damage the battery causing the battery liquid to leak causing irritation to your skin if exposed to the liquid. • Damaged battery may also be prone to overheating or causing a fire hazard. • Do not place the device near fire or expose it to excessive heating as it may cause the battery to explode posing a safety hazard. • Only use Noise approved chargers and cables that are specifically designed for use with the device. Unapproved chargers and cables may damage the device and also pose a safety hazard for the user. • If the device emits a loud smell or burning odour, please stop using the device immediately and contact the Noise approved service centres. • The device can be used in ambient temperature ranges of -20°C to 55°C. Using the device outside of the prescribed temperature range may damage the device. Do not use the device in a sauna or steam room. • Do not use household cleaners to clean the device. Use soap-free cleaners instead.	• The device is dust and water resistant (rated at IP68). Following tips are to be followed for a safe upkeep of the device: • Please make sure that the device is not exposed to sea water or used in deep waters. • Do not expose the device to high pressure water flow. • Wipe the device clean of water with soft and clean cloth if exposed to water. • Leave the device to dry up naturally. • Do not open the device if it starts functioning upon exposure to water and despite following the above steps. Visit an authorized service centre for getting the device checked. MEDICAL DEVICE INTERFERENCE: The device includes components that may cause interference when worn with medical devices like pacemakers and other magnet-sensitive devices. In case you intend to use a medical device, please consult your physician before using the device. Also, in case the device is allowed to be worn with the medical device by your physician, ensure sufficient separation between the device and the medical device during all times. MEDICAL USE ADVISORY: Unless otherwise specified, the device and any associated app-based or Noise provided services are not suitable to be used as medical devices. In particular, the device and associated app-based or Noise provided services are not intended to diagnose, treat, cure or prevent any disease/health condition. We develop products and services to track daily activity and wellness information as accurately as possible. The accuracy of devices is not intended to be equivalent to medical devices or scientific measurement devices. HEARING LOSS: Prolonged exposure to high volumes may result in permanent damage to hearing capability. While using the device, ensure that the sound levels are maintained at optimum level.	CHOKING HAZARD: The device is not a toy and it contains small components that could cause a choking hazard. Accordingly, the device is not intended for use by or left unattended around small children or pets. SKIN IRRITATION HAZARD: In some cases, prolonged use of or exposure to the device may cause skin irritation or allergies in some users. To reduce the possibility of irritation, keep the device clean and dry. If you feel soreness, tingling, numbness, burning or stiffness on any part of your skin while or after using the watch, please immediately discontinue use. DISPOSAL INFORMATION: At Noise, we are committed towards protecting the environment and prevent any damage to the same by way of irresponsible disposal of e-waste generated from electronic devices. In our endeavour to collaboratively protect the environment, we urge our customers to help Noise to reduce the impact of e-waste on the environment. The following symbol is indicative that the device and/or any of the associated accessories (like USB cable, charger and the like) thereof should not be disposed with household/domestic waste. In accordance with the regulation of the Ministry of Environment, Forest and Climate Change, Noise has been granted Extended Producer Responsibility Authorization (EPR Authorization number: B-297016 (2003/2015)2016/10 Division dated 14.03.2021) by the Central Pollution Control Board. Accordingly, Noise is committed to contribute its bit towards protecting the environment by providing customers with the option of depositing their Noise devices, which have reached their end-of-life, at authorized e-waste collection centres. The details of our e-waste collection centres and our e-waste policy is available at the link: https://www.noisefit.com/pages/e-waste-management. By recycling, reusing material/or other forms of utilizing old devices, you are making an important contribution towards protecting our environment. Together we could make a difference!	CUSTOMER SUPPORT If you experience any problem with the watch, it may be fixed by restarting your watch. For any assistance, please reach out to us at link.support@noisefit.com and our support team will assist you.
---	---	--	--	---	---	---	---	--	--	---