

[Manuals.plus](#) /

› [Logitech](#) /

› Logitech Pebble Keys 2 K380s Wireless Bluetooth Keyboard User Manual

Logitech K380s Graphite

Logitech Pebble Keys 2 K380s Wireless Bluetooth Keyboard User Manual

Model: K380s Graphite

INTRODUCTION

This manual provides comprehensive instructions for the Logitech Pebble Keys 2 K380s wireless Bluetooth keyboard. It covers setup, operation, maintenance, troubleshooting, and detailed specifications to ensure optimal use of your device. The Pebble Keys 2 K380s is designed for multi-device connectivity and portability, offering a comfortable and quiet typing experience.

WHAT'S IN THE BOX

CONTENU DU COFFRET



EMBALLAGE
RESPONSABLE

FSC® N003028

The image above displays the contents of the Logitech Pebble Keys 2 K380s packaging. Upon unboxing your new keyboard, you should find the following items:

- Logitech Pebble Keys 2 K380s Keyboard

- 2 AAA alkaline batteries (pre-installed)
- User documentation
- Important Information Document (IID)

SETUP

1. Powering On

The Logitech Pebble Keys 2 K380s keyboard comes with two AAA alkaline batteries pre-installed. To power on the keyboard, locate the power switch on the side of the device and slide it to the 'On' position.

2. Connecting via Bluetooth



The Pebble Keys 2 K380s supports connection to up to three devices simultaneously using Bluetooth. The image illustrates the multi-device connectivity feature.

1. Ensure the keyboard is powered on.
2. Press and hold one of the Easy-Switch keys (1, 2, or 3) located at the top left of the keyboard until the LED light above the key starts blinking rapidly. This indicates the keyboard is in pairing mode.
3. On your device (computer, tablet, or smartphone), navigate to the Bluetooth settings.
4. Select "Logitech K380s" from the list of available devices.
5. Follow any on-screen prompts to complete the pairing process. The LED light on the Easy-Switch key will turn solid for a few seconds, then turn off, indicating a successful connection.
6. Repeat these steps for up to two additional devices using the other Easy-Switch keys.

3. System Compatibility

The keyboard is compatible with a wide range of operating systems:

- Windows 10, 11 or later
- macOS 11 or later
- iPadOS 13.1 or later
- iOS (for smartphones)
- Android 9.0 or later
- Chrome OS

- Linux



This diagram provides an overview of the keyboard's features, including its ability to connect to multiple devices, customizable function keys, and compatibility with various operating systems like Windows, macOS, ChromeOS, Android, and iOS.

OPERATING INSTRUCTIONS

1. Switching Between Devices

To switch between connected devices, simply press the Easy-Switch key (1, 2, or 3) corresponding to the device you wish to use. The keyboard will instantly connect to the selected device.

2. Using Function (Fn) Keys and Shortcuts



The image highlights the dedicated function keys and multimedia shortcuts available on the keyboard, designed for quick access to common tasks.

The Pebble Keys 2 K380s features a row of Fn keys (F1-F12) that double as multimedia and shortcut keys. By default, these keys perform specific actions such as:

- Screen capture
- Search
- Voice dictation
- Emoji menu
- Media playback controls (play/pause, next/previous track)
- Volume control (mute, volume up/down)

To use the standard F1-F12 functions, press the **Fn** key simultaneously with the desired F key.

3. Customizing Fn Keys with Logi Options+



The image shows a user working efficiently with the keyboard and a laptop, emphasizing the ability to customize function keys using the Logi Options+ application.

You can personalize the 10 Fn shortcut keys to perform daily actions, such as opening favorite applications or assigning copy/paste shortcuts, using the Logi Options+ application.

1. Download and install the Logi Options+ application from the official Logitech website (www.logitech.com/optionsplus).
2. Open the Logi Options+ application.
3. Select your Pebble Keys 2 K380s keyboard.
4. Navigate to the "Keys" or "Customization" section.
5. Assign desired functions or shortcuts to the programmable Fn keys.

MAINTENANCE

1. Cleaning the Keyboard

To maintain the cleanliness and functionality of your keyboard:

- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the surface of the keys and body.
- Avoid using harsh chemicals, abrasive cleaners, or solvents.
- For dust and debris between keys, use compressed air.
- Ensure the keyboard is powered off before cleaning.

2. Battery Replacement

The Pebble Keys 2 K380s is powered by two AAA alkaline batteries, offering an estimated battery life of up to 3 years. When the battery indicator light (if present) signals low power, or if the keyboard becomes unresponsive, it's time to replace the batteries.

1. Locate the battery compartment on the underside of the keyboard.
2. Open the battery compartment cover.
3. Remove the old AAA batteries.
4. Insert two new AAA alkaline batteries, ensuring correct polarity (+/-).
5. Close the battery compartment cover securely.

TROUBLESHOOTING

1. Keyboard Not Connecting

- **Check Power:** Ensure the keyboard is powered on and has sufficient battery charge.
- **Re-pair Device:** Go to your device's Bluetooth settings, forget the "Logitech K380s" connection, and then re-pair the keyboard following the "Connecting via Bluetooth" steps in the Setup section.
- **Bluetooth On:** Verify that Bluetooth is enabled on your computer, tablet, or smartphone.
- **Proximity:** Ensure the keyboard is within the effective range of your Bluetooth device (typically up to 10 meters or 33 feet).
- **Interference:** Move away from other wireless devices that might cause interference (e.g., Wi-Fi routers, cordless phones).

2. Keys Not Responding

- **Battery Check:** Replace the batteries if they are low or depleted.
- **Clean Keys:** Ensure no debris is lodged under the keys. Refer to the "Cleaning the Keyboard" section.
- **Restart:** Turn the keyboard off and then on again. Restart your connected device.

3. Lag or Delayed Input

- **Reduce Distance:** Bring the keyboard closer to your device.
- **Minimize Interference:** Reduce the number of active Bluetooth devices in the vicinity.
- **Update Drivers:** Ensure your device's Bluetooth drivers are up to date.

4. Easy-Switch Not Working

- **Re-pair Devices:** If a specific Easy-Switch slot is not working, try re-pairing that device to the corresponding key.
- **Check Device Bluetooth:** Ensure Bluetooth is active and discoverable on the target device.

SPECIFICATIONS

Brand	Logitech
Model Number	920-011803
Series	Pebble Keys 2 K380s
Color	Graphite

Operating System Compatibility	Android 9.0+, Chrome OS, Linux, Windows 10/11+, macOS 11+, iPadOS 13.1+, iOS
Hardware Platform	Mac, PC, Smartphone, iPad
Keyboard Description	Standalone
Power Source	Battery Powered (2 x AAA)
Connector Type	Bluetooth
Hand Orientation	Ambidextrous
Dimensions (L x W x H)	27.9 x 12.4 x 2.6 cm (10.98 x 4.88 x 1.02 inches)
Product Weight	415 Grams (including batteries)
Number of Keys	105
Material	Plastic (minimum 49% certified post-consumer recycled plastic)
Special Features	Low profile key, Lightweight, Keyboard shortcut and multimedia key, Easy-Switch multi-device connectivity
First Available Date	December 9, 2023



The image provides a visual representation of the keyboard's dimensions and weight, indicating its compact and portable design. The keyboard measures 279 mm in length, 124 mm in width, and 16 mm in height, weighing 415 grams including batteries.

UN DESIGN PENSÉ POUR UN AVENIR POSITIF



PLASTIQUE RECYCLÉ



EMBALLAGE
RESPONSABLE



This image highlights Logitech's commitment to sustainability, showing icons for recycled plastic content and responsible packaging, indicating the product's environmentally conscious design.

WARRANTY AND SUPPORT

Manufacturer's Warranty

The Logitech Pebble Keys 2 K380s keyboard comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Return Policy

For purchases made through Amazon, a **30-day refund/replacement policy** is typically available from the date of purchase. Please refer to Amazon's return policy for specific terms and conditions.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please visit the official Logitech support website or contact their customer service.

- Logitech Support Website: support.logi.com