

Manuals.plus / > Canon /

> Canon imageCLASS LBP6030w - Monochrome, Wireless Compact Wireless Laser Printer, 1 Year Limited Warranty, 19 PPM, White User Manual

Canon LBP6030W

Sign in to save this manual

Sign in to bookmark this manual and keep private notes.

Canon imageCLASS LBP6030w Wireless Laser Printer User Manual

Model: LBP6030W

Advertisements



Manuals+



INTRODUCTION

The Canon imageCLASS LBP6030w is a compact monochrome wireless laser printer designed for personal and home office environments. It offers reliable performance for daily printing tasks, emphasizing ease of use and efficiency.



Figure 1: The Canon imageCLASS LBP6030w printer with its paper tray extended, ready for use. This compact design is ideal for small spaces.

KEY FEATURES

- **Fast Print Speeds:** Capable of printing up to 19 pages per minute.
- **Compact Design:** Space-saving design allows it to fit conveniently in various home, school, or small office settings.
- **Wireless Connectivity:** Enables printing from compatible mobile devices from almost anywhere within your workspace.
- **Paper Capacity:** Features a paper tray that holds up to 150 sheets.
- **Sustainability:** Designed for energy efficiency, consuming less than 2 watts in Energy Saver mode.
- **Toner:** Utilizes Canon Genuine Toner 125, offering a yield of approximately 1,600 pages.
- **Peace of Mind:** Includes a 1-year limited warranty.

SETUP

1. Unboxing and Initial Placement

Carefully remove the printer from its packaging. Place the printer on a stable, flat surface with adequate space around it for ventilation and paper handling. Ensure the power outlet is easily accessible.



Figure 2: Front view of the Canon imageCLASS LBP6030w, showing its compact size and clean design, suitable for various environments.

2. Installing the Toner Cartridge

1. Open the top cover of the printer to access the cartridge compartment.
2. Remove the new Canon Genuine Toner 125 cartridge from its packaging.
3. Gently shake the cartridge horizontally to distribute the toner evenly.
4. Insert the cartridge into the printer until it clicks securely into place.
5. Close the top cover.



Figure 3: The printer's top cover is open, revealing the toner cartridge compartment. The Canon Genuine Toner 125 is visible inside.

3. Loading Paper

1. Pull out the paper tray from the front of the printer.
2. Adjust the paper guides to match the size of the paper you are loading.
3. Load up to 150 sheets of standard plain paper (8.5 x 11 inch or 8.5 x 14 inch) into the tray, print-side down.
4. Gently push the paper tray back into the printer until it is fully seated.



Figure 4: Paper loaded into the printer's input tray, ready for printing. The tray is designed to accommodate various standard paper sizes.

4. Power Connection and Driver Installation

1. Connect the power cord to the printer and then to a wall outlet.
2. Turn on the printer using the power button.
3. For initial setup and wireless configuration, it is recommended to connect the printer to your computer via a USB cable.
4. Install the necessary drivers from the provided installation CD or download the latest drivers from the official Canon support website.
5. Follow the on-screen instructions to complete the driver installation and connect the printer to your wireless network.



Figure 5: The rear panel of the printer, displaying the power input and USB port for connectivity. Ensure proper cable connections for stable operation.

OPERATING THE PRINTER

Basic Printing

1. Ensure the printer is powered on and connected to your network or computer.
2. Open the document or image you wish to print on your computer or mobile device.
3. Select the print option from your application (usually File > Print).
4. Choose "Canon LBP6030w" as your printer.
5. Adjust print settings such as paper size, number of copies, and orientation as needed.
6. Click "Print" to send the job to the printer. The printer will quickly process and output your monochrome documents.



Figure 6: The Canon imageCLASS LBP6030w in operation, with a document being fed through the printer. It efficiently handles print jobs for quick output.

The LBP6030w is a monochrome laser printer, meaning it prints in black and white only. It is capable of printing on various media types, including cardstock and envelopes, without issues.

MAINTENANCE

Toner Cartridge Replacement

When the print quality deteriorates or the toner low indicator appears, it's time to replace the toner cartridge. Follow the installation steps in the "Setup" section to replace the Canon Genuine Toner 125 cartridge.

Advertisements

Cleaning

Regularly clean the exterior of the printer with a soft, dry cloth. For internal cleaning, refer to the detailed instructions in the full user manual (link provided in the Warranty and Support section) to

ensure proper maintenance and longevity of your printer.

TROUBLESHOOTING

- **Printer Not Responding:** Ensure the printer is powered on and all cables (power, USB if used) are securely connected. For wireless connections, verify the printer is connected to the correct network and has a stable signal.
- **Paper Jams:** If a paper jam occurs, carefully open the printer covers and remove any jammed paper following the instructions in the full user manual. Ensure paper is loaded correctly and not overfilled.
- **Print Quality Issues:** Check the toner cartridge level. If low, replace it. Ensure you are using appropriate paper for your print job.
- **Driver Issues:** If experiencing problems with drivers, try reinstalling them from the Canon support website. Ensure your operating system is up to date.

For more detailed troubleshooting steps, consult the comprehensive user manual.

Advertisements



SPECIFICATIONS

Feature	Detail
Product Dimensions	14.3"D x 16.1"W x 7.8"H
Maximum Media Size	8.5 x 14 inch
Power Consumption (Energy Saver)	Less than 2 Watts
Included Components	imageClass LBP6030W Wireless Laser Printer
Print Media	Paper (plain)
Max Input Sheet Capacity	150 sheets
Max Copy Speed (Black & White)	19 ppm
Maximum Black and White Print Resolution	600 dpi
Dual-sided printing	No

Feature	Detail
Hardware Interface	USB, USB 2.0
Ink Color	Black
Compatible Cartridge	Canon Genuine Toner 125 (1,600 page yield)
Item Weight	12.1 pounds
Connectivity Technology	Wi-Fi
Printing Technology	Laser
Printer Output	Monochrome

WARRANTY AND SUPPORT

The Canon imageCLASS LBP6030w comes with a **1-year limited warranty**, providing peace of mind for your purchase.

For comprehensive support, including detailed troubleshooting guides, driver downloads, and contact information, please refer to the official Canon support resources. You can also find the full User Manual in PDF format:

[Download Full User Manual \(PDF\)](#)

Advertisements



OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for embedding at this time. Please refer to the user manual for detailed instructions and visual aids.

© 2023 Canon Inc. All rights reserved.

Advertisements

