

[Manuals.plus](#) /

› [XP-Pen](#) /

› XPPen Deco Pro MW Bluetooth Drawing Tablet - User Manual

XP-Pen Deco Pro MW

XPPen Deco Pro MW Bluetooth Drawing Tablet - User Manual

Model: Deco Pro MW

1. INTRODUCTION

The XPPen Deco Pro MW is a versatile Bluetooth drawing tablet designed for digital art, painting, and remote learning. It features advanced connectivity options, a battery-free stylus, and customizable controls to enhance your creative workflow.

Key Features:

- **Bluetooth 5.0 Connectivity:** Offers reliable wireless connection in addition to USB wireless receiver and wired options.
- **Wide Compatibility:** Supports Windows 7 or later, Mac OS 10.10 or later, Android 6.0 or later, Chrome OS M88 or later, and Linux. Compatible with major drawing software.
- **Battery-Free PA1 Stylus:** Features 60-degree tilt function and 8,192 levels of pressure sensitivity for precise control.
- **Efficient Dual Dials & Express Keys:** Eight customizable shortcut keys and two innovative dial wheels for improved workflow.
- **Superior Endurance:** Ultra-thin 7mm body with a large capacity battery for long working hours in Bluetooth mode.

2. PACKAGE CONTENTS

Verify that all items are present in your XPPen Deco Pro MW package:

- XPPen Deco Pro MW Drawing Tablet
- PA1 Battery-Free Stylus
- 10 x Replacement Pen Nibs
- 1 x USB-C to USB-C Cable

- 1 x USB-A to USB-C Cable
- 1 x USB Wireless Receiver
- 1 x USB-Micro Adaptor
- 1 x Drawing Glove
- Quick Guide & Warranty Policy



Image: All items included in the XPPen Deco Pro MW package, neatly arranged.

3. PRODUCT OVERVIEW

Familiarize yourself with the physical components and layout of your Deco Pro MW tablet.



Image: The XPPen Deco Pro MW tablet and its accompanying stylus.

PA1 Battery-Free Stylus

The PA1 stylus is designed for comfort and precision. It features two customizable buttons and a pressure-sensitive tip.

SMOOTH AND SLEAK

The PA1 battery-free stylus features a 60-degree tilt function and 8,192 levels of pressure sensitivity.



Image: Detailed view of the PA1 stylus, showing its ergonomic design and programmable buttons.

Express Keys and Dual Dials

The tablet features eight responsive shortcut keys and two innovative dial wheels. These can be programmed for various functions to streamline your workflow.

EFFICIENT DUAL DIALS

Deco Pro series features 8 responsive shortcutkeys and 2 innovative dials

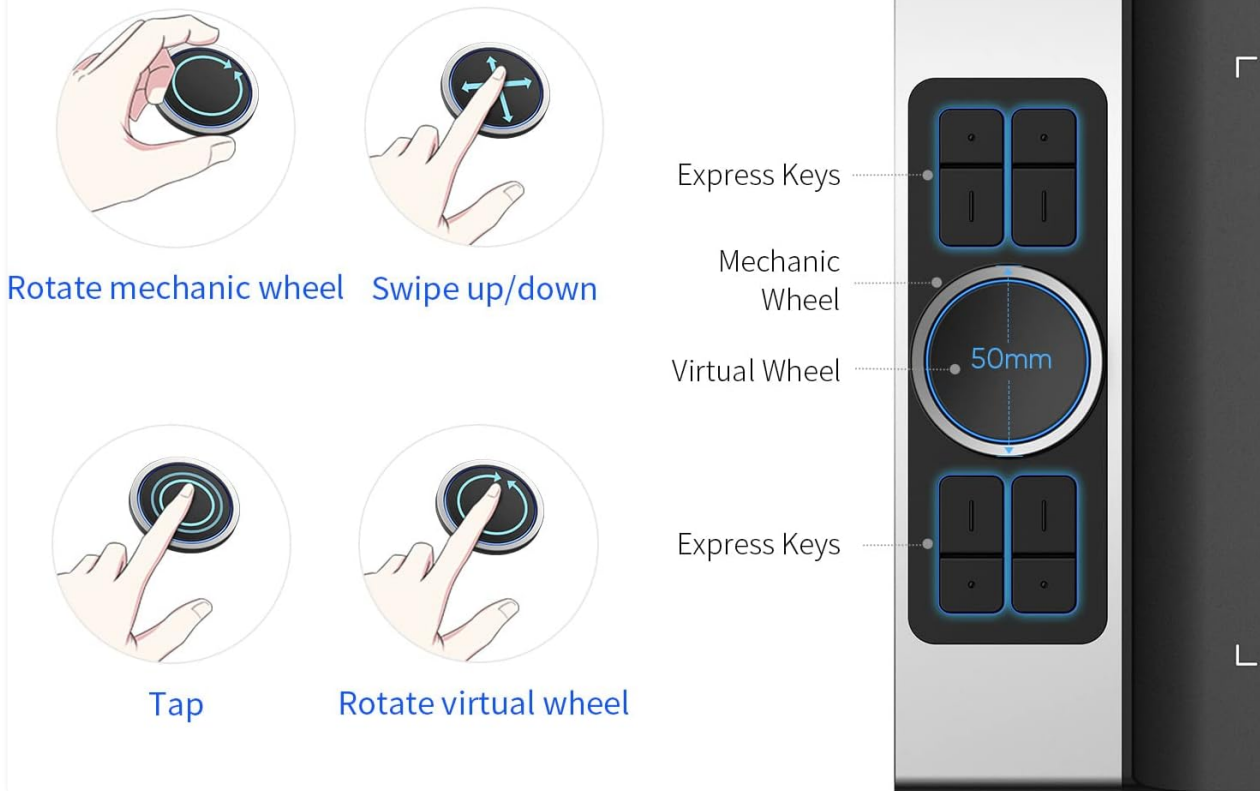


Image: Visual guide to the customizable express keys and dual dial wheels on the tablet.

4. CONNECTIVITY

The Deco Pro MW offers multiple ways to connect to your device.

Bluetooth Connection

For wireless operation, the tablet can connect via Bluetooth 5.0. Ensure your device's Bluetooth is enabled and pair with the 'Deco Pro MW' device.

BOUNDLESS IMAGINATION WITH 3 CONNECTIONS

Bluetooth 5.0



reddot award 2019
winner

GOOD DESIGN
AWARD 2018



3–5 Meters of Indoor Wireless Working Area

*The data comes from a laboratory simulation test and may differ depending on the environment that it is used in.



Wireless Receiver



Cord Length:
1.5 Meters

Image: Overview of Bluetooth, wireless receiver, and wired USB connection options.

USB Wireless Receiver & Wired Connection

Alternatively, use the provided USB wireless receiver for a stable wireless connection or connect directly via the USB-C cable for a wired setup.

Your browser does not support the video tag.

Video: A tutorial demonstrating various connection methods for the Deco Series Pen Tablet, including wired and wireless options.

5. DRIVER INSTALLATION

To ensure full functionality, install the latest drivers for your operating system from the official XPPen website.

Windows Driver Setup

Follow these steps to install the driver on your Windows computer:

1. Visit www.xp-pen.com.
2. Navigate to the 'Support' page and then the 'Download' tab.

3. Select 'Deco Series Pen Tablet' as your product category.
4. Download the latest Windows driver for your specific model.
5. Follow the on-screen prompts to complete the installation.

Your browser does not support the video tag.

Video: A step-by-step guide on how to install the Deco Series Pen Tablet driver on Windows operating systems.

Mac Driver Setup

Follow these steps to install the driver on your Mac computer:

1. Visit www.xp-pen.com.
2. Navigate to the 'Support' page and then the 'Download' tab.
3. Select 'Deco Series Pen Tablet' as your product category.
4. Download the latest Mac driver for your specific model.
5. Follow the on-screen prompts to complete the installation, ensuring to grant necessary accessibility and screen recording permissions.

Your browser does not support the video tag.

Video: A step-by-step guide on how to install the Deco Series Pen Tablet driver on Mac operating systems.

6. OPERATING THE TABLET

Once connected and drivers are installed, your Deco Pro MW tablet is ready for use.

Basic Pen Usage

Hold the PA1 stylus as you would a regular pen. The tablet's active area will map to your screen. The pen's pressure sensitivity allows for varied line thickness and opacity depending on the software used.

Customizing Express Keys and Dials

Use the XPPen driver software to customize the functions of the eight express keys and two dial wheels. You can assign different shortcuts for various applications, optimizing your workflow.

Left-Handed User Friendly

The tablet design accommodates both right-handed and left-handed users. The orientation can be adjusted in the driver settings.

LEFT-HANDED USER FRIENDLY



Gift-OTG Adapters
Gadget for connecting Deco Pro to Android device.

Image: A left-handed user operating the Deco Pro MW tablet, highlighting its adaptable design.

7. COMPATIBILITY

The Deco Pro MW is designed for broad compatibility with various operating systems and creative software.

Operating Systems:

- Windows 7 or later
- Mac OS 10.10 or later
- Android 6.0 or later
- Chrome OS M88 or later
- Linux

Software Compatibility:

The tablet is compatible with most drawing and design software, including but not limited to:

- Adobe Photoshop
- SAI

- Painter
- Adobe Illustrator
- Krita
- GIMP
- Clip Studio Paint

EXCELLENT COMPATIBILITY

The Deco Pro series supports Windows, Mac OS, Android, Chrome OS and Linux Systems.



Image: Visual representation of the tablet's broad compatibility with operating systems and popular creative applications.

8. BATTERY AND POWER MANAGEMENT

The Deco Pro MW is equipped with a high-capacity battery for extended use.

- **Battery Life:** Up to 12 hours of continuous use in Bluetooth mode.
- **Charging Time:** Approximately 2 hours for a full charge.
- **Power Switch:** A convenient on/off switch is located on the back of the tablet.



Up to **12** Hours
Battery Life

Up to **2** Hours
Charging Time

1.92 Lb
Weight

1500 mAh
Battery

12hours

A convenient switch on the back allows you to turn the pen tablet on or off.

LONG STANDBY DEVICE FOR CARRY OUT

Image: Key battery and power specifications for the Deco Pro MW tablet.

9. MAINTENANCE

Proper care will extend the life and performance of your drawing tablet.

- **Cleaning:** Use a soft, dry cloth to clean the tablet surface and stylus. Avoid abrasive cleaners or solvents.
- **Storage:** Store the tablet and stylus in a cool, dry place away from direct sunlight and extreme temperatures. Use the provided pen holder for the stylus.
- **Pen Nibs:** Replace pen nibs when they show significant wear to maintain optimal drawing performance. Use the nib remover tool (often found in the pen holder) to carefully extract worn nibs and insert new ones.

10. TROUBLESHOOTING

If you encounter issues with your Deco Pro MW tablet, try the following solutions:

- **No Pen Response:**

- Ensure the tablet is powered on and correctly connected (wired or wireless).
- Verify that the drivers are correctly installed and updated.
- Check if the pen nib is worn out and replace it if necessary.
- Restart your computer and the tablet.

- **Connection Issues:**

- For Bluetooth, ensure your device's Bluetooth is on and the tablet is in pairing mode. Try re-pairing.
- For wireless receiver, ensure the receiver is securely plugged into a USB port.
- For wired connection, try a different USB port or cable.


- **Driver Not Working Correctly:**

- Uninstall any previous tablet drivers before installing the XPPen driver.
- Ensure your operating system is up to date.
- Temporarily disable any antivirus software during driver installation.

11. SPECIFICATIONS

Feature	Detail
Product Dimensions	15.74 x 8.94 x 0.65 inches
Item Weight	4.18 pounds
Connectivity Technology	Bluetooth, USB
Pressure Sensitivity	8192 Levels
Operating System Compatibility	Windows, Android, Linux, Chrome OS, Mac
Battery	1 Lithium Ion battery required (included)
Model Number	Deco Pro MW

Deco Pro Small

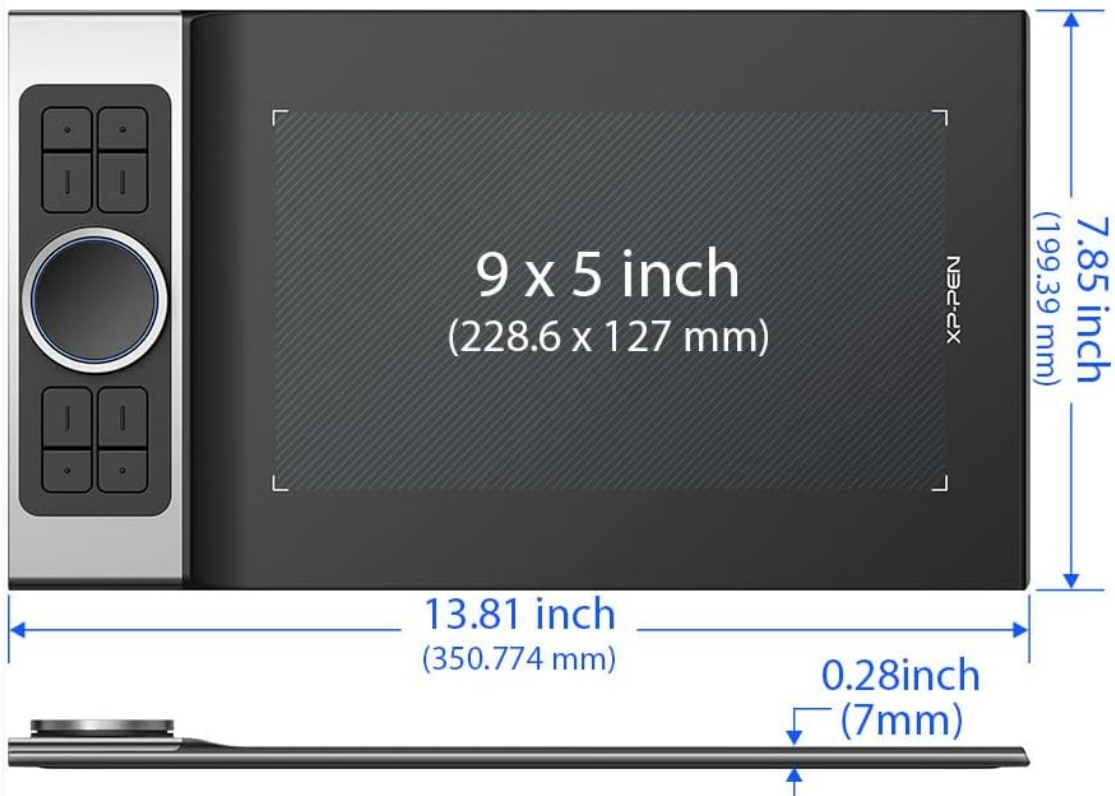

Deco Pro Medium

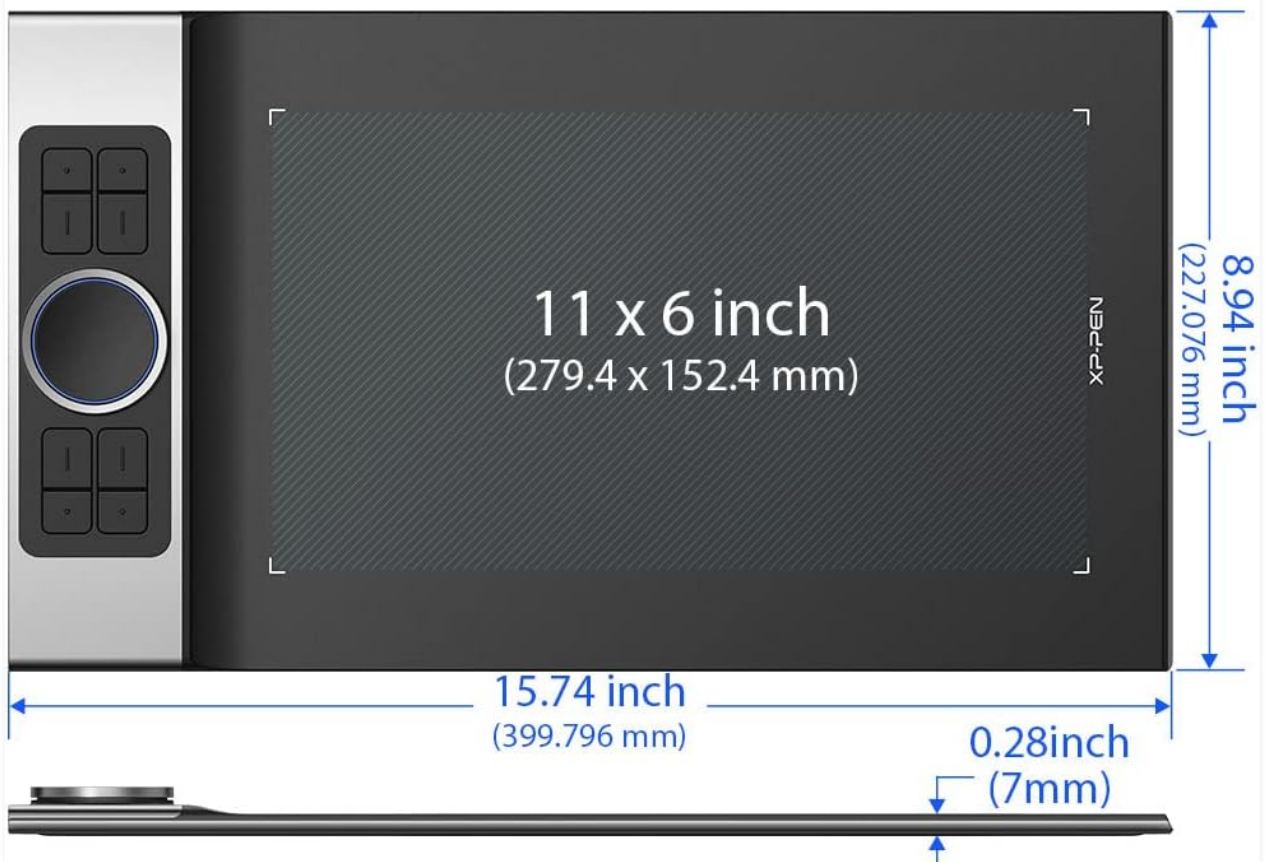


Image: Detailed dimensions of the Deco Pro tablet series.

12. WARRANTY AND SUPPORT

XPPen provides comprehensive support for its products.

- **Warranty:** A 1-Year Protection Plan is offered for all XPPen products. Please contact XPPen for terms and conditions regarding support, returns, and refunds.
- **Customer Service:** For any product-related questions or support, you can get in touch with XPPen via Amazon Message or through their official website.