

[Manuals.plus](#) /

› [OnePlus](#) /

› OnePlus Pad 4 User Manual

OnePlus OPD2514

OnePlus Pad 4 User Manual

Model: OPD2514

INTRODUCTION

Welcome to the OnePlus Pad 4 user manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read this manual thoroughly to ensure proper use and to maximize your tablet's capabilities.

WHAT'S IN THE BOX

Upon unboxing your OnePlus Pad 4, verify that all the following items are present:

- 1 x OnePlus Pad 4 Tablet
- 1 x Charger
- 1 x Charge Cable
- 1 x User Guide & Safety and Warranty Booklet

SETUP

1. Initial Charging

Before first use, fully charge your OnePlus Pad 4. Connect the provided charger to the tablet's charging port and then to a power outlet. The battery indicator on the screen will show charging progress.

2. Powering On

Press and hold the power button, located on the side of the tablet, until the OnePlus logo appears on the screen. Release the button once the logo is visible.

3. Initial Configuration

Follow the on-screen instructions to complete the initial setup:

- **Language Selection:** Choose your preferred language.
- **Wi-Fi Connection:** Select your Wi-Fi network and enter the password to connect to the internet.
- **Google Account Setup:** Sign in with your Google account or create a new one. This is essential for accessing the Google Play Store and other Google services.
- **Security Settings:** Set up a screen lock (PIN, pattern, or password) and configure facial recognition if desired.

OPERATING INSTRUCTIONS

Display and Visual Experience

The OnePlus Pad 4 features a large, high-resolution display designed for immersive viewing and productivity.

- **Screen Size:** 33.53 cm (13.2 inches) with a 7:5 aspect ratio.
- **Resolution:** 3.4K (3392x2400 pixels) for sharp, detailed visuals.
- **Refresh Rate:** Adaptive 144Hz for smooth scrolling and fluid animations.
- **Brightness:** Up to 1000 nits HBM brightness for clear visibility in various lighting conditions.
- **Color Accuracy:** Supports 12-bit color depth and 98% DCI-P3 color saturation for vibrant and accurate colors.
- **Dolby Vision:** Enhanced HDR experience for compatible content.

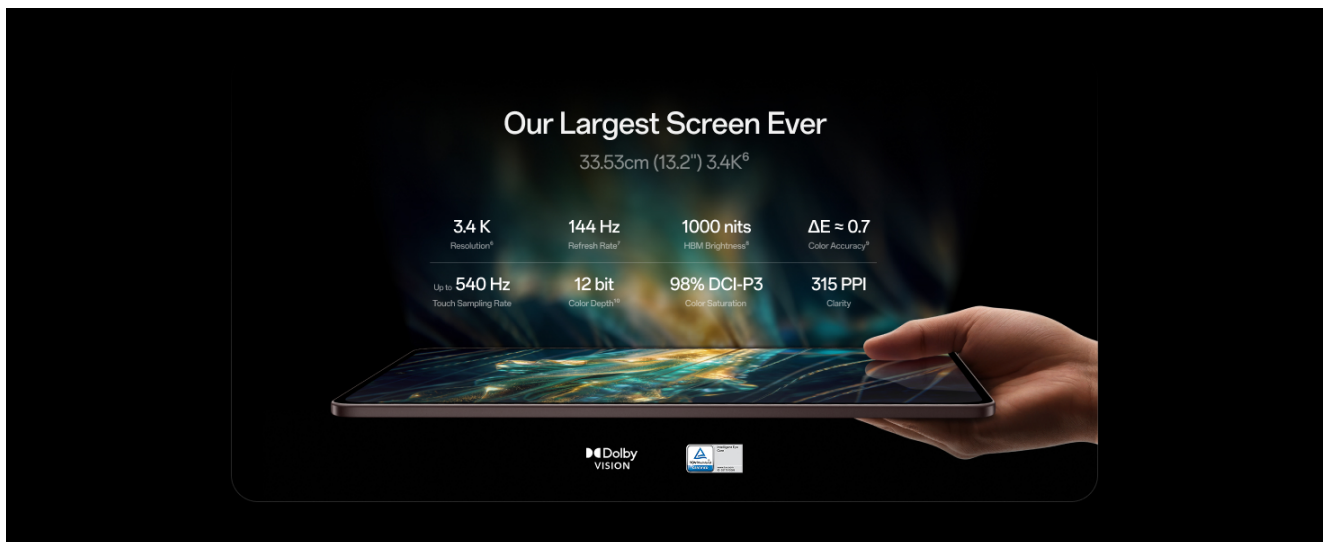 


Image: OnePlus Pad 4 display specifications.

Performance

Powered by the Snapdragon 8 Elite Gen 5 platform, the OnePlus Pad 4 delivers high performance for demanding applications and multitasking.

- **Processor:** Snapdragon 8 Elite Gen 5 for efficient and powerful operation.
- **Cooling System:** Cryo-Velocity Cooling System with a 40,760 mm² cooling area to maintain stable performance during extended use.
- **Operating System:** OxygenOS 16.0 provides a clean and smooth user interface.

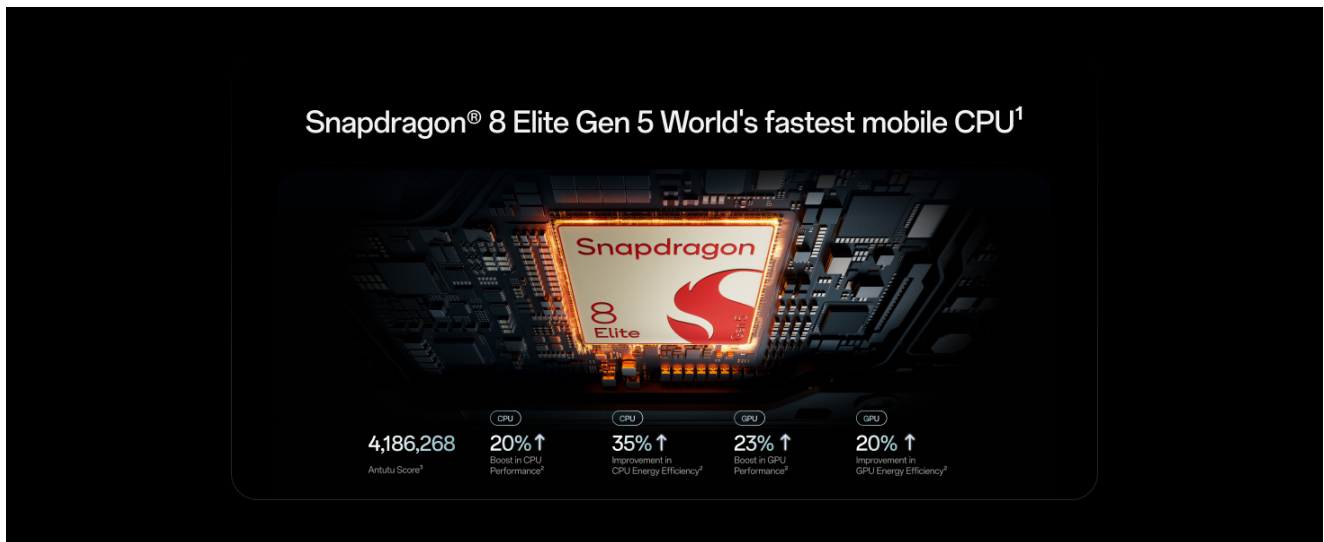 


Image: OnePlus Pad 4 featuring the Snapdragon 8 Elite Gen 5 processor.

Audio

Experience rich and immersive sound with the integrated 8-speaker system.

- **Speaker Configuration:** Four woofers and four tweeters arranged symmetrically.
- **Spatial Audio:** Delivers an immersive cinematic sound experience with deep bass and crisp highs.
- **Adaptive Audio:** Sound output adjusts based on the tablet's orientation for balanced audio.

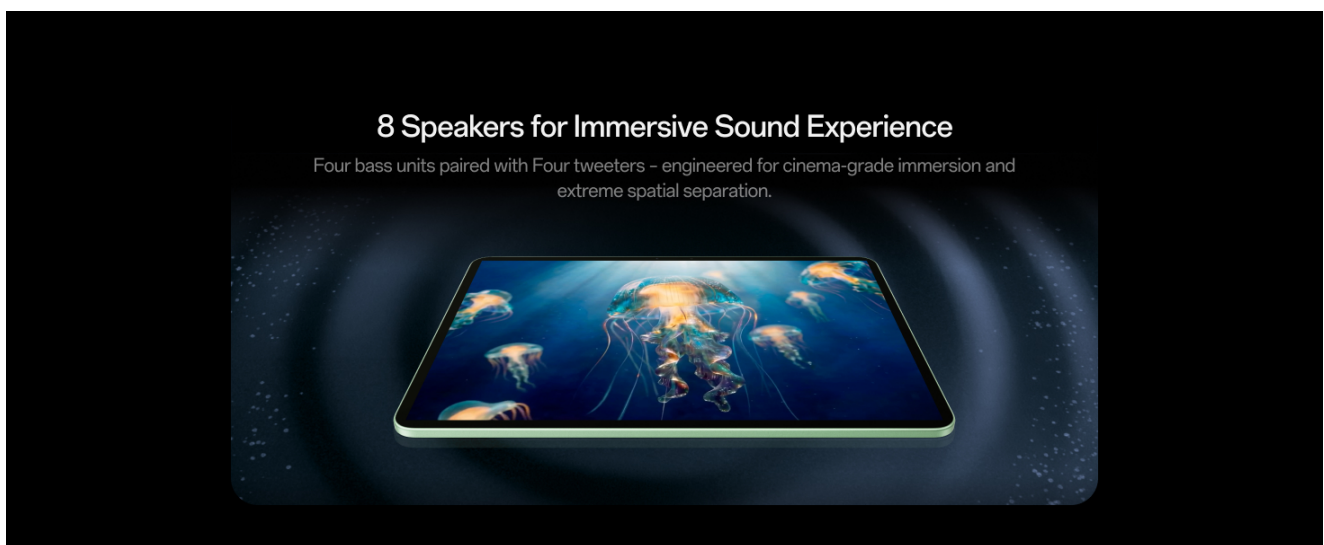 


Image: OnePlus Pad 4 highlighting its 8-speaker system.

Connectivity

The tablet offers robust Wi-Fi connectivity for seamless internet access.

- **Wireless Technology:** Wi-Fi.
- **AI Smart Antenna Design:** Features a hybrid magnetic loop and cavity antenna system for strong and stable signal reception, optimizing for Wi-Fi 5G environments.

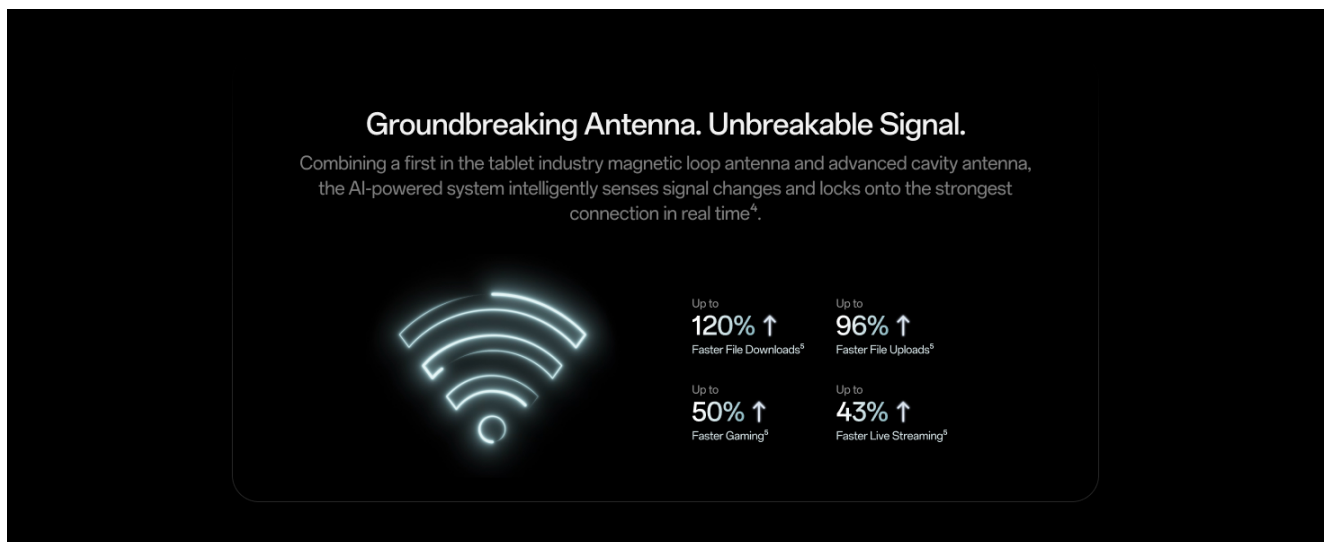 


Image: Diagram illustrating the AI Smart Antenna Design of the OnePlus Pad 4.

Battery

The OnePlus Pad 4 is equipped with a large battery for extended usage.

- **Capacity:** 13,380 mAh battery.
- **Endurance:** Designed for all-day power, supporting up to 54 days standby, 20 hours video playback, or 7 hours gaming.

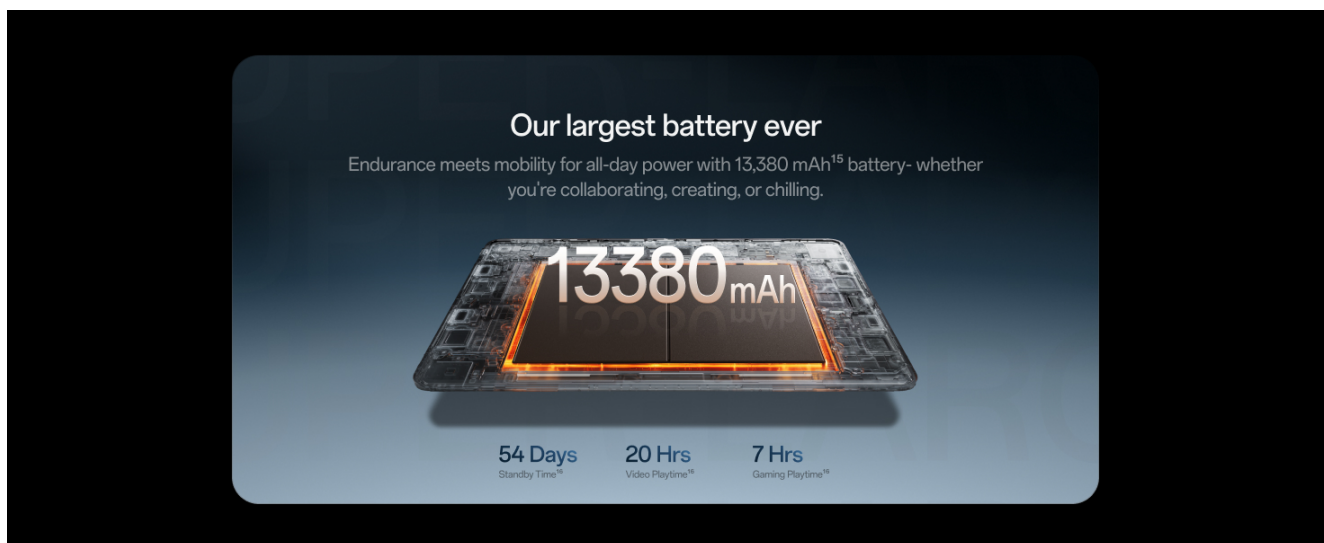 


Image: Illustration of the OnePlus Pad 4's 13,380 mAh battery.

AI Features

Leverage integrated AI capabilities for enhanced productivity and convenience.

- **AI Recorder:** Record and transcribe meetings, add notes and images, and organize key points.
- **AI Painter:** Transform notes into data charts, mind maps, or flowcharts.
- **Google Gemini:** Access Google's AI assistant for search results, ideas, and learning.
- **AI Clear Call:** Reduces background noise for crystal-clear calls in noisy environments.
- **AI Translation:** Translate websites, screenshots, and other content.



Image: OnePlus Pad 4 demonstrating the AI Recorder feature.

Accessories (Sold Separately)

Enhance your tablet experience with optional accessories:

- **OnePlus Stylo Pro:** For natural note-taking, sketching, and precise interaction.
- **OnePlus Pad 4 Smart Keyboard:** Provides a responsive typing experience for PC-level productivity.



Image: OnePlus Stylo Pro in use with the OnePlus Pad 4.



Image: OnePlus Pad 4 with the Smart Keyboard accessory.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your OnePlus Pad 4.

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.
- **Software Updates:** Regularly check for and install system updates to benefit from the latest features, security patches, and performance improvements. Navigate to *Settings > About device > Up to date* to check for updates.
- **Storage Management:** Periodically review and delete unnecessary files, apps, and media to free up storage space and maintain performance.
- **Battery Care:** Avoid extreme temperatures. Do not let the battery drain completely frequently. Use only the official charger and cable.
- **Physical Protection:** Consider using a protective case and screen protector to guard against drops and scratches.

TROUBLESHOOTING

If you encounter issues with your OnePlus Pad 4, refer to the following common solutions:

- **Device Not Powering On:**
 - Ensure the battery is charged. Connect the tablet to the charger for at least 30 minutes before attempting to power on.
 - Press and hold the power button for 10-15 seconds to force a restart.
- **Wi-Fi Connectivity Issues:**
 - Verify your Wi-Fi router is working correctly and your internet connection is active.
 - Restart the tablet and your Wi-Fi router.
 - Forget the Wi-Fi network on your tablet and reconnect.
- **Slow Performance or App Crashes:**
 - Close all unused applications running in the background.
 - Clear the cache of problematic apps (Settings > Apps > [App Name] > Storage > Clear cache).
 - Ensure your device software is up to date.
 - If issues persist, consider a factory reset (back up your data first).
- **Screen Unresponsive:**
 - Force restart the device by holding the power button.
 - If the issue continues, contact customer support.

SPECIFICATIONS

Brand	OnePlus
Model Name	OnePlus Pad 4
Model Number	OPD2514
Processor	Snapdragon 8 Elite Gen 5
Operating System	OxygenOS 16.0
RAM	12 GB
Storage Capacity	512 GB
Screen Size	13.2 Inches (33.53 cm)
Display Resolution	3392 x 2400 Pixels (3.4K)
Display Type	LCD
Refresh Rate	144 Hz
Battery Capacity	13380 Milliamp Hours
Connectivity	Wi-Fi

Dimensions (L x W x Thickness)	28.9L x 21W x 0.6Th Centimeters
Item Weight	657 Grams
Human Interface	Touchscreen with Stylus Support

WARRANTY AND SUPPORT

Warranty Information

The OnePlus Pad 4 comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please refer to the included Safety and Warranty Booklet for full terms and conditions.

Customer Support

For technical assistance, warranty claims, or further inquiries, please contact OnePlus customer support through their official channels:

- **Online Support:** Visit the official [OnePlus Support Website](#).
- **Service Centers:** Locate authorized service centers in your region via the support website.