



Quick Start Guide


Challenger
2.1 Multimedia Wood Encased Speaker

I. Important - Warnings and Safety

1. Do not place the speaker near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Use only accessories supplied by FINGERS.
3. It is recommended to refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

II. In the box


1 x Sub-Woofer	1 x Remote Control
2 x Satellites Speaker	1 x Quick Start Guide
1 x Stereo to RCA cable (Audio cable)	1 x Brand Note

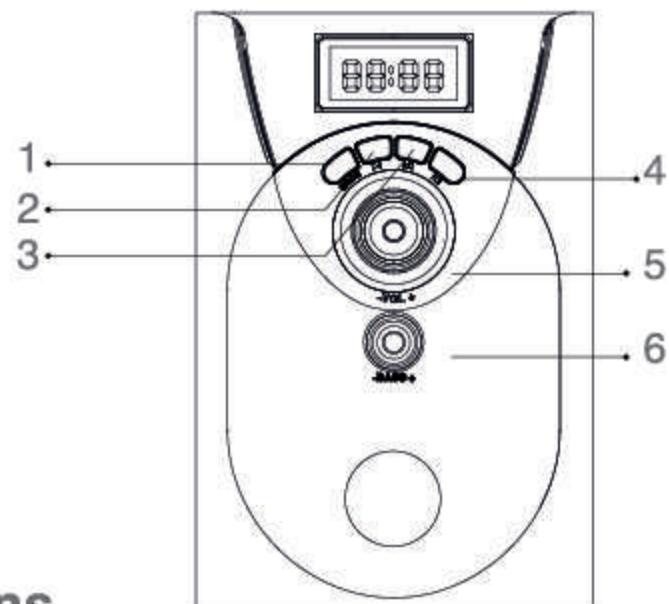

III. On-board Controls

Function	Description / Operations
1 Mode	Short press to navigate among different modes of BT, FM Radio, USB, SD and AUX
2 Play/Pause/Auto-Scan	In BT/USB/SD mode: - Short Press to Play/Pause current track In FM Mode: - Short Press to Volume Mute - Long press for Auto-scan In AUX mode: - Short Press to Volume Mute
3 Previous Track	Short Press to select Previous Track
4 Next Track	Short Press to select Next Track
5 Volume Controller	Rotate the controller to adjust master volume level of the speaker system
6 Bass Controller	Rotate the controller to adjust bass level of the speaker system

IV. Connections

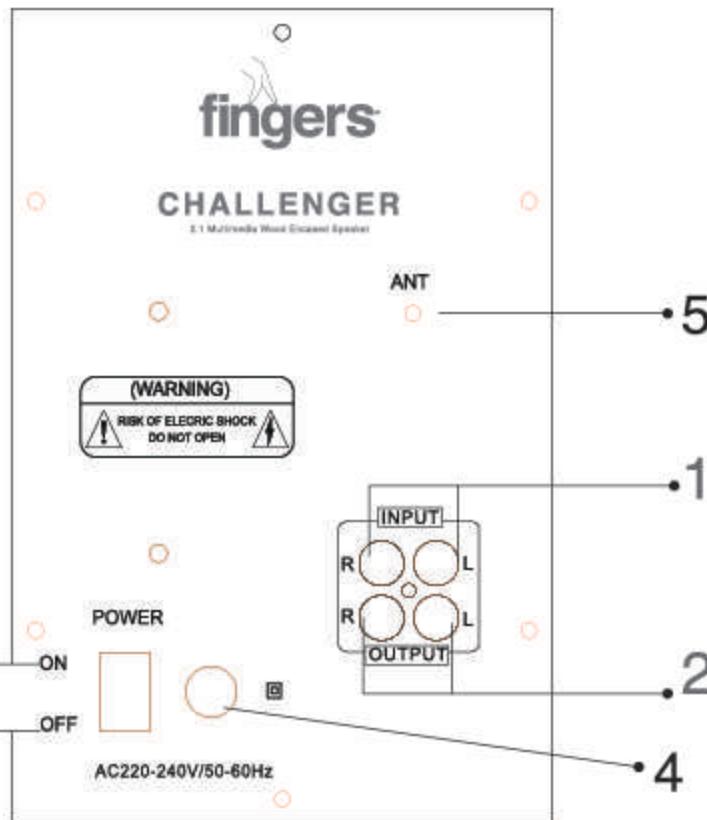

1 Audio Input (L/R) To the signal from PC/Notebook/MP3/VCD/DVD/Music System, etc.

2 Audio Output (L/R) Left/Right channel output connectors of the system


3 On-Off

4 AC In

5 FM Antenna

Illustration

To prevent malfunction and/or damage to speakers or other devices, we recommend to always turn the volume down and switch OFF all the power devices before making any connections.

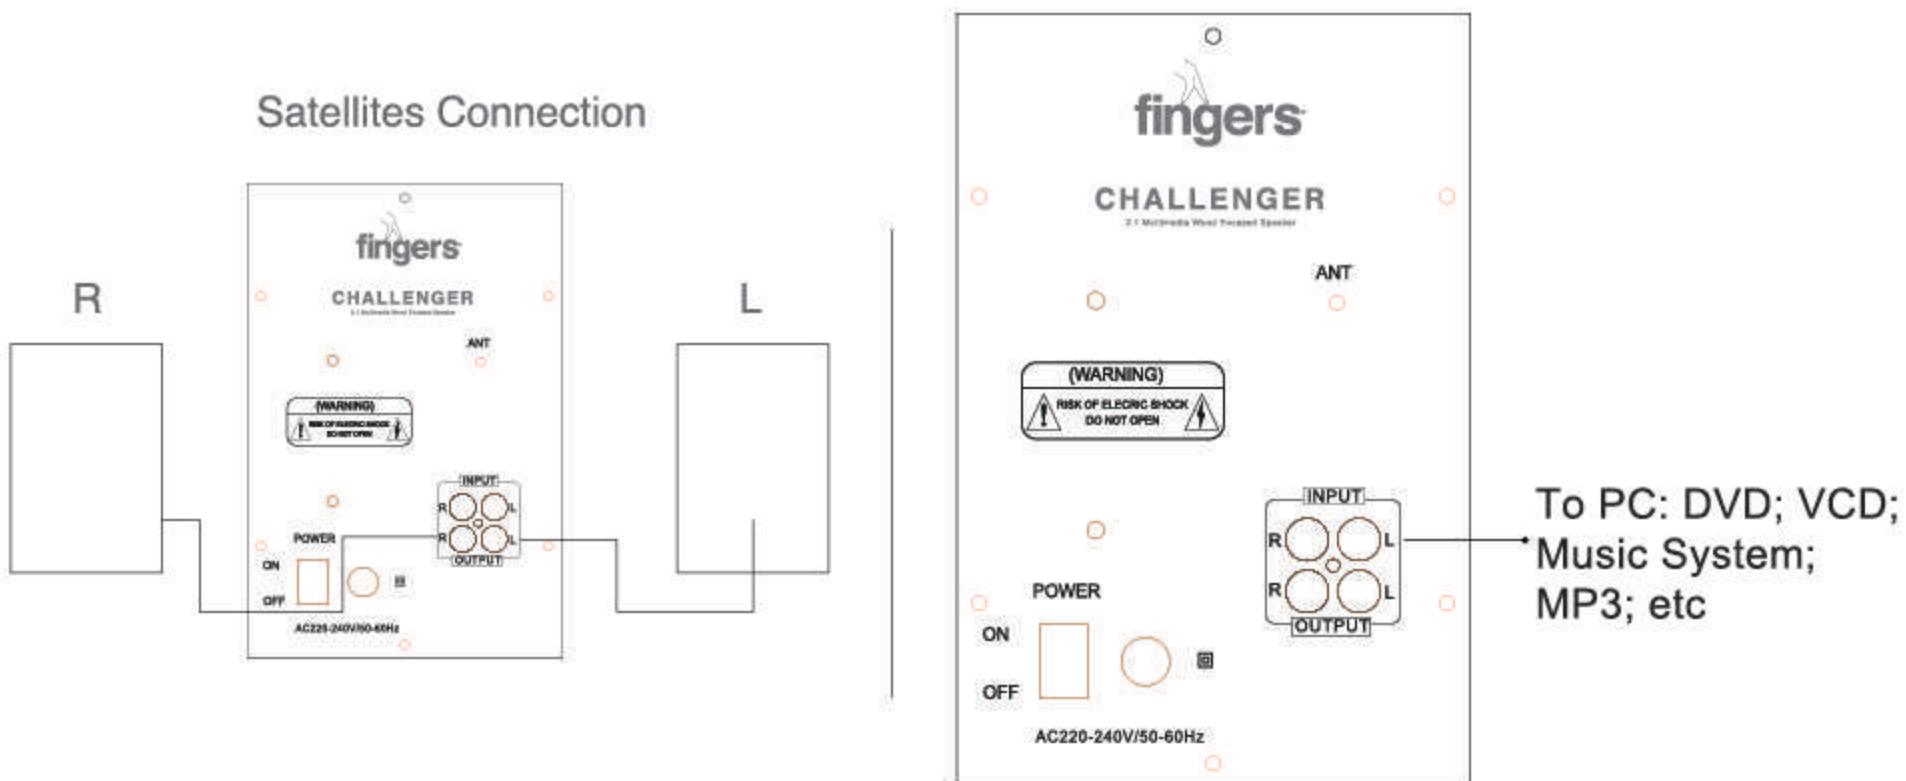

V. Modes

You can enjoy your music in the following ways

- i. BT
- ii. FM Radio
- iii. USB
- iv. SD
- v. AUX

i. BT Mode

- Press on the mode button till the voice prompt of the word “BT mode” is heard.
- The LED screen highlights “BT” signifying that it is ready to pair a device.
- Make sure that Bluetooth is enabled on your device. Find the device list and select FINGERS Challenger. A sound prompt of “Connected” is heard and it is ready to play.



ii. FM Radio

- Press on the mode button till the voice prompt of the word “FM Mode” is heard.

a. Auto Scan

- Long press $\blacktriangleright\!\!\!$ to auto-scan and save available FM channels automatically.

b. Select FM Channels

- FM channels can be navigated with numeric keys as well; Can be used to switch to any saved FM channel as well as any available FM frequency.
- Once FM channels are tuned, you can navigate $\blacktriangleright\!\!\!$ and $\blacktriangleleft\!\!\!$ to select the desired FM channel.

iii. USB

- Insert the USB in the provided port.
- You can then play your favourite tracks directly from the USB.


iv. SD

- Insert the SD card in the provided port.
- You can then play your favourite tracks directly from the SD Card.

v. AUX

- If you wish to listen to music from mobile devices, plug in the AUX cable in the AUX port.
- You can then stream music directly from your mobile devices.

VI. Remote Control

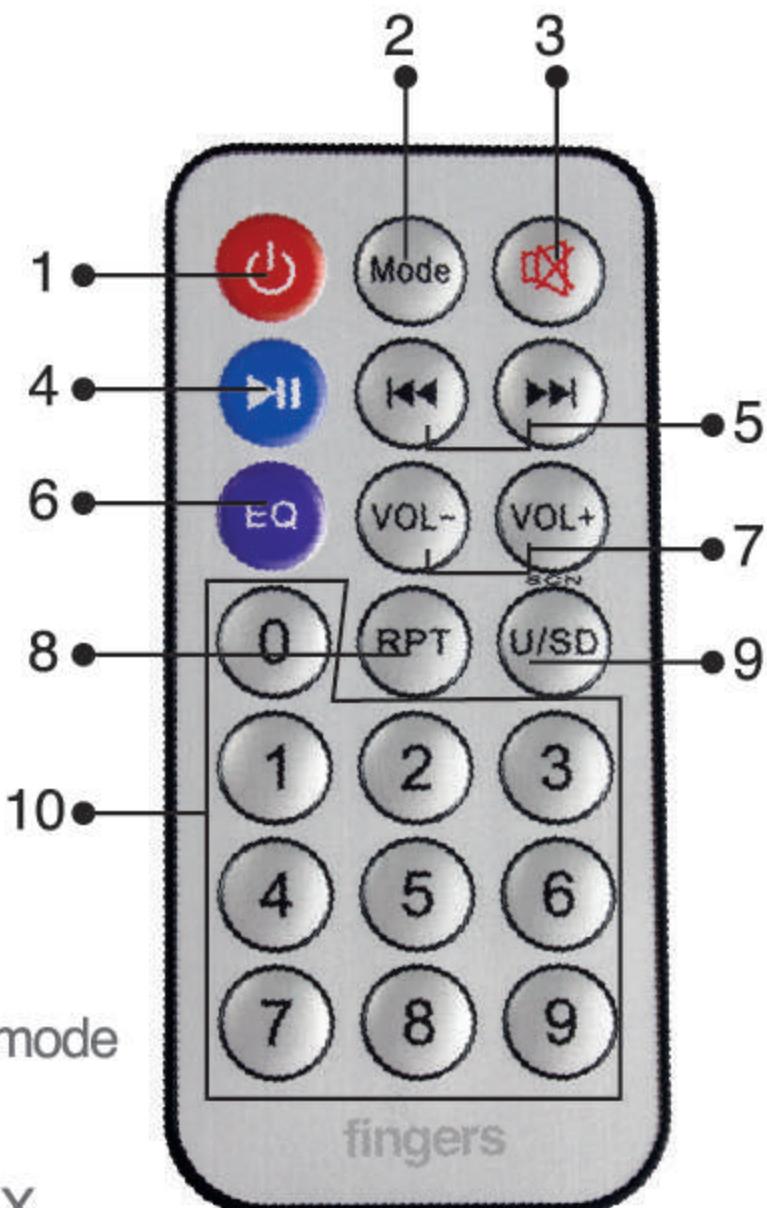

1. Stand-by: To switch between stand-by & operational mode
2. Mode: Short Press to switch between different modes of BT | FM Radio | SD | USB | AUX
3. Mute: To enable or disable volume mute of the system
4. Play/Pause: In BT/USB/SD mode - To Play/Pause current track
In FM and AUX mode - As Volume Mute
5. $\blacktriangleright/\blacktriangleright$: Short Press to select Next Track/ Previous Track
6. EQ: Short Press to select desired equalizer
7. VOL -/+: Short Press to increase/decrease the volume level
8. RPT: To repeat the track in USB/SD mode
9. U/SD: Short Press to go directly in USB/SD mode
10. 0-9 Numeric Keys: To select desired track in USB and SD mode, and to select saved FM channel/FM Frequency

VII. Care and Maintenance

1. Switch off the speaker before cleaning it.
2. Use soft, damp cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

VIII. Product Specifications

Wireless Protocol	Bluetooth v5.0
Total Output Power	18 W Peak
Speaker Output Power	Sub-Woofer: 6 W RMS Satellites: 2 x 3 W RMS
Driver unit	Sub-Woofer: 4 ", 6 Ω Satellites: 2 x 3", 4 Ω
Interfaces	Input: 2 RCA sockets Output: 2 RCA sockets
On-board Controls	Power On-Off Mode Next Track Play/Pause Previous Track, Volume Controller Bass Controller
Effective Range	Wireless range up to 10 m
Dimensions	Sub-Woofer: 150 (W) x 255 (D) x 240 (H) mm
Satellites	100(W) x 98(D) x 150(H) mm
Weight	2.75 kg

Ver.: 1.0.0

Stay connected with us



Customer Service

- Support email: customer.care@fingers.co.in
- 022-4938 7600: Mon - Fri (9.30 am to 6.30 pm)

For further information, please visit www.fingers.co.in

- Images shown may vary from actual product.
- Specifications, features and appearance are subject to change without notice.
- All logos, brands, trademarks and product names are properties of their respective owners.
- Product warranty is governed by warranty terms mentioned on www.fingers.co.in
- This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in

