

[Manuals.plus](#) /

› [BLAUPUNKT](#) /

› Blaupunkt 40CSG7112 Cyber Sound G2 Series Full HD LED Google TV User Manual

BLAUPUNKT 40CSG7112

Blaupunkt 40CSG7112 Cyber Sound G2 Series Full HD LED Google TV User Manual

Model: 40CSG7112

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Blaupunkt 40CSG7112 Cyber Sound G2 Series Full HD LED Google TV. Please read these instructions thoroughly before using the television and retain them for future reference. This television features a 40-inch Full HD (1920 x 1080) display, 60 Hz refresh rate, 48 Watts sound output with Dolby Digital Plus, and runs on Android 11 with Google TV functionalities.

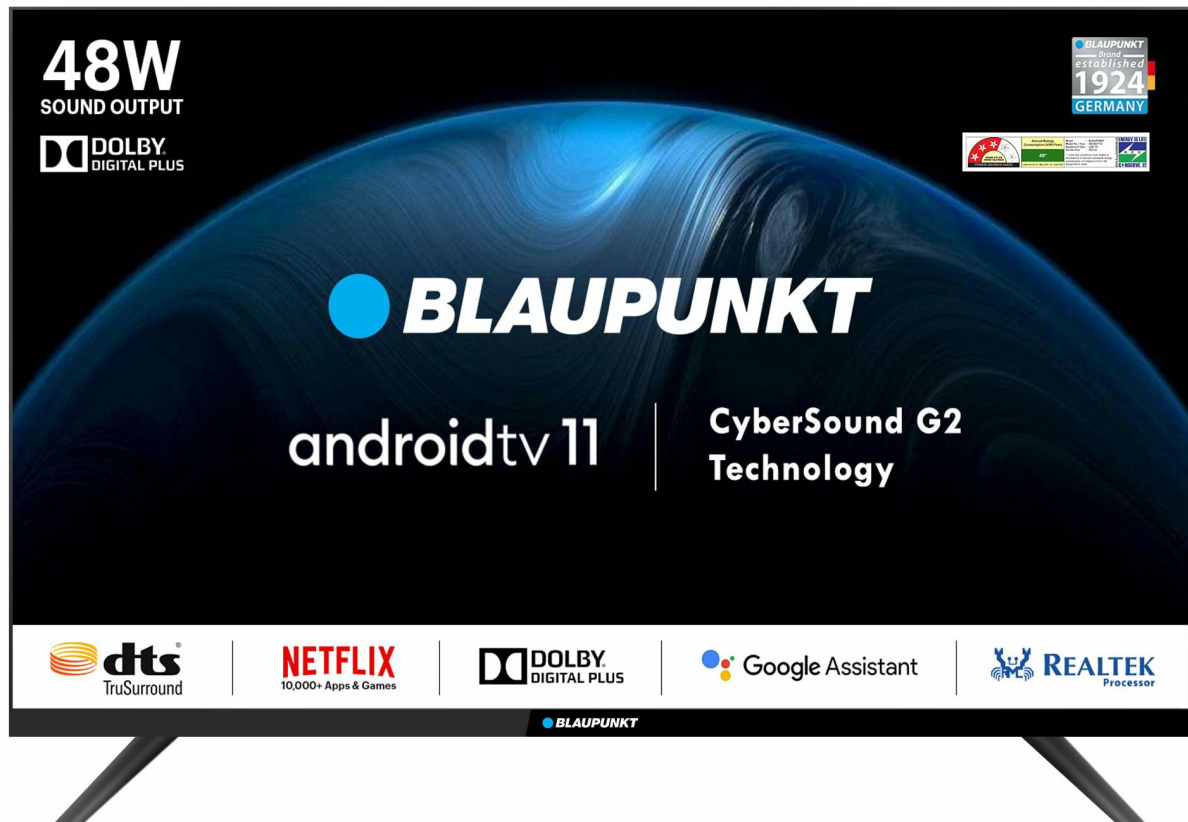 


Image 1.1: Front view of the Blaupunkt 40CSG7112 TV.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent electric shock, fire, or damage to the television:

- Do not expose the television to rain or moisture.
- Do not open the television casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the television.
- Use only the power cord supplied with the television.
- Keep the television away from direct sunlight, heat sources, and strong magnetic fields.
- Clean the television with a soft, dry cloth only.

3. WHAT'S IN THE BOX

 
 
Verify that all components are present in the packaging:

- 1N LED TV
- 1N Remote Control (with 2 AAA batteries)
- 1N User Manual (this document)
- Base Stand


- Power Cord
- Stand Screws (x4)
- Wall Mount Bracket (Fixed, 32"-65" compatible, provided free during installation)




IN THE BOX

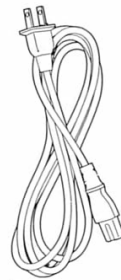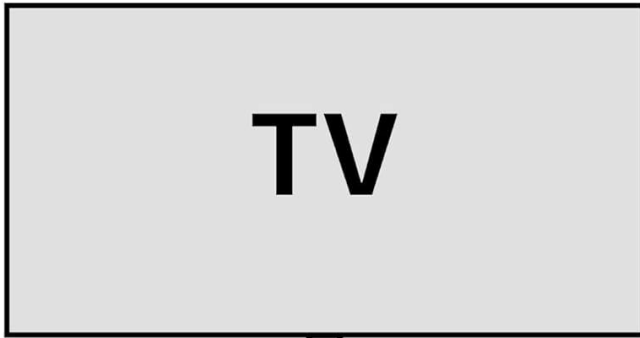


Power Cord

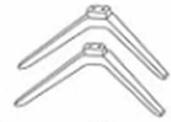 

Base Stand

 

Stand Screw x 4

 

Wall Mount



REMOTE WITH
2 AAA BATTERIES

Wall Mount & Stand Options

(Provided Free During The Installation Process)

32"–65"

Fixed Wall Mount Bracket

Image 3.1: Included components in the TV packaging.

4. PHYSICAL SETUP

4.1 Mounting Options

Your television supports both table-top placement using the included base stand and wall mounting. The VESA mount standard is 200 x 200 mm. A fixed wall mount bracket is provided free during the installation process.

4.2 Connecting Peripherals

Connect your devices to the television using the available ports:

- **HDMI Ports (x3):** For connecting gaming consoles, set-top boxes, Blu-ray players, and other HDMI-compatible devices. One port supports eARC.
- **USB Ports (x2):** For connecting hard drives, USB flash drives, and other USB devices.
- **Ethernet Port:** For a wired internet connection.
- **Auxiliary Audio Input:** For connecting external audio sources.
- **Power Input:** Connect the power cord to the TV and a suitable power outlet.

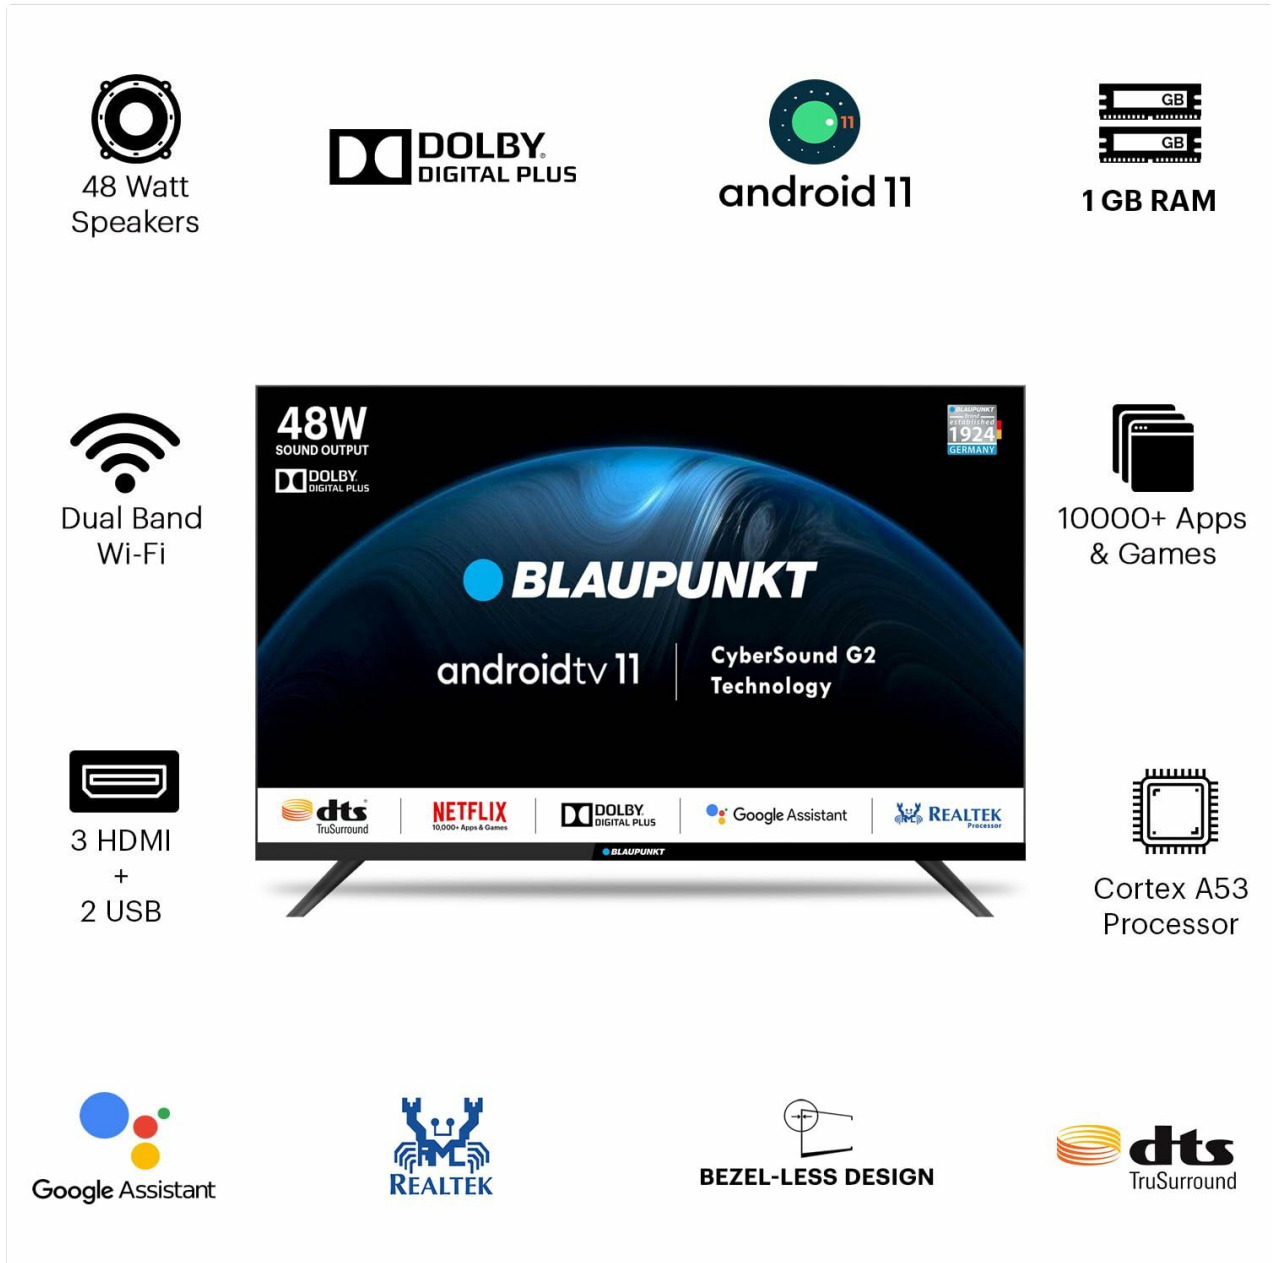 


Image 4.1: Rear view of the TV with connectivity ports.

4.3 Dimensions

The product dimensions are 11D x 92.5W x 54.5H Centimeters. The screen size is 40 inches (101 cm diagonally).

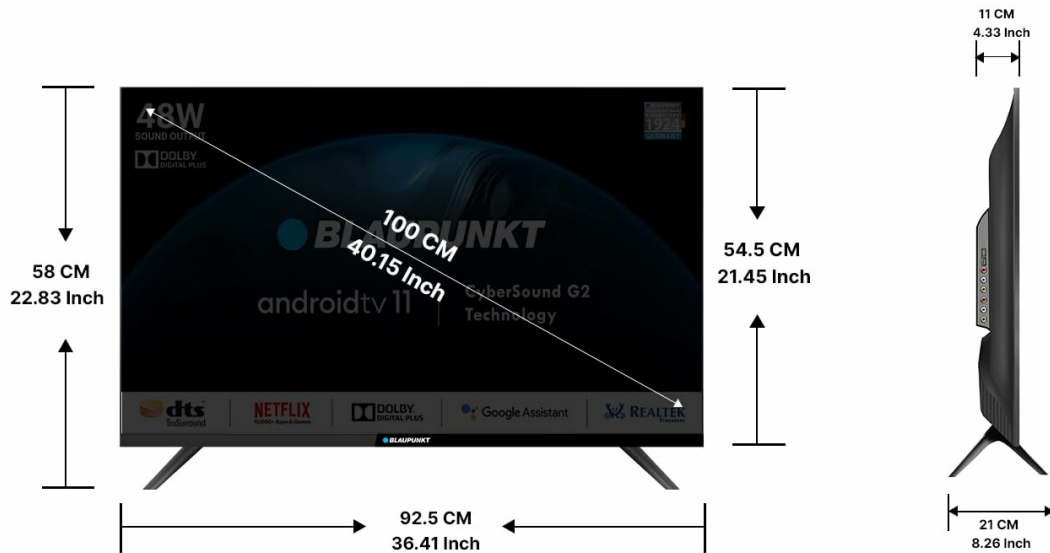 


Image 4.2: Television dimensions.

5. INITIAL SETUP & FIRST USE

5.1 Powering On

After connecting the power cord, press the power button on the remote control or the TV to turn it on. The TV will guide you through the initial setup process.

5.2 Initial Configuration

Follow the on-screen prompts to configure your TV:

- **Language Selection:** Choose your preferred language.
- **Network Connection:** Connect to your Wi-Fi network (Dual Band Wi-Fi supported) or use an Ethernet cable for a wired connection.
- **Google Account Setup:** Sign in with your Google account to access Google TV features, apps, and services.
- **Channel Scan:** If using an antenna or cable, scan for available channels.

5.3 Remote Control Overview

The included remote control allows you to navigate the TV's interface and access various functions. It supports both IR and Bluetooth technology and features dedicated buttons for popular streaming services and voice control.



Image 5.1: The television remote control.

6. OPERATING YOUR TV

6.1 Basic Navigation

Use the directional pad and OK button on your remote to navigate menus, select options, and confirm actions. The Home button returns you to the main Google TV interface.

6.2 Smart TV Features (Google TV)

Your Blaupunkt TV runs on Android 11, providing access to the Google TV platform. Key features include:

- **App Access:** Download and use over 10,000 apps and games from the Google Play Store, including Netflix, Prime Video, YouTube, Apple TV, Disney+Hotstar, and more.
- **Voice Control:** Utilize the hand-free voice control feature or the Google Assistant button on your remote to search for content, control smart home devices, and get information.

- **Screen Mirroring & Chromecast:** Built-in Chromecast allows you to cast content from your compatible smartphone, tablet, or computer directly to the TV.



Image 6.1: Google TV interface with supported applications.



Image 6.2: Using voice control with the remote.

6.3 Connectivity

The TV offers versatile connectivity options:

- **Wi-Fi:** Dual Band Wi-Fi for wireless internet access.
- **Bluetooth:** Connect wireless headphones, soundbars, or other Bluetooth devices.
- **HDMI:** Connect up to three HDMI devices.
- **USB:** Connect up to two USB devices.
- **Ethernet:** For a stable wired network connection.



Image 6.3: Seamless connectivity options.

6.4 Audio and Display Features

Experience clear visuals and immersive sound:

- **Display:** Full HD (1920 x 1080) resolution with a 60 Hz refresh rate and 178-degree viewing angle.
- **Audio:** 48 Watts output from built-in box speakers with Dolby Digital Plus and DTS TruSurround for powerful stereo sound.



Image 6.4: Key features of the Blaupunkt TV.

7. MAINTENANCE

7.1 Cleaning the TV

To clean the screen and casing, unplug the TV from the power outlet. Use a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or abrasive cleaning agents, as they may damage the TV.

7.2 Software Updates

Your TV may receive automatic software updates via the internet. Ensure your TV is connected to a stable network for these updates to download and install correctly. Do not power off the TV during an update.

7.3 Return Policy Guidelines

For a successful return, keep the item in its original condition with all internal and external packaging. Ensure all accessories are included. Missing packaging components may result in return rejection.



Image 7.1: Components required for a successful return.

8. TROUBLESHOOTING

If you encounter issues with your television, refer to the following common solutions:

- **No Power:** Ensure the power cord is securely connected to both the TV and the power outlet. Check if the outlet is functioning.

- **No Picture/Sound:** Verify that the correct input source is selected. Check all cable connections (HDMI, AV).
- **Remote Control Not Working:** Replace the AAA batteries in the remote. Ensure there are no obstructions between the remote and the TV's IR sensor. For Bluetooth remote, ensure it is paired correctly.
- **Network Connection Issues:** Restart your router and modem. Reconnect the TV to the Wi-Fi network or check the Ethernet cable connection.
- **App Not Working:** Try restarting the app. If the issue persists, clear the app's cache and data in the TV settings, or uninstall and reinstall the app.
- **Voice Control Not Responding:** Ensure the remote's microphone is not obstructed and that Google Assistant is enabled and configured in the TV settings.

For more complex issues, please contact customer support.

9. SPECIFICATIONS

Feature	Specification
Model Number	40CSG7112
Screen Size	40 Inches (101 cm)
Display Technology	LED
Resolution	Full HD (1920 x 1080p)
Refresh Rate	60 Hz
Viewing Angle	178 Degrees
Contrast Ratio	4000:1
Maximum Display Brightness	400 Candela Per Square Meter
Response Time	10 Milliseconds
Operating System	Android 11 (Google TV)
Memory Storage Capacity	8 GB
Audio Output	48 Watts
Integrated Surround Sound Format	Dolby Digital Plus, DTS TruSurround
HDMI Ports	3 (including eARC)
USB Ports	2
Wireless Connectivity	Dual Band Wi-Fi, Bluetooth
Wired Connectivity	Ethernet
Control Method	Remote Control, Voice Control

Feature	Specification
Product Dimensions (D x W x H)	11D x 92.5W x 54.5H Centimeters
Item Weight	5200 Grams
Power Consumption	150 Watts
Annual Energy Consumption	49 Kilowatt Hours Per Year
VESA Mount Standard	200 x 200 mm
Color	Black

10. WARRANTY AND SUPPORT

10.1 Warranty Information

Your Blaupunkt 40CSG7112 TV comes with a **1-year warranty** provided by the manufacturer from the date of purchase. To avail warranty services, please retain your purchase invoice.

10.2 Customer Support

For assistance, service requests, or any queries regarding your television, please contact Blaupunkt customer support:

- **Toll-Free Number:** 1800-274-4342
- **Email ID:** consumercare@blaupunkttv.in

When contacting support, please provide the product's model name (40CSG7112) and seller's details as mentioned on your invoice. The service center will assist you in scheduling a convenient service slot.