


Television
Reference Guide



5-065-331-01(1)



K-75S26BM2 / 75S26M2 / 75S25BM2 / 75S25M2 / 65S26BM2 / 65S26M2 / 65S25BM2 / 65S25M2 / 55S26BM2 / 55S26EM2 / 55S26M2 / 55S25BM2 / 55S25EM2 / 55S25M2 / 50S26M2 / 50S25M2 / 50S23BM2 / 50S23M2 / 50S22BM2 / 50S22M2 / 43S26M2 / 43S25M2 / 43S23BM2 / 43S23GM2 / 43S23M2 / 43S22BM2 / 43S22GM2 / 43S22M2

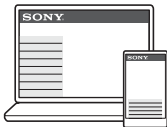


https://rd1.sony.net/help/tv/mga3/h_ga/

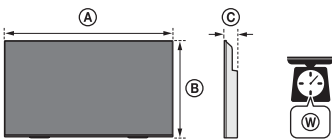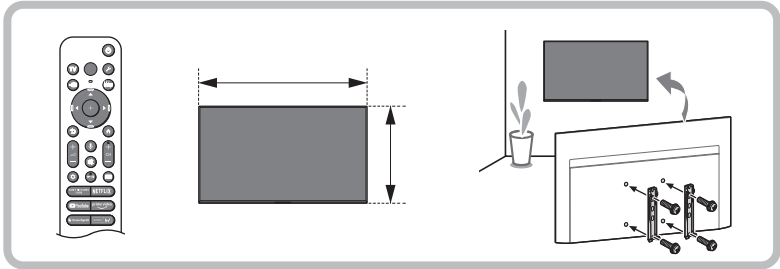


	(mm)*1			(kg)*1
	A	B	C	W
K-75S26BM2 / 75S26M2 / 75S25BM2 / 75S25M2	1 670	975	83	28
K-65S26BM2 / 65S26M2 / 65S25BM2 / 65S25M2	1 447	846	83	19.7
K-55S26BM2 / 55S26EM2 / 55S26M2 / 55S25BM2 / 55S25EM2 / 55S25M2	1 227	724	82	13.2
K-50S26M2 / 50S25M2 / 50S23BM2 / 50S23M2 / 50S22BM2 / 50S22M2	1 111	655	80	9.8
K-43S26M2 / 43S25M2 / 43S23BM2 / 43S23GM2 / 43S23M2 / 43S22BM2 / 43S22GM2 / 43S22M2	958	570	79	7.8

*1 (Approx.)

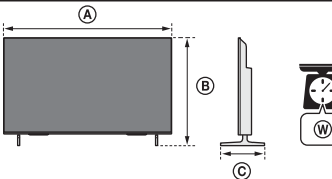


	(mm)*1			(kg)*1
	A	B	C	W
K-75S26BM2 / 75S26M2 / 75S25BM2 / 75S25M2	1 670	1 033	393	29
K-65S26BM2 / 65S26M2 / 65S25BM2 / 65S25M2	1 447	904	327	20
K-55S26BM2 / 55S26EM2 / 55S26M2 / 55S25BM2 / 55S25EM2 / 55S25M2	1 227	782	288	13.5
K-50S26M2 / 50S25M2 / 50S23BM2 / 50S23M2 / 50S22BM2 / 50S22M2	1 111	714	255	10
K-43S26M2 / 43S25M2 / 43S23BM2 / 43S23GM2 / 43S23M2 / 43S22BM2 / 43S22GM2 / 43S22M2	958	628	255	8

*1 (Approx.)

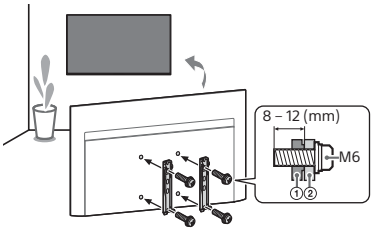

- ① TV's rear cover
② Wall-Mount Bracket

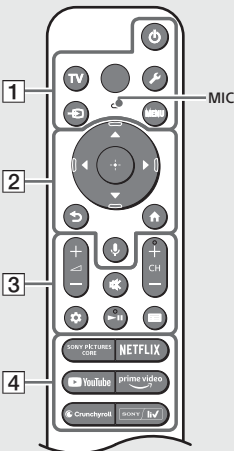

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/TV settings.

- ① **⏻ (Power)**
TV: Display TV channel list or switch to input.
⚙️ (Quick settings): Display Quick Settings.
📶 (Input select): Display and select the input source, etc.
MENU (Control menu): Display the Control menu.
- ② **▲ / ▼ / ◀ / ▶ / ⏮ / ⏭:** On screen menu navigation and selection.
⏮ (Back)
🏠 (Home)
🗣️ (Google Assistant / Microphone): Use Google Assistant*1*2 or voice search*2.
🔊 + / - (Volume)
🔇 (Mute)*3
CH + / - (Channel)
⚙️ (Dashboard): Display Dashboard.
📺
📖 (Guide): Display the digital programme guide of TV or TV box*4.

④ **App buttons**

- *1 Only for limited region/country/model/ language.
*2 Google Assistant or voice search requires an Internet connection.
*3 Accessibility shortcut is available by pressing and holding 🔇 (Mute).
*4 [TV box setup] setting is required.

About Manuals

Please retain the manuals for future reference.

Paper manual

Setup Guide (on top of the product) / Reference Guide (this manual) / Safety and Other Information.

Help Guide (On screen Manual)

- To open it, select [Settings] → [Help and feedback] → [Help] or select [Help] in the Home Menu, if [Help] does not exist, select [See all] → [Help].
- You can refer to the Help Guide with your smartphone (visit website provided on the front cover of Reference Guide).

Read and understand the contents of this manual before operating this product.

Note

- Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
- Read the supplied safety documentation for additional safety information.
- Images and illustrations used in the supplied manuals are for reference and may differ from the actual product.
- Setting menus are subject to change without notice due to software updates. For latest information, visit Sony support website.

IMPORTANT - Read the End User Software Licence Agreement before using your Sony product. Using your product indicates your acceptance of the End User Software Licence Agreement. The software licence agreement between you and Sony is available online at Sony website (<https://www.sony.net/tv-software-licenses/>) or on your product screen. Press  (Quick Settings) on the remote control and select [Settings] → [System] → [About] → [Legal information] → [Notices and licences].

Location of the identification label

Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

Installing the TV to the Wall

Using the optional Wall-Mount Bracket (not supplied)

This TV's instruction manual only provides the steps to prepare the TV for Wall-Mount installation before it is installed on the wall.

Your TV can be mounted to a wall using a suitable Wall-Mount Bracket (not supplied). If the Table-Top Stand is attached to the TV, the TV may require detaching the Table-Top Stand (models with Table-Top Stand only).

Prepare the TV for the Wall-Mount Bracket before making cable connections.


For product protection and safety reasons, Sony strongly recommends that installation of your TV on the wall be performed by qualified professionals. Do not attempt to install it yourself.

- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- The screws for installing the Wall-Mount Bracket to the TV are not supplied.
- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand (models with Table-Top Stand only). Keep the screws away from children.


Note

- Read the supplied safety documentation for additional safety information.


- 1 Remove the screws from the rear of the TV.

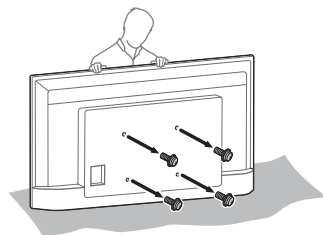


(Models with Table-Top Stand only)

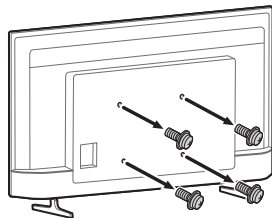

- 2 Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).

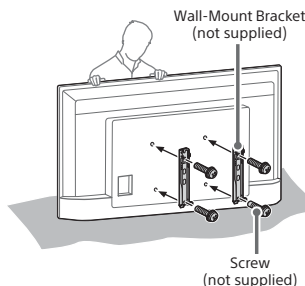

(Models with Table-Top Stand only)

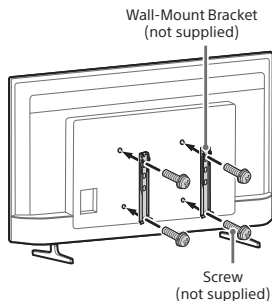

Note

- If using an electric screwdriver, set the torque at approximately 1.2 N·m {12 kgf·cm}.
- Be sure to fasten the Wall-Mount Bracket when attaching them to the TV. Use only a flat head screwdriver to install the Wall-Mount Bracket. Use of another tool might result in over torquing the Wall-Mount Bracket and damaging the TV.
- Be sure the TV is vertical before turning on. To avoid uneven picture uniformity do not power on the TV with the panel facing down.

Troubleshooting

General troubleshooting for issues like: black screen, no sound, frozen picture, TV does not respond, or network is lost, do the following steps.

- 1 Restart your TV by pressing the power button on the remote control for about five seconds. Select [Restart] and TV will restart. If the TV does not recover, try unplugging the AC power cord (mains lead) then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord (mains lead). Or, press the power button on the TV for about 40 seconds until the TV turns off.
- 2 Refer to the Help menu shown below.
- 3 Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV software updated. Software updates provide new features and performance improvements.
- 4 Visit Sony support website (information provided at the end of the supplied safety documentation).

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV.

It takes time to initialize the system. Wait for about one minute, then operate it again.

The remote control does not function.

- Replace the batteries.

The parental lock password has been forgotten.

- Enter 4357 for the PIN and enter the new PIN.



For more information, refer to the Help Guide.
To open it, select [Settings] → [Help and feedback] → [Help] or select [Help] in the Home Menu, if [Help] does not exist, select [See all] → [Help].

Specifications

System

Panel system
LCD (Liquid Crystal Display) Panel, LED Backlight
TV system
Analogue: B/G
Digital: DVB-T/DVB-T2
Satellite: DVB-S/DVB-S2
Colour system
PAL/ SECAM
Channel coverage
Analogue: UHF/VHF/Cable
Digital: UHF/VHF
Satellite: Intermediate Frequency 950-2 150 MHz
Sound output (W)
10 + 10
Wireless technology
Protocol IEEE 802.11a/b/g/n/ac/ax
Bluetooth® Version 5.3

Input/Output jacks

Antenna (aerial)/cable
75 ohm external terminal for RF input
Satellite antenna
Female F Type Connector, 75 ohm
LNB 13 V/18 V & 22 kHz tone
HDMI IN 1/2/3/4 (HDCP 2.3-compatible)

Video:
4096 × 2160p (50, 60 Hz)*1, 4096 × 2160p (24 Hz), 3840 × 2160p (50, 60 Hz)*1, 3840 × 2160p (24, 25, 30 Hz), 1080p (30, 50, 60 Hz), 1080i (50, 60 Hz), 720p (30, 50, 60 Hz), 720/24p, 576p, 480p, PC Formats*2

Audio:

In eARC (Enhanced Audio Return Channel) mode
Refer to the online Help Guide for details.
Except eARC mode

7.1 channel linear PCM: 32/44.1/48/88.2/96/176.4/192 kHz 16/20/24 bits, Dolby Audio, Dolby Atmos, DTS

eARC/ARC (Enhanced Audio Return Channel/ Audio Return Channel) (HDMI IN 3 only)*3

In eARC mode

Refer to the online Help Guide for details.

In ARC mode

Two channel linear PCM: 48 kHz 16 bits, Dolby Audio, Dolby Atmos, DTS

➡ DIGITAL AUDIO OUT (OPTICAL)

Digital optical jack (Two channel linear PCM: 48 kHz 16 bits, Dolby Audio, DTS)

➡ 1, ➡ 2

USB port 1 and 2 support High Speed USB (USB 2.0)

LAN

10BASE-T/100BASE-TX connector (Depending on the operating environment of the network, connection speed may differ. The communication rate and quality are not guaranteed.)

Power and others

Power requirements

110 V – 240 V AC, 50/60 Hz

Screen size (measured diagonally) (Approx.)

(inches/cm)

K-75S26BM2 / 75S26M2 / 75S25BM2 / 75S25M2:

75 / 189.3

K-65S26BM2 / 65S26M2 / 65S25BM2 / 65S25M2:

65 / 163.9

K-55S26BM2 / 55S26EM2 / 55S26M2 / 55S25BM2 /

55S25EM2 / 55S25M2: 55 / 138.8

K-50S26M2 / 50S25M2 / 50S23BM2 / 50S23M2 /

50S22BM2 / 50S22M2: 50 / 125.7

K-43S26M2 / 43S25M2 / 43S23BM2 / 43S23GM2 /

43S23M2 / 43S22BM2 / 43S22GM2 / 43S22M2:

43 / 108.0

Power consumption

Indicated on the rear of the TV

Standby power consumption**4*5 (W)

0.5

Display resolution (horizontal × vertical) (pixels)

3 840 × 2 160

Output rating

500 mA (for USB 1/2)

Others

Operating temperature

0 °C – 45 °C

*1 Refer to the on screen menu to set [HDMI signal format].

*2 Refer to the online Help Guide for details.

*3 Connect your audio system to the HDMI IN 3 to route TV audio to your audio system.

*4 Specified standby power is reached after the TV finishes necessary internal processes.

*5 Standby power consumption will increase when your TV is connected to the network.

Note

- Optional accessories availability depends on countries/region/TV model/stock.
- Design and specifications are subject to change without notice.
- Subscriptions for services and applications may be required and additional terms, conditions and/or charges may apply when using Google Assistant.
- Visit Sony website for more information on product specifications.

Trademark Information

- Dolby, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2024 Dolby Laboratories. All rights reserved.

Dolby
ATMOS

dts X

TUXERA

- For DTS patents, see <https://xperi.com/dts-patents/>. Manufactured under license from DTS, Inc. and its affiliates. DTS, DTS:X, the DTS:X logo, Virtual:X, and the DTS Virtual:X logo are registered trademarks or trademarks of DTS, Inc. and its affiliates in the United States and/or other countries. © DTS, Inc. and its affiliates. ALL RIGHTS RESERVED.
- TUXERA is a registered trademark of Tuxera Inc. in the US and other countries.