

Haier

Inspired Living

Scan QR code to Download



LED/LCD Television

TABLE OF CONTENTS

Important safety instructions2-3

Precautions and reminders4

Preparation5

Operating instructions6-18

Trouble Shooting 19

E-Waste guideline 20-21

Warranty 22

IMPORTANT SAFETY INSTRUCTIONS

 
- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this product near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lighting storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 20) Warning: To avoid any injury caused by lean of the product, please always ensure the whole product was placed within the table surface in horizontal.



This symbol indicates AC voltage.



This symbol indicates DC voltage.

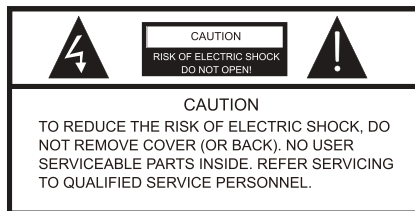

The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.



The symbol indicates that there are important operating and maintenance instructions provided in the user manual given with this unit.

WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING:

The batteries shall not be exposed to excessive heat such as radiators, fire or the like.



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



EU Battery Regulation

This symbol on the battery(ies) or on the packaging indicates that the battery(ies) provided with this product shall not be treated as household waste. Instead, please separate battery(ies) from other types of waste and recycle it(them) through your local recycling system to protect environment and health.

The chemical symbol for lead (Pb) is added under this symbol if the battery(ies) contains more than 0.004 % lead. For more detailed information about recycling of this battery(ies), please contact your local authority or the shop where you purchased the product or battery(ies).

IMPORTANT SAFETY INSTRUCTIONS



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

Stability Hazard

A display may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the display.
- ALWAYS use furniture that can safely support the display.
- ALWAYS ensure the display is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the display or its controls.
- ALWAYS route cords and cables connected to your display so they cannot be tripped over, pulled or grabbed.
- NEVER place the display set in an unstable location.
- NEVER place the display on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the display to a suitable support.
- NEVER place the display on cloth or other materials that may be located between the display and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the display or furniture on which the display is placed.

CAUTION

Risk of explosion if battery is replaced by an incorrect type.

Warning for Apparatus containing COIN / BUTTON CELL BATTERIES (Below instruction only used for the apparatus containing a user-replaceable coin/button cell battery)

WARNING:

Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with) this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Precautions For Using Battery

Improper using of the battery will cause leakage. So please do as the following methods and use carefully.

- Please note the batteries' polarity, to avoid short circuit.
- When the battery's voltage is insufficient which affect the use range, you should replace new battery.
- Remove the batteries from the remote control unit if you do not intend to use it for a longtime.
- Do not use different types of batteries (for example, Manganese and Alkaline batteries) together.
- Do not put the battery into fire, and charge or decompose the battery.
- Please dispose batteries abide by relevant environmental protection regulation.

 
Warning

Don't disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a Battery.


Don't leaving a battery in an extremely high temperature surrounding environment.

To avoid battery subjected to extremely low air pressure. The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.


PRECAUTIONS AND REMINDERS

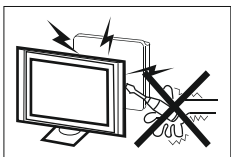

 
High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

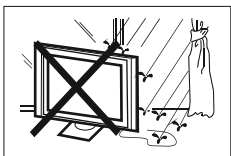

 
To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

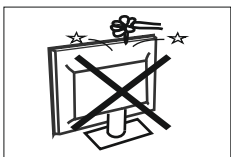

 Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

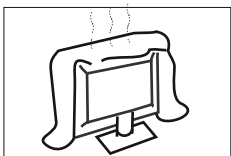

 
Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

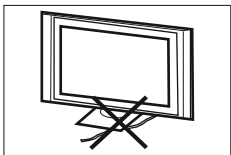


Do not trap the power supply cord under the television receiver.



 
If you are going to clean the product, Unplug the TV, use soft fabric, no water, never chemicals.

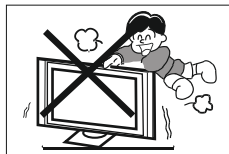

 
Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

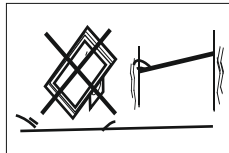

 
Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.

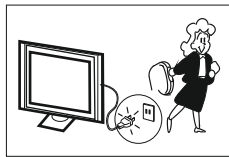

 When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

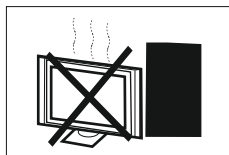

 Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

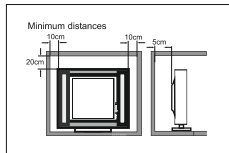


If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.

Note: Use the apparatus in moderate climates.

Note: This product uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

 PRECAUTIONS AND REMINDERS

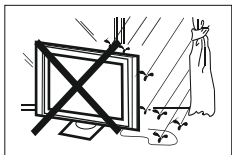


To avoid Dust, rain water and direct sunlight, do not install do not install the television in front of open window.

PREPARATION


TURNNING ON THE TV

 1. Install the stand and place the TV on a solid surface.

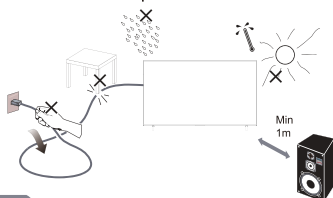

NOTE

 - Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover.
 - To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed on or in the vicinity.
 - Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing.
2. Connect the antenna cable or cable TV cable to the **ANT IN** aerial socket on the back of the TV set.
 3. Power:
Plug the cord into a working power outlet.

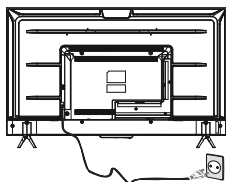


4. Turn the TV on:
Press  on the remote control or **POWER** button on the bottom of the TV.


OPERATING INSTRUCTIONS

INITIAL SETUP

 
The first time you turn on your TV, the setup wizard will guide you through setting up basic settings. Please according to the Text Tip to First Time Setup.

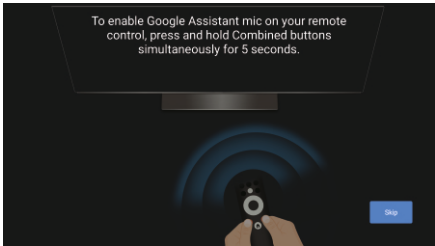

 This function is used for the remote control pair code. After the code is successful, you can use the Bluetooth remote control to operate the TV.

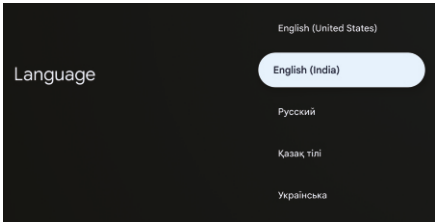


 Press ▲ / ▼ to select the system language and press OK to confirm the language.

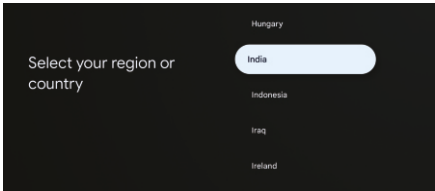

Press ▲ / ▼ to select the region/country of your device and press OK to confirm.

 You can try setting up the TV with your phone.(This interface is region-related, some regions will not appear on this page, please refer to the actual situation.)

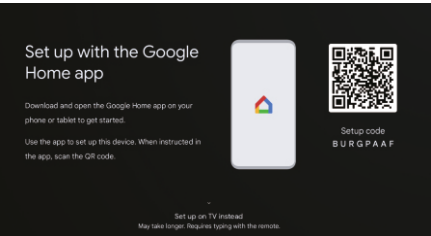


First, turn on your phone's Bluetooth (Note: Please make sure your phone has the Google Home App installed). Go to Google Home APP on your phone, find your TV, and tap Connect. Once connected, scan the QR code on your TV with your mobile phone.


When your phone is connected to your TV, you can set up your TV on your phone (connect to WIFI and enter Google account), your TV will automatically get the WiFi and Google account information on your phone.

You can also use the remote to set up your TV and log in to your Google account.

 
Press OK to next step.

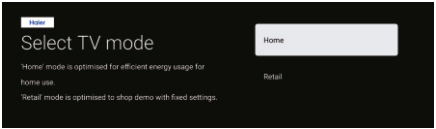

 For selecting the mode, press / key to select Home mode and press "OK".



 Select "Yes" and press OK to confirm. (Press ← to go back to the previous step)

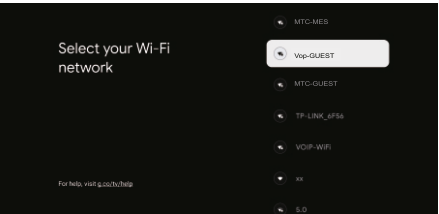


Press ▲ / ▼ to select the wifi to connect, press OK and enter the password to confirm the connection is successful.


☑You can also select "Skip" to set it to the basic TV.



 OPERATING INSTRUCTIONS

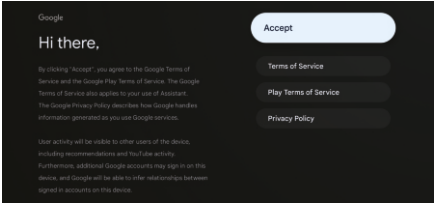

 
By accepting the Google Terms of Service to improve the product experience, select "Accept" to accept this condition.

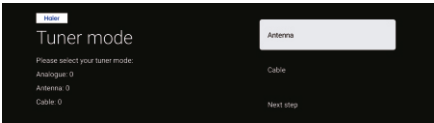



Select the Tuner mode for searching, press / to select and press OK to confirm.

Please note that the process of scanning will take some time.

 
When you connect your TV to the Internet, please complete the following settings.

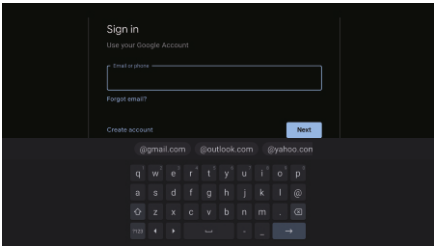

  
Enter your Google account and password. You need to be signed in to an Google account in order to use Google services. If you don't already have a Google account you can set up an account by choosing "Create account" option.

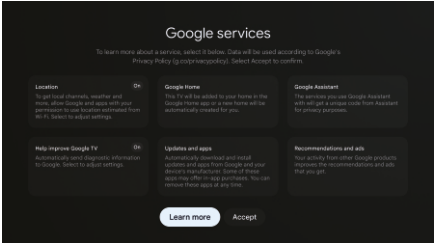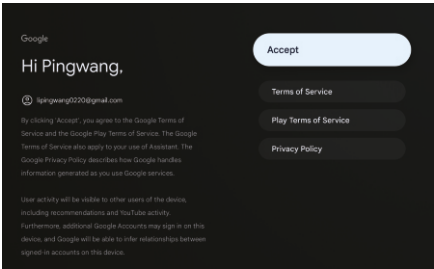

 
Read to accept the Google terms of service and privacy policy.

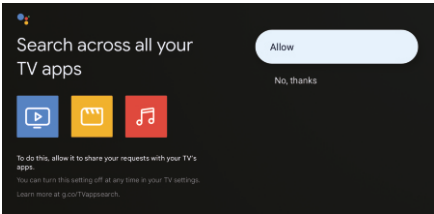

 Press to select and press OK to continue.

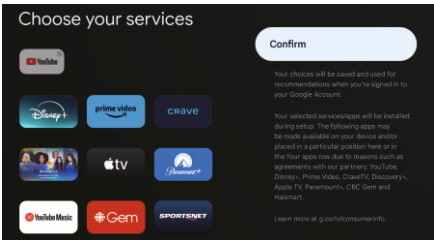


 Press / to select the Choose your subscriptions and press OK .

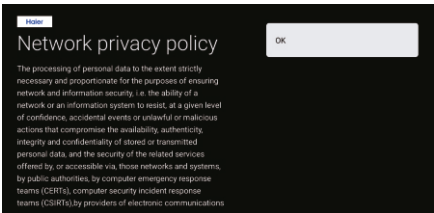


Select ☐ OK ☐ to accept this terms of the Network Privacy Policy.

 OPERATING INSTRUCTIONS

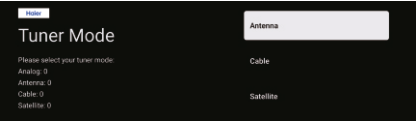


Select the Tuner mode for searching, press ▲/▼ to select and press OK to confirm.

 Please note that the process of scanning will take some time.

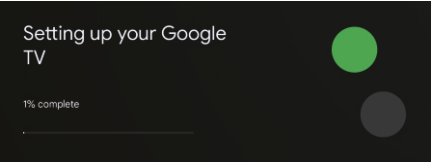


Press the next step setting up your Google TV.

 Note: After the internet connection is established, the TV will check for the software updates and download. Please notice that this will take some time.

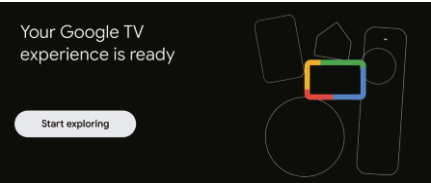

Your Google TV experience is ready and press OK to Start exploring.

 
Switch from basic TV to Google TV

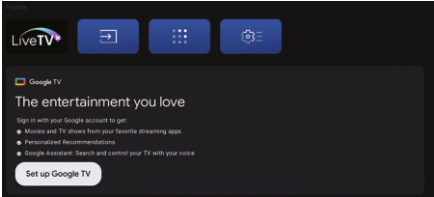

Press to select the "Set up Google TV" of your device and press OK to continue.

Use your Google Account Sign in.

 
Follow Google's guidelines to complete your account sign-in.

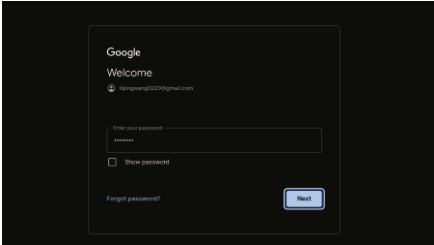

E-Manual

E-Manual is built into your TV and can be displayed on the screen. To learn more about your TV features, access your E-Manual by referring to the following. E-Manual may be available depending on the region or model.

 1. Press HOME button to access the home page.
2. Press ▲/▼/◀/▶ and OK button to select and enter "E-Manual" in "Apps".

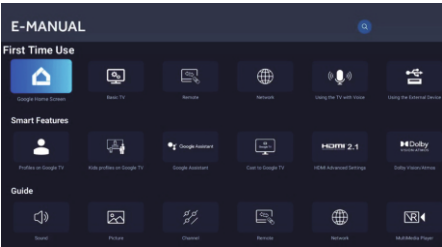

Note: The picture is only for reference.

 
OPERATING INSTRUCTIONS

HOME SCREEN

After completing the wizard Settings, you can watch TV and go to the home screen.

NOTE:

When you are connected to the Internet, the home screen is updated from time to time. This image is an example only and is subject to the actual push.

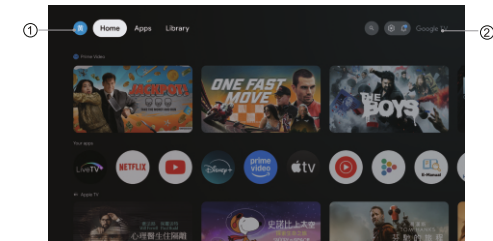

- 1. : You can add or switch user accounts.
Home - Select icons from the screen list.
Apps - Show the list of favorite applications, or access the application center.
Library - Find your purchases, rentals, and watchlisted content across TV mobile, and web here.
- 2. : Search movies shows, apps and more.
 : You can select Settings, Screensaver, Inputs, Picture, Wi-Fi and more.

Note:

- 1. The functions and contents of "Home screen" may vary by different countries or models.
- 2. Before using network functions in home page like network applications and so on, please connect the TV to the network firstly.
- 3. Icon copyrights are owned by the application providers.

 
Note: The images shown for illustration and reference only.

USING THE MENU FUNCTIONS


There are two ways to enter the settings interface. First, press the settings key of the remote control to display. Second, on the HOME interface, press the selected circular settings menu icon.

Note: When you connect to the Internet, the interface will update. The images shown for illustrative and reference on.

Note: When you connect to the internet, the on-screen menu display may be updated, if it is updated without notice, please refer to the actual situation.

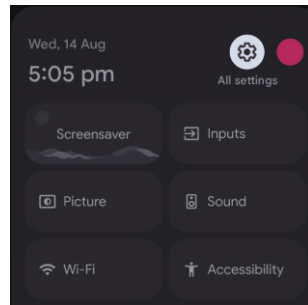

 
Press / button to select what you want set. Press OK to enter setting.

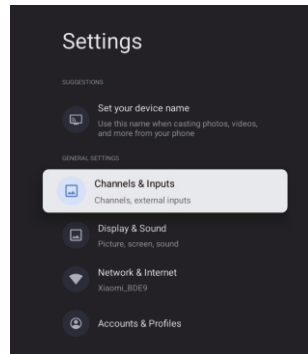

Press BACK to return to the previous menu. If the main menu is displayed, pressing BACK will close the on screen menu.

CHANNEL & Inputs

 Menu -> Settings -> Channels & Inputs

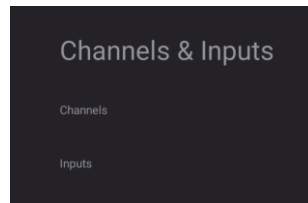


Note: This function is only available in TV mode. Depending on the signal source, the menu that appears may be different, please refer to the actual situation.

OPERATING INSTRUCTIONS

CHANNELS

 
Menu->Settings->Channels & Inputs->Channels

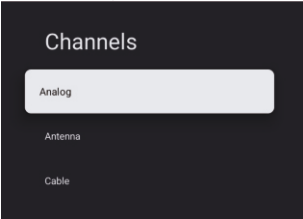

Analog/Antenna/Cable - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

CHANNELS(Analog)

 Menu->Settings->Channels & Inputs->Channels->Analog.

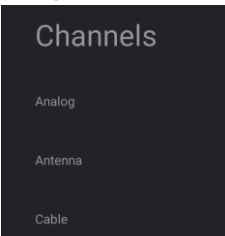


Channel Scan - Directly enters the automatic search platform interface.

Update Scan - Re-automatically search for frequency points outside the station.

Analog Manual Scan - Manual ATV search station. After input the frequency point, you can select up or down search station.

CHANNELS(Antenna)

 Menu->Settings->Channels & Inputs->Channels->Antenna.

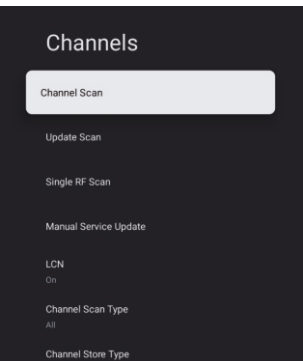

Channel Scan - Directly enters the DTV automatic search platform interface of Antenna.

Update Scan - Re-automatically search for frequency points outside the station.

Single RF Scan - DTV manual search, left and right after selecting RF Channel, directly OK search.

Manual Service Update - Directly enters the search platform interface.

LCN - Press OK button to choose ON/OFF.

Channel Scan Type - Press OK button to choose All, Only Encrypted Channels or Only Free Channels.

 
Channel Store Type - Press OK button to choose All, Only Digital Channels or Only Radio Channels.

Auto Channel Update - Press OK button to choose ON/OFF. When selecting ON, the system will automatically scan and update channels after 5 minutes of standby.

Channel Update Message - Press OK button to choose ON/OFF. When selecting ON, the system will show you the update message.

CHANNELS(Cable)

Menu->Settings->Channels & Inputs->Channels->Cable.

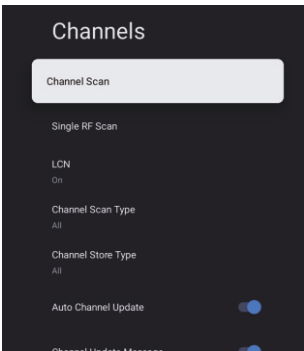

Channel Scan: Select Scan Mode (Optional: Full/Quick/Advanced) or directly enters the automatic search platform interface.

Single RF Scan - Manual search station.

LCN - Press OK button to choose ON/OFF.

Channel Scan Type - Press OK button to choose All, Only Encrypted Channels or Only Free Channels.

Channel Store Type - Press OK button to choose All, Only Digital Channels or Only Radio Channels.

 
Auto Channel Update - Press OK button to choose ON/OFF. When selecting ON, the system will automatically scan and update channels after 5 minutes of standby.

OPERATING INSTRUCTIONS

Channel Update Message - Press OK button to choose ON/OFF. When selecting ON,the system will show you the update message.

Inputs

Menu->Settings->Channels & Inputs->Inputs.

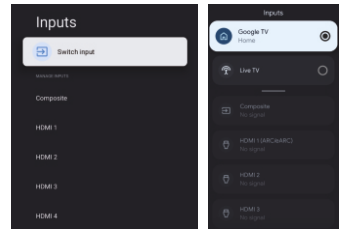

Inputs - Press ▲/▼button to select the option then press OK button to enter the sub-menu.

Switch input - Press to open the input source list.

 
Global CEC control : Press OK button to choose ON/OFF. When on, your TV and connected devices can control each other via CEC.

Allow TV to turn off connected devices : Press OK button to choose ON/OFF. When on, powering off your TV will also power off devices connected to your TV that support CEC.

Allow connected devices to turn on/off TV : Press OK button to choose ON/OFF. When on, powering on/off your connected devices may also power on/off your screen, if your connected device supports CEC.

Display & Sound


Menu->Settings->Display & Sound.

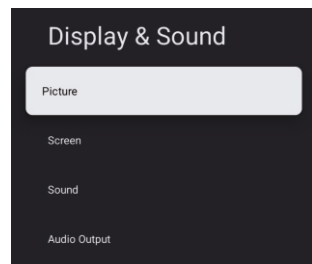

Press ▲/▼ button to select "Display & Sound" set.

Picture

 Menu->Settings->Display & Sound->Picture.

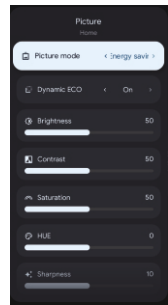

Picture Mode - Press ◀ / ▶ button to select the option button to enter the sub-menu.(Optional: User, Standard, Vivid, Sports, Movie, Game, Energy saving).

 
Dynamic ECO - Press ◀ / ▶ button to select the choose ON/OFF.

Backlight/Brightness/Contrast/Saturation/HUE/Sharpness - Press ▲/▼button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

Advanced Settings - Press ▲/▼button to select the option then press OK button to enter the sub-menu. Reset to Default-Reset all settings to the factory defaults.

Sound

Menu->Settings->Display & Sound->Sound.

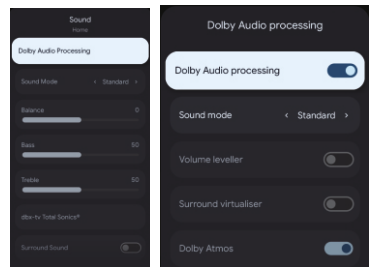

Dolby Audio processing - Press OK button to enter the sub-menu then press OK button to choose ON/OFF.

Sound mode - When you select Dolby Audio processing-OFF, you will be able to press left and right buttons to select sound mode.(Optional:User, Standard, Sports, Movie, Music, News).

OPERATING INSTRUCTIONS

Balance/Bass/Treble - Press ▲/▼ button to select the option. Press ◀ to decrease the parameter.

Press ▶ to increase the parameter.

BDX-TV TOTAL SONICS - Press ▲/▼ button to select the option then

press OK button to enter the sub-menu.

Surround Sound - Press OK button to choose ON/OFF.

Equalizer Detail - Press OK button to enter the sub-menu. Press ▲/▼ button to select the option.

Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

Speakers - Press OK button to choose On/Off.

Speaker Delay - Press ◀ to decrease the parameter.

Press ▶ to increase the parameter.

eARC - Press OK button to choose Auto/Off.

Auto Volume Control - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

 
Downmix Mode - Press ▲/▼ button to select the option then press ◀/▶ button to enter the sub-menu. (Optional: Stereo, Surround).

Dialogue Enhancer - Press ▲/▼ button to select the option then press ◀/▶ button to choose Off/Low/Medium/High.

Reset to Default - Reset all settings to the factory defaults.

Audio Output

Menu->Settings->Display & Sound->Audio Output.

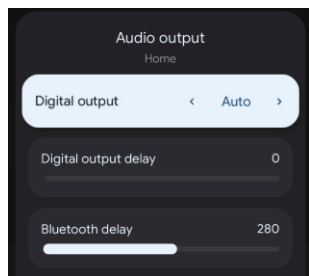


Digital Output - Press ◀/▶ button to select the digital output mode.

(Optional: Auto, Bypass, PCM, Dolby Digital Plus, Dolby Digital ,Dolby MAT).

Digital Output Delay / Bluetooth delay - Press ▲/▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

Network & Internet

 Menu->Settings->Network & Internet.

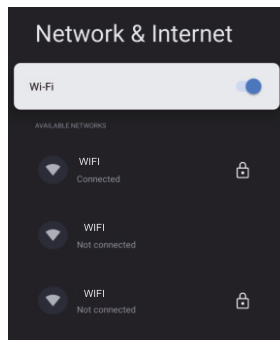


Select Wi-Fi or Ethernet to connect the monitor to the network environment and adjust network Settings.

1. Press ▲/▼ button to select what you want set.
2. Press OK button to confirm.
3. After finishing your adjustment, Press BACK button to return to the previous menu.

Accounts & Profiles

 Menu->Settings->Accounts & profiles.

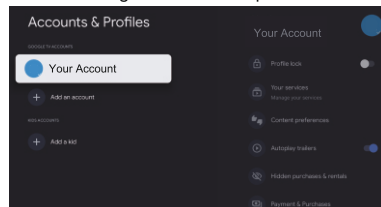

Press the ▲/▼ button to select Google account you are logged in, and then press the OK button to enter the sub-menu.

 
Add an account - Press the OK button to enter the sub-menu and add your Google Account.

Add an child - Press the OK button to enter the sub-menu and add a Google children's Account.

OPERATING INSTRUCTIONS

Privacy

Menu->Settings->Privacy .

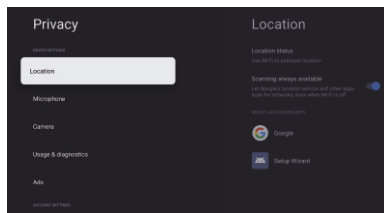


View or adjust privacy Settings for devices, accounts, and applications.

1. Press ▲/▼ button to select what you want set.
2. Press OK button to confirm.
3. After finishing your adjustment, press BACK button to return to the previous menu.

Apps

 Menu->Settings->Apps.

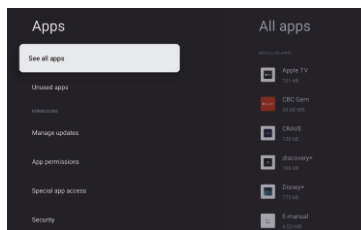


In this menu, you can set the APP permissions, and read the app lists.

1. Press ▲/▼ button to select what you want set.
2. Press OK button to confirm.
3. After finishing your adjustment, press BACK button to return to the previous menu.

System

 Menu->Settings->System.

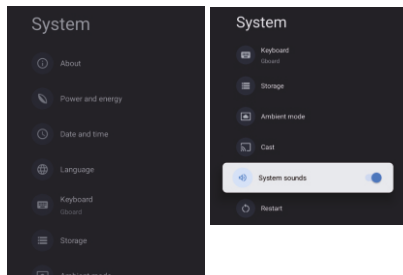


In this menu, you can read the information and settings of TV.

1. Press ▲/▼ button to select what you want set.
2. Press OK button to confirm.
3. After finishing your adjustment, press BACK button to return to the previous menu.

System sounds- Press ▲/▼ button to select the option then press OK button to choose ON/OFF. For details on the system, see the next explanation.

About

 Menu->Settings->System->About.

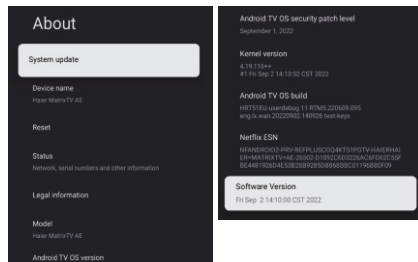


In this menu, you can System update, Factory reset and read the information of TV.

1. Press ▲/▼ button to select what you want set.
2. Press OK button to confirm.
3. After finishing your adjustment, press BACK button to return to the previous menu.

OPERATING INSTRUCTIONS

Power & Energy

 Menu->Settings->System->Power & Energy.

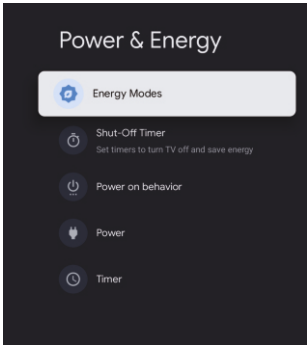

In this menu, you can set the Energy modes, Shur-off timer, Power-on behaviour, Power and Timer)

Energy modes - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.
(Optional: Low, Optimised, Increased).

Shut-Off Timer - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Optional:

When inactive: 15 minutes, 20 minutes, 30 minutes, 1 hour, 4 hours, 8 hours, 12 hours, 24 hours, Never.

When watching: 4 hours, 6 hours, 8 hours, Never.

Power on behavior - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.
(You can choose to return to the Google Home screen or the last used input when the TV is turned on.)

Power - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Sleep Timer - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

(Optional: Off, 10 minutes, 20 minutes, 30 minutes, 40 minutes, 50 minutes, 60 minutes, 90 minutes, 120 minutes).

 
Switch off timer - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

(Optional: Off, 30 minutes, 60 minutes, 90 minutes, 120 minutes, 150 minutes, 180 minutes, 210 minutes, 240 minutes).

Standby light - Press OK button to choose ON/OFF.

Timer

Menu->Settings->System->Power & Energy->Timer.

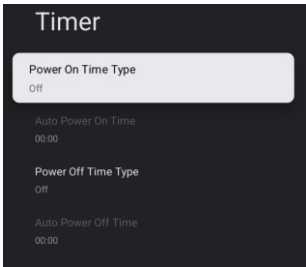

Power On Time Type - Press ▲/▼ button to select the option then press OK button to choose ON / OFF / ONCE.

Auto Power On Time - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

(This option is valid when the Power On Time Type is selected as On /ONCE)

 
Power Off Time Type - Press ▲/▼ button to select the option then press OK button to choose ON / OFF / ONCE.

Auto Power Off Time - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

(This option is valid when the Power Off Time Type is selected as On / ONCE)

Date & Time

Menu->Settings->System->Date & Time.

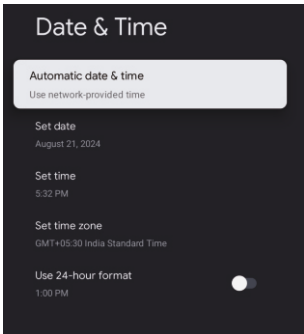

Automatic date time - Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: Use network-provided time or Off.)

 
OPERATING INSTRUCTIONS

NOTE

□ When the Automatic date & time to OFF, you can use Manually adjusting date & time.
Set date - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.
Set time - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.
Set time zone - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.
Use 24-hour format - Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

Language


Menu->Settings->System->Language.

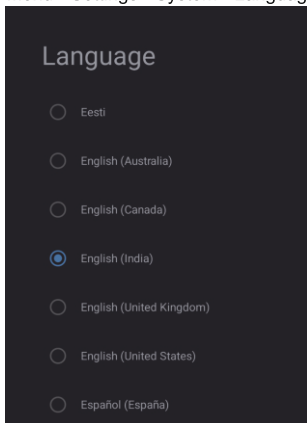

Language - Press ▲/▼ button to select the option then press OK button to enter the select language.

Keyboard

 
Menu->Settings->System->Keyboard.

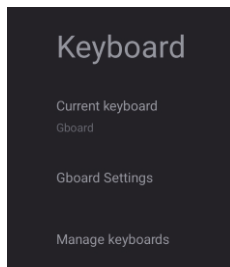

Current keyboard - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.
Gboard Settings - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.
Manage keyboards - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Storage

 Menu->Settings->System->Storage.

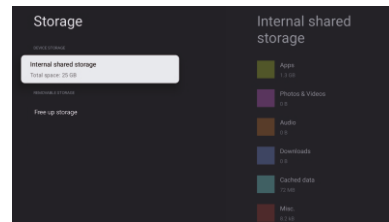


Internal shared storage - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.
Free up storage - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.
(Then you can select clear cache or uninstall apps.)

Note: It can also be displayed if an external device is connected.

Ambient mode

 Menu->Settings->System->Ambient mode.

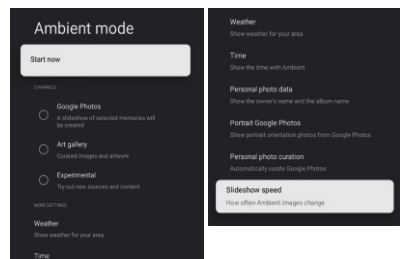


In this menu, you can read the information and settings of Ambient mode.

1. Press ▲/▼ button to select what you want set.
2. Press OK button to confirm.
3. After finishing your adjustment, Press BACK button return to the previous menu.

Cast

 Menu->Settings->System->Cast.

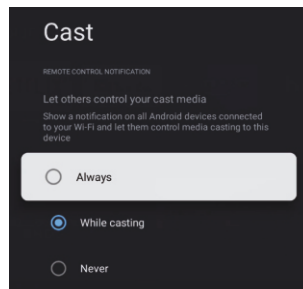

Press ▲/▼ button to select the option then press OK button to choose Always/While casting/Never.

 
OPERATING INSTRUCTIONS

Restart

Menu->Settings->System->Restart.


Press OK button to enter the sub-menu.

(Optional: Restart and Cancel.)



Accessibility

 Menu->Settings->Accessibility.

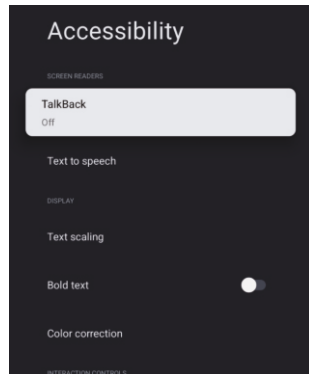

Talk Back - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

The intercom mode can then be turned on or off, or the function can be configured.

Text to speech - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

 
 
Text Scaling - Press OK button to enter the sub-menu then you can set the font size.

Colour correction - Press OK button to enter the sub-menu then you can press ▲/▼ button to set the colour correction.

Accessibility shortcut - Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Remotes & Accessories

Menu->Settings->Remotes & Accessories.

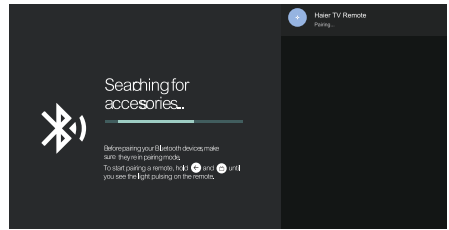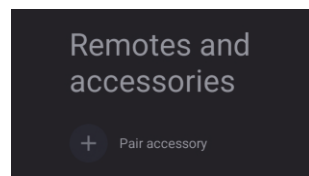


In this menu, you can pair Bluetooth devices.

1. Press the "←" and "⏮" buttons at the bottom of the remote control for 5 seconds.
2. When the LED starts to flash, release it. The remote controller will send the pairing signal to the TV.
3. Press the OK button to display the pairing. If the paired is displayed, the connection is successful.
4. If the couldn't pair appears, the connection fails. Wait 30 seconds and then press the "←" and "⏮" buttons at the bottom of the remote control for 5 seconds to repeat the previous steps.
5. Press "←" button return to the previous menu.

Help & Feedback

 
Menu->Settings->Help & Feedback.

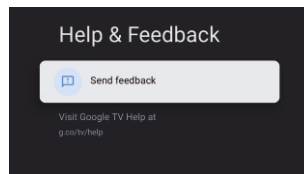


Provide feedback to Google or use the web search screen to access the Google Description Center.

OPERATING INSTRUCTIONS

 USE OF MULTI MEDIA PLAYER

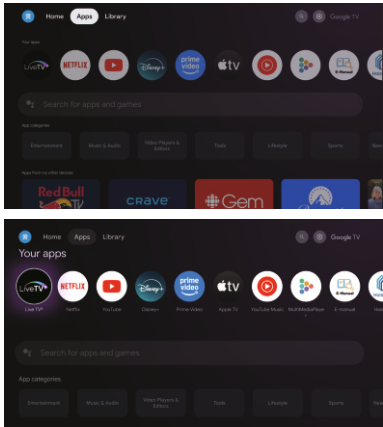

 1. In the HOME or APPS interface, press ▲/▼/◀/▶ to select the Multi Media Player application.(Press the MEDIA button on the remote control to also access the application).

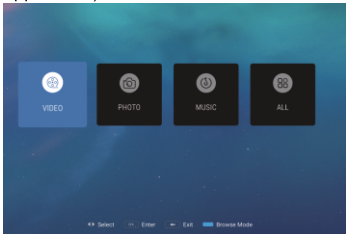

2. Select OK key to enter Multi Media Player and display Video, Photo,Audio. After inserting the usb flash drive, you can view the corresponding files in the usb flash drive (FAT32 Format).

NOTE:

The menu may be different depending on when you purchased the TV.
Photos are just for reference.

OPERATING INSTRUCTIONS

Read Before Using Apps

 
(*Terms & Conditions apply)

- Due to the product characteristics featured on the Apps store, as well as limitations in available content, certain featured applications, and services may not be available on all devices or in all territories. Some Apps featured may also require additional peripheral device or membership fees. Services and content availability are subject to change without prior notice.
- Manufacture takes no legal responsibility whatsoever for any interruption of App services caused by the service provider for any reason.
- An unstable Internet connection may cause delays or interruptions. In addition, applications may terminate automatically depending on the network environment.
- Applications services and updates may become unavailable.
- Application content is subject to change by the services provider without prior notice.
- Specific services may differ with the version of the application installed on the TV.
- An application's functionality may change in future version of the application.
- Depending on the third party service provider's policies, certain applications may not support multitasking.
- The response to remote commands and the resulting on-screen display may be delayed while a webpage is loading.
- The copy and paste operations are not supported.
- The web browsing speed will differ with the network environment.
- Depending on the types of video/audio codecs supported, it might not be possible to play certain video and audio files while playing content.
- Apps store have certain limitation, it consist many inbuilt apps for various needs of user but user doesn't have facility to add other apps from any other media.

License



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.




Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright ©2012–2024 Dolby Laboratories. All rights reserved.

 TROUBLE SHOOTING

Trouble phenomenon		Inspection
Picture	Audio	
 Snow	 Noise	antenna position, direction or connection
 Ghost	 Normal audio	antenna position, direction or connection
 Interfere	 Noise	electronic equipment,car/motorcycle,fluorescent light
 Normal Picture	 Mute	Volume(inspect wether the mute function on the remote control are started , or audio system are correct or not)
 No picture	 Mute	Power cord is not inserted Power switch is not opened Contrast and brightness/volume setup Press standby key on the remote control for inspecting
 No color	 Normal audio	color control
 Scramble	 Normal audio or weak	retune channel
 No color	 Noise	Audio system

Special Explanation: The accessories such as remote control is not belongs to the guarantee.



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use return and collection system or contact retailer where the product was purchased. They can take this product for environmental safe recycling, as per e-waste Management and Handling Rules, 2011

Do's

1. Handover/Donate/Give the discarded electronic equipment only at the authorized collection centers.
2. Drop the discarded electronic equipment only in bins meant for electronic waste.
3. Ask the retailer about the take back schemes.
4. Consult the authorized service center whether the electronic equipment can be repaired or not, before discarding the same.
5. Tell your neighbors and other person about hazards of improper disposal or handling or improper recycling of electronic waste.
6. If the unwanted electronic equipment still works or can be repaired then consider donating them.
7. To minimize our impact on earth and to protect the environment for future generations return your discarded electronic equipments at authorized collections centers only.

Don'ts

1. The product should not be opened by the user himself/herself, but only by authorized service personnel.
2. The product is not meant for re-sale to any unauthorized agencies/scrap dealers.
3. The product is not meant for mixing into household waste stream.
4. Do not keep any replaced spare part(s) from the product in exposed area.
5. Any disposal through unauthorized agencies/person will attract action under Environment (Protection) Act 1986.

This product is complied with the requirement of Hazardous Substances as specified under Rule 13 (1) & (2) of the E-Waste (Management & Handling) Rules, 2011.

To locate a nearest collection centre, please contact Toll Free No. 1800-419-9999 / 1800-102-9999 for details. All collection centre are operated by third parties with Haier Appliances India Pvt. Ltd. Merely as a facilitator.

E WASTE TOXIC COMPONENT & THEIR DAMAGE TO HUMAN HEALTH

Toxic Materials	Birth Defects	Brain Damage	Heart, Liver, Lung & Spleen Damage	Kidney Damage	Nervous/ Reproductive System Damage	Skeletal System Damage
Barium	✓	X	X	✓	✓	✓
Cadmium	X	✓	X	X	X	X
Lead	X	X	✓	X	X	✓
Lithium	X	X	X	X	X	✓
Mercury	X	X	X	X	✓	✓
Nickel	X	✓	X	X	X	✓
Palladium	X	X	X	X	✓	✓
Rhodium	✓	✓	X	✓	✓	✓
Silver	X	X	X	X	X	✓

Without proper recycling, most of these toxic components will end up in land fill poisoning soil and water.

Reach us at -

Haier Appliances (India) Pvt. Ltd.

Building No. 1, Okhla Industrial Estate, Phase III,
New Delhi - 110020



1800-419-9999 [Toll Free - 24x7]

1800-102-9999 [Toll Free - 24x7]

HAIER WARRANTY

Haier

CUSTOMER WARRANTY CARD

Customer Name : _____
Address : _____
Date of Purchase : _____
Model Name : _____ Serial Number : _____
Dealer Seal and Signature : _____

HAIER APPLIANCES (INDIA) PVT. LTD. (here –in-after referred to as “the company” hereby offers the following warranty to the domestic purchaser commencing from the date of purchase.

Warranty		
Product	Period	Parts Not Covered
LCD/LED TV	12 Months	Remote, Cabinet

TERMS AND CONDITIONS :

- 1) The company will free of charge repair or replace any defective part or parts which prove to be defective in workmanship and / or material not due to abnormal or improper usage, at its sole discretion.
- 2) This warranty will automatically terminate on the expiry of the applicable warranty period from the date of invoice.
- 3) While the company will make every efforts to carry out the repairs as soon as possible, however the company is not liable for any delay in servicing due to reasons beyond control of the company or any of its authorized service centers.
- 4) It is entirely left to Company's discretion to repair/replace parts at the site of installation or at the authorized service center of the Company.
- 5) The warranty shall be strictly limited to the repairs or replacement of the defective parts specified in the warranty.
- 6) The parts shall be replaced by functionally operating equivalent material only and not with brand new ones and are likely to be different from the one originally fitted. The parts thus removed shall be taken back to company.
- 7) This warranty shall continue to be in force for the term herein specified, irrespective of what replacements may be provided under it, and such replacement shall not attract any fresh warranty.
- 8) The company reserves the right to retain any part or component replaced at its sole discretion during the warranty period.
- 9) The warranty shall not in any case extend towards payment of any monetary consideration whatsoever or replacement or return of the product.
- 10) In no event the Company or its authorized service center be liable for any consequential damages or resulting liability, damage or loss arising directly or indirectly out of any defect in the appliance.
- 11) During the period of additional / non comprehensive warranty, visit charges as applicable will be payable in addition to and fro charges.
- 12) Any change of location or change in the ownership during the warranty period must be intimated in writing to the Company.
- 13) The Company's employees or its authorized representatives or dealer/service franchise have no authority to vary the terms of this warranty.
- 14) The Company is not liable to provide the service support beyond 5 years after the end of manufacturing of the particular model of the product except in cases where the product is covered under warranty.
- 15) This warranty is effected in New Delhi and claims, if any, shall be made only before the courts having jurisdiction in New Delhi and no claim shall be made against the Company outside New Delhi notwithstanding that appliance may have been sold or delivered elsewhere.
- 16) This warranty is not valid in case of following events :
 - a) If the product has been installed/serviced/repaired/opened or tampered by any unauthorized personnel
 - b) If original serial number is removed or obliterated from the product.
 - c) If defects arise/caused by improper electrical circuit, major fluctuations in voltage, alteration, misuse, neglect, substitution of original components with spurious/non-genuine components, attacked by household pest/rodents, fire, flood, earthquake, lightning and/or any other accident or act of God/natural calamities.



1800-419-9999 [Toll Free - 24x7]
1800-102-9999 [Toll Free - 24x7]

Haier Appliances (India) Pvt. Ltd.
Building No. 1, Okhla Industrial Estate,
Phase III, New Delhi - 110020

Customer Name : _____
Address : _____
Date of Purchase : _____
Model Name : _____ Serial Number : _____
Dealer Seal and Signature : _____

Haier

