

Manuals.plus / > Fujifilm / > Fujifilm Instax Mini 12 Instant Camera User Manual

Fujifilm Instax Mini 12

Sign in to save this manual Sign in to bookmark this manual and keep private notes.

Fujifilm Instax Mini 12 Instant Camera User Manual

Your guide to setting up, operating, and maintaining your Instax Mini 12 camera.

INTRODUCTION

Welcome to the world of instant photography with your new Fujifilm Instax Mini 12 camera. This manual provides essential information to help you get started, capture memorable moments, and ensure the longevity of your device. Please read through these instructions carefully before using your camera.



The Fujifilm Instax Mini 12 Instant Camera in Clay White.

WHAT'S IN THE BOX

Upon unboxing your Fujifilm Instax Mini 12, please verify that all the following items are included:

- Instax Mini 12 Camera Body
- AA Batteries (x2)
- Hand Strap
- User Manual (this document)



The standard contents included with your Instax Mini 12 camera.

SETUP

1. Inserting Batteries

Open the battery compartment cover located on the back of the camera. Insert two AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment. Close the cover securely.



Locate and open the battery compartment on the back of the camera.

Advertisements

2. Loading Film

Open the film compartment door on the side of the camera. Align the yellow mark on the film pack with the yellow mark on the camera body. Insert the film pack straight in and close the door. Do not open the film compartment until all 10 exposures have been used, as this will expose the remaining film.



Insert the Instax Mini film pack into the designated slot.

Advertisements

3. Turning On the Camera

To turn on the camera, simply twist the lens barrel clockwise from the 'OFF' position to the 'ON' position. The lens will extend, and the flash will charge.

OPERATING THE CAMERA

Taking a Photo

Once the camera is on and the flash is charged, simply point the camera at your subject and press the shutter button. The camera features automatic exposure, which adjusts the flash and shutter speed for optimal brightness in various lighting conditions. A printed photo will eject from the top of the camera.




The Instax Mini 12 instantly prints your captured moments.

Advertisements


Using Close-Up and Selfie Mode

For close-up shots or selfies, twist the lens barrel one more time from the 'ON' position to the 'CLOSE-UP' position. This mode is ideal for subjects between 30 to 50 cm (11.8 to 19.7 inches) away. The built-in selfie mirror next to the lens helps you frame your selfies perfectly.

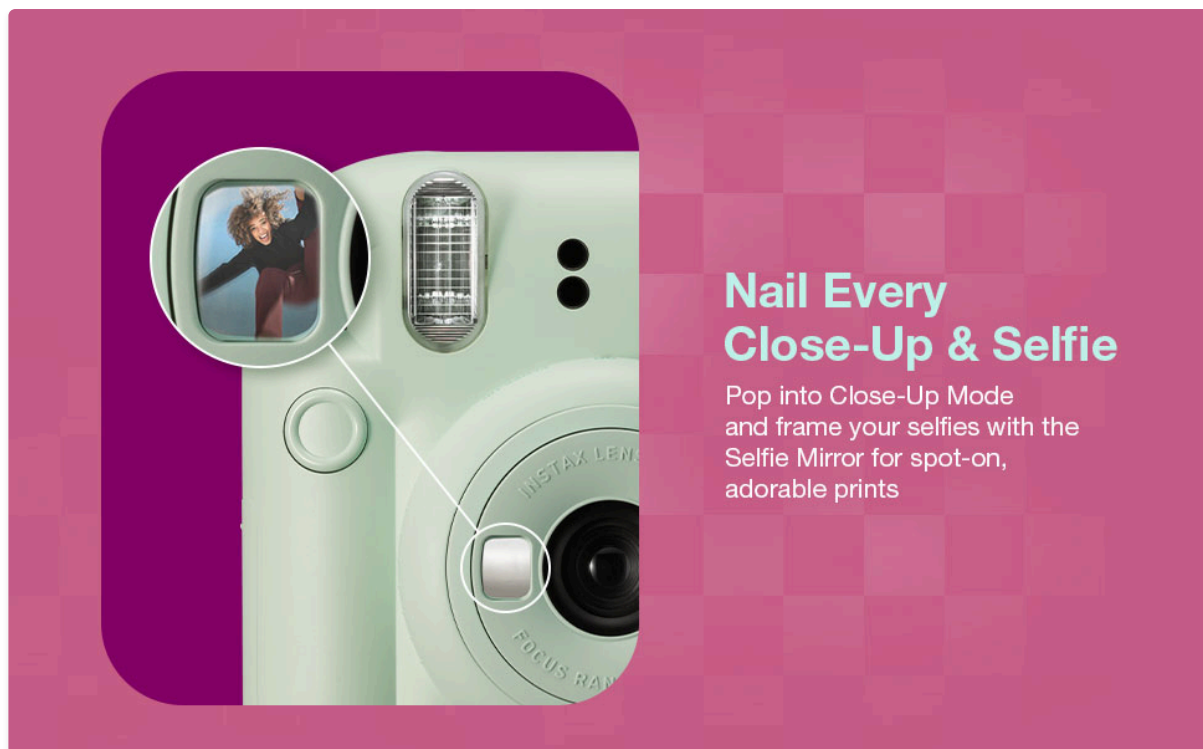

The selfie mirror assists in framing your close-up and selfie shots.

Advertisements

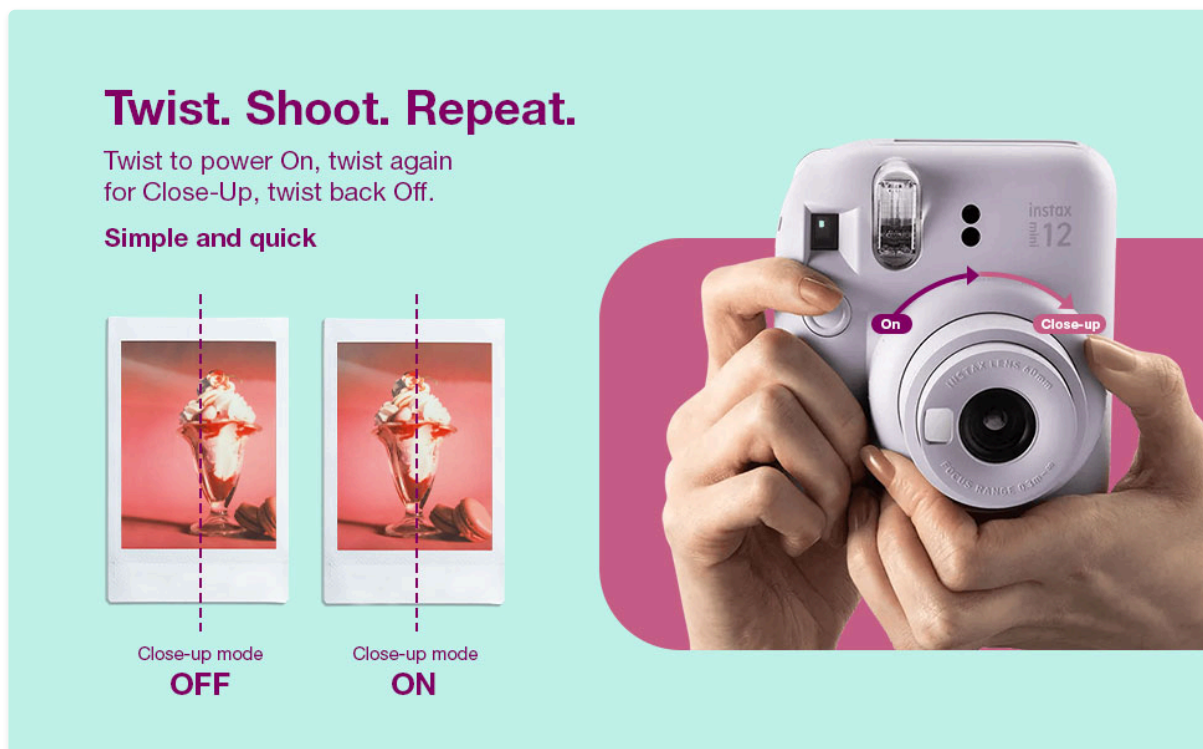


Twist the lens barrel to switch between power on and close-up modes.

Advertisements

Automatic Exposure

The Instax Mini 12 automatically detects the brightness of your environment and adjusts the shutter speed and flash output accordingly. This ensures well-exposed photos in various lighting conditions without manual adjustments.

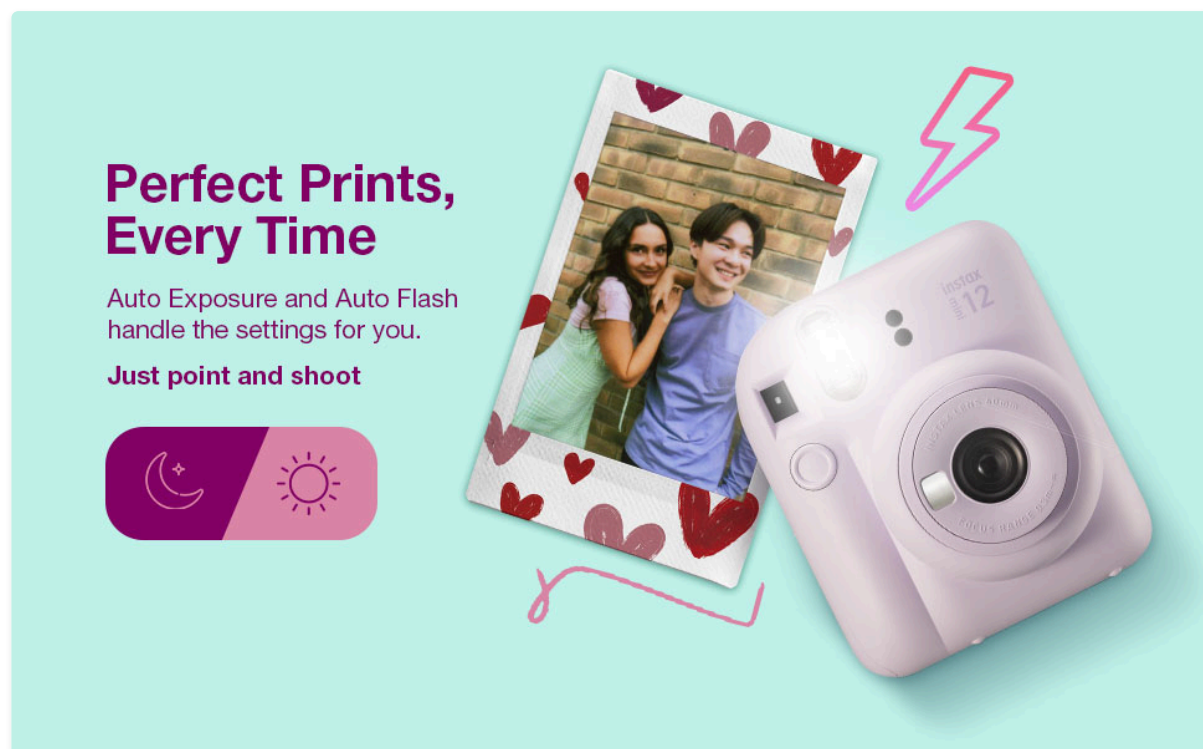

The camera's automatic exposure feature simplifies photography.

MAINTENANCE

Cleaning the Camera

To clean the camera body, use a soft, dry cloth. For the lens, use a lens cleaning cloth designed for optical surfaces. Avoid using abrasive cleaners or solvents, which can damage the camera's finish or lens coating.

Advertisements

Storing Film

Store Instax Mini film in a cool, dry place, away from direct sunlight and high temperatures. For optimal results, use film before its expiration date.

Battery Care

Remove batteries from the camera if it will not be used for an extended period to prevent leakage. Replace both batteries simultaneously with new ones when the battery indicator light signals low power.

TROUBLESHOOTING

- **Camera does not turn on:** Ensure batteries are inserted correctly with the right polarity and are not depleted. Replace with fresh batteries if necessary.

- **Photo is too dark/light:** The Instax Mini 12 has automatic exposure. Ensure the flash is not obstructed and that you are within the recommended shooting distance. Avoid shooting in extremely dark or bright conditions that might exceed the camera's automatic adjustment range.
- **Film does not eject:** Check if the film pack is correctly loaded and if there is any film remaining. If the film counter shows 'S' or '0', the film pack might be empty or incorrectly inserted.
- **Photo is blurry:** Ensure the subject is within the camera's focus range (0.3m to infinity, or 0.3m to 0.5m in close-up mode). Hold the camera steady when pressing the shutter button.

Advertisements

For further assistance, please refer to the Warranty and Support section or visit the official Fujifilm support website.

SPECIFICATIONS

Feature	Detail
Brand	Fujifilm
Model Name	Instax Mini 12
Item Weight	306 Grams
Item Dimensions (L x W x H)	6.7 x 10.4 x 12.2 Centimeters
Film Format Type	Instax Mini
Exposure Control	Automatic
Maximum Shutter Speed	1/2 to 1/250s (Programmed electronic shutter)
Viewfinder Type	Optical viewfinder
Special Feature	Compact, Selfie Lens

WARRANTY AND SUPPORT

Warranty Information

This product comes with a 1-year manufacturer's warranty. Please retain your proof of purchase for warranty claims.

Customer Support

For technical support, service, or warranty inquiries, please contact Fujifilm customer service. You can find detailed contact information on the official Fujifilm website or through the contact details provided below:

Advertisements

- **Manufacturer:** Fujifilm India Private Limited
- **Address:** Unit No 521, Level V, Caddie Commercial Tower, Hospitality District Aerocity, IGI Airport, New Delhi - 110037 (India)
- **Importer:** Fujifilm India Pvt Ltd
- **Packer:** Fujifilm India Pvt Ltd

Visit the official [Fujifilm website](#) for the latest support resources and contact options.

© 2024 Fujifilm. All rights reserved. Instax and Instax Mini are trademarks of FUJIFILM Corporation.

Advertisements

Advertisements

Related Documents - Instax Mini 12

	Fujifilm Instax Mini LiPlay Hybrid Instant Camera User's Guide This user's guide provides comprehensive instructions for operating the Fujifilm Instax Mini LiPlay Hybrid Instant Camera, covering setup, shooting, playback, printing, and troubleshooting.
	FUJIFILM instax SQUARE SQ 40 Instant Camera User Guide and Safety Precautions User guide and safety precautions for the FUJIFILM instax SQUARE SQ 40 instant camera. Learn about setup, operation, taking photos, selfie mode, and essential safety advice.
	Fujifilm instax SQUARE Link Smartphone Printer User's Guide Comprehensive user guide for the Fujifilm instax SQUARE Link smartphone printer (model FI017W). Includes setup, charging, film loading, app connectivity, and troubleshooting instructions.
	Mode d'emploi Fujifilm instax mini Link+ (FI046W) Guide complet d'utilisation pour l'imprimante pour smartphone Fujifilm instax mini Link+ (FI046W). Instructions pour l'installation, l'impression, le chargement et le dépannage.
	Manual de Utilização da Impressora de Smartphone FUJIFILM instax mini Link+ Guia completo para a Impressora de Smartphone FUJIFILM instax mini Link+, cobrindo instalação, operação, solução de problemas e informações de segurança.
	FUJIFILM instax Pal Digital Camera User's Guide Comprehensive user guide for the FUJIFILM instax Pal Digital Camera, covering setup, operation, shooting modes, app connectivity, printing, and troubleshooting.