

[Manuals.plus](#) /

› [TOSHIBA](#) /

› Toshiba 14 Place Settings Dishwasher User Manual

TOSHIBA DW-14F1IN(S)-1

Toshiba 14 Place Settings Dishwasher

Model: DW-14F1IN(S)-1

1. INTRODUCTION

This user manual provides detailed instructions for the safe and efficient operation, installation, and maintenance of your new Toshiba 14 Place Settings Dishwasher. Please read this manual thoroughly before using the appliance and keep it for future reference.



Image: Front view of the Toshiba 14 Place Settings Dishwasher, showcasing its sleek silver finish and control panel.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for household use only.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it has a damaged power cord or plug.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not touch the heating element during or immediately after use.
- Always close the door securely before starting a wash cycle.

3. WHAT'S IN THE BOX

Upon unpacking your Toshiba Dishwasher, please ensure all components are present:

- 1 x Toshiba Dishwasher Unit

- 1 x Inlet Pipe
- 1 x Outlet Pipe
- 1 x Salt Filter
- 1 x User Manual (this document)
- 1 x Finish Start Kit

4. INSTALLATION AND SETUP

Proper installation is crucial for the optimal performance and longevity of your dishwasher. It is recommended to have the appliance installed by a qualified technician.

4.1. Placement and Dimensions

The Toshiba DW-14F1IN(S)-1 is a freestanding dishwasher. Ensure there is adequate space for ventilation and access to water and drain connections. Refer to the dimensions below for proper placement.



**14 PLACE
SETTING**



**6 WASH
PROGRAM**



**ANTI BACTERIAL
FILTER**




**HI-TEMP
HYGIENE CYCLE**



**SMART POWER
OFF MEMORY**



**SOIL -SENSING
AUTO CYCLE**

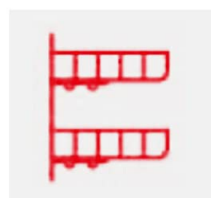

**HEIGHT
ADJUSTABLE
UPPER RACK**



**2 YEAR
PRODUCT WARRANTY**



**5 YEAR
MOTOR WARRANTY**

Image: Dimensional diagram of the dishwasher, indicating a depth of 59.8 cm, width of 60.4 cm, and height of 84.5 cm.

4.2. Water and Drain Connections

Connect the inlet pipe to a cold water supply and the outlet pipe to a suitable drain. Ensure all connections

are secure to prevent leaks.



Image: Rear view of the dishwasher, illustrating the connections for the water inlet (blue hose), water outlet (grey corrugated hose), and power cord.

5. OPERATING INSTRUCTIONS

Your Toshiba dishwasher is designed for ease of use with multiple wash programs and functions to suit various dishwashing needs.

5.1. Control Panel

The dishwasher features a push-button control panel with an LED display for easy program selection and monitoring.

5.2. Wash Programs and Functions

The dishwasher offers 6 wash programs and 2 additional functions:

- **Normal:** For everyday dishware with normal soil.
- **Heavy:** For heavily soiled pots, pans, and dishes.
- **Delicate:** For fragile items like glassware.
- **Half Load:** Optimizes water and energy consumption when the dishwasher is not fully loaded.
- **Heated Dry:** Enhances drying efficiency for spotless results.
- **Toshiba Hygiene / Hi-Temp Hygiene Cycle:** Highly effective program for heavily soiled dishes, designed to remove 99.99% of bacteria.

Additional features include:

- **Smart Power Off Memory:** Resumes the cycle from where it left off after a power interruption.
- **Soil-Sensing Auto Cycle:** Automatically detects the level of soil and adjusts the wash cycle accordingly for optimal cleaning.

5.3. Loading the Dishwasher

Proper loading ensures effective cleaning and drying. The dishwasher features adjustable racks to accommodate various sizes of utensils and dishes.

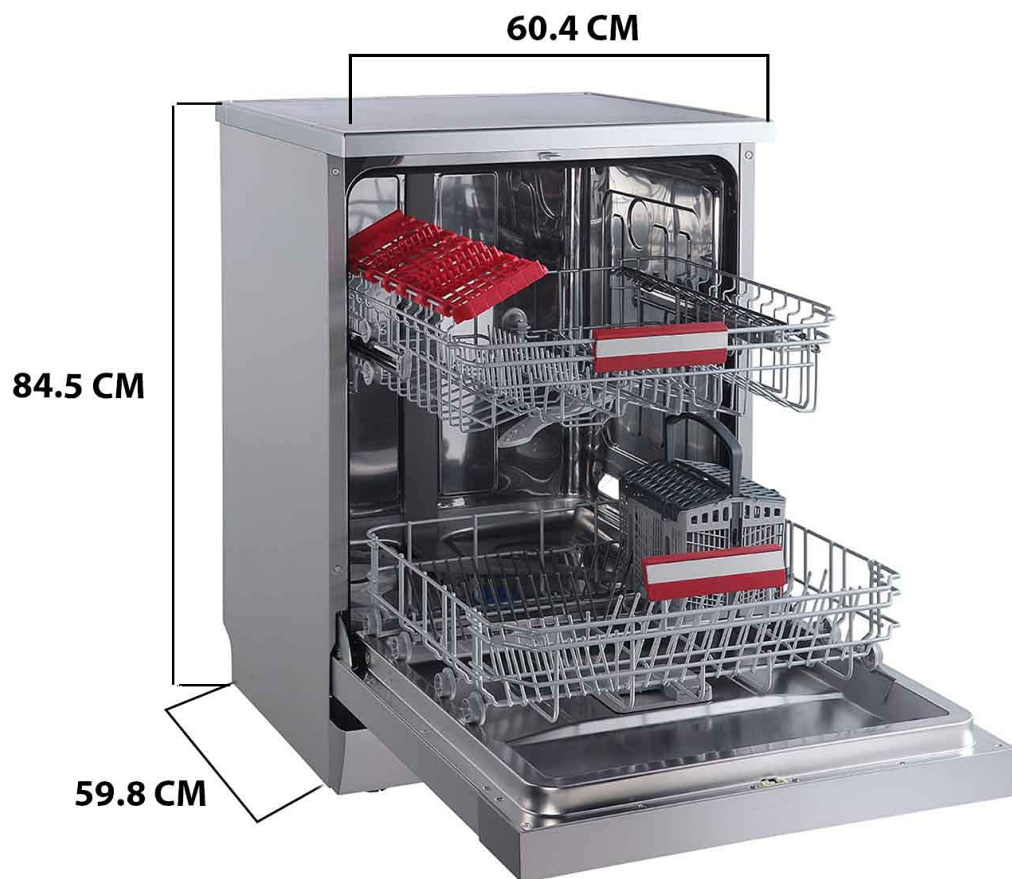


Image: Interior view of the dishwasher with both upper and lower racks extended, demonstrating the ample space for loading dishes.



Image: Detailed view of the lower rack, highlighting the arrangement of tines for plates and the removable cutlery basket.



Image: Detailed view of the upper rack, illustrating its design for glasses, cups, and smaller items, with adjustable elements.



Image: Close-up of the height adjustment mechanism for the upper rack, allowing flexibility for taller items in the lower basket.

For optimal results:

- Scrape off large food particles before loading.
- Place larger items in the lower rack and smaller, delicate items in the upper rack.
- Ensure items do not block the spray arms.

6. MAINTENANCE AND CARE

Regular maintenance helps ensure the longevity and efficiency of your dishwasher.

6.1. Antibacterial Filter

The dishwasher is equipped with an Antibacterial Filter made from a material that constantly inhibits microorganism build-up inside the unit, ensuring a high level of hygiene. Clean the filter regularly to maintain performance.

6.2. Cleaning the Interior and Exterior

- Wipe the exterior with a soft, damp cloth.
- Clean the interior periodically to remove any food residue or mineral deposits.
- Run a dishwasher cleaning cycle with a specialized cleaner if needed.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Circuit breaker tripped.	Check power connection; Ensure door latches securely; Reset circuit breaker.
Dishes not clean	Improper loading; Clogged spray arms; Insufficient detergent; Incorrect program.	Reload dishes correctly; Clean spray arm nozzles; Use recommended detergent amount; Select appropriate wash program.
Excessive noise	Items rattling; Foreign object in pump; Improper installation.	Rearrange dishes; Check for foreign objects; Ensure dishwasher is level.
Water not draining	Clogged drain hose or filter; Drain pump malfunction.	Clean filter; Check drain hose for kinks or blockages; Contact service if pump is faulty.

8. SPECIFICATIONS

Detailed technical specifications for the Toshiba DW-14F1IN(S)-1 Dishwasher:

Feature	Specification
Model Name	DW-14F1IN(S)-1
Colour	Silver
Controls Type	Push Button
Material	Stainless Steel
Noise Level	49 dB
Item Weight	41.5 kg (41500 Grams)
Voltage	240 V
Wattage	1930 Watts
Cycle Options	Normal, Heavy, Delicate, Half Load, Heated Dry
Number of Settings	14 Place Settings
Water Consumption	0.01 Gallons per Minute (approx. 11 Litres per cycle)
Energy Efficiency	A++
Annual Energy Consumption	266 Kilowatt Hours Per Year
Product Dimensions (LxWxH)	59.8D x 60.4W x 84.5H Centimeters
Installation Type	Freestanding
Country of Origin	China

9. WARRANTY AND SUPPORT

Your Toshiba Dishwasher comes with comprehensive warranty coverage:

- **Product Warranty:** 2 Years
- **Motor Warranty:** 5 Years

For service, support, or warranty claims, please contact Toshiba customer service. You can also visit the official [TOSHIBA Store on Amazon](#) for more information.

Manufacturer: Foshan Shunde Midea Washing Appliances Manufacturing Co.,Ltd., No 20, Gangqiang Road, Beijiao, Shunde, Foshan, Guangdong, P.R. China - 528311

Importer: Midea India Private Limited, Unit No 517-522, 5th Floor, BPTP Park Centra, Sector-30, Gurgaon-Haryana- 122001