

[Manuals.plus](#) /

› [Bosch](#) /

› Bosch Series 6 14 Place Settings Free-standing Dishwasher (SMS6IKI01I, 60 cm, Brushed Steel, Anti-Fingerprint, Wi-Fi Enabled, EcoSilence Drive) - Instruction Manual

## Bosch SMS6IKI01I

# Bosch Series 6 Free-standing Dishwasher

Model: SMS6IKI01I

## 1. PRODUCT OVERVIEW

---

The Bosch Series 6 SMS6IKI01I is a 14 place settings free-standing dishwasher, designed for efficient and quiet operation in modern kitchens. It features a brushed steel anti-fingerprint finish, Wi-Fi connectivity via the Home Connect app, and Bosch's EcoSilence Drive motor for powerful yet quiet performance. This appliance is equipped with a flexible rack system and multiple wash programs to handle various types of dishes and cookware.



Figure 1.1: Front view of the Bosch Series 6 Free-standing Dishwasher.



Figure 1.2: The dishwasher integrated into a kitchen environment, showcasing its freestanding design.

## 2. SAFETY INFORMATION

---

Please read all safety instructions carefully before operating the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the dishwasher is properly grounded to prevent electrical shock.
- Do not operate the dishwasher if the power cord is damaged.
- Keep children and pets away from the dishwasher during operation and when the door is open.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Avoid touching the heating element during or immediately after a wash cycle.
- Do not overload the dishwasher, as this can affect cleaning performance and potentially damage the appliance.
- The AquaStop Leak Protection system provides 24x7 anti-leakage safety. However, always ensure proper

installation and check for leaks periodically.

## 3. SETUP AND INSTALLATION

---

The Bosch SMS6IKI01I is a free-standing dishwasher. Proper installation is crucial for optimal performance and safety.

### 3.1 Unpacking

Carefully remove the dishwasher from its packaging. Check for any visible damage. The package includes: 1 Dishwasher, Inlet Pipe, Outlet Pipe, and this User Manual.


### 3.2 Placement

Place the dishwasher on a level, stable surface. Ensure there is adequate space for the door to open fully. The dimensions of the appliance are 60D x 60W x 84.5H Centimeters.

### 3.3 Water and Electrical Connections

Connect the inlet pipe to a cold water supply and the outlet pipe to a drain. Ensure all connections are secure to prevent leaks. The dishwasher operates on 220 Volts. Consult the installation diagram for detailed connection points and measurements.

measurements in mm

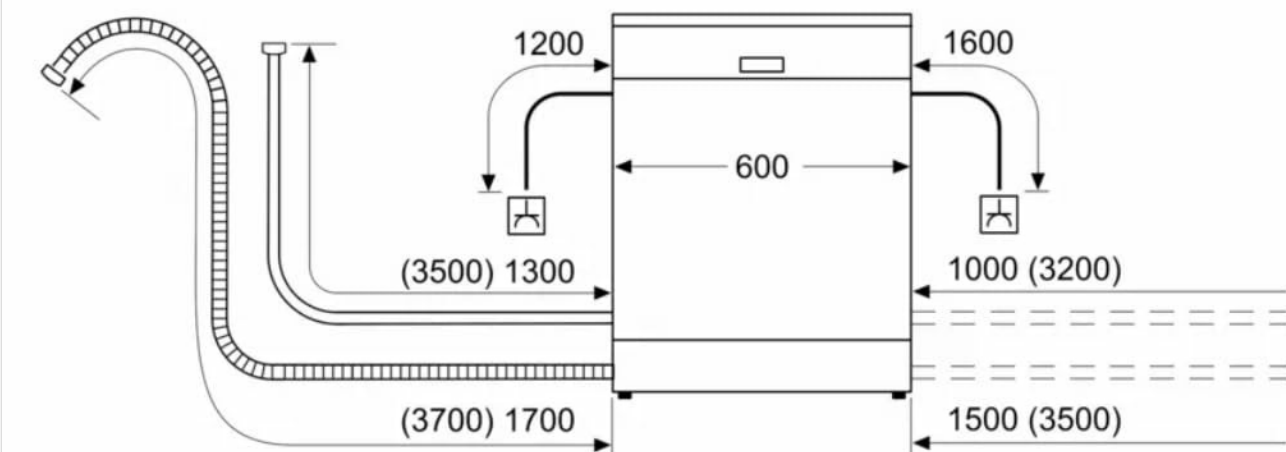

socket  
( ) values with extension kit

Figure 3.1: Installation diagram showing water and electrical connections with measurements in millimeters.

## 4. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Bosch dishwasher.

### 4.1 Control Panel Overview

The dishwasher features a Button Control with Touch Panel for easy program selection and operation.



Figure 4.1: Detailed view of the control panel with program selection buttons and digital display.

## 4.2 Loading the Dishwasher

The 14 place settings capacity and flexible rack system allow for efficient loading of various items, including large Indian family dishes, pots, glasses, and cutlery. Utilize the adjustable racks and foldable tines for maximum space optimization.



Figure 4.2: Interior view showcasing the flexible rack system and ample space for dishes.



Figure 4.3: Example of a loaded upper rack, demonstrating efficient placement of glasses and smaller plates.



Figure 4.4: Example of a loaded lower rack, showing how larger plates and pots can be accommodated.

### 4.3 Adding Detergent and Rinse Aid

Open the detergent dispenser and add the appropriate amount of dishwasher detergent. For optimal drying results and to prevent water spots, ensure the rinse aid dispenser is filled.



Figure 4.5: Close-up of the detergent dispenser, illustrating where to place dishwasher tablets or powder.

## 4.4 Selecting a Wash Program

The dishwasher offers 6 wash programs and 4 wash options to suit various cleaning needs:

- **Eco 50 °C:** Energy-efficient program for normally soiled dishes.
- **Intensive Kadhai 70 °C:** For heavily soiled pots, pans, and kadhais.
- **Auto 45-65 °C:** Automatically adjusts temperature and water usage based on soil level.
- **Quick:** Faster wash for lightly soiled dishes.
- **Pre-rinse:** For rinsing dishes that will be washed later.
- **Express Sparkle 65 °C:** For quick and sparkling results.

Additional options include **ExtraDry Technology** for enhanced drying, and **HygienePlus Function** for high-temperature rinsing to eliminate bacteria, ideal for baby bottles and chopping boards.

## 4.5 Wi-Fi Connectivity (Home Connect)

The dishwasher is Wi-Fi enabled with Home Connect. Download the Home Connect app to your smartphone to operate, monitor, and receive alerts from your dishwasher anytime, anywhere.

## 5. MAINTENANCE AND CARE

---

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

### 5.1 Cleaning the Exterior

The brushed steel anti-fingerprint finish is designed to be easy to clean. Wipe the exterior surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or solvents.

### 5.2 Cleaning the Interior and Filters

Periodically clean the interior of the dishwasher, including the spray arms and filters. Remove food particles from the filter system regularly to prevent blockages and odors. Refer to the detailed instructions in the included user manual for filter removal and cleaning.

### 5.3 Descaling

Depending on your water hardness, descaling may be necessary. Use a dishwasher-safe descaling agent as recommended by Bosch.

## 6. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your dishwasher.

### 6.1 Dishwasher Not Starting or Operating

- Ensure the power cord is securely plugged into a working outlet.
- Check if the circuit breaker has tripped.
- Make sure the dishwasher door is fully closed and latched.
- Verify that the water supply valve is open.

### 6.2 Dishes Not Clean

- Check if the spray arms are blocked by large dishes or food debris.
- Ensure the detergent dispenser is not obstructed and the correct amount of detergent is used.
- Clean the dishwasher filters regularly.
- Select an appropriate wash program for the soil level of your dishes (e.g., Intensive Kadhai for tough stains).
- Avoid overloading the dishwasher, which can prevent water from reaching all surfaces.

### 6.3 Water Leaks

- Check the water inlet and outlet hose connections for tightness.
- Ensure the dishwasher is level.
- Inspect the door seal for any damage or debris.
- The AquaStop Leak Protection system is designed to prevent leaks, but regular checks are recommended.

For persistent issues, refer to the comprehensive troubleshooting guide in the full user manual or contact Bosch customer support.

## 7. SPECIFICATIONS

---

| Feature             | Detail                                                                                                                                       |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Model Name          | Series 6 Free-standing Dishwasher                                                                                                            |
| Model Number        | SMS6IKI01I                                                                                                                                   |
| Capacity            | 14 Place Settings                                                                                                                            |
| Color               | Brushed Steel (Anti-Fingerprint)                                                                                                             |
| Material            | Stainless Steel                                                                                                                              |
| Dimensions (LxWxH)  | 60D x 60W x 84.5H Centimeters                                                                                                                |
| Item Weight         | 46.2 Kilograms                                                                                                                               |
| Noise Level         | 52 dB                                                                                                                                        |
| Voltage             | 220 Volts                                                                                                                                    |
| Energy Consumption  | 1.35 Watts per Kilogram                                                                                                                      |
| Water Consumption   | Approx. 9.5 litres per cycle                                                                                                                 |
| Special Features    | EcoSilence Drive, ExtraDry Technology, Flexible Rack System, AquaStop Leak Protection, HygienePlus Function, Wi-Fi Enabled with Home Connect |
| Included Components | 1 Dishwasher, Inlet Pipe, Outlet Pipe, User Manual                                                                                           |

## 8. WARRANTY AND SUPPORT

---

### 8.1 Warranty Information

This Bosch dishwasher comes with a standard 2-year warranty from the date of purchase. Please retain your purchase receipt as proof of warranty. The warranty covers manufacturing defects and malfunctions under normal use conditions.

### 8.2 Returns Policy

The product is eligible for a 10-day return policy from the date of delivery, subject to the retailer's terms and conditions.

### 8.3 Customer Support

For technical assistance, service requests, or any queries regarding your Bosch dishwasher, please contact Bosch customer support. You can find contact details on the official Bosch website or in the included warranty card.  
Manufacturer: BSH Household Appliances Manufacturing Pvt Ltd

