

[Manuals.plus](#) /

› [Bosch](#) /

› Bosch Serie 4 SMV4EVX14E Built-in Dishwasher User Manual

Bosch SMV4EVX14E

Bosch Serie 4 SMV4EVX14E Built-in Dishwasher User Manual

Model: SMV4EVX14E

IMPORTANT SAFETY INFORMATION

Please read this user manual carefully before installing, operating, or performing maintenance on your Bosch dishwasher. Keep these instructions for future reference. Failure to follow these instructions may result in property damage or personal injury.

- Ensure the appliance is properly earthed.
- Do not allow children to play with the appliance.
- Only use detergents and rinse aids specifically designed for dishwashers.
- Sharp items should be loaded with their points down or horizontally in the cutlery basket to avoid injury.
- Do not open the door during operation, especially during the hot wash cycle.

PACKAGE CONTENTS

Your Bosch SMV4EVX14E dishwasher package includes:

- 1x Bosch SMV4EVX14E Built-in Dishwasher
- User Manual (this document)
- Installation Template and Fasteners
- Water Inlet and Drain Hoses
- Power Cable

SETUP AND INSTALLATION

The Bosch SMV4EVX14E is a fully integrated built-in dishwasher designed to blend seamlessly with your kitchen cabinetry. Professional installation is recommended.

Dimensions and Cabinet Requirements

Ensure your cabinet opening meets the following dimensions for proper fit:

Height: 81.5 - 87.5 cm

Width: 59.8 cm

Depth: 55 cm


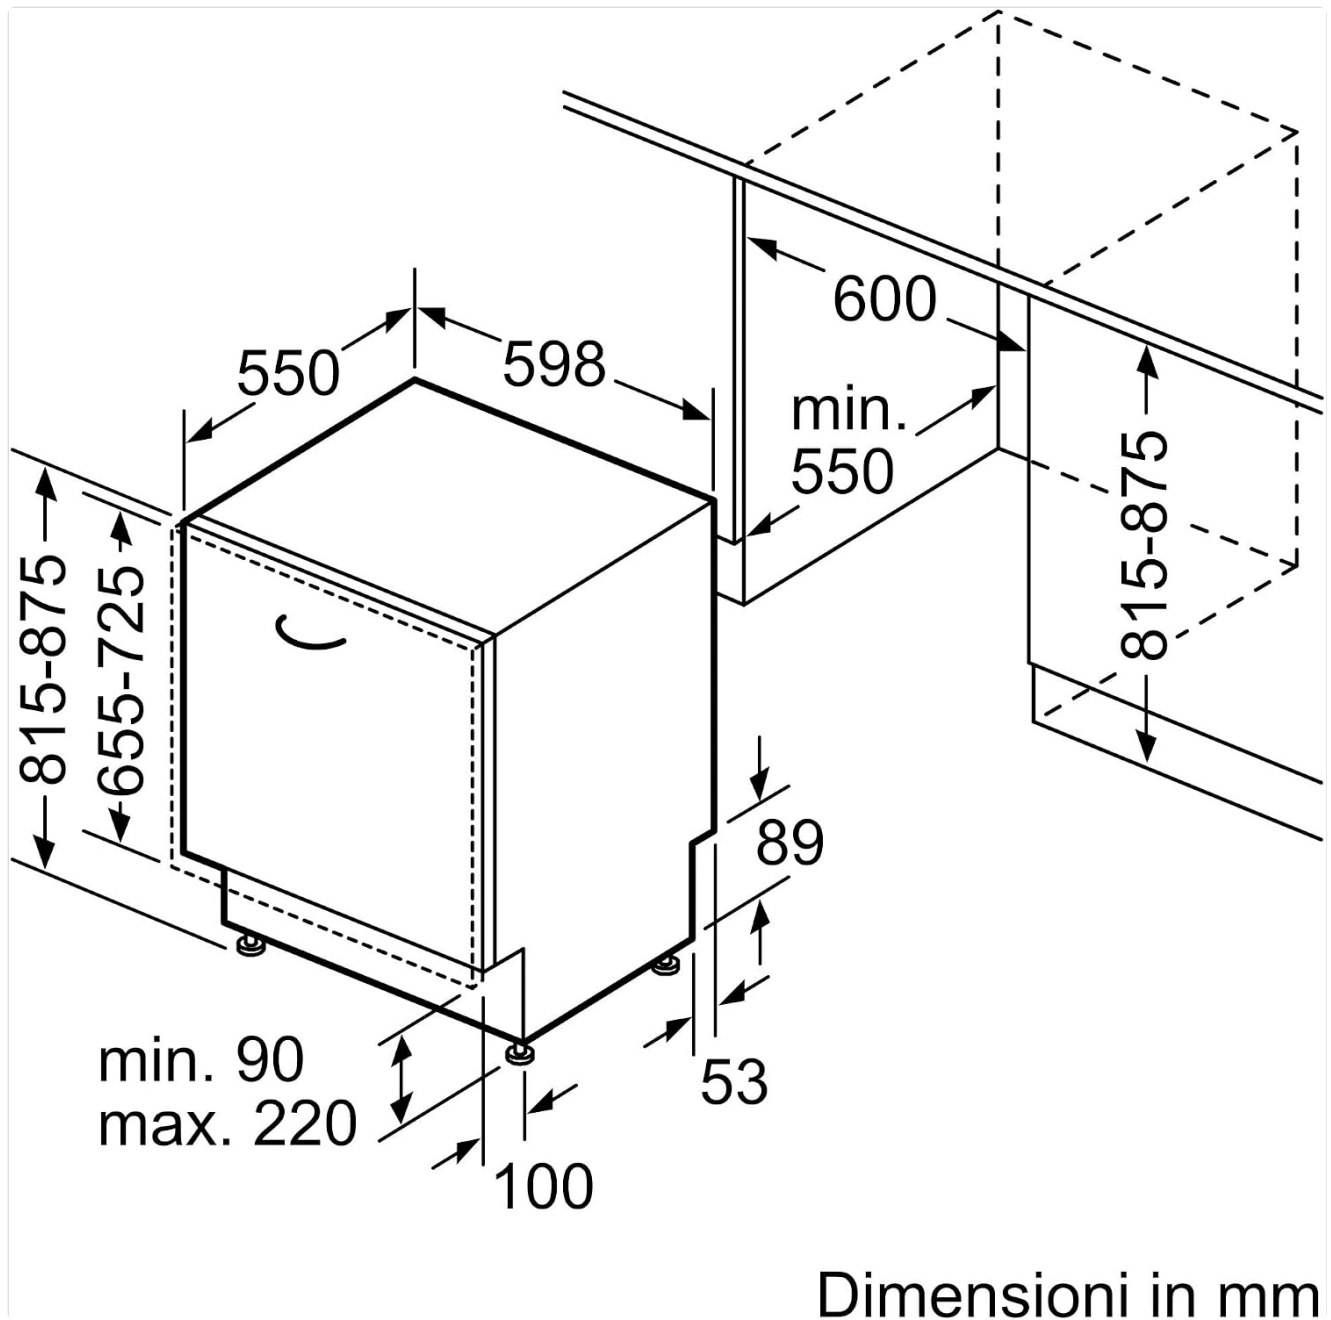 


Diagram showing the required installation dimensions for the dishwasher, including height, width, and depth measurements for the cabinet opening.

Water and Electrical Connections

Connect the water inlet hose to a cold water supply and the drain hose to a suitable drain. The appliance requires a 240 Volt electrical connection. Refer to the diagram below for typical connection points.

 Dimensioni in mm

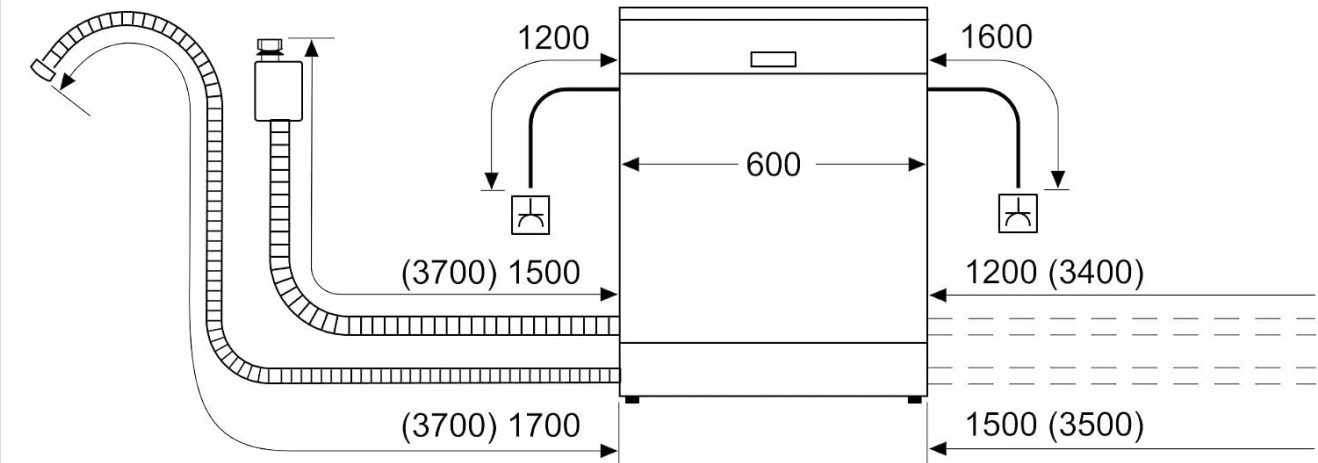

⏏ Presa di corrente
() Valori con prolunga

Diagram illustrating the water inlet, drain, and electrical connection points for the dishwasher installation.

Cabinet Panel Installation

This dishwasher does not include a decorative front panel. A custom panel matching your kitchen cabinetry must be installed by a specialist to ensure a seamless integrated look.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel is located on the top edge of the dishwasher door, visible when the door is slightly ajar. It features touch controls and a digital display.



Close-up view of the dishwasher's control panel, showing program selection buttons, digital display, and status indicators.



 
The control panel displaying the "Favourite" program option, allowing for personalized wash cycle settings.

Loading the Dishwasher


Proper loading ensures optimal cleaning results. The dishwasher features flexible baskets and a cutlery tray.



The dishwasher interior with both upper and lower racks extended, demonstrating the spacious and flexible loading options.

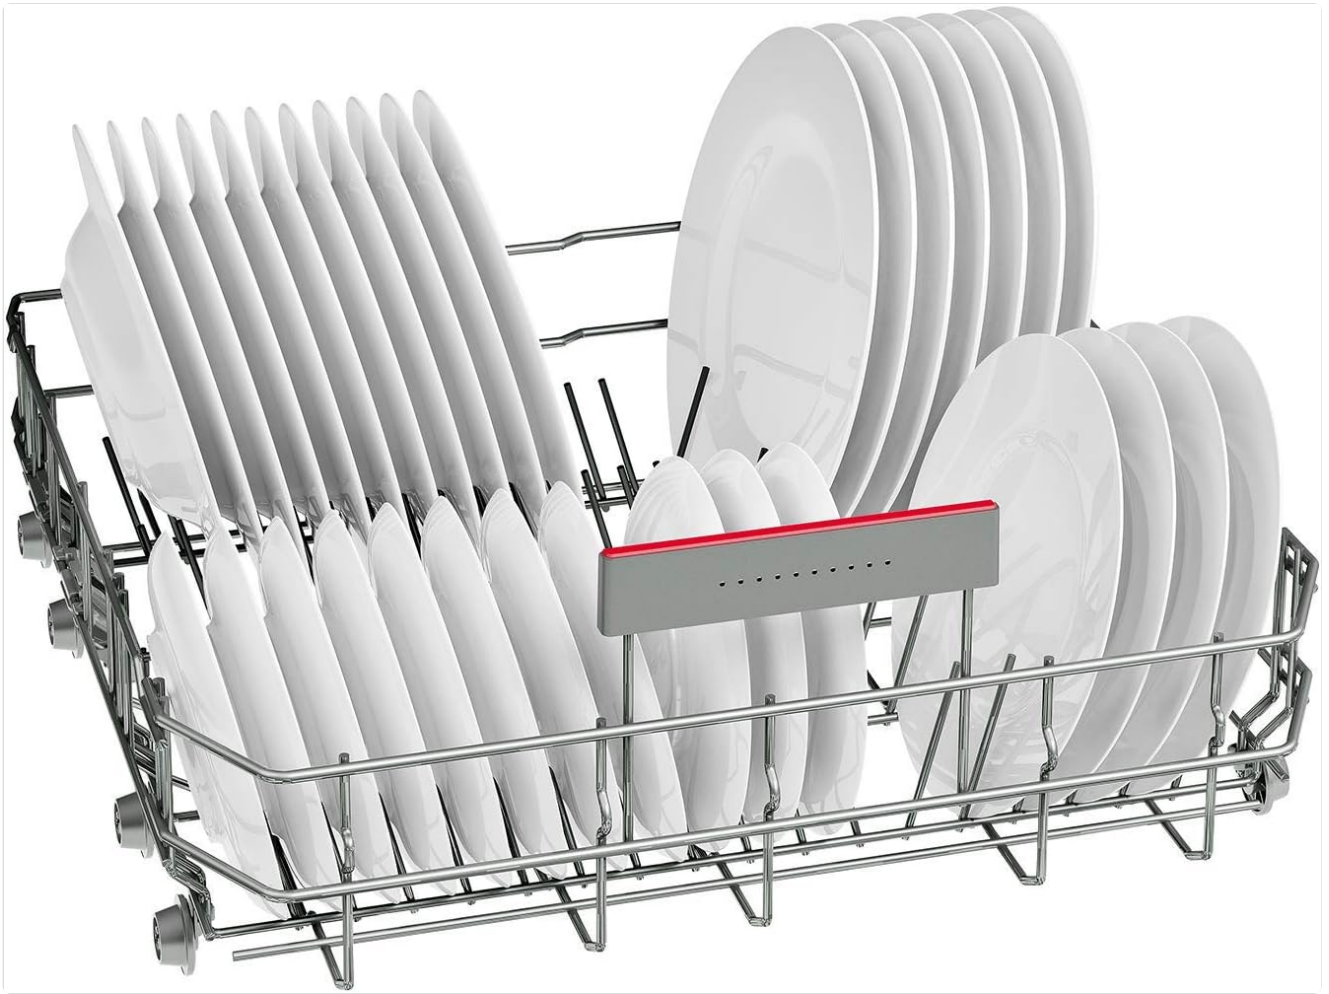

 The lower rack of the dishwasher, efficiently loaded with dinner plates and larger items.

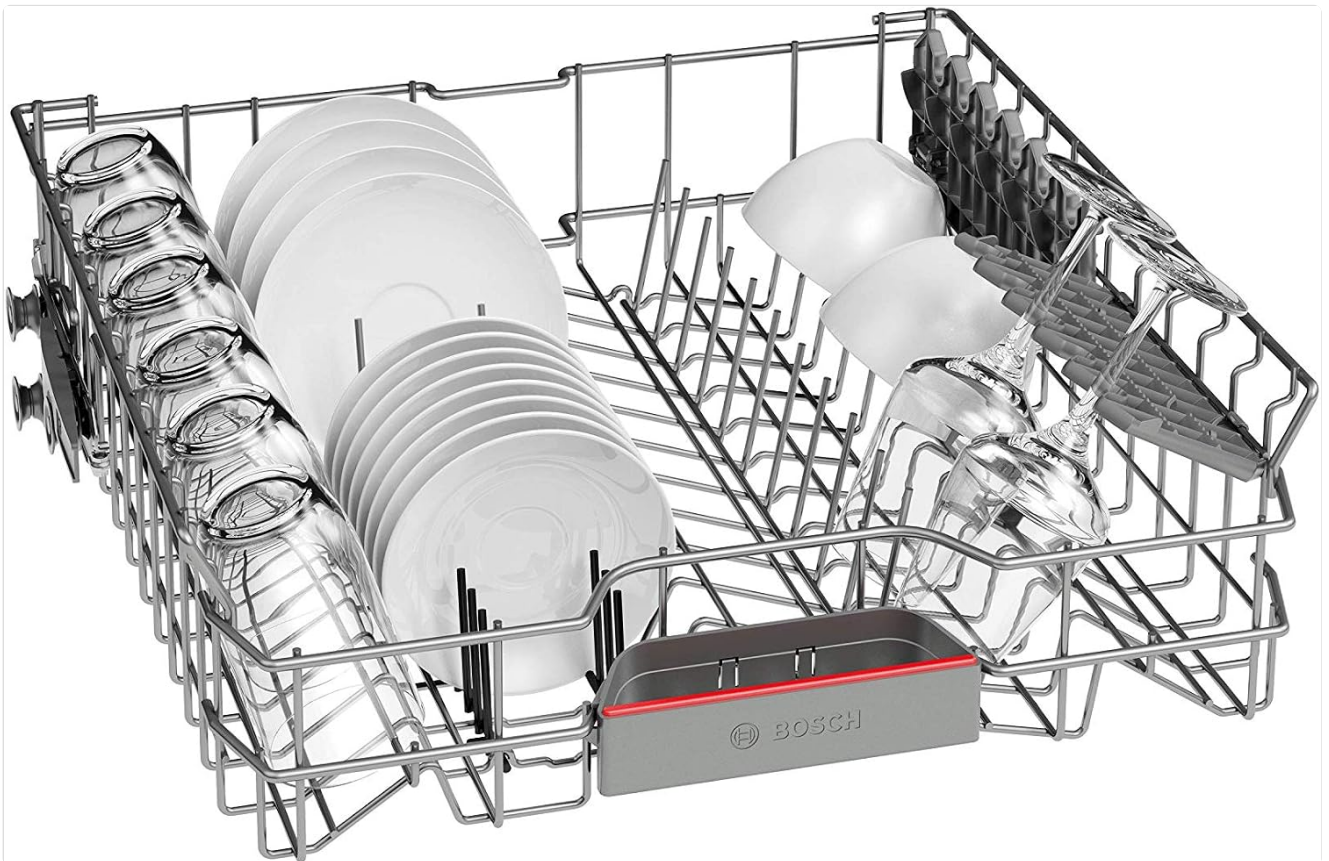


The upper rack of the dishwasher, showing proper placement of glasses, cups, and small bowls.



The dedicated cutlery tray at the top of the dishwasher, neatly organized with various utensils.

 Place larger items and heavily soiled dishes in the lower rack. Delicate items, glasses, and cups should be placed in the upper rack. Use the dedicated cutlery tray for forks, knives, and spoons.

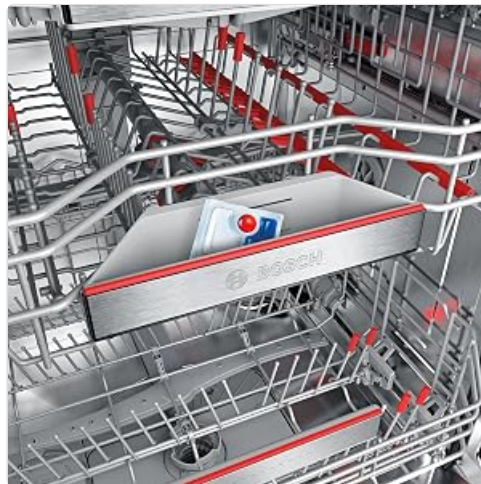

The detergent dispenser compartment, ready for dishwasher tablet or powder.

Add the appropriate amount of dishwasher detergent to the dispenser before starting a cycle.

Program Selection and Start

Select your desired wash program using the control panel. The "Favourite" program allows you to save your most used settings for quick access. Press the Start button to begin the cycle.

Home Connect Feature

The Bosch SMV4EVX14E is equipped with Home Connect, allowing you to control and monitor your dishwasher remotely via a smartphone or tablet app. This feature enables convenient program selection, status checks, and even remote diagnostics with Bosch technical support (with your consent).



A hand holding a smartphone displaying the Bosch Home Connect app interface, demonstrating remote control capabilities for the dishwasher.

EcoSilence Drive


This dishwasher features Bosch's EcoSilence Drive motor, which is highly efficient, fast, and exceptionally quiet during operation, contributing to a peaceful kitchen environment.



Diagram illustrating the EcoSilence Drive motor, highlighting its efficient and quiet operation.

InfoLight

 As a fully integrated model, the dishwasher projects a red light onto the floor during operation to indicate that it is running. This light disappears when the cycle is complete.

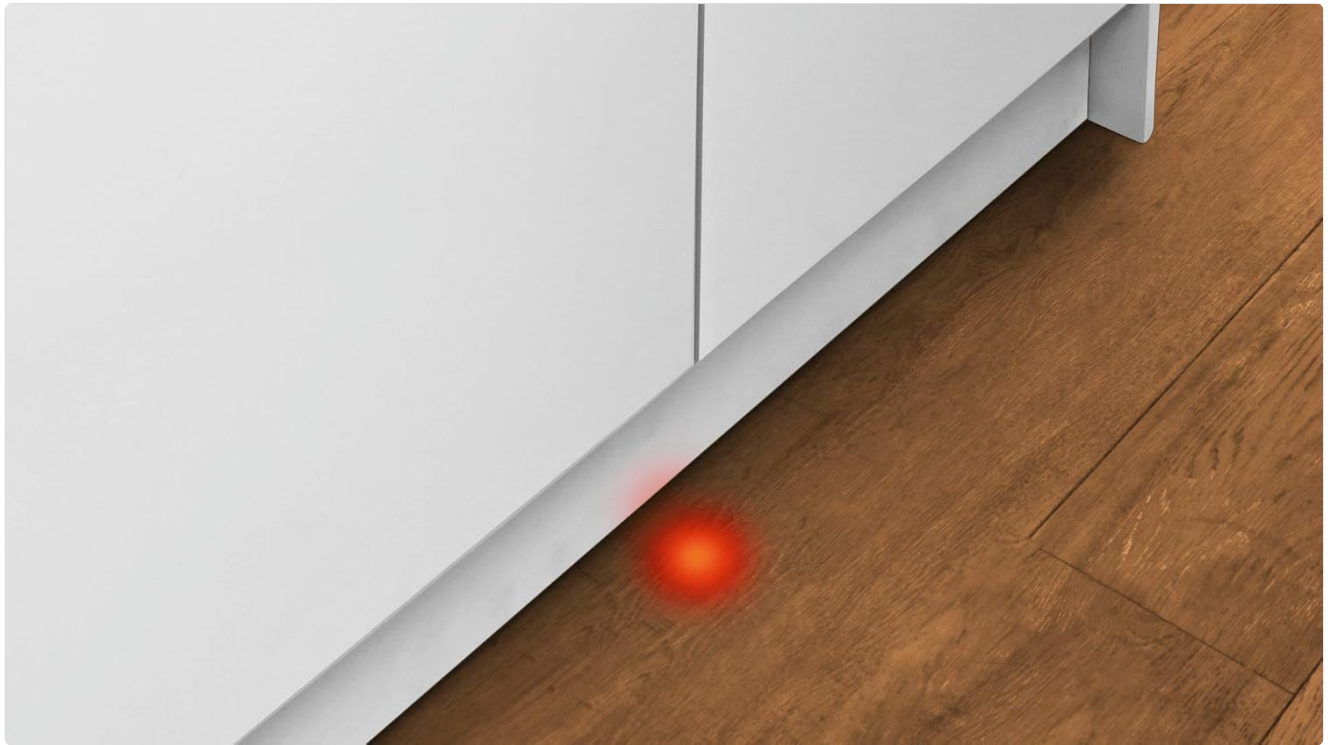

A red light projected onto the floor from the bottom of the dishwasher, indicating that the appliance is currently in operation.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your dishwasher.

Cleaning the Filters

The filter system in the base of the dishwasher should be checked and cleaned regularly to prevent blockages and ensure efficient washing. Refer to the detailed instructions in the full manual for filter removal and cleaning.

Cleaning the Spray Arms

Periodically check the spray arm nozzles for any blockages from food particles. Clear any obstructions to ensure water is distributed evenly.

Exterior Cleaning

Wipe down the exterior of the dishwasher and the control panel with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Before contacting service, please check the following common issues:

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power cord, ensure door clicks shut, select a program and press Start.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, clogged filters.	Reload dishes correctly, clean spray arms, add more detergent, clean filters.

Problem	Possible Cause	Solution
Water remains in the tub	Clogged drain hose or filter, drain pump issue.	Clean filters, check drain hose for kinks or blockages.
Unusual noises	Items hitting spray arms, foreign objects in pump.	Rearrange dishes, check for and remove any foreign objects.


For more detailed troubleshooting or issues not listed here, please refer to the comprehensive troubleshooting guide in the full product manual or contact Bosch customer service.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	SMV4EVX14E
Brand	Bosch
Form Factor	Built-in
Installation Type	Integrated
Product Dimensions (HxWxD)	81.5 x 59.8 x 55 cm
Weight	35 kg
Capacity	13 Place Settings
Noise Level	44 dB
Energy Efficiency Class	C
Water Consumption (Eco Program)	9.5 Liters
Energy Consumption (Eco Program)	0.736 kWh
Eco Program Duration	4:55 h:min
Special Feature	Home Connect
Included Components	1x Dishwasher

For detailed energy information, please refer to the official EU Energy Label and Product Information Sheet:

 - [EU EPREL Database Link](#)
- [Bosch Energy Label Information](#)

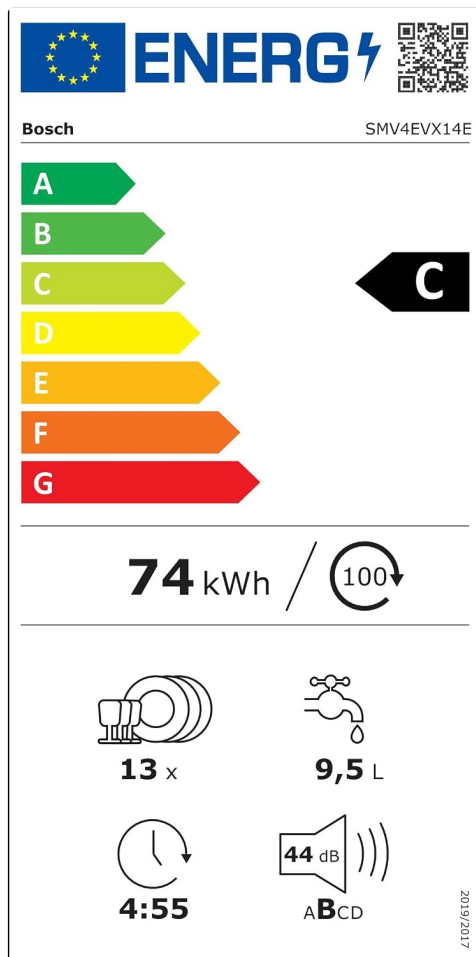

The official EU Energy Label for the Bosch SMV4EVX14E dishwasher, showing its energy efficiency class (C), energy consumption, water consumption, and noise level.

WARRANTY AND SUPPORT

Your Bosch SMV4EVX14E dishwasher comes with a minimum manufacturer's warranty of 24 months from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or to schedule a service appointment, please contact Bosch customer support. With your consent, Bosch technical service can remotely access your dishwasher to diagnose issues via the Home Connect feature.

For return policies and specific details regarding purchases made through marketplaces, please refer to the retailer's return policy or Amazon's help pages.

Visit the official Bosch website for the most up-to-date support information and contact details.

© 2024 Bosch. All rights reserved.

Bosch is a registered trademark of Robert Bosch GmbH.