



User Guide

Side by Side Refrigerators

Total Capacity: 600L

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)

For Installation and Demo




© Whatsapp "Hi" on 9321665511
or Scan the QR code

Contents

Parts Identification.....	01
Installation.....	07
Tips Before First Usage.....	09
Temperature Setting.....	10
Helpful Hints & Tips.....	11
Cleaning.....	12
Trouble Shooting.....	13
Safety Precautions.....	14
Environment Friendly Suggestions.....	18
Warranty.....	19

Parts Identification

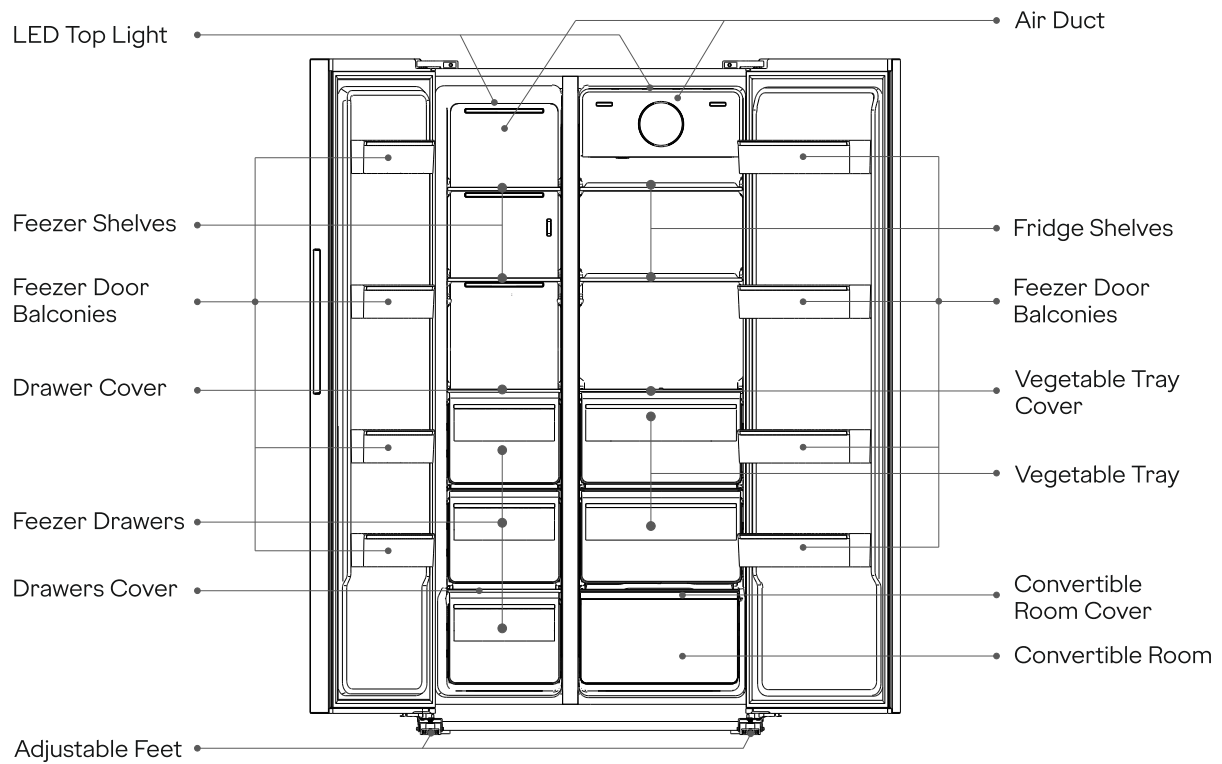


*Features may vary by model wise.

Installation


Remove the Doors*

Required: Philips screwdriver, Flat bladed screwdriver.


- Ensure the unit is unplugged and empty. To take the door off, it is necessary to tilt the unit backwards. You should rest the unit on something so that it will not slip during the door removing process.
- All parts removed must be saved to do the reinstallation of the door.
- Do not lay the unit flat as this may damage the coolant system.
- It's better that 2 people handle the unit during assembly.

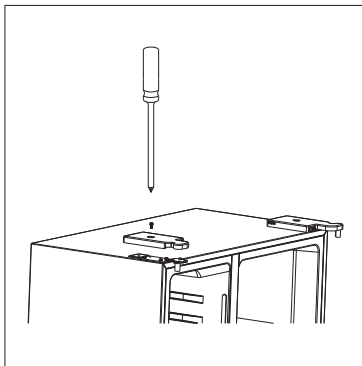

1. Unscrew Hinge Cover by Philips Screwdriver.

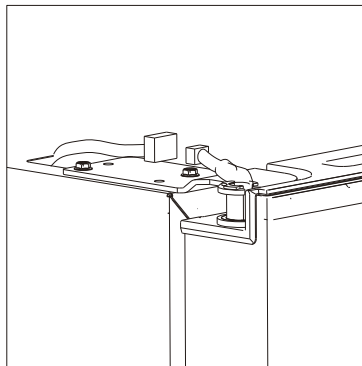


2. Disconnect the Harness.

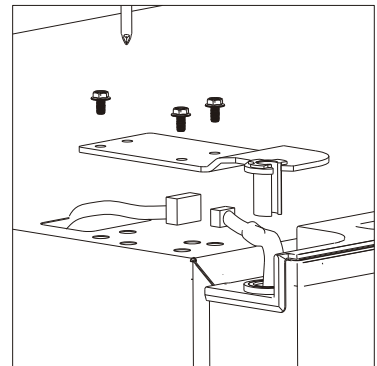


3. Unscrew Top Hinge



4. Lift The Door and Place it on a Soft Pad. Then Remove Another Door as Same Process.

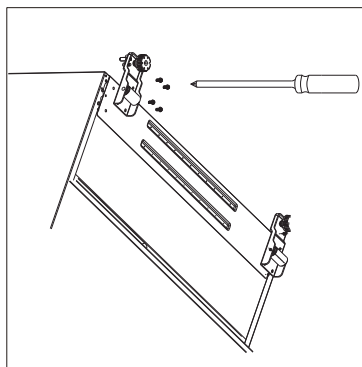


5. Unscrew Bottom Hinges.

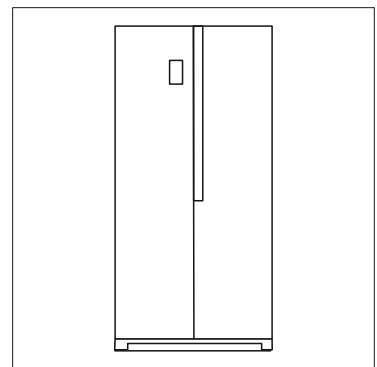

6. After the Appliance is Positioned, Install the Doors as Reversed Process.


Note - Applicable for cases where the end user's home has size limitation for door entrance, and door removal is required.

Installation

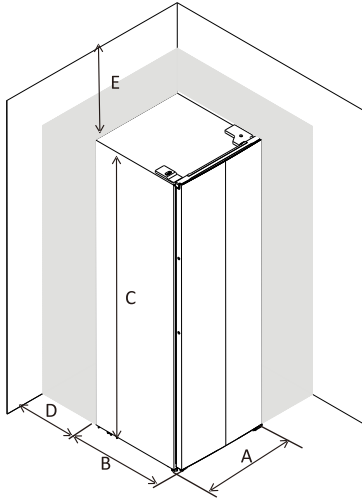



Space Requirement

Keep enough space of door open.
Keep at least 50mm gap at two sides and back.

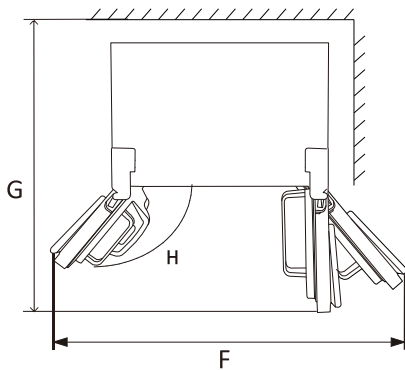


A	905
B	730
C	1770
D	min=50
E	min=50
F	1565A
G	1220
H	140°

Levelling the Refrigerator

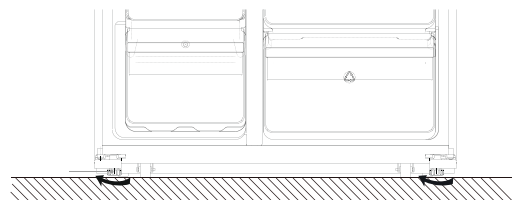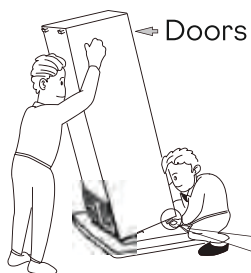

- Clockwise rotate feet to heighten them by hand.
- Anticlockwise rotate feet to lower them by hand.

Installation

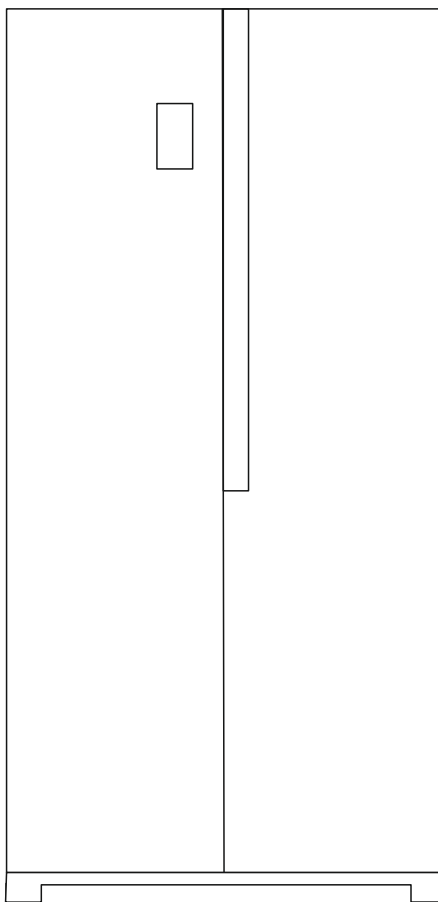

Choose a well-ventilated place
Provide at least 15 cm space at both sides to ensure adequate circulation.

Avoid extreme heat and cold
Place the refrigerator away from direct sunlight & heat sources such as radiators, cooking ranges, direct air drafts i.e., windows, fans, etc.

Place on a firm, level floor
If the floor requires adjustment, suitable packing will have to be used. No stand must be used with the refrigerator. It should directly rest on the floor.

Use the proper voltage and electrical wiring
Your refrigerator operates on AC 230 V, 50 Hz power supply. If there is a wide fluctuation in supply voltage, a voltage stabiliser is advisable. Connect the plug to a 3 pin, 5 amps socket.


Ensure that the wall socket is properly earthed by a qualified electrician. It is safe to use a socket with a fuse and a switch, at about 1.4 metres from the floor. To achieve a better cooling performance of the refrigerator, it should be operated in rated Climate class T (+16°C to +43°C). Outside the climate class it may not be able to maintain a satisfactory internal temperature.

Keep it close to the electrical outlet

Do not use an extension cord. The wires should be kept off the floor to avoid any short circuit if the water drips on the floor.

Daily Use

Using the Control Panel

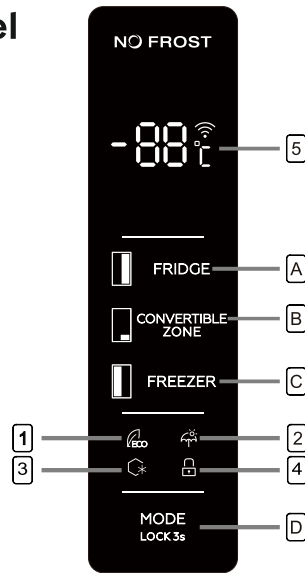

Buttons

- [A] Press to adjust temperature of fridge compartment (right side) from 2°C to 8°C
- [B] Press to adjust temperature of convertible zone from 5°C to -3°C
- [C] Press to adjust temperature of freezer compartment (left side) from -14 °C to -22°C.
- [D] Press to select running mode from ECO, HOLIDAY, SUPER FREEZING and USER'S SETTING (no symbol in display).

Press 3s button and hold for 3 seconds to lock other three buttons. Press it and hold for 3 seconds to unlock them.

Display

ECO Mode

- Press the "Mode" button to select ECO Mode. The ECO icon will flash for 5 seconds and then remain lit.
- In Eco mode, the temperature is fixed at 5°C in the fridge compartment and -18°C in the freezer compartment.
- Note: When ECO Mode is activated:
 - The "Freezer" and "Fridge" buttons will not function. Pressing these buttons will trigger an alarm, indicated by three flashes of the ECO icon.
 - The temperature of the convertible compartment can still be adjusted using the convertible zone temperature setting.
- To exit ECO Mode, press the "Mode" button again. After 5 seconds, the selected mode will be activated.

Daily Use

2 HOLIDAY Mode

- Press the "Mode" button to select Holiday Mode. The Holiday icon will flash for 5 seconds and then remain lit.
- In Holiday Mode:
 - The temperature in the fridge compartment is fixed at 17°C.
 - The "Fridge" button will not function. Pressing this button will trigger an alarm, indicated by three flashes of the Holiday icon.
 - The temperatures in the freezer compartment and convertible compartment can still be adjusted freely.
- To exit Holiday Mode, press the "Mode" button again. After 5 seconds, the selected mode will be activated

3 SUPER FREEZING Mode

- Press the "Mode" button to select Super Freezing Mode. The Super Freezing icon will flash for 5 seconds and then remain lit.
- In Super Freezing Mode:
 - The temperature in the freezer compartment is fixed at -25°C.
 - The "Freezer" button will not function. Pressing this button will trigger an alarm, indicated by three flashes of the Super Freezing icon.
 - The temperatures in the fridge compartment and convertible compartment can still be adjusted freely.
- To exit Super Freezing Mode:
 - Press the "Mode" button to manually exit the mode.
 - The mode will automatically exit after 50 hours of continuous operation.

- 4 **Lock** – The lock symbol will light up if buttons are locked.

- 5 **Temperature Display** – The Temperature Display shows the set temperature for each zone, including the Fridge Zone, Convertible Zone, and Freezer Zone.

Door Open Alarm

- If a door is left open or not closed completely for 60 seconds, an alarm will sound.
- Closing the door will stop the alarm.
- If the door is not properly closed, the alarm will sound every 30 seconds until the door is closed.
- If doors are left open for 10 continuous minutes, the internal LED light will automatically turn off.

Child Safety Lock

This function is designed to prevent children from operating the appliance.

- Press and hold the LOCK button for 3 seconds to activate the child safety lock.
- The lock indicator light will illuminate when the lock is activated.
- To deactivate the lock, press and hold the LOCK button for 3 seconds again. The unlock indicator light will illuminate when the lock is deactivated.

Daily Use

First Use

Cleaning the Interior

Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap so as to remove the typical smell of a brand new product, then dry thoroughly. Important! Do not use detergents or abrasive powders, as these will damage the finish.

Daily Use

Position different food in different compartments according to be below table

Refrigerator Compartments	Type of Food
Door or Balconies of Fridge Compartment	• Foods with natural preservatives, such as jams juices, drinks, condiments. • Do not store perishable foods.
Vegetable Tray	• Fruits, herbs and vegetables should be placed separately in the crisper bin. • Do not store bananas, onions, potatoes, garlic in the refrigerator.
Fridge Shelf	• Dairy food, eggs, cakes, pasta, pizza • Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.
Covertible Compartment	- 3°C-5°C: fresh fruit, vegetables. - 0°C-2°C: drinks, beer, red wine, treasure. - 0°C-2°C: chilling foods for short-term storage, such as raw meat, fish, seafood, dumplings.
Freezer Compartment	• Foods for long-term storage. • Seafood, fish, meat, dumplings, frozen baked goods.

Daily Use

Thawing

Deep-frozen or frozen food, prior to be used, can be thawed in the freezer compartment or at room temperature, depending on the time available for this operation. Small pieces may even be cooked still frozen, directly from the freezer. In this case, cooking will take longer.


Ice-Cube

This appliance may be equipped with one or more ice-cube to produce ice.

Accessories


Movable Shelves

The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.

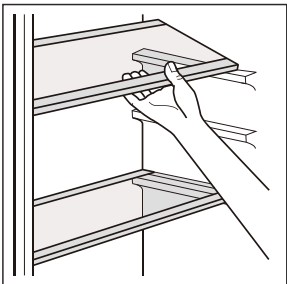


Positioning the Door Balconies

To permit storage of food packages of various sizes, the door balconies can be placed at different heights. To make these adjustments proceed as follows: gradually pull the balcony in the direction of the arrows until it comes free, then reposition as required.

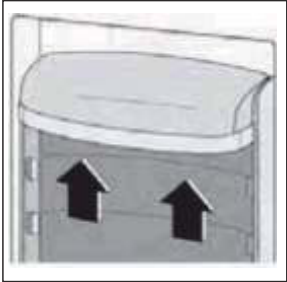

Temperature Setting Recommendation

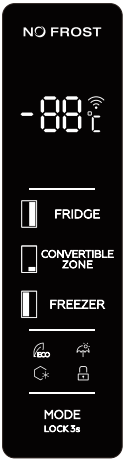Temperature Setting Recommendation		
Environment Temperature		Temperature Setting
Summer (Above 38°C)		Fridge Set on 2°C Freezer Set on -20°C
Normal		Fridge Set on 4°C Freezer Set on -18°C
Summer (Below 16°C)		Fridge Set on 5°C Freezer Set on -18°C

- Information above give users recommendation of temperature setting.
- Temperature of convertible zone setting depends on food leading.

Impact on Food Storage

- Under Recommended setting, the best storage time of fridge is no more than 3 days.
- Under Recommended setting, the best storage time of freezer is no more than 1 month.
- The best storage time may reduce under other settings.

Daily Use

Helpful Hints and Tips

Hints for Freezing

To help you make the most of the freezing process, here are some important hints:

- Only freeze top quality, fresh and thoroughly cleaned, food stuffs;
- Prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible subsequently to thaw only the quantity required;
- Wrap up the food in aluminium foil or polythene and make sure that the packages are airtight;
- Do not allow fresh, unfrozen food to touch food which is already frozen, thus avoiding a rise in temperature of the latter;
- Lean foods store better and longer than fatty ones; salt reduces the storage life of food;
- Water ices, if consumed immediately after removal from the freezer compartment, can possibly cause the skin to be freeze burnt; it is advisable to show the freezing in date on each individual pack to enable you removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- It is advisable to show the freezing in date on each individual pack to enable you to keep tab of the storage time.

Hints for Storage of Frozen Food

To obtain the best performance from this appliance, you should:

- Make sure that the commercially frozen foodstuffs were adequately stored by the retailer;
- Be sure that frozen foodstuffs are transferred from the food store to the freezer in the shortest possible time;
- Do not open the door frequently or leave it open longer than absolutely necessary, Once defrosted, food deteriorates rapidly and cannot be refrozen ;
- Do not exceed the storage period indicated by the food manufacture.

Hints for Fresh Food Refrigeration

To obtain the best performance:

- Do not store warm food or evaporating liquids in the refrigerator.
- Do cover or wrap the food, particularly if it has a strong flavour.

Daily Use

Hints for Refrigeration

Useful Hints:

- Cooked foods, cold dishes, etc ... : these should be covered and may be placed on any shelf.
- Fruit and vegetables: these should be thoroughly cleaned and placed in the special drawer(s) provided.
- Butter and cheese: these should be placed in special airtight containers or wrapped in aluminum foil or polythene bags to exclude as much air as possible.
- Milk bottle: these should have a cap and should be stored in the balconies on the door.
- Bananas, potatoes, onions and garlic, if not packed, must not be kept in the fridge.

Cleaning

For hygienic reasons the appliance interior, including interior accessories, should be cleaned regularly.



Caution! The appliance may not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker or fuse. Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components, danger of electrical shock! Hot vapors can lead to the damage of plastic parts. The appliance must be dry before it is placed back into service.

Important! Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid, cleanser that contain acetic acid.

- Do not allow such substances to come into contact the appliance parts.
- Do not use any abrasive cleaners
- Remove the food from the freezer. Store them in a cool place, well covered.
- Switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker or fuse.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. After cleaning wipe with fresh water and rub dry.
- After everything is dry place appliance back into service.

Daily Use

Troubleshooting

⚠ Caution! Before troubleshooting, disconnect the power supply. Only a qualified electrician or competent person must do the troubleshooting that is not in this manual.

During high humidity conditions, you may observe condensation on the external/internal surface of the refrigerator. This is normal. Just wipe with a dry cloth.

Important! There are some sounds during normal use (compressor, refrigerant circulation).

Problem	Possible Cause	Solution
Appliance does not work	Mains plug is not plugged in or is loose	Insert mains plug
	Fuse has blown or is defective	Check fuse, replace if necessary.
	Socket is defective	Mains malfunctions are to be corrected by an electrician.
Appliance freezes or cools too much	Turn the temperature regulator to a warmer setting temporarily.	Turn the temperature regulation to a colder setting temporarily.
The food is not frozen enough.	Temperature is not properly adjusted.	Please look in the installation location section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the installation location section.
Heavy build up of frost on the door seal.	Door seal is not air tight.	Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time shape the warmed door seal by hand such that it sits correctly.
Unusual noises	Appliance is not level.	Re-adjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way
Side panels are hot	It's normal. Heat exchange is in the side panels.	Take gloves to touch side panel if need.

If the malfunction shown again, contact the Service Center. These data are necessary to help you quickly and correctly. Write the necessary data here, refer to the rating plate.

Safety Information

Warning:

When using this refrigerator, always exercise basic safety precautions, including the following:

- Lacquer, install and use the refrigerator properly in accordance with the instructions given in this user guide.
- Never unplug your refrigerator by pulling the power cord. Always grip the plug firmly and pull it straight out from the wall socket after switching off the supply.
- Repair or replace immediately all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or damage by abrasion, rodents etc.
- Do not keep anything on top of the refrigerator—such as lit candles, temples, cloth covers, electrical appliances like TV/Lamp etc.
- Do not splash water on or in the vicinity of the refrigerator. It could cause an electrical leak or malfunction.
- The ventilation grilles should not be obstructed. Always ensure that there is good ventilation and that the outward flowing air is able to escape.
- Young children should be supervised to ensure they do not play with the appliance. They could damage the refrigerator or hurt themselves. It could also disturb the stability of the refrigerator.
- After your refrigerator is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces and get hurt.
- Don't re-freeze frozen foods which have thawed— completely or partially. Eating such re-frozen foods could harm your health.
- Unplug your refrigerator before cleaning and making repairs. We strongly recommend that any servicing be performed by a qualified technician.
- Do not store flammable sprays, vapour or liquids like gasoline, laquer and paint, volatile chemicals like benzene or ether, evaporating liquids like perfumes, nail polish removers etc. inside the refrigerator it may damage the food and some of these could also cause an explosion. Avoid storing these near the refrigerator as well.
- Do not use lubricants (lubricating oils, sprays, kerosene, WD-40, etc) on the hinges of the refrigerator doors. Some lubricants chemically react with plastics resulting in damage to doors.
- Refrigerator contains refrigerant and contains gases, which must be disposed of professionally, to avoid any safety hazards.
- The keys be kept out of the reach of children and not in the vicinity of the refrigerating appliance, in order to prevent children from being locked inside.

To ensure safe and efficient operation of your appliance, follow these essential electrical safety guidelines:

1. **Power Cord Protection:** Avoid damaging the power cord, as it can cause electrical shock or fire. Never lengthen the power cord, and ensure it's not pinched or crushed.
2. **Power Plug Safety:** Verify that the power plug is securely inserted into the socket and not loose. A loose power plug can cause electrical shock or fire. Also, ensure the power plug is not squashed or damaged.

Safety Information

3. **Mains Plug Accessibility:** Always ensure the mains plug is easily accessible. This allows you to quickly disconnect the appliance from the power source in case of an emergency.
4. **Avoid Overloading:** Refrain from overloading the appliance with excessive electrical devices, as this can cause electrical shock, fire, or damage to the appliance.
5. **Regular Inspection:** Regularly inspect the power cord, power plug, and mains plug for any signs of damage or wear. Replace them immediately if you notice any damage.

Light Bulb/ Led strip Safety

To ensure safe operation and prevent accidents, follow these light Bulb/ Led strip safety guidelines:

1. **Avoid Touching Hot Bulb/ Led strip :** Never touch the light Bulb/ Led strip if it's been on for an extended period, as it can cause burns.
2. **Use Recommended Bulb/ Led strip :** Only use light Bulb/ Led strip recommended by the manufacturer. Using incompatible Bulb/ Led strip can cause electrical shock, fire, or damage to the appliance.
3. **Replace Bulb/ Led strip Safely :** When replacing the light Bulb/ Led strip, ensure the appliance is switched off and unplugged from the power source. Allow the Bulb/ Led strip to cool down before handling it.

***Features may vary per models**

Safety Information

Important Safety Precautions and Usage Guidelines

1. Do not put hot objects on the plastic parts in the appliance.
2. Do not place food products directly against the rear wall.
3. Frozen food must not be re-frozen once it has been thawed out.
4. Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions.
5. Appliance manufacturer's storage recommendations should be strictly adhered to.
6. Do not place carbonated or fizzy drinks in the freezer compartment, as they may explode and damage the appliance.
7. Ice lollies can cause frost burns if consumed straight from the appliance.
8. Opening the door for long periods can cause a significant increase in the temperature in the compartments of the appliance.
9. Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
10. If the appliance is left empty for long periods, switch it off, defrost, clean, dry, and leave the door open to prevent mold from developing.
11. Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
12. Regularly examine the drain in the refrigerator for defrosted water; clean it if necessary. If the drain is blocked, water will collect in the bottom of the appliance.

Care and Cleaning

1. Clean regularly surfaces that can come into contact with food and accessible drainage systems.
2. Clean water tanks if they have not been used for 48 hours; flush the water system connected to a water supply if water has not been drawn for 5 days.
3. Do not clean the appliance with metal objects.
4. Do not use sharp objects to remove frost from the appliance; use a plastic scraper instead.

Safety Information

Installation Instructions

1. Unpack the appliance carefully and inspect for any damage. Do not connect the appliance if it is damaged. Report any damage to the place of purchase immediately.
2. Wait at least four hours before connecting the appliance to allow the oil to flow back into the compressor.
3. Ensure adequate air circulation around the appliance to prevent overheating. Follow the installation instructions for ventilation requirements.
4. Place the appliance against a wall, if possible, to avoid touching or catching warm parts (compressor, condenser) and prevent possible burns.
5. Do not locate the appliance near radiators or cookers.
6. Ensure the mains plug is accessible after installation.

Service and Maintenance

1. Any electrical work required for servicing should be carried out by a qualified electrician or competent person.
2. This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.

Energy Saving Tips

1. Avoid placing hot food in the appliance.
2. Do not pack food too closely together, as this prevents air circulation.
3. Ensure food does not touch the back of the compartment(s).
4. If the electricity goes off, do not open the door(s).
5. Avoid opening the door(s) frequently.
6. Do not keep the door(s) open for too long.
7. Avoid setting the thermostat to excessively cold temperatures.
8. Keep all accessories, such as drawers, shelves, and balconies, in place to minimize energy consumption.

Safety Information

Environment Protection

 This appliance does not contain gasses which could damage the ozone layer, in either its refrigerant circuit or insulation materials. The appliance shall not be discarded together with the urban refuse and rubbish. The insulation foam contains flammable gases: the appliance shall be disposed according to the appliance regulations to obtain from your local authorities. Avoid damaging the cooling unit, especially the heat exchanger. The materials used on this appliance marked by the symbol  are recyclable.



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Packaging Materials


The materials with the symbol are recyclable.

Dispose the packaging in a suitable collection containers to recycle it.

Disposal of the appliance

1. Disconnect the mains plug from the mains socket.
2. Cut off the mains cable and discard it.

 **Warning!** During using, service and ✓ disposal the appliance, please pay attention to symbol similar as left side, which is located on rear of appliance (rear panel or compressor) and with yellow or orange color. It's risk of fire warning symbol. There are flammable materials in refrigerant pipes and compressor. Please be far away fire source during using, service and disposal.

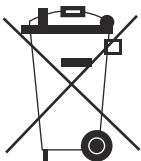

Protection of Environment:

Protection of environment" is one of the core values of Godrej and we seek your co-operation to make sure that the product, packaging and plastic material is not disposed as unsorted municipal waste.

This symbol is known as the "Crossed-out Wheellie Bin Symbol". It means that the product should not be disposed of with your general house-hold waste.

It should be disposed of only through the company's collection points with special treatment so as to prevent any damage to the environment. Please call: **080-6743-6743** for applicable buy back arrangement or visit: www.godrejenterprises.com/green-think for details about authorised collection points.

'This product is RoHS compliant'

Warranty

The Godrej Frost Free Refrigerator comes with a TEN-year warranty on COMPRESSOR and ONE year warranty on all other parts (except bulb, glass and add-on plastic parts) from the date of purchase, against defective material or workmanship. In case of any such defect found during the first year from date of purchase, Godrej and Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group) will undertake repairs to the warranted part free of charge, subject to the terms and conditions below. In the warranty period beyond the first year from date of purchase, only the compressor will be provided free of cost. However, the appliance will be repaired on payment of necessary charges.

Instructions For The Customer

- 1. Kindly ensure that the dealer fills the warranty card correctly and completely.
- 2. You should retain the warranty card for record and produce the same in the event of any warranty repairs.
- 3. In the event of a defect developing in the product, contact the nearest authorised Godrej service centre for obtaining warranty service and provide the defect, model details & serial no.
- 4. Earthing of the appliance is necessary to ensure safety.
- 5. Product will function between +/-5% of the rated voltage. For any fluctuation beyond the specified limit, company shall not be responsible and the warranty stands terminated.
- 6. Frequency must be between 5% variation of 50 Hz. Beyond this, the company shall not be liable for any unforeseen hazards like fire, shock, etc. and in turn, the warranty stands terminated.
- 7. The product must be maintained to ensure hygiene. If there are any insects, rodents, etc in it, obstructing the functioning of the product, the company shall not be responsible and in turn, the warranty stands terminated.
- 8. If you are moving house, it is essential that a Godrej service representative inspects the refrigerator at the time of re-installation at the new address. The warranty on the product / optional service contract for the sealed system of the refrigerator continues to be effective only if the product is found to be in working condition. The re-inspection will be done on the payment of necessary charges. We would also recommend that the product be insured against damage in transit.
- 9. Please follow the guidelines given regarding refrigerator usage.

Terms And Conditions

- 1. Repairs and replacements of parts will be carried out through the authorised Customer Service Centre.
- 2. All transportation and handling expenses incurred while repairing will be payable by the customer.
- 3. For any appliance installed beyond the municipal limits of the jurisdiction of the authorised customer service centre, charges towards technician's visit will be borne by the customer.
- 4. While the company will make every effort to carry out the repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.
- 5. The company/ its authorised personnel will collect any parts, compressor or other components replaced.
- 6. Warranty does not cover accessories to the appliance.
- 7. Sealed system gas charging and consumables will be charged for any such repairs after one year from the date of purchase.
- 8. While the company will take all necessary steps to repair the appliances supplied under the warranty and keep sufficient stock of the spare parts of the appliance with them, however, in certain cases where the appliance cannot be repaired due to non-availability of the spare parts, the company, at its sole discretion, may offer a replacement of the appliance to the purchaser of such an appliance, under a replacement offer. The replacement offer is subject to change from year to year and any discount given shall be applicable on the MRP of the product to be purchased as a replacement. A table giving the details of the replacement offer is available on www.godrejenterprises.com/support

**Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)
CUSTOMER COPY**

Model no. Unit sr. No.	Dealer's name & address Date of purchase
Customer's name & address Tel	Dealer's name & address Tel

Customer's Signature:

(This warranty is only valid if it is filled in and stamped by our authorised dealer on the date of purchase.)

Overall warranty stands null and void if

- 1. The warranty card is not completed properly at the time of the purchase.
 - 2. The completed warranty card is not presented to the authorised personnel at the time of service of the product.
 - 3. The refrigerator is not operated according to instructions given in the User's Guide.
 - 4. Defects are caused by improper use, which shall be determined by the company personnel.
 - 5. Unauthorised persons carry out any repair work.
 - 6. Defects are caused by reasons beyond control, like abnormal voltage, acts of God, or while in transit to service center or purchaser's residence.
 - 7. The serial number is deleted, defaced or altered.
 - 8. Damage is caused to the refrigerator or any parts due to transportation or shifting.
- Warranty automatically expires after the stipulated period from the original date of purchase, even if the refrigerator was not in use for any time for whatever reasons.



Godrej and Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group)
Plant 11, Pirojshanagar, Vikhroli (W), Mumbai 400 079.