

AS PER ATTACHED SHEET

NOTES:
1. SAMPLES SHOULD BE APPROVED FOR GRAPHICS AND COLOUR BY R&D DEPT. BEFORE MASS PRODUCTION.
2. ANY CHANGE IN GRAPHICS & COLOUR SHOULD BE DONE WITH PRIOR PERMISSION FROM R&D DEPT.
3. ACCORDING TO STANDARD EN 50581 OF EU THE PART SHOULD NOT CONTAIN PROHIBITED SUBSTANCES(Pb,Cd,Hg,Cr+6,PBB's,PBDE's, DEHP,BBP,DBP,DIBP)
ABOVE THE RoHS PERMISSIBLE LIMIT.

(*Pb)	(Cd)	(Hg)	(Cr+6)	(PBB's)	(PBDE'S)	(DEHP)	(BBP)	(DBP)	(DIBP)
<1000ppm	<100ppm	<1000ppm	<1000ppm	<1000ppm	<1000ppm	<1000ppm	<1000ppm	<1000ppm	<1000ppm

*(Pb) : Aluminium - 4000ppm (0.4% lead by weight)
Galvanised Stee - 3500ppm (0.35% lead by weight)
Copper - 40000ppm (4% lead by weight)

PACKING STANDARD:
1. MAKE THE BUNDLE 100 ~ 1000 NOS AND TIE IT BY THREAD.
2.10 NOS BUNDLES ARE SUPPLY IN APPROPRIATE CARTON BOX.
3.QUANTITY TO BE MENTION ON EVERY BUNDLE & CARTON BOX.
4.BOX SHOULD NOT BE WEAR AND TEAR WHILE TRANSPORTATION
5.VENDOR WILL IMPROVE THE PACKING WITH CONCERN
AND APPROVAL BY R&D DEPT.

Overall Tolarance: +/- 1.0

AMMD	ECN No.	LOC	DESCRIPTION	DATE	ISSUED BY	APPROVED BY

GRAPHICS
Haier

LIBRARY CHECKED	TRIG.	UNIT - mm		SCALE : N/S	
	DESIGNED	REVIEWED	CHECKED	APPROVED	
	KOMAL	TUSHAR	VEERU	VEERU	
HAIER INDIA APPLIANCES PVT. LTD.			RELATED DWG.		
			XXXXXXXXXX		


T
I
T
L
E

USER MANUAL T-DOOR
COMMON DOMESTIC
830UT

0060540123A

Haier

THE FUTURE IS FRESH
....With Haier Refrigerators

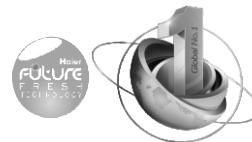

USER GUIDE FOR QUAD DOOR FROST FREE REFRIGERATOR AND E-WASTE GUIDELINE MANUAL



ECO LIFE

Live Smart. Live Green.

SMARTER LIFE

BETTER PLANET

Haier Customer Care Toll Free (24x7)-1800-102-9999, 1800-419-9999

Website: www.haier.com/in www.facebook.com/haierindia

*Source Euromonitor International Limited; Consumer Appliance
2024ed, % unit share, 2023 volume sales data.

Dear Friend,

At the outset, we at Haier thank you for your interest in our range of products. A unique and international range of appliances designed solely with the purpose of making modern life simpler. And how! The entire Haier range of appliances ranging from Refrigerators, Televisions, Washing machines, Air-conditioners, Microwave ovens, Dishwashers, Wine Coolers, Freezers, Visicoolers, and Chocolate Coolers combines the best of technology, features, performance and styling. Altogether, it is a result of our perfect understanding of your lifestyle and needs.

But what is a great product without great service? Leaving no stone unturned in giving you the best of service, we have also established an extensive network of authorised dealers and authorised service centers, so that you get a lifetime of great and timely service for your Haier Appliance.

It has been an honor and a pleasure bringing these hi-tech products to you and we hope that you get as much happiness using them as we have got putting them together for you.

Happy Inspired Living!

Thanking you


Haier

CONTENTS


1. KNOW YOUR FRIDGE	01
2. PRODUCT FEATURES	01
3. SAFETY PRECAUTIONS	02
4. PRODUCT INSTALLATION GUIDELINES	04
5. HOW TO OPERATE	05
6. FOOD STORAGE GUIDELINES	17
7. EQUIPMENT.....	18
8. CLEANING	20
9. BASIC TROUBLESHOOTING BY YOURSELF	21
10. E-WASTE GUIDELINE MANUAL	24
11. PRECAUTION FOR Wi-Fi USE	24

1. KNOW YOUR FRIDGE

Basic & Classic Model

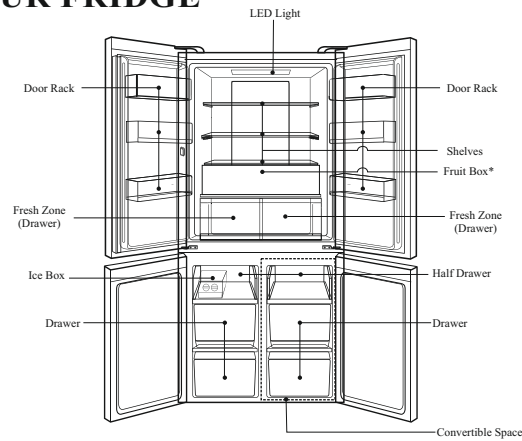

Premium Model

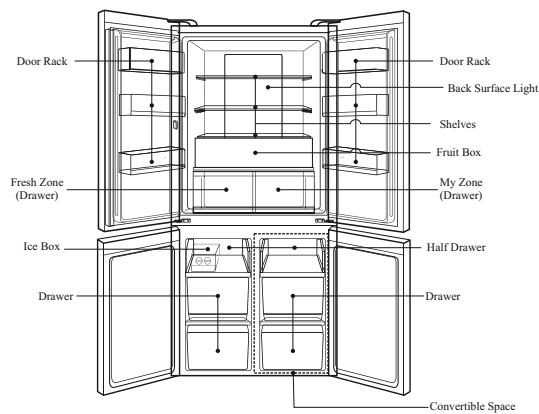

2. PRODUCT FEATURES

- ▶ Independent Convertible Room
- ▶ Back Surface Light*
- ▶ Fruit Box*
- ▶ My Zone*
- ▶ Expert Inverter Technology
- ▶ LED Light*
- ▶ On Door Colorful Display*
- ▶ DEO Fresh Function
- ▶ Super Cool
- ▶ Super Freeze
- ▶ Wi-Fi Function*
- ▶ Cold storage for heat insulation during power-off.



Due to continuous improvements in our Products, specifications shown here are subject to change without prior notice.

* Available in selected models only.

3. SAFETY PRECAUTIONS

Before switching on the appliance for the first time, read the following safety hints:

WARNING

Before First Use

- ▶ Make sure there is no transport damage.
- ▶ Remove all packaging and keep out of children's reach.
- ▶ Wait at least two hours before installing the appliance to ensure the refrigerant circuit is fully efficient.
- ▶ Handle the appliance always with at least two persons because it is heavy.

Installation

- ▶ The appliance should be placed in a well-ventilated place. Ensure a space of at least 20 cm above and 10 cm around the appliance.
- ▶ Never place the appliance in a damp area or location where it might be splashed with water. Clean and dry water splashes and stains with a soft clean cloth.
- ▶ Do not install the appliance in direct sunlight or near heat sources (e.g., stoves, heaters).
- ▶ Install and level the appliance in an area suitable for its size and use.
- ▶ Keep ventilation openings in the appliance or in the in-built structure clear of obstruction.
- ▶ Make sure that the electrical information on the rating plate agrees with the power supply. If it does not, contact an electrician.
- ▶ The appliance is operated by a 220-240 VAC/50Hz power supply. Abnormal voltage fluctuation may cause the appliance to fail to start, damage the temperature control or compressor, or cause abnormal noise during operation. In such cases, an automatic regulator should be installed.
- ▶ Use a separate earthed socket for the power supply that is easily accessible. The appliance must be earthed.
- ▶ Do not use multi-plug adapters or extension cables.
- ▶ Ensure that the power cable is not trapped by the appliance. Do not step on the power cable.
- ▶ Do not damage the refrigerant circuit.

Daily Use

- ▶ This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- ▶ Keep children under 3 years of age away from the appliance unless they are constantly supervised.
- ▶ Children shall not play with the appliance.
- ▶ If cool gas or other inflammable gas is leaking in the vicinity of the appliance, turn off the valve of the leaking gas, open the doors and windows, and do not unplug the power cable of the appliance or any other appliance.
- ▶ Note that the appliance is set for operation at a specific ambient range between 10 and 43°C. The appliance may not work properly if it is left for a long period at a temperature above or below the indicated range.
- ▶ Do not place unstable articles (heavy objects, containers filled with water) on top of the appliance, to avoid personal injury caused by falling or electric shock caused by contact with water.
- ▶ Do not pull on the door shelves. The door may tilt, the bottle rack may be dislodged, or the appliance may topple.
- ▶ Open and close the doors only with the handles. The gap between the doors and between the doors and the cabinet is very narrow. Do not extend your hands in these areas to avoid pinching your fingers. Open or close the doors only when there are no children standing within the range of door movement.
- ▶ Do not store or use inflammable, explosive, or corrosive materials in the appliance or in the vicinity.
- ▶ Do not store medicines, bacteria, or chemical agents in the appliance. This appliance is a household appliance. It is not recommended to store materials that require strict temperatures.

3. SAFETY PRECAUTIONS

Daily use

- ▶ Never store liquids in bottles or cans (except high-percentage spirits), especially carbonated beverages, in the freezer, as these will burst during freezing.
- ▶ Check the condition of food if warming in the freezer has taken place.
- ▶ Do not set unnecessarily low temperatures in the refrigerator compartment. Minus temperatures may occur at high settings. Attention: Bottles can burst.
- ▶ Do not touch frozen goods with wet hands (wear gloves). Especially, do not eat ice lollies immediately after removal from the freezer compartment. There is a risk of freezing or the formation of frost blisters. FIRST aid: keep immediately under running cold water. Do not pull away!
- ▶ Do not touch the inside surface of the freezer storage compartment when in operation, especially with wet hands, as your hands may freeze onto the surface.
- ▶ Unplug the appliance in the event of a power interruption or before cleaning. Allow at least 5 minutes before restarting the appliance, as frequent starting may damage the compressor.
- ▶ Do not use electrical devices inside the food storage compartments of the appliance unless they are of the type recommended by the manufacturer.

Maintenance/ cleaning

- ▶ Make sure children are supervised if they carry out cleaning and maintenance.
- ▶ Disconnect the appliance from the electrical supply before undertaking any routine maintenance. Allow at least 5 minutes before restarting the appliance, as frequent starting may damage the compressor.
- ▶ Hold the plug, not the cable, when unplugging the appliance.
- ▶ Do not scrape off frost and ice with sharp objects. Do not use sprays, electric heaters (like hair dryers), steam cleaners, or other sources of heat to avoid damage to the plastic parts.
- ▶ Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ▶ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- ▶ Do not try to repair, disassemble, or modify the appliance by yourself. In case of repair, please contact our customer service.
- ▶ Eliminate the dust on the back of the unit at least once a year to avoid a fire hazard, as well as increased energy consumption.
- ▶ Do not spray or flush the appliance during cleaning.
- ▶ Do not use water spray or steam to clean the appliance.
- ▶ Do not clean the cold glass shelves with hot water. Sudden temperature changes may cause the glass to break.

Refrigerant Gas Information

WARNING

The appliance contains the flammable refrigerant ISOBUTANE (R600a). Make sure the refrigerant circuit is not damaged during transportation or installation. Leaking refrigerant may cause eye injuries or ignite. If damage has occurred, keep away from open flames, thoroughly ventilate the room, and do not plug or unplug the power cord of the appliance or any other appliance. Inform customer service. In case of contact with the refrigerant in the eyes, rinse immediately with running water and call an eye specialist right away.

Taking care to avoid causing a fire by igniting flammable materials.

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not place multiple portable socket outlets or portable power supplies at the rear of the appliance.



4. PRODUCT INSTALLATION GUIDELINES

Unpacking

- ▶ The appliance is heavy. Always handle it with at least two people.
- ▶ Keep all packaging materials out of children's reach and dispose of them in an environmentally friendly manner.
- ▶ Remove the appliance from the packaging.
- ▶ Remove all packaging materials, including the transparent protective film.

Environmental conditions

The room temperature should always be between 10°C and 43°C, as it can influence the temperature inside the appliance and its energy consumption. Do not install the appliance near other heat-emitting appliances (e.g., ovens, fridges) without proper insulation.

Space requirement


Required space when the door is opened:

Appliance width: 1270 mm

Appliance depth: 995 mm

Ventilation cross-section


To ensure the appliance is adequately ventilated for safety purposes, it is essential to follow the guidelines for the required ventilation cross-sections.

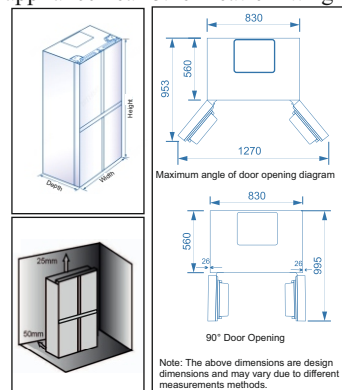

Aligning the appliance

The appliance should be placed on a flat and solid surface.

1. Tilt the appliance slightly backward.
2. Set the feet to the desired level. Make sure the distance to the wall on the hinge sides is at least 30 cm for the door to open properly.
3. The stability can be checked by alternately bumping on the diagonals. The slight swaying should be the same in both directions. Otherwise, the frame may warp, and possible leaking door seals may occur. A slight tendency to the rear facilitates the closing of the doors.

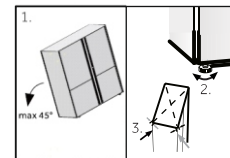

Fine tuning of the doors

If the doors are not in one level, this mismatch can be remedied by the following:


A) Using adjustable foot

Rotate the adjustable foot according to the direction of the arrow to raise or lower the foot.

B) Using spacers

Open the upper door and lift it. Carefully clip the spacer (enclosed in the accessory bag) into the white plastic ring of the middle hinge, either by hand or using tools like pliers. Do not scratch or damage the door.

In the future use of the refrigerator, an uneven door may occur due to the weight of stored food. If this happens, please adjust the door using the methods described above.

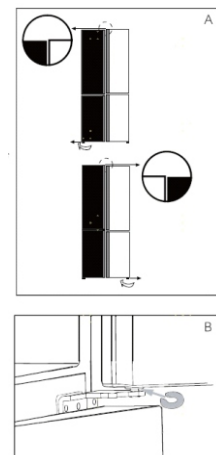


4. PRODUCT INSTALLATION GUIDELINES

⚠ WARNING

Do not adjust the hinge lifting shaft excessively to a height that might cause the shaft to move out of its original locked position.
(Adjustable height range: 3 mm)

When you close the door, the vertical door strip on the left door should be bent inside (1).

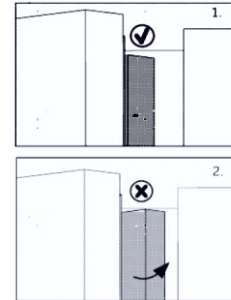

If you try to close the left door and the vertical door strip is not bent (2), you should bend it first; otherwise, the door strip will hit the fixing shaft or the right door. This may cause damage to the door strip or a leak. There is a heating thread inside the frame. The surface temperature will rise slightly, which is normal and will not affect the appliance's function.

Waiting time

The maintenance-free lubrication oil is located in the capsule of the compressor. This oil may move through the closed pipe system during slanted transport. Before connecting the appliance to the power supply, you must wait at least 2 hours to allow the oil to return to the capsule.

Electrical connection

Before each connection, check if:

- ▶ The power supply, socket, and fusing are appropriate to the rating plate.
- ▶ The power socket is earthed, and no multi-plug or extension is used.
- ▶ The power plug and socket are properly matched. Connect the plug to a properly installed household socket.

⚠ WARNING

To avoid risks, a damaged power cord must be replaced by customer service (see warranty card).

5. HOW TO OPERATE

BASIC MODELS (Steel Door Models)


Temperature Setting Guide

Icon Description:

- | | |
|--------------------------|---------------------|
| A Fridge Zone Icon | F Holiday Icon |
| B Convertible Zone Icon | G Super Cool Icon |
| C Freezer Zone Icon | H Auto Set Icon |
| D Temperature Icon | I Super Freeze Icon |
| E Degree Centigrade Icon | J Lock/Unlock Icon |

Button Description:

- | |
|--|
| a Temperature Decrease button |
| b Zone Selection button |
| c Temperature Increase button |
| d Super cool button (Press 3 Seconds for Holiday mode) |
| e Auto Set button/Press 3 Seconds for Convertible function switch button |
| f Super Freezer button |
| g 3 Seconds Lock/Unlock button |

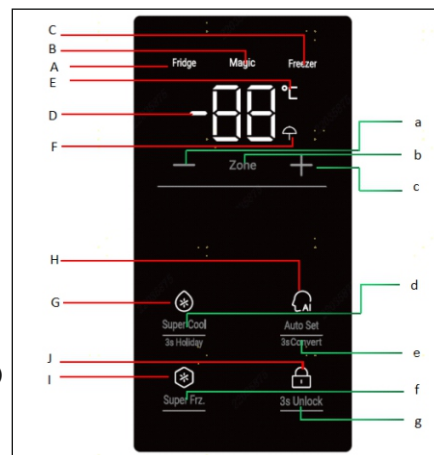

5. HOW TO OPERATE

1. First Use:

The appliance starts operating as soon as it is connected to the power supply.

The display lights up when the refrigerator is powered on for the first time.

The Fridge temperature, Convertible Zone temperature, and freezer temperature are automatically set to 5°C, 3°C and -18°C respectively.

2. Lock/Unlock Panel

i. Standby-Mode : The display screen turns off automatically 30 seconds after pressing a button.

The display will be automatically locked. It lights up automatically when pressing any button or opening any door.

ii. Manual Adjusting Mode: If you want to adjust the temperature of the appliance manually, you can set the temperature via a temperature adjust button.

3. Adjust the temperature of fridge

i. Unlock the Settings: Long press the button “g” for 3 seconds to unlock the settings.

ii. Toggle Across Zones: In the unlocked state, press the button “b” (zone selector) to toggle through the zones. When the Icon “A” (Fridge Zone Icon) lights up, you are in the fridge zone.

iii. Adjust Fridge Zone Temperature:

- To decrease the fridge temperature:

Press button “a” (Temperature control “-”) to decrease the temperature by 1°C each time.

The value displayed on Icon “D” will decrease by 1°C with each press of button “a”.

The display will flash and turn solid with the new set temperature, then go off after a few seconds.

- To increase the fridge temperature:

Press button “c” (Temperature control “+”) to increase the temperature by 1°C each time.

The value displayed on Icon “D” will increase by 1°C with each press of button “c”.

The display will flash and turn solid with the new set temperature, then go off after a few seconds.

iv. Temperature Range:

The fridge zone temperature can be adjusted from 1°C to 9°C, with 1°C increment.



The temperature in the corresponding zone cannot be adjusted if any other function (Super-Cool, Holiday, or Auto Set mode) is activated or the display is locked. The corresponding Icon will flash accompanied by a buzzer.

4. Adjust the temperature for the Freezer

i. Unlock the Settings: Long press the button “g” for 3 seconds to unlock the settings.

ii. Toggle Across Zones: In the unlocked state, press the button “b” (zone selector) to toggle through the zones. When Icon “C” (Freezer Zone Icon) lights up, you are in the freezer zone.

iii. Adjust Freezer Zone Temperature:

- To decrease the freezer temperature:

Press button “a” (Temperature control “-”) to decrease the temperature by 1°C each time. The value displayed on Icon “D” decreases by 1°C with each press of button “a”. The display will flash and then turn solid with the set temperature, before going off after a few seconds.

- To increase the freezer temperature:

Press button “c” (Temperature control “+”) to increase the temperature by 1°C each time. The value displayed on Icon “D” increases by 1°C with each press of button “c”. The display will flash and then turn solid with the set temperature, before going off after a few seconds.

iv. Temperature Range:

The freezer zone temperature can be adjusted from -24°C to -14°C, with 1°C increment.



The temperature in the corresponding zone cannot be adjusted if any other function (Super Frz. or Auto Set mode) is activated or the display is locked. The corresponding icon will flash accompanied by a buzzer.

5. HOW TO OPERATE

5. Adjust Convertible Zone temperature

- i. **Unlock the Settings:** Long press the button “g” for 3 seconds to unlock the settings.
- ii. **Toggle Across Zones:** In the unlocked state, press the button “b” (zone selector) to toggle through the zones. When Icon “B” (Convertible Zone Icon) lights up, you are in the convertible zone.
- iii. **Adjust Convertible Zone Temperature:**
 - To decrease the convertible zone temperature:
Press button “a” (Temperature control “-”) to decrease the temperature by 1°C each time. The value displayed on Icon “D” decreases by 1°C with each press of button “a”. The display will flash and then turn solid with the set temperature, before going off after a few seconds.
 - To increase the convertible zone temperature:
Press button “c” (Temperature control “+”) to increase the temperature by 1°C each time. The value displayed on Icon “D” increases by 1°C with each press of button “c”. The display will flash and then turn solid with the set temperature, before going off after a few seconds.
- iv. **Temperature Range:**
The convertible zone temperature can be adjusted from -20°C to 5°C, with 1°C increments.

6. Super Cool function (Press 3 Seconds for Holiday mode):

After putting food into the fridge zone, if you want to cool it down quickly, you can enable the Super Cool function.

- i. **Unlock the Settings:** Long press the button “g” for 3 seconds to unlock the settings.
- ii. **Activate Super Cool Mode:** In the unlocked state, press button “d” (Super Cool function selector) to activate Super Cool mode. When Icon “G” (Super Cool function icon) lights up, the product enters Super Cool mode.
- iii. **Super Cool Mode Duration:**
The product will automatically exit Super Cool mode after 6 hours of activation.
- iv. **Manually Exit Super Cool Mode:**
To manually exit Super Cool mode, press button “d” (Super Cool function selector) again in the unlocked state. Icon “G” (Super Cool function icon) will go off, and the product will exit Super Cool mode.



Super Cool function de-activates automatically when Holiday mode is selected. Under Super Cool mode, button “a” (Temperature control “-”) & button “c” (Temperature control “+”) are locked when the fridge zone is selected and the fridge zone temperature cannot be adjusted.

7. Holiday mode:

Under Holiday mode, the fridge zone automatically sets to 17°C (for energy saving), while the convertible zone and freezer zone operate at normal temperature settings.

- i. **Unlock the Settings:** Long press the button “g” for 3 seconds.
- ii. **Activate Holiday Mode:** Under the unlocked state, press the button “d” (Holiday mode button) for 3 seconds. The icon “F” (Holiday mode icon) lights up, and the product enters Holiday mode. To exit, press the button “d” (Holiday mode selector) for 3 seconds; the icon “F” goes off, and the product exits Holiday mode.

WARNING

Empty the fridge zone after selecting the holiday function, due to the high temperature in the fridge zone (+17°C).

5. HOW TO OPERATE

8. Auto Set function:

- i. **Unlock the Settings:** Long press the button “g” for 3 seconds to unlock the settings.
- ii. **Activate Auto Set:** Under the unlocked state, press the button “e” (Auto Set selector). The icon “H” (Auto Set icon) lights up, and the product enters Auto Set mode. The product can automatically adjust the temperature setting according to the ambient temperature and temperature change in the appliance. By repeating the above steps, this function can be switched off.



When the Auto Set function is activated, the fridge zone and freezer zone cannot be adjusted.

9. 3 Seconds Convert Function (For Convertible Zone switch temperature 5°C or -20°C):

- i. **Unlock the Settings:** Unlock the settings by pressing the button “g” for 3 seconds.
- ii. **Activate Convertible Mode:** When the convertible zone settled temperature shows in the display above 0°C, pressing the button “e” for 3 seconds, the settled temperature switches to -20°C, and the “B” icon flashes 5 times before the normal display.
When the convertible zone settled temperature shows in the display below 0°C (including 0°C), pressing the button “e” for 3 seconds, the settled temperature switches to 5°C, and the “B” icon flashes 5 times before normal display.



If the display lights up again, icon “D” will show the current settled temperature of the convertible zone, and icon “B” will flash 5 times at the same time; When the temperature reaches the settled temperature (5°C or -20°C), the B icon stops flashing.

Tips:

1. Icon “B” flashes 5 times indicating the temperature conversion is not complete yet.
2. While the activation of convertible function, press button “a” (Temperature control “-”) or button “c” (Temperature control “+”) to adjust the convertible zone temperature, the 3 Seconds Convertible function exits;

10. Super Freeze function:

Super Freeze function can freeze the fresh food as soon as possible to the core by accelerating the freezing to preserve the best nutritional value, appearance and taste of food.

- i. **Unlock the Settings:** Unlock the settings by long pressing button “g” for 3 seconds.
- ii. **Activate Super Freeze mode:** Under unlock state, press button “f” (Super Freeze function selector), icon “I” (Super Freeze function icon) lights up, and the product enters Super Freeze mode. The product automatically exits Super Freeze mode after 12 hours of activation. For manually exiting Super Freeze mode, press button “f” (Super Freeze function selector) under unlock state, icon “I” (Super Freeze function icon) goes off, product exits Super Freeze mode.



Under Super Freeze mode, button “a” (Temperature control “-”) & button “c” (Temperature control “+”) are locked when the freezer zone is selected and the freezer zone temperature cannot be adjusted.

5. HOW TO OPERATE

CLASSIC MODELS (Black Glass and Other)


Temperature Setting Guide

Icon Description:

- A Fridge Zone Icon
- B Convertible Zone Icon
- C Freezer Zone Icon
- D Temperature Icon
- E Degree Centigrade Icon
- F Holiday Icon
- G Super Cool Icon
- H Auto Set Icon
- I Super Freeze Icon
- J Lock/Unlock Icon
- K Wi-Fi Icon

Button Description:

- a Temperature Decrease button
- b Zone Selection button
- c Temperature Increase button
- d Super cool button (Press 3 Seconds for Holiday mode)
- e Auto Set button/Press 3 Seconds for Convertible function switch button
- f Super Freezer button
- g 3 Seconds Lock/Unlock button
- h Wi-Fi button

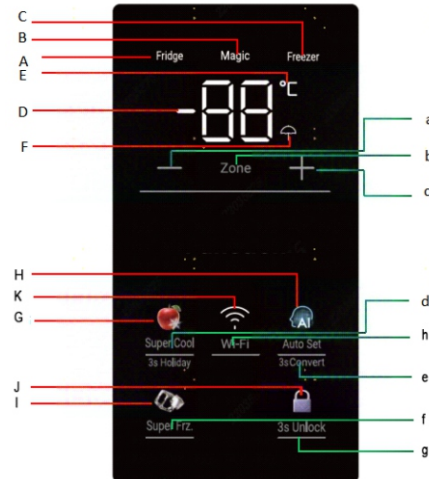

1. First to use:

The appliance starts operating as soon as it is connected to the power supply.

The display lights up when the refrigerator is powered on for the first time.

The Fridge temperature, Convertible Zone temperature, and freezer temperature are automatically set to 5°C, 3°C and -18°C respectively.

2. Lock/unlock panel:

i. Standby-mode

The display screen turns off automatically 30 seconds after pressing a button. The display will be automatically locked. It lights up automatically when pressing any button or opening any door.

ii. Manual adjusting mode:

If you want to adjust the temperature of the appliance manually, you can set the temperature via a temperature adjust button.

3. Adjust the temperature of fridge

i. Unlock the Settings: Long press the button “g” for 3 seconds to unlock the settings.

ii. Toggle Across Zones: In the unlocked state, press the button “b” (zone selector) to toggle through the zones. When the Icon “A” (Fridge Zone Icon) lights up, you are in the fridge zone.

iii. Adjust Fridge Zone Temperature:

- To decrease the fridge temperature:

Press button “a” (Temperature control “-”) to decrease the temperature by 1°C each time.

The value displayed on Icon “D” will decrease by 1°C with each press of button “a”.

The display will flash and turn solid with the new set temperature, then go off after a few seconds.

5. HOW TO OPERATE

- To increase the fridge temperature:

Press button “c” (Temperature control “+”) to increase the temperature by 1°C each time.

The value displayed on Icon “D” will increase by 1°C with each press of button “c”.

The display will flash and turn solid with the new set temperature, then go off after a few seconds

iv. Temperature Range:

The fridge zone temperature can be adjusted from 1°C to 9°C, with 1°C increments.



The temperature in the corresponding zone cannot be adjusted if any other function (Super-Cool, Holiday, or Auto Set mode) is activated or the display is locked. The corresponding Icon will flash accompanied by a buzzer.

4. Adjust the temperature for the Freezer

- i. **Unlock the Settings:** Long press the button “g” for 3 seconds to unlock the settings.

- ii. **Toggle Across Zones:** In the unlocked state, press the button “b” (zone selector) to toggle through the zones. When Icon “C” (Freezer Zone Icon) lights up, you are in the freezer zone.

iii. Adjust Freezer Zone Temperature:

- To decrease the freezer temperature:

Press button “a” (Temperature control “-”) to decrease the temperature by 1°C each time. The value displayed on Icon “D” decreases by 1°C with each press of button “a”. The display will flash and then turn solid with the set temperature, before going off after a few seconds.

- To increase the freezer temperature:

Press button “c” (Temperature control “+”) to increase the temperature by 1°C each time. The value displayed on Icon “D” increases by 1°C with each press of button “c”. The display will flash and then turn solid with the set temperature, before going off after a few seconds.

iv. Temperature Range:

The freezer zone temperature can be adjusted from -24°C to -14°C, with 1°C increments.



The temperature in the corresponding zone cannot be adjusted if any other function (Super Frz. or Auto Set mode) is activated or the display is locked. The corresponding icon will flash accompanied by a buzzer.

5. Adjust Convertible Zone temperature

- i. **Unlock the Settings:** Long press the button “g” for 3 seconds to unlock the settings.

- ii. **Toggle Across Zones:** In the unlocked state, press the button “b” (zone selector) to toggle through the zones. When Icon “B” (Convertible Zone Icon) lights up, you are in the convertible zone.

iii. Adjust Convertible Zone Temperature:

- To decrease the convertible zone temperature:

Press button “a” (Temperature control “-”) to decrease the temperature by 1°C each time. The value displayed on Icon “D” decreases by 1°C with each press of button “a”. The display will flash and then turn solid with the set temperature, before going off after a few seconds.

- To increase the convertible zone temperature:

Press button “c” (Temperature control “+”) to increase the temperature by 1°C each time. The value displayed on Icon “D” increases by 1°C with each press of button “c”. The display will flash and then turn solid with the set temperature, before going off after a few seconds.

iv. Temperature Range:

The convertible zone temperature can be adjusted from -20°C to 5°C, with 1°C increments.

5. HOW TO OPERATE

6. Super Cool function (Press 3 Seconds for Holiday mode):

After putting food into the fridge zone, if you want to cool it down quickly, you can enable the Super Cool function.

i. Unlock the Settings: Long press the button “g” for 3 seconds to unlock the settings.

ii. Activate Super Cool Mode: In the unlocked state, press button “d” (Super Cool function selector) to activate Super Cool mode. When Icon “G” (Super Cool function icon) lights up, the product enters Super Cool mode.

iii. Super Cool Mode Duration:

The product will automatically exit Super Cool mode after 6 hours of activation.

iv. Manually Exit Super Cool Mode:

To manually exit Super Cool mode, press button “d” (Super Cool function selector) again in the unlocked state. Icon “G” (Super Cool function icon) will go off, and the product will exit Super Cool mode.



Super Cool function de-activates automatically when Holiday mode is selected. Under Super Cool mode, button “a” (Temperature control “-”) & button “c” (Temperature control “+”) are locked when the fridge zone is selected and the fridge zone temperature cannot be adjusted.

7. Holiday mode:

Under Holiday mode, fridge zone automatically sets to 17°C (for energy saving), while the convertible zone and freezer zone operate at normal temperature settings.

i. Unlock the Settings: Long press the button “g” for 3 seconds.

ii. Activate Holiday Mode: Under unlock state, press button “d”(Holiday mode button) for 3 seconds, Icon “F” (Holiday mode icon) lights up, and the product enters Holiday mode; to exit, press button “d” (Holiday mode selector)for 3 seconds, icon “F” goes off, and the product exits Holiday mode.



Empty the fridge zone after selecting the holiday function, due to the high temperature in the fridge zone (+ 17 ° C).

8. Auto Set function:

i. Unlock the Settings: Long press the button “g” for 3 seconds to unlock the settings.

ii. Activate Auto Set: Under unlock state, press button “e” (Auto Set selector), icon “H” (Auto Set icon) lights up, product enters Auto Set mode. The product can automatically adjust the temperature setting according to the ambient temperature and temperature change in the appliance. By repeating the above steps, this function can be switched off.



When the Auto Set function is activated, the fridge zone and freezer zone cannot be adjusted.

9. 3 Seconds Convert Function (For Convertible Zone switch temperature 5°C or -20°C):

i. Unlock the Settings: Unlock the settings by pressing the button “g” for 3 seconds.

ii. Activate Convertible Mode: When the convertible zone settled temperature shows in the display above 0°C, pressing the button “e” for 3 seconds, the settled temperature switches to -20°C, and the “B” icon flashes 5 times before the normal display.

When the convertible zone settled temperature shows in the display below 0°C(including 0°C), pressing the button “e” for 3 seconds, the settled temperature switches to 5°C, and the “B” icon flashes 5 times before normal display.

5. HOW TO OPERATE



If the display lights up again, icon “D” will show the current settled temperature of the convertible zone, and icon “B” will flash 5 times at the same time;
When the temperature reaches the settled temperature (5°C or -20°C) , the B icon stops flashing.

Tips:

1. Icon “B” flashes 5 times indicating the temperature conversion is not complete yet.
2. While the activation of convertible function, press button “a” (Temperature control “-”) or button “c”(Temperature control “+”) to adjust the convertible zone temperature, the 3 Seconds Convertible function exits;

10. Super Freeze function:

Super Freeze function can freeze the fresh food as soon as possible to the core by accelerating the freezing to preserve the best nutritional value, appearance and taste of food.

- i. Unlock the Settings:** Unlock the settings by long pressing button “g” for 3 seconds.
- ii. Activate Super Freeze mode:** Under unlock state, press button “f” (Super Freeze function selector), icon “I” (Super Freeze function icon) lights up, and the product enters Super Freeze mode. The product automatically exits Super Freeze mode after 12 hours of activation.
For manually exiting Super Freeze mode, press button “f” (Super Freeze function selector) under unlock state, icon “I” (Super Freeze function icon) goes off, product exits Super Freeze mode.



Under Super Freeze mode, button “a” (Temperature control “-”) & button “c” (Temperature control “+”) are locked when the freezer zone is selected and the freezer zone temperature cannot be adjusted.

11. Wi-Fi Function

In the initial state, the Wi-Fi function is enabled. In the first 30 minutes after the first power-on, or 3 seconds after holding the Wi-Fi button, the refrigerator will enter configuration mode, and the Wi-Fi icon “K” will flash to indicate it is connecting to the network. In the unlocked state, press the Wi-Fi button “h”; the Wi-Fi icon “K” will turn off, and the Wi-Fi function will be disabled. When the Wi-Fi function is off, if you need to turn it back on, press the Wi-Fi button “h”; the Wi-Fi icon “K” will light up, and the Wi-Fi function will turn on. You can then perform the same operation as described above.

5. HOW TO OPERATE

PREMIUM GLASS MODEL(Mirror, Vogue & Other)


Temperature Setting Guide

Icon Description:

- A Fridge Zone Icon
- B Convertible Zone Icon
- C Freezer Zone Icon
- D Temperature Icon
- E Degree Centigrade Icon
- F Holiday Icon
- G Super Cool Icon
- H Auto Set Icon
- I Super Freeze Icon
- J Lock/Unlock Icon
- K Wi-Fi Icon
- L Spice Icon
- M Cheese Icon
- N Beverage Icon

Button Description:

- a Temperature Decrease button
- b Zone Selection button
- c Temperature Increase button
- d Super cool button (Press 3 Seconds for Holiday mode)
- e Auto Set button/Press 3 Seconds for Convertible function switch button
- f Super Freezer button

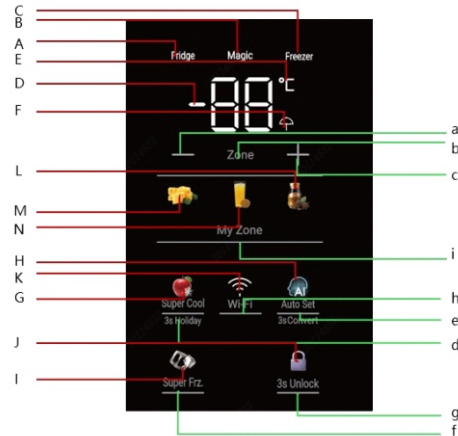

- g 3 Seconds Lock/Unlock button
- h Wi-Fi button
- i My Zone button

1. First to use:

The appliance is in operation as soon as it is connected to the power supply. The display will illuminate when the refrigerator is first powered on. The fridge temperature, Convertible Zone temperature, and freezer temperature are automatically set to 5°C, 3°C, and -18°C, respectively.

2. Lock/unlock panel:

i. Standby-mode:

The display screen turns off automatically 30 seconds after pressing a button. The display will then be automatically locked. It will light up automatically when any button is pressed or any door is opened.

ii. Manual adjusting mode:

If you want to adjust the temperature of the appliance manually, you can set it using the temperature adjustment button.

3. Adjust the temperature of fridge

i. **Unlock the Settings:** Long press the button “g” for 3 seconds to unlock the settings.

ii. **Toggle Across Zones:** In the unlocked state, press the button “b” (zone selector) to toggle through the zones. When the Icon “A” (Fridge Zone Icon) lights up, you are in the fridge zone.

iii. Adjust Fridge Zone Temperature:

- To decrease the fridge temperature:

Press button “a” (Temperature control “-”) to decrease the temperature by 1°C each time.

The value displayed on Icon “D” will decrease by 1°C with each press of button “a”.

The display will flash and turn solid with the new set temperature, then go off after a few seconds.

5. HOW TO OPERATE

- To increase the fridge temperature:

Press button “c” (Temperature control “+”) to increase the temperature by 1°C each time.

The value displayed on Icon “D” will increase by 1°C with each press of button “c”.

The display will flash and turn solid with the new set temperature, then go off after a few seconds

iv. Temperature Range:

The fridge zone temperature can be adjusted from 1°C to 9°C, with 1°C increments.



The temperature in the corresponding zone cannot be adjusted if any other function (Super-Cool, Holiday, or Auto Set mode) is activated or the display is locked. The corresponding Icon will flash accompanied by a buzzer.

4. Adjust the temperature for the Freezer

- i. **Unlock the Settings:** Long press the button “g” for 3 seconds to unlock the settings.

- ii. **Toggle Across Zones:** In the unlocked state, press the button “b” (zone selector) to toggle through the zones. When Icon “C” (Freezer Zone Icon) lights up, you are in the freezer zone.

iii. Adjust Freezer Zone Temperature:

- To decrease the freezer temperature:

Press button “a” (Temperature control “-”) to decrease the temperature by 1°C each time. The value displayed on Icon “D” decreases by 1°C with each press of button “a”. The display will flash and then turn solid with the set temperature, before going off after a few seconds.

- To increase the freezer temperature:

Press button “c” (Temperature control “+”) to increase the temperature by 1°C each time. The value displayed on Icon “D” increases by 1°C with each press of button “c”. The display will flash and then turn solid with the set temperature, before going off after a few seconds.

iv. Temperature Range:

The freezer zone temperature can be adjusted from -24°C to -14°C, with 1°C increments.



The temperature in the corresponding zone cannot be adjusted if any other function (Super Frz. or Auto Set mode) is activated or the display is locked. The corresponding icon will flash accompanied by a buzzer.

5. Adjust Convertible Zone temperature

- i. **Unlock the Settings:** Long press the button “g” for 3 seconds to unlock the settings.

- ii. **Toggle Across Zones:** In the unlocked state, press the button “b” (zone selector) to toggle through the zones. When Icon “B” (Convertible Zone Icon) lights up, you are in the convertible zone.

iii. Adjust Convertible Zone Temperature:

- To decrease the convertible zone temperature:

Press button “a” (Temperature control “-”) to decrease the temperature by 1°C each time. The value displayed on Icon “D” decreases by 1°C with each press of button “a”. The display will flash and then turn solid with the set temperature, before going off after a few seconds.

- To increase the convertible zone temperature:

Press button “c” (Temperature control “+”) to increase the temperature by 1°C each time. The value displayed on Icon “D” increases by 1°C with each press of button “c”. The display will flash and then turn solid with the set temperature, before going off after a few seconds.

iv. Temperature Range:

The convertible zone temperature can be adjusted from -20°C to 5°C, with 1°C increment.

5. HOW TO OPERATE

6. Super Cool function (Press 3 Seconds for Holiday mode):

After putting food into the fridge zone, if you want to cool it down quickly, you can enable the Super Cool function.

i. Unlock the Settings: Long press the button “g” for 3 seconds to unlock the settings.

ii. Activate Super Cool Mode: In the unlocked state, press button “d” (Super Cool function selector) to activate Super Cool mode. When Icon “G” (Super Cool function icon) lights up, the product enters Super Cool mode.

iii. Super Cool Mode Duration:

The product will automatically exit Super Cool mode after 6 hours of activation.

iv. Manually Exit Super Cool Mode:

To manually exit Super Cool mode, press button “d” (Super Cool function selector) again in the unlocked state. Icon “G” (Super Cool function icon) will go off, and the product will exit Super Cool mode.



Super Cool function de-activates automatically when Holiday mode is selected. Under Super Cool mode, button “a” (Temperature control “-”) & button “c” (Temperature control “+”) are locked when the fridge zone is selected and the fridge zone temperature cannot be adjusted.

7. Holiday mode:

Under Holiday mode, fridge zone automatically sets to 17°C (for energy saving), while the convertible zone and freezer zone operate at normal temperature settings.

i. Unlock the Settings: Long press the button “g” for 3 seconds.

ii. Activate Holiday Mode: Under unlock state, press button “d” (Holiday mode button) for 3 seconds, Icon “F” (Holiday mode icon) lights up, and the product enters Holiday mode; to exit, press button “d” (Holiday mode selector) for 3 seconds, icon “F” goes off, and the product exits Holiday mode.



Empty the fridge zone after selecting the holiday function, due to the high temperature in the fridge zone (+ 17 °C)

8. Auto Set function:

i. Unlock the Settings: Long press the button “g” for 3 seconds to unlock the settings.

ii. Activate Auto Set: Under unlock state, press button “e” (Auto Set selector), icon “H” (Auto Set icon) lights up, product enters Auto Set mode. The product can automatically adjust the temperature setting according to the ambient temperature and temperature change in the appliance. By repeating the above steps, this function can be switched off.



When the Auto Set function is activated, the fridge zone and freezer zone cannot be adjusted.

9. 3 Seconds Convert Function (For Convertible Zone switch temperature 5°C or -20°C):

i. Unlock the Settings: Unlock the settings by pressing the button “g” for 3 seconds.

ii. Activate Convertible Mode: When the convertible zone settled temperature shows in the display above 0°C, pressing the button “e” for 3 seconds, the settled temperature switches to -20°C, and the “B” icon flashes 5 times before the normal display.

When the convertible zone settled temperature shows in the display below 0°C (including 0°C), pressing the button “e” for 3 seconds, the settled temperature switches to 5°C, and the “B” icon flashes 5 times before normal display.

5. HOW TO OPERATE



If the display lights up again, icon “D” will show the current settled temperature of the convertible zone, and icon “B” will flash 5 times at the same time;
When the temperature reaches the settled temperature (5°C or -20°C) , the B icon stops flashing.

Tips:

1. Icon “B” flashes 5 times indicating the temperature conversion is not complete yet.
2. While the activation of convertible function, press button “a” (Temperature control “-”) or button “c”(Temperature control “+”) to adjust the convertible zone temperature, the 3 Seconds Convert function exits;

10. Super Freeze function:

Super Freeze function can freeze the fresh food as soon as possible to the core by accelerating the freezing to preserve the best nutritional value, appearance and taste of food.

- i. Unlock the Settings:** Unlock the settings by long pressing button “g” for 3 seconds.
- ii. Activate Supper Freeze mode:** Under unlock state, press button “f” (Super Freeze function selector), icon “I” (Super Freeze function icon) lights up, and the product enters Super Freeze mode. The product automatically exits Super Freeze mode after 12 hours of activation.
For manually exiting Super Freeze mode, press button “f” (Super Freeze function selector) under unlock state, icon “I” (Super Freeze function icon) goes off, product exits Super Freeze mode.



Under Super Freeze mode, button “a” (Temperature control “-”) & button “c” (Temperature control “+”) are locked when the freezer zone is selected and the freezer zone temperature cannot be adjusted.

11. Wi-Fi Function

In the initial state, the Wi-Fi function is enabled. Within the first 30 minutes after the first power-on, or 3 seconds after holding the Wi-Fi button, the refrigerator will enter configuration mode, and the Wi-Fi icon “K” will flash to indicate it is connecting to the network.

In the unlocked state, press the Wi-Fi button “h”; the Wi-Fi icon “K” will turn off, and the Wi-Fi function will be disabled. When the Wi-Fi function is off, if you need to enable it, press the Wi-Fi button “h”; the Wi-Fi icon “K” will light up, and the Wi-Fi function will turn on. You can then perform the same operation as described above.

12. My Zone function


My Zone Function: To unlock the display, press the “My Zone” button (marked with “I”). Then, choose one of the following icons:

- Cheese (icon “M”)
- Beverage (icon “N”)
- Spice (icon “L”)

6. FOOD STORAGE GUIDELINES

Storing into the fridge compartment

- ▶ Keep your fridge temperature according to your requirement.
- ▶ Hot food must be cooled to room temperature before storing in the appliance.
- ▶ Foods stored in the fridge should be washed and dried before storing
- ▶ Food to be stored should be properly sealed to avoid odour or taste alterations.
- ▶ Do not store excessive quantities of food. Leave spaces between foods to allow cold air flowing around them, for a better and more homogeneous cooling.
- ▶ Foods eaten daily should be stored at the front of the shelf.
- ▶ Leave a gap between foods and the inner walls. allowing air flowing. In special way don't store foods against the rear wall: foods could freeze against rear wall. Avoid direct contact of food (especially oily or acidic food) with the inner liner, as oil/acid can erode the inner liner. Clean away oily/acid dirt whenever it is found.
- ▶ Defreeze frozen food in the fridge storage compartment. This way, you can use the frozen food to decrease the temperature in the compartment and save energy.
- ▶ The ageing process of fruit and vegetables such as corvettes. melons. papaya, banana, pineapple, etc. can be accelerated in the fridge. Therefore. It is not advisable to store them in the fridge. However. the ripening of strongly green fruits can be promoted for a certain period. Onions. garlic, ginger and other root vegetables should also be stored at room temperature.
- ▶ Unpleasant odors inside the fridge are a sign that something has spilled and cleaning is required.
- ▶ Different foods should be placed in different areas according to their properties
 1. Butter. cheese. etc.
 2. Eggs, Cans. canned food, spices. etc.
 3. Drinks and bottled foods
 4. Pickled foods, canned food, etc.
 5. Meat products, snack foods, Pasta, canned food, milk, tofu, dairy, etc.
 6. Cooked meat, sausages, etc.
 - 7*/8. Fruits. vegetables. salad, etc.

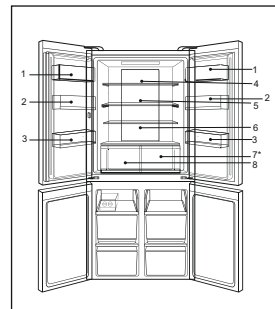


Storing into the freezer compartment

- ▶ Keep the freezer temperature according to your requirement.
- ▶ Hot food must be cooled to room temperature before storing in the freezer compartment.
- ▶ Food cut into small portions will freeze faster and be easier to defrost and cook. The recommended weight for each portion is less than 2.5 kg
- ▶ It is better to pack food before putting it into the freezer. The outside of the packaging must be dry to avoid bags sticking together. Packaging materials should be odour-free, airtight. non-poisonous and nontoxic.
- ▶ In order to avoid expiration of storage periods, please note the freezing date, time limit and name of the food on the packaging according to the storage periods of different foods.
- ▶ **WARNING!:** Acid, alkali and salt etc. could erode the internal surface of the freezer. Do not place the food containing these substances (e.g. sea fish) directly on the internal surface. Salt water in the freezer should be cleaned up immediately.
- ▶ Do not exceed the food storage times recommended by the manufacturers. Only take the required amount of food out of the freezer.
- ▶ Different foods should be placed in different areas according to their properties

Less weighty items, such as ice cream, veget a bles, bread etc.
Beverage without high alcohol and temporary storage of spirits with a high alcohol content, small parts like Pizza or herbs.

1. Ice box
2. Freezer Tray
3. Large/heavier portions of food, such as meats joints for roasting

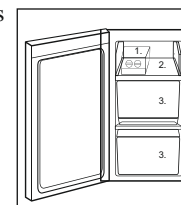

6. FOOD STORAGE GUIDELINES


i Notice

- ▶ Please keep a distance of more than 10 mm between the food and the sensor to ensure proper cooling.
- ▶ Keep the lowest drawer closed when the appliance is operating to ensure optimal cooling.
- ▶ Foods with ice (such as ice cream, etc.) should be stored inside the freezer compartment, not on the bottle holder. The temperature changes at the bottle holder due to door opening and closing may thaw the food.
- ▶ Consume defrosted food quickly. Defrosted food cannot be re-frozen unless it is first cooked; otherwise, it may become unsafe to eat.
- ▶ Do not load excessive quantities of fresh food into the freezer compartment. Refer to the freezing capacity of the freezer — see the TECHNICAL DATA or the data on the type plate.
- ▶ Food can be stored in the freezer at a temperature of at least -18°C for 2 to 12 months, depending on its properties (e.g., meat: 3-12 months, vegetables: 6-12 months).
- ▶ When freezing fresh food, avoid letting it come into contact with already frozen food, as this could cause thawing.
- ▶ Defrost frozen food in the fridge. This way, you can use the defrosted food to decrease the temperature in the compartment and save energy.

Storing the food into the Convertible Compartment:

- 5°C — Used as a refrigerator chamber at $0^{\circ}\text{C} \sim 5^{\circ}\text{C}$ to store vegetable and fruit.
- 0°C — Sea food or other food to be eaten in a short time.
- -3°C — Retain the freshness of meat up to 5 days and sea food up to 2 days.
- -5°C — Retain the freshness of meat up to 7 days and sea food up to 3 days.
- -7°C — Retain the freshness of meat up to 10 days and sea food up to 5 days.
- -12°C — Used as a storage compartment for frozen food
- -18°C —

1. Less weighty items, such as ice cream, vegetables, bread etc.
 2. Large/heavier portions of food, such as meats joints for roasting.
- ▶ Different foods should be placed in different areas according to their properties.

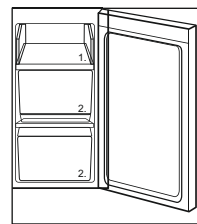

When storing commercially frozen foods, please follow these guidelines:


- ▶ Always follow the manufacturer's guidelines for the length of time you should store food. Do not exceed these guidelines.
- ▶ Try to minimize the time between purchase and storage to preserve food quality.
- ▶ Buy frozen foods that have been stored at a temperature of -18°C or below.
- ▶ Avoid buying food that has ice or frost on the packaging, as this indicates that the products may have been partially defrosted and refrozen at some point. Temperature fluctuations affect the quality of food.

7. EQUIPMENT

Adjustable shelves

The height of the shelves can be adjusted to fit your storage needs

1. To relocate a shelf, remove it first by uplifting its hind edge (1) and pulling it out (2).
2. To reinstall the shelf, place it on the lugs on both sides and push it to the most rearward position until the rear of the shelf is securely fixed inside the slots on the sides.

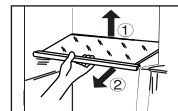

Notice


- Ensure that all ends of shelf are at same level.

7. EQUIPMENT

Removable door racks


The door racks can be removed for cleaning. Place your hands on each side of the rack, lift it upwards (1), and pull it out (2).

To reinstall the door rack, follow the above steps in reverse order.

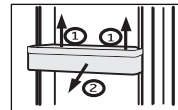

Ice Maker


1. Pull the Ice Maker out (1)
2. Pour fresh drinking water into each ice-making box, up to the scale mark inside the measuring cup. Do not exceed the scale mark.
3. Place the box into the freezing compartment.
4. Once the water has frozen into ice, remove the ice maker from the appliance and rotate the button by hand. The ice blocks will then fall into the ice box automatically. Remove the cover and collect the ice cubes (2).

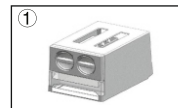

Removable drawer

To remove the drawer from the fridge or freezer compartment, pull it out to the maximum extent (1), then lift and remove it (2).

To insert the drawer, follow the above steps in reverse order.

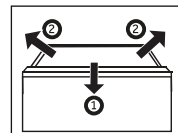

The Surface Light

The LED interior light comes on when the door is opened. The performance of the light is not affected by any of the appliance's other settings.

Energy Saving Tips


- Make sure the appliance is properly ventilated (see Installation Guidelines).
- Do not install the appliance in direct sunlight or near heat sources (e.g., stoves, heaters).
- Avoid setting unnecessarily low temperatures in the appliance. Energy consumption increases as the temperature setting lowers.
- Functions like Turbo Icing consume more energy.
- Allow warm food to cool down before placing it in the appliance.
- Open the appliance door as little as possible.
- Do not overfill the appliance to avoid obstructing airflow.
- Avoid air within food packaging.
- Keep door seals clean to ensure the door always closes properly.

8. CLEANING

Clean the appliance when little or no food is stored. The appliance should be cleaned every four weeks for proper maintenance and to prevent unpleasant food odors.

WARNING

- ▶ Do not clean the appliance with hard brushes, wire brushes, detergent powder, petrol, amyl acetate, acetone, or similar organic solutions, acid, or alkaline solutions. Use a special fridge detergent to avoid damage.
- ▶ Do not spray or flush the appliance during cleaning.
- ▶ Do not use water spray or steam to clean the appliance.
- ▶ Do not clean the cold glass shelves with hot water. Sudden temperature changes may cause the glass to break.
- ▶ Do not touch the inside surface of the freezer storage compartment, especially with wet hands, as your hands may freeze to the surface.
- ▶ In case of heating, check the condition of frozen goods.
- ▶ Always keep the door gasket clean.
- ▶ Clean the inside and housing of the appliance with a sponge dampened with warm water and neutral detergent.
- ▶ Rinse and dry with a soft cloth.
- ▶ Do not clean any parts of the appliance in a dishwasher.
- ▶ Allow at least 5 minutes before restarting the appliance, as frequent starting may damage the compressor.

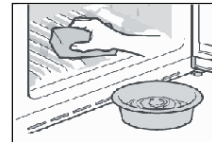

Replacing the LED-lamps

WARNING


Do not replace the LED lamp yourself. It must only be replaced by the manufacturer or an authorized service agent.

The lamp uses LED as its light source, featuring low energy consumption and a long service life. If there is any issue, please contact customer service (see CUSTOMER SERVICE).
Lamp parameters: 12V, max 8W, max 9W for back surface light.

Non-use for a longer period

If the appliance is not going to be used for an extended period of time, and you will not use the Holiday function for the fridge:

- ▶ Remove the food.
- ▶ Unplug the power cord.
- ▶ Clean the appliance as described above.
- ▶ Keep the doors open to prevent the formation of bad odors inside.

 **Notice Switch off** : Turn the appliance off only if strictly necessary.

Moving the appliance

1. Remove all food and unplug the appliance.
2. Secure shelves and other movable parts in the fridge and freezer with adhesive tape.
3. Do not tilt the appliance more than 45° to avoid damaging the refrigeration system.

WARNING

- ▶ Do not lift the appliance by its handles.
- ▶ Never place the appliance horizontally on the ground.

9. BASIC TROUBLESHOOTING BY YOURSELF

Many occurring problems could be solved by yourself without specific expertise. In case of a problem please check all shown possibilities and follow below instructions before you contact an after sales service. See CUSTOMER SERVICE.

WARNING

- ▶ Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- ▶ Electrical equipment should be serviced only by qualified electrical experts, because improper repairs can cause considerable consequential damages.
- ▶ A damaged supply should only be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Problem	Possible Cause	Possible Solution
The compressor does not work.	<ul style="list-style-type: none"> • Mains plug is not connected in the mains socket. • The appliance is in the defrosting cycle. 	<ul style="list-style-type: none"> • Connect the mains plug. • This is normal for an automatic defrosting.
The appliance runs frequently or runs for a too long period of time.	<ul style="list-style-type: none"> • The indoor or outdoor temperature is too high. • The appliance has been off power for a period of time. • A door of the appliance is not tightly closed. • The door has been opened too frequently or for too long. • The temperature setting for the freezer compartment is too low. • The door gasket is dirty, worn, cracked or mismatched. • The required air circulation is not guaranteed. 	<ul style="list-style-type: none"> • In this case, it is normal for the appliance to run longer. • Normally, it takes 8 to 12 hours for the appliance to cool down completely. • Close the door and ensure the appliance is located on a level ground and there is no food or container jarring the door. • Do not open the door too frequently. • Set the temperature higher until a satisfactory refrigerator temperature is obtained. It takes 24 hours for the refrigerator temperature to become stable. • Clean the door gasket or replace them by the customer service. • Ensure adequate ventilation.
The inside of the fridge is dirty and/ or smells.	<ul style="list-style-type: none"> • The inside of the fridge needs cleaning. • Food of strong odour is stored in the fridge. 	<ul style="list-style-type: none"> • Clean the inside of the fridge. • Wrap the food thoroughly.
It is not cold enough inside the appliance.	<ul style="list-style-type: none"> • The temperature is set too high. • Too warm goods has been stored. • Too much food has been stored at one time. • The goods are too close to each other. • A door of the appliance is not tightly closed. • The door has been opened too frequently or for too long. 	<ul style="list-style-type: none"> • Reset the temperature. • Always cool down goods before storing them. • Always store small quantities of food. • Leave a gap between several foods allowing air flowing. • Close the door. • Do not open the door too frequently.
It is too cold in side the appliance.	<ul style="list-style-type: none"> • The temperature is set too low. • The Super-Cool/ Super-Freezer functions activated or is running too long. 	<ul style="list-style-type: none"> • Reset the temperature. • Switch off the Super-Cool / Super-Freezer function.
Moisture formation on the inside of the fridge compartment.	<ul style="list-style-type: none"> • The climate is too warm and too damp. • A door of the appliance is not tightly closed. • The door has been opened too frequently or for too long. • Food containers or liquids are left open. 	<ul style="list-style-type: none"> • Increase the temperature. • Close the door. • Do not open the door too frequently. • Let hot foods cool to room temperature and cover foods and liquids.

9. BASIC TROUBLESHOOTING BY YOURSELF

Problem	Possible Cause	Possible Solution
Moisture accumulates on the fridges outside surface or between the doors.	<ul style="list-style-type: none"> The climate is too warm and too damp. The door is not closed tightly. The cold air in the appliance and the warm air outside it condensates. 	<ul style="list-style-type: none"> This is normal in damp climate and will change when the humidity decreases. Ensure that the door is tightly shut.
Strong ice and frost in the freezer compartment.	<ul style="list-style-type: none"> The goods were not adequately packaged. A door/drawer of the appliance is not tightly closed. The door has been opened too frequently or for too long. The door gasket is dirty, worn, cracked or mismatched. Something on the inside prevents the door to close properly. 	<ul style="list-style-type: none"> Always pack the goods well. Close the door/drawer. Do not open the door too frequently. Clean the door gasket or replace them by new ones. Reposition the shelves, door racks, or internal containers to allow the door to close.
The appliance makes abnormal sounds.	<ul style="list-style-type: none"> The appliance is not located on level ground. The appliance touches some object around it. 	<ul style="list-style-type: none"> Adjust the feet to level the appliance. Remove objects around the appliance.
A slight sound is to be heard similar to that of flowing water.	<ul style="list-style-type: none"> This is normal. 	-----
You will hear an alarm beep.	<ul style="list-style-type: none"> The door is open. 	<ul style="list-style-type: none"> Close the door.
You will hear a faint hum.	<ul style="list-style-type: none"> The anti-condensation system is working. 	<ul style="list-style-type: none"> This prevents condensation and is normal.
The interior lighting or cooling system does not work.	<ul style="list-style-type: none"> Mains plug is not connected in the mains socket. The power supply is not intact. The LED-lamp is out of order. 	<ul style="list-style-type: none"> Connect the mains plug. Check the electrical supply to the room. Call the local electricity company! Please call the service for changing the lamp.
The sides of the cabinet and door strip get warm.	<ul style="list-style-type: none"> This is normal. 	-----
Water leaking or dripping from the water dispenser spout.	<ul style="list-style-type: none"> The water tank is not installed correctly The water dispenser spout is not screwed tight to the tank. The white silicon O ring is missing from the water spout. 	<ul style="list-style-type: none"> Refit the water tank into the fridge door, ensure it is pushed fully into the door. The water spout is screwed in firmly to the water tank. Check the water spout has a white silicon O ring at the tank end before fitting the water spout to the water tank.

9. BASIC TROUBLESHOOTING BY YOURSELF

Power Interruption

In the event of a power cut, food should remain safely cold for about 5 hours.
Follow these tips during a prolonged power interruption, especially in summer:

- ▶ Open the door/drawer as few times as possible.
- ▶ Do not put additional food into the appliance during a power interruption.
- ▶ If prior notice of a power interruption is given and the interruption duration is longer than 5 hours, make some ice and put it in a container in the top of the fridge compartment.
- ▶ An inspection of the goods is required immediately after the interruption.
- ▶ As the temperature in the fridge will rise during a power interruption or other failure, the storage period and edible quality of food will be reduced. Any food that defrosts should be either consumed, or cooked and refrozen (where suitable) soon afterward in order to prevent health risks.



Notice: Memory function during power interruption


After the restoration of power, the appliance continues with the settings that were in place before the power failure.

10. E-WASTE GUIDELINE MANUAL (Disposal of the product)

HAZARDS OF IMPROPER HANDLING AND/OR IMPROPER RECYCLING OF ELECTRONIC WASTE

This crossed out wheeled bin symbol on the product and its user guide represents the product and its electronic accessories are covered by the E-waste management and handling rules 2018 and the product should not be disposed off with other household waste at the end of their working life.

Improper handling or improper recycling of the electronic waste results in hazardous metals/substances getting released into environment and it is harmful to human health.

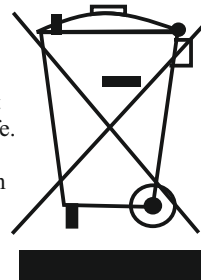

Do's :

- Give discarded electronic equipments only at authorized electronics waste collection centers near you so that e-waste can be disposed or recycled in a proper way.
- Drop the discarded electronic equipments only in the bins meant for the electronic waste
- Ask the retailer about the take back schemes.
- Consult the authorized service center as to whether the electronic equipment can be repaired or not, before discarding the same.
- Tell your neighbors and other persons about the hazards of improper disposal or handling or improper recycling of electronic waste.
- If the unwanted electronic equipments still does work or can be repaired then consider donating them.

Don'ts :

- Don't dump the discarded electronic equipments in open or in any land fill site as the same will result in contaminating the Soil and the ground water
- Don't dispose of the discarded electronic equipments in household bins or municipal bins
- Don't sell or give your discarded electronic equipments to any trash dealer or kabadiwala. any disposal through unauthorized agencies or person will attract action under Environment Protection Act 1986

Recycling of electronic equipments helps to save natural finite resources and also reduces the environmental and health risks associated with improper handling/disposing the electronic waste. We should minimize our impact on the earth and protect the environment for future generations.

RoHS COMPLIANT This appliance is RoHS compliant, which restricts the use of certain hazardous substances in electrical and electronic equipment. We take pride on meeting the toughest environmental standards in the world as represented by RoHS criteria.

11. Wi-Fi *

Description of APP login:

ONE-Download and login of app

1. **Download and install:** Scan the QR code below or search for "Haismart" in the app store to download and install the app.
2. **Registration and login:** On the app's home page, complete the account registration and login process as guided by the wizard.



11. Wi-Fi *

TWO - Device binding

1. **Distribution network settings:** Power on the refrigerator and enter configuration mode (press the “Wi-Fi” button for 3 seconds, the buzzer will sound, and the Wi-Fi icon will start flashing).
2. **Device Binding:** Open the Haismart app, click the “+” icon to add a device, and bind it according to the instructions. If binding fails, you can return to attempt rebinding.

THREE - Troubleshooting Common Network Failures and Precautions for Safe Use


1. Smart products must be connected to a wireless network to use mobile client software.
2. The wireless network (conforming to the 802.11/g protocol) only supports the 2.4GHz band. Please ensure the Wi-Fi name consists of English letters or numbers. Special characters such as @, *, and - are not supported.
3. Intelligent products need to be placed where they can receive signals from wireless routers. If the product is not properly connected to the wireless router, the mobile client software will display an offline message.
4. Use the mobile client to adjust the running state of the intelligent product. Please read the prompts carefully before making adjustments to avoid food damage inside the product due to incorrect operations.
5. It is not recommended to connect intelligent products to a public Wi-Fi network. If other users on the network can search for your intelligent products after connecting to the public network, it may compromise your privacy.
6. This equipment contains radio transmission modules with model approval codes:
CMIIT ID: 2017dp5606, 2018dp7102 / 2020dp4993.




*Available in selected models only.

Contact for further information:

Haier Appliances (India) Pvt. Ltd.
Building -1, Okhla Industrial Estate Phase El,
New Delhi-110020

 Toll Free No. (24X7): 1800-102-9999
1800-419-9999

 Email - customercare@haierindia.com

 Whatsapp - 855 304 9999



HAIER REFRIGERATOR WARRANTY CARD

Haier

Customer Name:.....Address:.....

Serial No.....Date of Purchase:.....Model No.....

Dealer Seal/Haier Seal:.....

HAIER WARRANTY

HAIER APPLIANCES (INDIA) PVT.LTD.(here-in-after referred to as "the company") hereby offers the following warranty to the domestic purchaser commencing from the date of purchase. The company, at its own sole discretion, will free of charge repair or replace any defective part or parts which prove to be defective in workmanship and/or materials and not due to abnormal or improper usage by the customer/consumer.

Product	Warranty Period		Parts Not Covered
Refrigerator	Comprehensive Period on product	Extended Period on Compressor Only	Plastic, Glassware and LED
1.All Side By side & French Door Models 2.TM/BTM with prefix - HRF/HEF 3.BM/BBM/4 Door with prefix - HRB/HEB 4.DC with prefix - HRD/HED	12 months	108 Months	

TERMS AND CONDITIONS OF WARRANTY:

1. The warranty term will commence and shall automatically terminate on completion of warranty period from the date of invoice.
2. The company is not liable for any delay in servicing due to reasons beyond the control of the company or any of its authorized service centers.
3. Parts replaced or repaired under this warranty are warranted throughout the remaining period of the original warranty.
4. It is entirely left to the company's discretion to repair/replace parts at the site of installation or at the authorized service center of the company.
5. This warranty shall be strictly limited to the repairs or replacement of defective parts specified in the warranty.
6. This warranty shall not, in any case, extend towards payment of any monetary consideration whatsoever or return of the product.
7. The company may repair/replace parts free of cost during the warranty period. This warranty does not cover any Excise Duty, central or sales tax, octroi and other local taxes or levies on the components/parts.
8. The parts shall be replaced by functional/ operating/ equivalent material only and not necessarily with brand new ones and are likely to be different from the one originally fitted. The parts thus removed shall be taken back by the company.
9. The company reserves the right to retain any part or component replaced at its sole discretion during the warranty period.
10. In no event the company or its authorized service center shall be liable for any consequential damages or resulting liability, damage or loss arising directly or indirectly out of any defect in the product.
11. This warranty is not valid in case of the following events:
 - a. If the product has been installed/serviced/repaired/opened or tampered by any unauthorized personnel/technician.
 - b. If defects arise/caused by accidents, alteration, misuse, neglect, substitution of original components with spurious/non-genuine components, attacked by household pest/ rodents, flood, earthquake, lightning and /or any other act of God/natural calamities.
 - c. The product is shifted outside India.
12. Any change of location or change in the ownership during the warranty period must be intimated in writing to the company.
13. The company's employees or its authorized representatives have no authority to vary the terms of this warranty.
14. This warranty is effected in New Delhi and claims, if any, shall be made only before the courts having jurisdiction in New Delhi and no claims shall be made against the company outside New Delhi notwithstanding that the appliances may have been sold or delivered elsewhere.
15. This offer entitles customer to enjoy free of cost an extended warranty during the warranty period on select models as above mentioned.
16. Labour, Gas charging and Transportation charges to be paid by customer accordingly during the extended warranty period of 108 months.
17. After the expiry of this warranty and/ or extended warranty period, the customer has to bear service charges and taxes as applicable.
18. Don't switch off the Refrigerator for long duration. If switch off then it could cause sealed system blockage or joint corrosion, which can result a leak.

Note: - All consumer electronic products as listed in Schedule II of the E-waste Handling & Management Rules, 2011 should be disposed of according to the procedure laid under the said Rules.

Haier

Customer Name:.....Address:.....

Serial No.....Date of Purchase:.....Model No.....

Dealer Seal/Haier Seal:.....

NOTES

NOTES

Haier



Established in 1984, Haier Group is a world-leading provider of better life and digital transformation solutions. Focusing on user experience, Haier is the world's only IoT ecosystem brand that has been included on the list of BrandZ Most Valuable Global Brands for four years straight. Haier has topped Global Major Appliances Brand Rankings by Euromonitor International for 13 consecutive years. The Group has seven global high-end brands such as Haier, Casarte, Leader, GE Appliances, Fisher & Paykel, AQUA and Candy, and the world's first scenario brand THREE WINGED BIRD. Haier has deployed 10+N innovation ecosystems, 71 research institutes, 30 industrial parks, 122 manufacturing centers and more than 230,000 sales networks worldwide.

With a focus on the real economy, Haier Group makes development planning for three major sectors: smart home and living, industrial internet and great healthcare. It is committed to working with its world-class ecosystem partners to continuously build high-end brands, scenario brands and ecosystem brands. The Group uses technological innovation to customize a personalized smart life for global users, to enable the digital transformation of business and institutional customers, to promote high-quality economic growth and sustainable social development.

Haier Appliances (India) Pvt.Ltd.

Building -1, Okhla Industrial Estate Phase III,
New Delhi -110020

Tel- +91-1139496000,30674000,Fax: +91-11-30674088

Manufactured by : Haier Appliances (India) Pvt. Ltd.,
B-3, M.I.D.C. Ranjangaon, Tal. Shirur, Dist. Pune-412 220



1800-102-9999, 1800-419-9999

(Toll Free - 24x7)

Email: customercare@haierindia.com

Whatsapp: 855 304 9999



Part No. 0060540123A Rev:00