

[Manuals.plus](#) /

- › [White Westinghouse \(Trademark by Electrolux\)](#) /
- › White Westinghouse 6.5 kg Semi-Automatic Top Load Washing Machine CSW6500 User Manual

White Westinghouse (Trademark by Electrolux) CSW6500

White Westinghouse 6.5 kg Semi-Automatic Top Load Washing Machine CSW6500 User Manual

Model: CSW6500

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your White Westinghouse 6.5 kg Semi-Automatic Top Load Washing Machine, model CSW6500. Please read these instructions carefully before using the appliance and retain them for future reference.



Figure 1.1: Overview of the White Westinghouse CSW6500 Washing Machine.

2. SAFETY INSTRUCTIONS

To prevent injury to the user or other persons and property damage, the following instructions must be followed. Incorrect operation due to ignoring instructions may cause harm or damage.

- Always ensure the washing machine is connected to a properly grounded power outlet.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not immerse the electrical parts in water or other liquids.

- Unplug the machine before cleaning or performing any maintenance.
- Do not wash items that are soiled with flammable substances (e.g., gasoline, kerosene).
- Ensure the water inlet and drain hoses are securely connected to prevent leaks.
- Do not overload the washing machine beyond its rated capacity of 6.5 kg.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts and controls of your washing machine.

3.1 Control Panel



Figure 3.1: Top view of the control panel with Wash Timer, Wash Selection, and Spin Timer knobs.

- **Wash Timer Knob:** Sets the duration for the wash cycle.
- **Wash Selection Knob:** Selects the wash program (e.g., Normal, Heavy).
- **Spin Timer Knob:** Sets the duration for the spin-drying cycle.

3.2 Wash and Spin Tubs

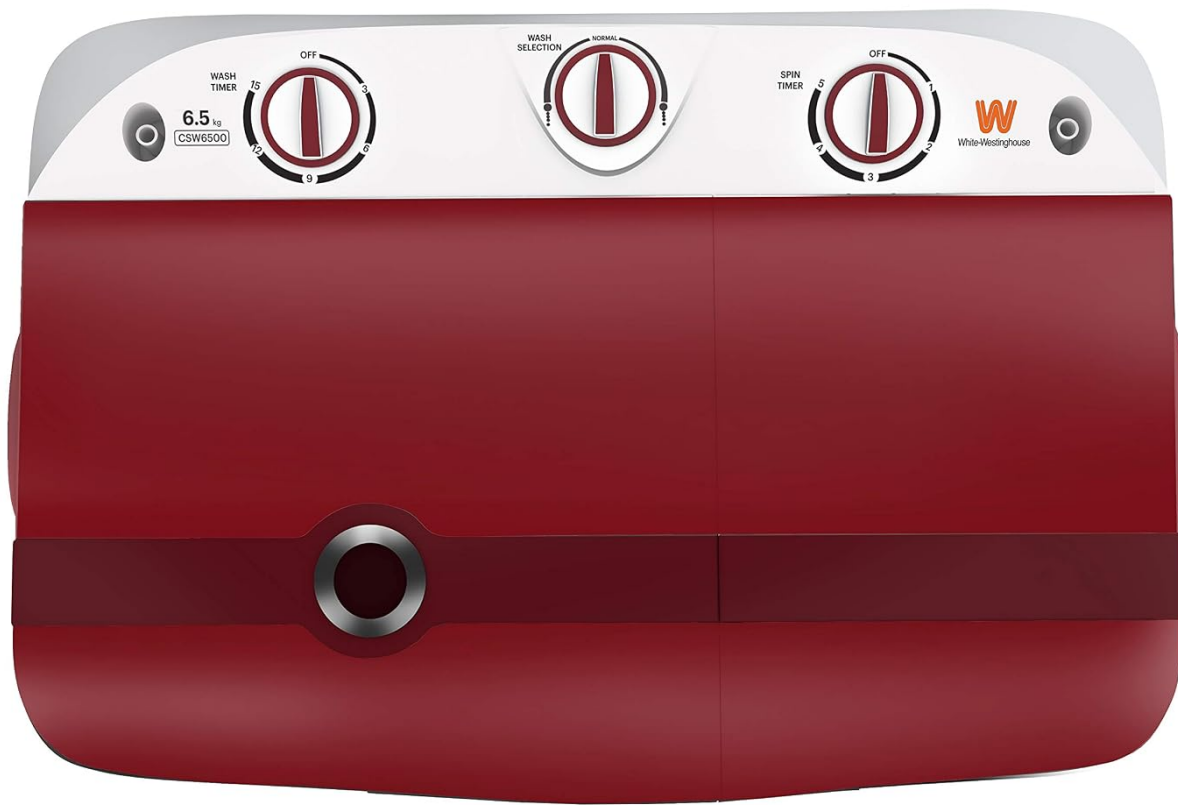


Figure 3.2: Interior view with the wash tub (left) and spin tub (right).

- **Wash Tub:** For washing and rinsing clothes.
- **Spin Tub:** For spin-drying clothes to remove excess water.

3.3 Included Accessories

The following items are included with your washing machine:

- 1 User Manual
- 1 Inlet Pipe
- 1 Safety Cover (for spin tub)
- 1 Drain Pipe
- 1 Drain pipe spring

4. INSTALLATION AND SETUP

Proper installation ensures optimal performance and safety.

4.1 Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage incurred during transit. Report any damage to your retailer immediately.

4.2 Placement

- Place the washing machine on a firm, level surface.
- Ensure there is adequate space around the machine for ventilation and operation.
- Avoid direct sunlight or locations with high humidity.
- The machine features adjustable leveling legs to ensure stability. Adjust them as needed to prevent vibration during operation.



Figure 4.1: Product dimensions for installation planning (Height: 86.5 cm, Width: 74.5 cm, Depth: 42.5 cm).

4.3 Water Connection

- Connect the inlet pipe to a water tap and the water inlet on the washing machine.
- The machine has a Twinwater Inlet feature, allowing connection to both hot and cold water sources if desired, though cold water is typically sufficient for semi-automatic machines.

- Ensure all connections are tight to prevent leaks.

4.4 Drain Hose Installation

- Position the drain pipe to allow water to flow freely into a sink or drain.
- Ensure the drain hose is not kinked or blocked.

4.5 Power Connection

Plug the power cord into a grounded electrical outlet (230 Volts).

5. OPERATION

Follow these steps for effective washing and spin-drying.

5.1 Washing Procedure

1. **Load Laundry:** Open the wash tub lid and place clothes loosely into the wash tub. Do not exceed the 6.5 kg capacity.
2. **Add Water:** Fill the wash tub with water to the appropriate level for your laundry load.
3. **Add Detergent:** Add the recommended amount of detergent.
4. **Select Wash Program:** Turn the **Wash Selection Knob** to either 'Normal' or 'Heavy' depending on the fabric type and soil level. The 360 Smart Wash Technology ensures thorough cleaning.
5. **Set Wash Timer:** Turn the **Wash Timer Knob** to the desired wash duration (e.g., 5-15 minutes).
6. **Start Washing:** The machine will begin the wash cycle.
7. **Drain Water:** Once the wash cycle is complete, drain the water from the wash tub.
8. **Rinse:** Refill the wash tub with clean water for rinsing. You may agitate briefly or perform a quick wash cycle without detergent.
9. **Drain Rinse Water:** Drain the rinse water.

5.2 Spin-Drying Procedure

1. **Transfer Laundry:** Carefully transfer the washed and rinsed clothes from the wash tub to the spin tub. Distribute them evenly to prevent imbalance.
2. **Place Safety Cover:** Place the safety cover firmly on top of the clothes in the spin tub.
3. **Close Spin Tub Lid:** Close the spin tub lid securely.
4. **Set Spin Timer:** Turn the **Spin Timer Knob** to the desired spin duration (e.g., 1-5 minutes). The machine's 1400 RPM spin speed helps reduce drying time.
5. **Start Spin:** The machine will begin the spin cycle.
6. **Remove Laundry:** Once the spin cycle is complete, open the lid and remove the spin-dried clothes.

5.3 Special Features

- **Collar Scrubber:** Utilize the integrated collar scrubber for pre-treating heavily soiled collars and cuffs before placing them in the wash tub.
- **Air Dry:** The Air Dry feature assists in faster drying of clothes by circulating air during the spin cycle.

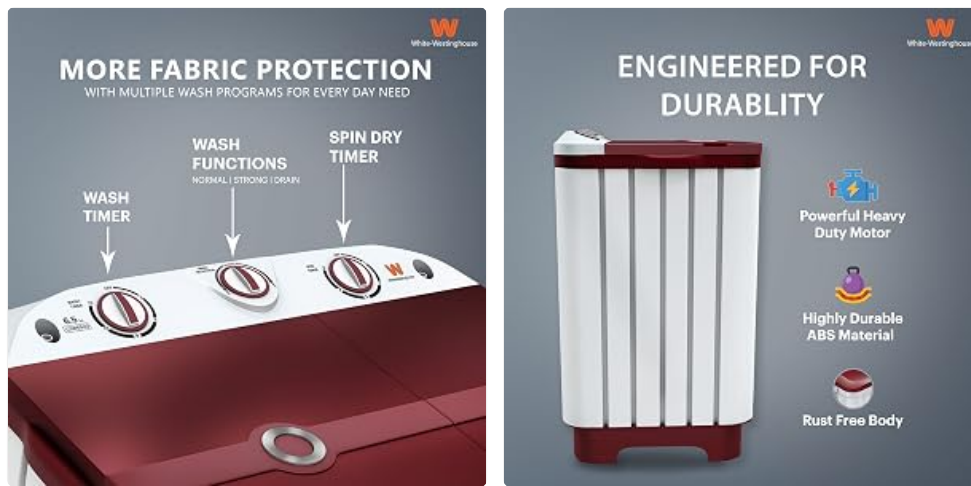


Figure 5.1: Collar Scrubber (left) and Twin Water Inlet (right) features.


6. MAINTENANCE

Regular maintenance helps prolong the life of your washing machine.

6.1 Cleaning the Lint Filter

The lint filter collects lint and debris during washing. Clean it regularly to ensure efficient operation.

1. Ensure the machine is unplugged.
2. Locate the lint filter inside the wash tub.
3. Remove the filter by pulling it upwards or unlatching it.
4. Clean the collected lint and debris under running water.
5. Reinsert the clean lint filter securely into its position.

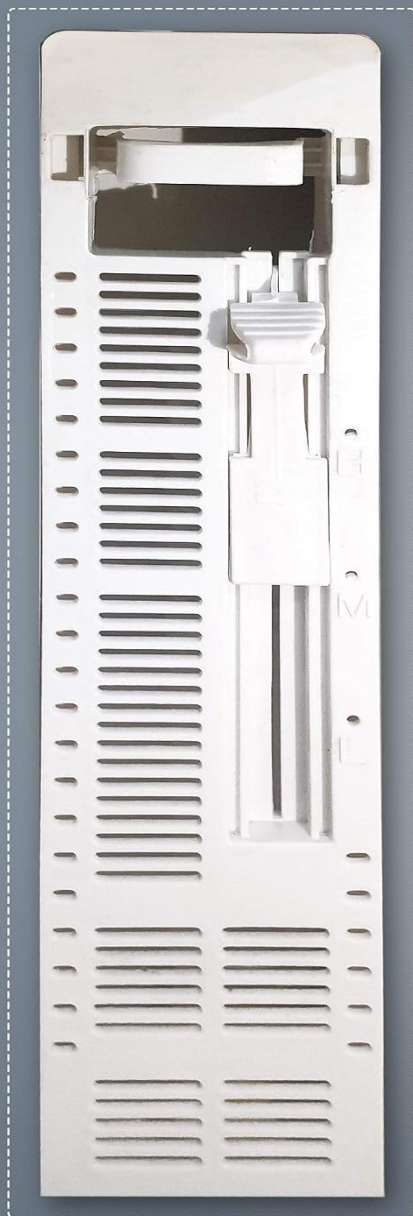

LINT FILTER

TO KEEP YOUR CLOTHES CLEAN
AND LINT FREE

Figure 6.1: Location and appearance of the lint filter.

6.2 General Cleaning

- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the wash and spin tubs periodically to prevent residue buildup.
- Ensure the drain hose is clear of obstructions.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Power outage; Lid not closed properly.	Check power connection; Restore power; Ensure lids are fully closed.

Problem	Possible Cause	Solution
No water filling	Water tap closed; Water inlet hose kinked/blocked.	Open water tap; Straighten hose; Check water supply.
Water not draining	Drain hose kinked/blocked; Drain pump filter clogged.	Straighten hose; Clear any blockages; Clean lint filter.
Excessive vibration/noise during spin	Machine not level; Uneven load in spin tub.	Adjust leveling legs; Redistribute clothes evenly in spin tub.

8. SPECIFICATIONS

Detailed technical specifications for the White Westinghouse CSW6500 washing machine.

Feature	Specification
Model Name	CSW6500
Capacity	6.5 kg
Type	Semi-Automatic Top Load
Product Dimensions (D x W x H)	58D x 55W x 85H Centimeters
Item Weight	16400 Grams
Max Rotational Speed	1400 RPM
Voltage	230 Volts
Noise Level	65 Decibels
Number of Wash Programs	2 (Heavy & Normal)
Special Features	360 Smart Wash Technology, Adjustable Leveling Legs, Air Dry, Collar Scrubber, Twinwater Inlet
Material Type	ABS

9. WARRANTY AND SUPPORT

Your White Westinghouse washing machine is covered by a comprehensive warranty and dedicated customer support.

9.1 Warranty Information

The product comes with a **2-year comprehensive warranty** on the unit and a **5-year warranty on the motor** from the date of purchase. Please retain your purchase receipt for warranty claims.



Figure 9.1: Warranty details: 2 years comprehensive, 4 years additional on motor.

9.2 Customer Support

For any queries, service requests, or technical assistance, please contact our customer support:

- **Toll-Free Helpline:** 1800-103-3661
- **Website:** www.wwh-sppl.in

Manufacturer: Super Plastronics Pvt Ltd

HAPPY TO HELP
1800-103-3661



White-Westinghouse

SERVING CUSTOMERS FOR PAST 30 YEARS IN INDIA

17000+ Pin codes | 2800 Cities Town & District covered



Hassle Free
Delivery



3000+ Ceritifed
Engineers



Doorstep
Services

"White-Westinghouse is a registered trademark used under licensee from Electrolux Home Products, INC"

Figure 9.2: Customer support contact details.