



Manuals.plus / > White Westinghouse (Trademark by Electrolux) /

> White Westinghouse HDF8500 Front Load Washing Machine User Manual

White Westinghouse (Trademark by Electrolux) HDF8500

Sign in to save this manual

Sign in to bookmark this manual and keep private notes.

White Westinghouse HDF8500 Front Load Washing Machine User Manual

Model: HDF8500 | Capacity: 8.5 kg

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the washing machine is properly grounded to prevent electric shock.
- Do not install or store the appliance where it will be exposed to weather or freezing temperatures.
- Keep flammable materials and vapors away from the washing machine.

- Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- Always unplug the washing machine from the power supply before cleaning, servicing, or performing any maintenance.
- Do not wash items that are soiled with cooking oils, gasoline, or other flammable substances.
- Use only detergents and fabric softeners specified for automatic washing machines.
- In case of a malfunction, switch off the appliance and disconnect it from the power supply. Contact authorized service personnel.

Advertisements

PRODUCT OVERVIEW

The White Westinghouse HDF8500 is an 8.5 kg fully-automatic front load washing machine designed for efficient and thorough cleaning. It features an in-built heater for hygienic washes, a Diamond Cut Drum for gentle fabric care, and multiple wash programs to suit various laundry needs.



Image: Front view of the White Westinghouse HDF8500 washing machine.

Advertisements



Dimensions

Understanding the dimensions of your washing machine is crucial for proper installation and placement.



Image: Diagram showing the dimensions of the washing machine: 850 mm (H), 595 mm (W), 440 mm (D).

Advertisements



The appliance measures approximately 850 mm in height, 595 mm in width, and 440 mm in depth. Ensure adequate space for ventilation and door opening.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage. Remove all transit bolts from the rear of the machine before use. Keep packaging materials out of reach of children.

Location Requirements

Place the washing machine on a firm, level surface. Avoid direct sunlight or extreme temperatures. Ensure there is sufficient space around the machine for air circulation and maintenance access.

Advertisements



Water Connection

Connect the inlet hose to a cold water tap with a 3/4-inch thread. Ensure all connections are tight to prevent leaks. Position the outlet hose into a drain or sink, ensuring it is securely fixed and not kinked.

Power Connection

Plug the power cord into a grounded electrical outlet. The washing machine operates on 230 Volts. Do not use extension cords or adapters.



SMART PANEL

MULTI-FUNCTION INTELLIGENT PANEL



DELAY START

SHOCK PROOF

AUTO POWER OFF

MEMORY BACK UP

Image: The Smart Panel of the washing machine, highlighting features like Delay Start, Shock Proof design, Auto Power Off, and Memory Backup.

Advertisements

The Smart Panel offers convenient features for enhanced usability and safety.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a program selector knob, function buttons, and an LED display. The LED display shows remaining time, temperature, and spin speed.



EFFECTIVE CLEANING WITH FUZZY LOGIC

DETERGENT PENETRATES THE FABRICS DEEP INSIDE AND
DISLODGES THE DIRT.



SEE THROUGH
LED DISPLAY

Image: Close-up of the washing machine's control panel, showing the program dial and LED display with current settings.

Advertisements

The LED display provides clear information on the selected cycle and its progress.

Loading Laundry

Open the door and load clothes loosely into the drum. Do not overload the machine. For optimal washing, ensure there is enough space for clothes to tumble freely.

Adding Detergent

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent, fabric softener, and pre-wash agents to their respective compartments. Refer to detergent packaging for dosage recommendations.

Selecting a Wash Program

Turn the program selector knob to choose the desired wash program. The machine offers 15 wash programs, including Cotton, Duvet, Rinse Spin, Wool, Quick 15, Spin, Synthetic, Eco, Baby Care, Sports, Mix, and Underwear.



Image: Diagram illustrating the various wash programs available on the White Westinghouse HDF8500 washing machine.

Choose the program that best suits your fabric type and soil level.

Starting a Cycle

After selecting the program and adding detergent, press the Start/Pause button to begin the wash cycle. The machine will automatically proceed through the selected program.

Child Lock Function

To prevent accidental changes to settings during operation, activate the child lock function. Refer to the control panel diagram for specific button combinations to engage and disengage the child lock.



Image: Illustration of the child lock feature on the washing machine's control panel, designed for family safety.

Advertisements

The child lock ensures uninterrupted wash cycles and prevents children from tampering with settings.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

Cleaning the Detergent Dispenser

Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue or mold buildup.

Advertisements

Cleaning the Drum

Run a 'Tub Clean' cycle (if available) or a hot wash with a washing machine cleaner to prevent odor and residue buildup in the drum. The Diamond Cut Drum design helps maintain cleanliness.



Image: Visual representation of the Diamond Cut Drum, Active/Smart Magic Filter, and Waterfall System, all contributing to effective cleaning.

The Diamond Cut Drum and Smart Magic Filter are designed for superior cleaning and maintenance.

Advertisements

Cleaning the Filter

Locate the drain pump filter (usually at the bottom front of the machine). Open the cover, drain any residual water, and remove the filter. Clean it under running water and reinsert it securely.

Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Advertisements



Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a wash program.
No water intake	Water tap closed; Inlet hose kinked; Water supply cut off.	Open water tap; Straighten hose; Check water supply.
Machine vibrates excessively	Transit bolts not removed; Machine not level; Uneven load.	Remove transit bolts; Adjust leveling feet; Redistribute laundry.
Water leaks	Inlet/outlet hose connections loose; Detergent dispenser clogged.	Tighten hose connections; Clean detergent dispenser.
Clothes not drying effectively	Spin speed too low; Overloaded machine; Air Dry program not selected.	Select higher spin speed; Reduce load size; Ensure Air Dry program is used for drying.



**WELL-ENGINEERED, HIGHLY RELIABLE
AMERICAN-MADE PRODUCTS**



INDUSTRY EXCELLENCE FOR 100 YEARS!

- Oldest American large appliances brand (1917).
- Pioneers of Laundry, air-conditioner, portable dishwasher, and sealed refrigerator.
- Trademark by Electrolux, Biggest Home Appliances Brand.
- Founded by an innovative genius of the 19th century, George Westinghouse.
- Known for Trust and Quality.



Image: Features like Ultra Smart Dry with Air Dry Program and Smart Tub technology for efficient drying and mold prevention.



The Ultra Smart Dry feature and Smart Tub technology contribute to effective drying and hygiene.

SPECIFICATIONS

Feature	Detail
Model Number	HDF8500
Capacity	8.5 kg
Type	Fully-Automatic Front Load
In-Built Heater	Yes
Maximum Rotational Speed	1000 RPM
Wash Programs	15 (e.g., Cotton, Duvet, Wool, Quick 15, Eco, Baby Care)
Drum Material	Stainless Steel (Diamond Cut Drum)
Product Dimensions (D x W x H)	58D x 55W x 85H Centimeters
Item Weight	52 kg
Voltage	230 Volts
Included Components	1 Washing Machine, 1 Inlet hose, 1 outlet hose, 1 User Manual

WARRANTY AND SUPPORT

Warranty Information

The White Westinghouse HDF8500 washing machine comes with a comprehensive warranty:

Advertisements



- **2 years** on the product from the date of purchase.
- **5 years** on the motor from the date of purchase.

Please retain your purchase receipt as proof of warranty. The warranty covers manufacturing defects under normal use conditions.



**IN THE PRESENCE
OF ULTRA SMART DRY**
POWERFUL MOTOR DRIES CLOTHES FASTER

AIR DRY PROGRAM
Maximum power air flow with high speed spin function

SMART TUB
Technology that initiates the clean function to keep it Mould and Odour free!

Image: Visual representation of the 2+5 year warranty provided for the washing machine.

Advertisements

The warranty details are clearly indicated for your reference.

Customer Support

For any queries, technical assistance, or service requests, please contact our customer support team:

Toll-Free Number: 1800-103-3661

Manufacturer/Importer: Super Plastronics Pvt. Ltd., B-30 & 31, Phase - 2, Sector 81, Noida, Uttar Pradesh - 201305

Website: www.wwh-sppl.in

Advertisements





Image: Customer service contact information, including the toll-free number.

Our dedicated support team is available to assist you with any product-related concerns.

Advertisements



Documents - White Westinghouse – HDF8500

no relevant documents

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question



WHITE WESTINGHOUSE (TRADEMARK BY ELECTROLUX) HDF8500**KEEP EXPLORING MANUALS, GUIDES, AND SUPPORT DOCS.**

Search model numbers, browse help resources, and jump straight into the next PDF manual or troubleshooting page without losing your place.

White Westinghouse (Trac

Search Manuals+

EXPLORE

Deep Search

Upload

Login

MANUALS+

Home

About Us

Privacy Policy

Login

GUIDES

Amazon Manuals

AliExpress Manuals

Video Guides

Login

FOLLOW

@manualsplus

YouTube

LinkedIn

Facebook

Login

Manuals+

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners.

SAVE MANUALS, NOTES, UPLOADS, AND QUESTIONS

Sign in with Google, X, or a passkey to keep private notes on saved manuals, track public uploads, and revisit questions you posted.

[Open login options](#)

[Privacy Policy](#) · [DMCA](#)