



[Manuals.plus](#) /

› [Voltas Beko](#) /

› Voltas Beko 7.0 Kg Fully Automatic Top Load Washing Machine WTL70VPSGX User Manual

Voltas Beko WTL70VPSGX

Voltas Beko 7.0 Kg Fully Automatic Top Load Washing Machine

Model: WTL70VPSGX

[Safety Information](#)

[Setup](#)

[Operation](#)

[Maintenance
Support](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Voltas Beko 7.0 Kg Fully Automatic Top Load Washing Machine, model WTL70VPSGX. Please read this manual thoroughly before using your appliance and retain it for future reference.



Image: The Voltas Beko 7.0 Kg Fully Automatic Top Load Washing Machine (WTL70VPSGX) in a grey finish, positioned in a room with plants and a laundry basket.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- **Electrical Safety:** Ensure the washing machine is connected to a properly grounded outlet. Do not use extension cords or adapters.
- **Water Connection:** Use new hose sets supplied with the appliance. Do not reuse old hose sets.
- **Children Safety:** Keep children away from the appliance during operation. Do not allow children to play on or in the appliance.
- **Flammable Materials:** Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.
- **Maintenance:** Disconnect the appliance from the power supply before performing any maintenance or cleaning.

- **Installation:** The appliance must be installed by a qualified technician.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. Refer to the included installation guide for detailed steps.

1. Unpacking

Carefully remove all packaging materials, including the base packaging and any protective films. Inspect the machine for any damage incurred during transit.

2. Location Requirements

- Place the machine on a firm, level floor.
- Ensure adequate space around the machine for ventilation and maintenance.
- Avoid direct sunlight or extreme temperatures.

3. Water Connection

Connect the inlet hose to a cold water tap with a 3/4-inch thread. Ensure connections are tight to prevent leaks.

4. Drainage Connection

Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fastened to prevent dislodgement during operation.



Image: Rear view of the washing machine, illustrating the water inlet and drain hose connections. The power cord is also visible.

5. Power Connection

Plug the power cord into a grounded electrical outlet. Do not use adapters or extension cords.

6. Leveling

Adjust the leveling feet at the bottom of the machine until it is perfectly stable and level. This prevents excessive vibration and noise during operation.

OPERATING INSTRUCTIONS

1. Control Panel Overview

The control panel features various buttons and indicators for program selection, cycle options, and status display. Familiarize yourself with the layout before first use.

2. Loading Laundry

Open the top lid and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to move freely. Close the lid securely.



Image: The Voltas Beko washing machine with its top lid open, revealing the drum where laundry is loaded.

3. Adding Detergent and Softener

Add the appropriate amount of detergent to the detergent dispenser. If using fabric softener, pour it into the designated compartment. Refer to detergent packaging for dosage recommendations.

4. Selecting a Wash Program

Turn the program selector knob or press the program buttons to choose the desired wash cycle (e.g., Cotton, Synthetics, Delicates, Quick Wash). The display will show the selected program and estimated time.

5. Starting a Wash Cycle

Press the "Start/Pause" button to begin the wash cycle. The machine will automatically fill with water and commence washing.

6. Pausing or Canceling a Cycle

To pause a cycle, press the "Start/Pause" button. To cancel, press and hold the "Start/Pause" button for a few seconds, or turn off the machine and restart.

7. End of Cycle

Once the cycle is complete, the machine will signal with an audible alert. Remove laundry promptly to prevent wrinkles.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine. Always unplug the machine before cleaning.

1. Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to remove any residue. Clean the dispenser housing with a damp cloth.

2. Cleaning the Lint Filter

Locate and remove the lint filter (usually inside the drum or near the top rim). Clean accumulated lint and debris under running water. Reinsert the filter securely.

3. Cleaning the Drum

Run a "Tub Clean" or "Drum Clean" cycle (if available) periodically using a washing machine cleaner or a mixture of vinegar and baking soda to prevent odor and residue buildup.

4. Exterior Cleaning

Wipe the exterior surfaces of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

5. Winterization (for cold climates)

If the machine is in an area subject to freezing temperatures, drain all water from the hoses and pump to prevent damage. Consult a technician if unsure.

TROUBLESHOOTING

Before contacting service, review the following common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, lid not closed, "Start/Pause" not pressed.	Check power connection, ensure lid is fully closed, press "Start/Pause".
No water filling	Water tap closed, inlet hose kinked, water supply cut off.	Open water tap, straighten hose, check household water supply.
Excessive vibration/noise	Machine not level, transport bolts not removed, uneven load.	Adjust leveling feet, ensure transport bolts are removed, redistribute laundry.
Water not draining	Drain hose kinked or blocked, pump filter clogged.	Check and clear drain hose, clean pump filter (refer to maintenance section).
Detergent residue on clothes	Too much detergent, low water pressure, dispenser clogged.	Reduce detergent amount, check water pressure, clean dispenser.

SPECIFICATIONS

Key technical specifications for the Voltas Beko WTL70VPSGX washing machine.

Brand	Voltas Beko
Model Name	WTL70VPSGX
Capacity	7 kg

Operation Mode	Fully Automatic
Special Feature	Inverter
Colour	Grey
Item Weight	32500 Grams
Laundry Appliance Drum Material	Stainless Steel
Noise Level	50 Decibels
Installation Type	Freestanding
Human Interface Input	Keypad
Washer Dispenser Options	Automatic Detergent Dispensing
Item Depth	41 centimeters



Image: Energy Savings Guide label for the Voltas Beko WTL70VPSGX, indicating 5-star rating and energy consumption of 0.0132 kWh/kg/cycle.

WARRANTY AND SUPPORT

Your Voltas Beko washing machine comes with a comprehensive warranty and dedicated customer support.

- **Warranty Period:** 3 years on product.
- **Included Components:** Washing Machine, User Manual.
- **Manufacturer:** Voltas Beko (Deemed) Voltbek Home Appliances Pvt. Ltd.
- **Contact Information:** For service or support, please contact Voltas Beko at **1860 599 4444**.
- **Manufacturer Address:** Voltas House A, Chinchpokli, Mumbai-400033.

Please retain your purchase receipt for warranty claims.



© 2024 Voltas Beko. All rights reserved.

For more information, visit the official [Voltas Beko Store](#).