



Manuals.plus / > Panasonic /

> Panasonic NA-F70V10LRB 7.0 kg Fully Automatic Top Load Washing Machine User Manual

Panasonic F70V10LRB

Sign in to save this manual

Sign in to bookmark this manual and keep private notes.

Panasonic NA-F70V10LRB Washing Machine User Manual

Fully Automatic Top Load with MirAle Wifi, Built-in Heater and Econavi

Advertisements

1. INTRODUCTION

Thank you for purchasing the Panasonic NA-F70V10LRB 7.0 kg Fully Automatic Top Load Washing Machine. This appliance is designed to provide efficient and convenient laundry care with advanced features like MirAle Wifi connectivity, a built-in heater, and Econavi technology. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new washing machine.



Figure 1: Front view of the Panasonic NA-F70V10LRB Washing Machine.

Advertisements



2. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance to prevent injury and property damage. Keep this manual for future reference.

- Ensure the washing machine is properly grounded to prevent electric shock.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Always unplug the machine before cleaning or performing maintenance.
- Do not attempt to repair or replace any part of the appliance unless specifically instructed in this manual. Refer to qualified service personnel.

Advertisements



3. SETUP

3.1 Unpacking

Carefully remove the washing machine from its packaging. Ensure all packing materials, including the base packaging, are removed. Verify that all included components (1 unit) are present and undamaged.

3.2 Placement

Place the washing machine on a firm, level surface. Avoid direct sunlight or high humidity. Ensure there is adequate space around the machine for ventilation and access. The dimensions of the unit are approximately 60.4 cm (D) x 52.5 cm (W) x 99.5 cm (H).

Advertisements





Figure 2: Washing machine dimensions and 7 kg capacity.

3.3 Connections

1. **Water Supply:** Connect the inlet hoses to the hot and cold water faucets and to the corresponding inlets on the back of the machine. Ensure connections are tight to prevent leaks.
2. **Drain Hose:** Securely place the drain hose into a standpipe or laundry tub, ensuring it is not kinked or blocked.
3. **Power Supply:** Plug the power cord into a grounded electrical outlet. The machine operates on standard household electricity.

3.4 Initial Wi-Fi Setup (MirAle)

This washing machine features MirAle Wifi connectivity for smart control. Download the MirAle app on your smartphone and follow the in-app instructions to connect your washing machine to your home Wi-Fi network. This enables features like Wash Wizard, Stain Genius, and Smart Scheduling.



Figure 3: MirAle Connected Living features, compatible with Alexa and Google Assistant.



4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

Familiarize yourself with the control panel, which features a push-button console for easy operation.

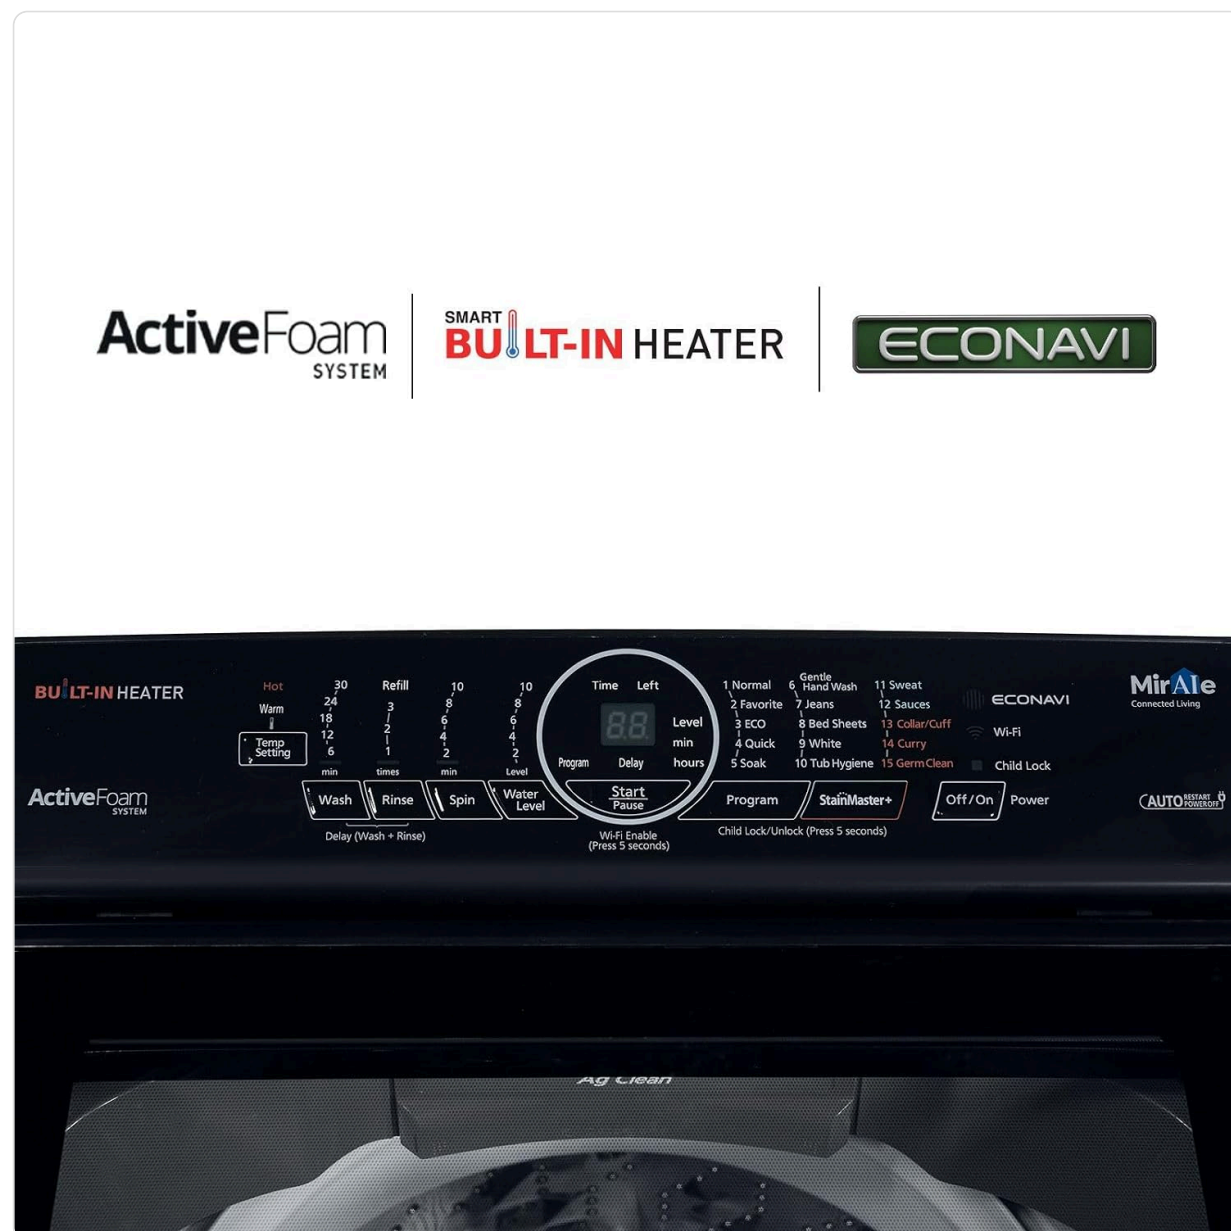


Figure 4: Detailed view of the washing machine control panel.

Advertisements



4.2 Loading Laundry

Open the top lid and load clothes loosely into the drum. Do not overload the machine. For optimal washing, ensure clothes can move freely within the Sazanami Drum.



Figure 5: Internal view showing the Sazanami Drum and Big Lint Filter.

4.3 Adding Detergent and Softener

Add the appropriate amount of detergent and fabric softener to their respective dispensers. Refer to the detergent manufacturer's instructions for dosage.

Advertisements



4.4 Selecting a Wash Program

This machine offers 15 pre-set wash programs. Turn the program selector or use the MirAle app to choose the desired cycle based on fabric type and soil level. Available programs include Normal, Gentle, Hand Wash, Sweat, Blanket, Bed Sheets, ECO, Curry, Quick, White, Tub Hygiene, Germ Clean, and more.

- **Wash Wizard:** Use the MirAle app to customize a wash cycle based on clothes' type, color, and dirt level. Choose from over 100 wash options.
- **Stain Genius:** For stubborn stains, the MirAle app provides a pre-treatment guide. You can even take a picture of the stain for recognition and recommendations.
- **Built-in Heater:** Select programs that utilize the built-in heater for hot water washes, ideal for sanitization and tough stains.
- **Econavi:** This feature optimizes water and energy consumption based on the load size and fabric type.

4.5 Smart Scheduling with Auto Pause

Through the MirAle app, you can schedule wash cycles to start at your convenience. You can also customize a program to pause at various stages (after soaking, washing, or rinsing) to add or remove items.

Advertisements



4.6 Starting a Cycle

Close the lid and press the 'Start' button. The machine will begin the selected wash cycle.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your washing machine.

5.1 Cleaning the Lint Filter

The Big Lint Filter (Figure 5) should be cleaned regularly, ideally after every few washes, to prevent lint buildup and ensure efficient drainage. Remove the filter, clean out accumulated lint, and rinse under water before reinserting.

Advertisements



5.2 Cleaning the Drum

Periodically run a 'Tub Hygiene' cycle (one of the 15 programs) with a washing machine cleaner to remove detergent residue and prevent odors in the Sazanami Drum.

5.3 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.4 Maintenance Alerts

The MirAle app provides maintenance alerts, reminding you when it's time for routine cleaning or checks. Pay attention to these alerts to keep your machine in top condition.

Advertisements

6. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Program not selected.	Check power connection; Ensure lid is fully closed; Select a wash program and press Start.
No water filling	Water faucets closed; Water inlet hose kinked; Water pressure too low.	Open water faucets; Straighten hose; Check household water pressure.
Machine not draining	Drain hose kinked or blocked; Lint filter clogged.	Check and clear drain hose; Clean the lint filter.
Excessive vibration/noise	Machine not level; Load unbalanced; Shipping bolts not removed.	Adjust leveling feet; Redistribute laundry; Ensure all shipping bolts are removed during installation.

Problem	Possible Cause	Solution
Wi-Fi connectivity issues	Router too far; Incorrect Wi-Fi password; App issues.	Move router closer or use extender; Re-enter password in MirAle app; Restart app/phone.

7. SPECIFICATIONS

Feature	Specification
Brand	Panasonic
Model	NA-F70V10LRB (F70V10LRB)
Capacity	7 Kilograms
Installation Type	Freestanding
Special Features	Portable, Smart Connectivity (MirAle Wifi, Built-in Heater, Econavi, Wash Wizard, Stain Genius, Smart Scheduling, Maintenance Alerts, Energy and Water Consumption Tracking)
Color	Silver
Control Console	Push Button
Access Location	Top Load
Material	ABS
Item Weight	32 kg
Item Dimensions (LxWxH)	60.4 x 52.5 x 99.5 Centimeters
Manufacturer	Panasonic Life Solutions India Private Limited

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Panasonic NA-F70V10LRB washing machine comes with a comprehensive warranty:

- **2 Years Warranty** on the entire product.
- **12 Years Warranty** on the motor.

Advertisements



Please retain your purchase receipt as proof of purchase for warranty claims.



Figure 6: Warranty details for the product and motor.

8.2 Customer Support

For any service requests, technical assistance, or warranty claims, please contact Panasonic customer support. You can find contact details on the official Panasonic website or through the MirAle app's service request feature.

Advertisements





Related Documents - F70V10LRB

	Panasonic Fully Automatic Washing Machine Operating & Installation Instructions Comprehensive guide for Panasonic Fully Automatic Washing Machines (Models NA-F75S7, NA-F70S7, NA-F65S7, NA-F75V7, NA-F70V7, NA-F65V7, NA-F62V7, NA-F70X7, NA-F65X7, NA-F62X7). Includes safety, installation, operation, maintenance, and troubleshooting instructions.
	Panasonic Fully Automatic Washing Machine Service Manual (NA-FS16X3, NA-FS15X3, NA-FS14X3, NA-F150A3) Comprehensive service manual for Panasonic fully automatic washing machines, models NA-FS16X3, NA-FS15X3, NA-FS14X3, and NA-F150A3, covering parts diagrams and technical information.
	Panasonic Fully Automatic Washing Machine Operating and Installation Instructions Comprehensive guide for Panasonic fully automatic washing machines (models NA-FD13XR1, NA-FD13AR1, NA-FD12XR1, NA-FD11AR1), covering safe operation, installation, maintenance, and troubleshooting.
	Panasonic Fully Automatic Washing Machine Operating & Installation Instructions Comprehensive operating and installation instructions for Panasonic Fully Automatic Washing Machines, including model numbers NA-F80VB7, NA-F75S7, and NA-F70S7. This guide covers safety precautions, part names, operation panel details, program varieties, detergent usage, washing options, convenient functions, maintenance, installation steps, troubleshooting, error displays, and specifications.
	Panasonic Fully Automatic Washing Machine Operating & Installation Instructions Comprehensive operating and installation guide for Panasonic Fully Automatic Washing Machines, covering models NA-F80VB7, NA-F75S7, and NA-F70S7. Includes safety precautions,

8/17/26, 4:31 PM	Panasonic NA-F70V10LRB 7.0 kg Fully Automatic Top Load Washing Machine User Manual
	part names, operation panel details, program descriptions, maintenance, troubleshooting, and specifications.
	Panasonic Washing Machine Service Manual Comprehensive service manual for Panasonic fully automatic washing machines (household use). Includes safety precautions, part names, specifications, technical descriptions, installation guides, and troubleshooting tips.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

PANASONIC F70V10LRB

KEEP EXPLORING MANUALS, GUIDES, AND SUPPORT DOCS.

Search model numbers, browse help resources, and jump straight into the next PDF manual or troubleshooting page without losing your place.

Panasonic F70V10LRB ma

Search Manuals+

EXPLORE

Deep Search

Upload

Login

MANUALS+

Home

About Us

Privacy Policy

Login

GUIDES

Amazon Manuals

AliExpress Manuals

Video Guides

Login

FOLLOW

@manualsplus

YouTube

LinkedIn

Facebook

Login

Manuals+

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners.

SAVE MANUALS, NOTES, UPLOADS, AND QUESTIONS

Sign in with Google, X, or a passkey to keep private notes on saved manuals, track public uploads, and revisit questions you posted.

[Open login options](#)[Privacy Policy](#) · [DMCA](#)