


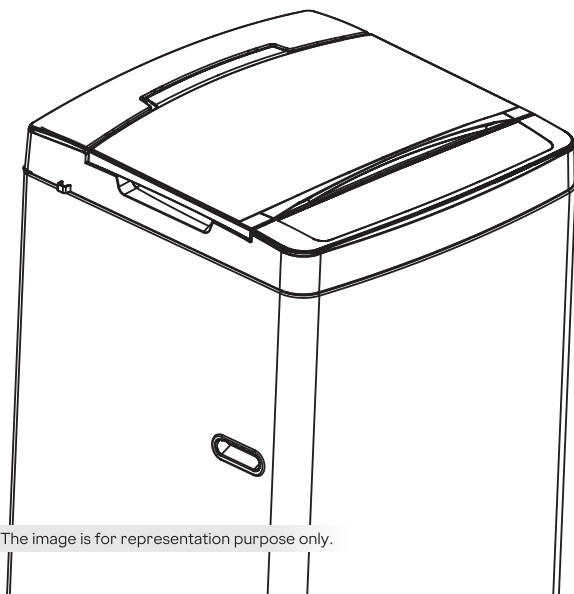

How to get the best out of your Godrej Eon Washing Machine



Fully Automatic Top Load

User Manual

WTEON MGNS 70 5.0 FDTG

WTEON MGNS 75 5.0 FDTG

WTEON VAL 75 5.0 FDAG

WTEON MGNS 70 5.0 FDAGS

WTEON MGNS 75 5.0 FDAGS

*The image is for representation purpose only.


Congratulations!

You are now the proud owner of a Godrej washing machine. You can look forward to years of smooth & trouble-free washing with your machine as well as considerable savings in time, money and effort. Please read this manual carefully as it will tell you how to operate your machine optimally in order to get the best results. If you need any further clarifications, do contact your nearest Godrej dealer or any of our service centres/offices. We would be glad to help you. We wish you an easier, more convenient life with your new Godrej washing machine.

Contents

■ Description Of Parts	1
■ Specifications	2
■ Know Your Washing Machine	3
■ How To Install	4
Choosing the right location	
Step-by-step installation	
Ensuring proper earthing	
Installing the drainage hose	
Attaching the water supply hose to the tap	
Connecting the water supply hose to your machine	
■ Description And Operations: Control Panel	9
■ Washing Operations	11
■ How To Select Water Level And Load Size	14
■ How To Measure Wash Load	15
■ How To Operate	16
When washing using Auto cycle	
When washing blankets	
■ Washing Tips	18
■ Safety Instructions	19
■ How To Maintain	20
Water inlet	
Washing machine body	
Magic Filter	
■ When do you call the service personnel	21
■ Don't Worry When	22
■ Troubleshooting	23
■ Key Checklist	24
■ Warranty	25
■ Branches/Service Connect	26

Description Of Parts

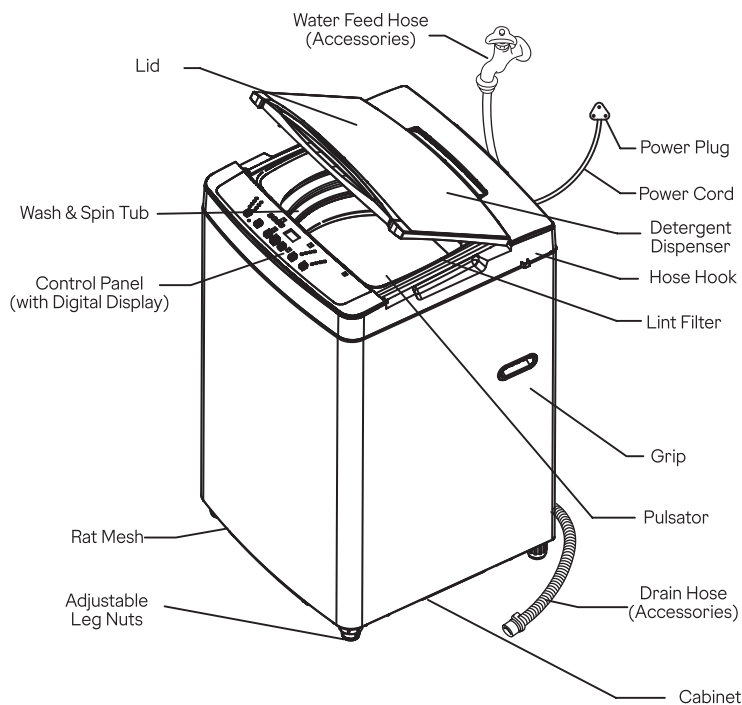

*The image is for representation purpose only

Specifications

Model		WTEON MGNS 70 5.0 FDTG WTEON MGNS 75 5.0 FDTG	WTEON MGNS 70 5.0 FDAGS WTEON MGNS 75 5.0 FDAGS	WTEON VAL 75 5.0 FDAG
Capacity(Maximum dry cloth load) kg		7.0,7.5	7.0,7.5	7.5
Temp. options		Regular, Warm, Hot	Regular, Warm, Hot	Regular, Warm, Hot
Power Source		230 V, 50 Hz, 16 A	230 V, 50 Hz, 16 A	230 V, 50 Hz, 16 A
Power Consumption		1750 W	1750 W	1750 W
Heater Rating		1450 W	1450 W	1450 W
Water Consumption		Regular cycle: 180L at Max Water level	Regular cycle: 180L at Max Water level	Regular cycle: 180L at Max Water level
Motor Type		Capacitor motor output:84 W	Capacitor motor output:84 W	Capacitor motor output:84 W
Water Pressure		~0.02 Mpa-1 Mpa ^	~0.02 Mpa-1 Mpa ^	0.02 Mpa
Water Tub	Outer	Polypropylene	Polypropylene	Polypropylene
	Inner	Stainless steel	Stainless steel	Stainless steel
Net Dimensions(WxDxH) (mm)		565mm x 565mm x 931.5mm	565mm x 565mm x 931.5mm	542mm x 565mm x 975mm
Net Weight (kg)		29.9	30.8	30.9

***In the view of Godrej policy of continuous development, specifications may change without notice.**

^Total cycle time may vary according to the inlet water pressure & water level selection.

Know Your Washing Machine

This washing machine has unique features to make your washing very convenient.

1. Auto Logic Control

The intelligent micro-controller controls all operations precisely to ensure a perfect water level for the wash load. Washing, rinsing and spin drying happens with a single on the control panel.

2. Heater (In built)*

The in built water heater helps you to select the water temperature inside the tub by pressing heater key for normal, warm or hot. (by default normal temperature is selected.)

3. Germ Shield™*** (Patent Applied)

Approx. 60°C hot wash+ special wash algorithm leads to disinfection of 99.99%+ germs & Covid virus.

4. Unbalance Load Corrector

The Godrej Washing Machine automatically corrects a load imbalance that might occur during the spin cycle. This protects the machine from damages.

5. Rat Mesh

The rat mesh is provided to protect your machine from damages due to rodent entry.

6. Memory Backup

During program operation if there is a power failure, the machine memorises the program operation. On restoration of incoming power, the machine will resume from exactly where it was stopped due to power failure for the remaining operation.

7. Child Lock

This feature allows machine keys to be locked during operation. This prevents unintended changes during a wash cycle.

8. 14 wash programs

The Godrej washing machine provides you the freedom to select 14 wash programs. This includes Auto, Auto + Soak, Germ Shield, Strong, Strong + Soak, Quick Wash, Quick wash + Soak, Sports Wear, Sports Wear + Soak, Gentle, Gentle + Soak, Rinse only, Rinse + Spin, Spin only.

9. Digital Display

The Godrej washing machine comes with a 3-Digit LED digital display with remaining time indicator. It also indicates the error codes if machine encounters any error.

10. Detergent indicator

Put indicated no. of standard detergent scoops inside the basket for better results (Approximately 35 gm per scoop).

Overdose of detergent will cause detergent deposits on clothes and/or drum.

11. Soft shut –Wash Lid***

The machine's soft shut lid lifts and shuts gently, preventing any injury.

*Applicable only for selected models. Using this function will delay the total cycle time for water heating. Total cycle time will vary based on the water's Initial Temperature, Inlet Water Pressure, and Water Level Selection. Some mild water vapor might be seen on the internal Glass Lid due to ambient temperature difference.

**T&C Apply. Visit <https://bit.ly/GAWMCTnC>, Germshield Patent Application No.202021035916

***Applicable for below model only




WTEON MGNS 70 5.0 FDAGS/WTEON MGNS 75 5.0 FDAGS

How to Install

Choosing the right location

Removal of packaging materials



- Please ensure all packaging and bottom cushions are removed from the machine before starting it.
- **CAUTION:** Operating the machine with the packaging may cause movement/unbalanced condition and can damage the machine parts.
- Install your Godrej EON Washing Machine on a flat and firm surface.
Max tilt angle on the supporting face : 1°
Installing the machine on an unstable location can create noise as machine may vibrate. This can be dangerous since vibrations may cause the machine to move.
- Keep a distance of at least 10 cm between the sides and rear of your machine and the nearest wall.
- Do not place your machine in an area with high humidity or direct exposure to sunlight, rain or wet areas like bathrooms.
- This can result in insulation damage.
- Cause deformation or discolouration of the plastic parts.

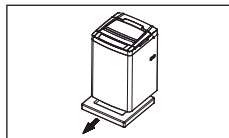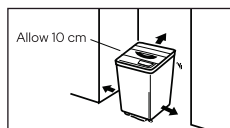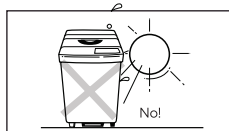

Step-by-step installation

The front leg can be adjusted so that the machine is at ground level.

- After loosening the adjusting nut, adjust the leg to the correct height by turning it. Then, tighten the adjusting nut securely.
- If the leg height is difficult to adjust because of an extremely uneven floor, place a board underneath and bring it to a level.
- To check whether your machine is in level, open the lid of the machine, pour water into the tub upto the level just above the pulsator and check if the water level matches with steel drum holes along the periphery
- Trolley is not recommended.
- If a trolley is used it should be a meta lictrolley with four adjustable legs and with proper locking to avoid movement during the function of the machine.

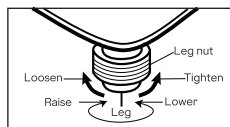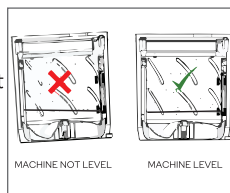


*The image are for representation purpose only

How to Install

Connecting the Electrical plug of your washer to Wall Socket


- Connect the 3-pin power cord to a proper ampere rating socket i.e 6 amp socket is required for non heater machine & 16 amp socket would be required for heater machine.
- Connect the 3-pin power cord to a properly grounded standard indian 3-pin outlet. Never plug it into an ungrounded outlet.
- If the external socket does not have grounding terminal, then a separate grounding is needed.
- Live and neutral terminals in socket should not be reversed.

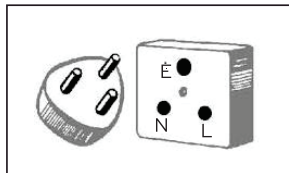

Separate Grounding Methods (any One To Be Followed)


Burying copper plate:

- Connect the ground wire to a ground copper plate and bury it more than 75 cm in the ground.

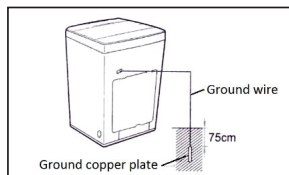


Using Grounding Wire:

- Connect the ground wire to the socket provided exclusively for grounding.

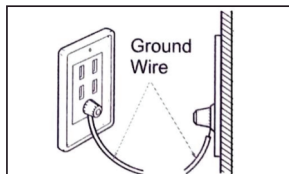

Using a short-circuit breaker:

- If grounding methods described above are not possible, a separate circuit breaker should be employed and installed by a qualified electrician.

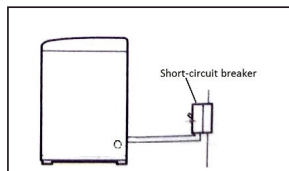

Never connect ground to:

- A gas pipe, telephone wire, lightening rod, neutral, extension cords without ground terminals, plastic, etc.

Note: All electrical wirings or modifications should be done by a qualified electrician only.

*The image are for representation purpose only

How To Install

Installing the drain hose

 
 
 



- Insert the drain hose as far as it goes, then secure it tightly with the hose clamp. The hose may leak if not secured properly.
- While attaching the drain hose to a wash pan, Leave a gap between the end of the hose and the Adjacent surface. If the flat end of the hose comes in Contact with a flat surface, drainage will be affected.

Caution: if the drain hose is not installed properly, Your washing machine may not function well, and the Overflow prevention mechanism may cause your Machine to stop mid-cycle.

- While inserting the drain hose into a wash pan or drain pipe, move the hook for easier installation.
- Move the hook back to its initial position before placing it in the slot provided on the side of your machine.
- Make sure the drain hose is not too high, otherwise it may not drain properly.

Installing the Rat Mesh

- Tilt the washer on one side & match the outline of the rat mesh with the bottom front side of the machine As shown in fig. 1.
- Insert the rat mesh as shown in fig. 2 & screw it to The base as shown in the picture.



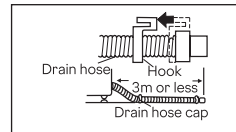
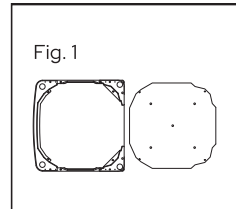
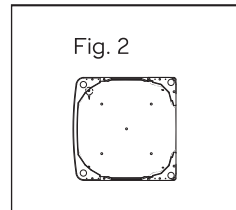


*The images are for representation purpose only.

How To Install

Attaching the water supply hose to the tap

    - Pull the sleeve down with your fingers as you lower the entire hose to disconnect the union.
- Loosen the four screws on the hose union and then fit the union exactly over the mouth of the tap.
- Tighten the four screws evenly around the tap.
- Remove the seal from the union and turn the nozzle to tightly secure it (if the tap is large, square or oddly shaped, remove the inside ring to facilitate attachment).
- Grip the ring with your hand and pull it down, and then insert the nozzle. Separate the sleeve until you hear a click, and then push it back.
- After installation, check to ensure that the union does not come off while pulling down. Next, confirm that the union is properly installed by turning the water on and checking for leakage. If you see any leakage, adjust the section where there is leakage.

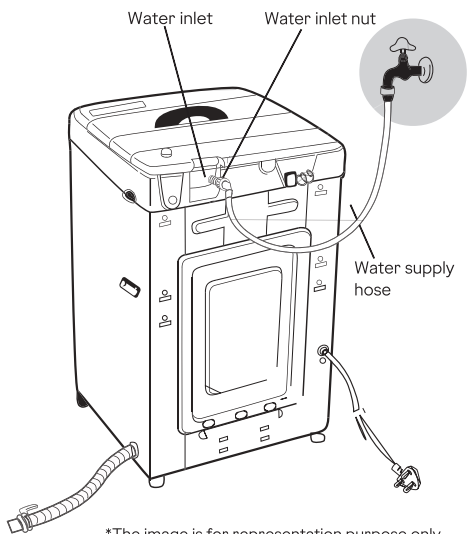

*The image is for representation purpose only.




Caution:

Do not use a tap with a diagonal mouth or a movable tap since this may leak.

How To Install


Connecting the water supply hose to your washing machine


- Turn the hose nut clockwise and tighten it on the end of the water supply hose. Securing it to the water intake valve.
- Tighten further by turning the water supply hose and water intake valve in the direction of the arrow as shown in the below image.
- Hold the hose nut firmly. Turn the water supply hose back again only in the direction of the arrow as shown.
- Repeat steps 2 and 3, and tighten it until you find it difficult to turn the water supply hose further.

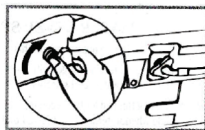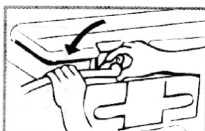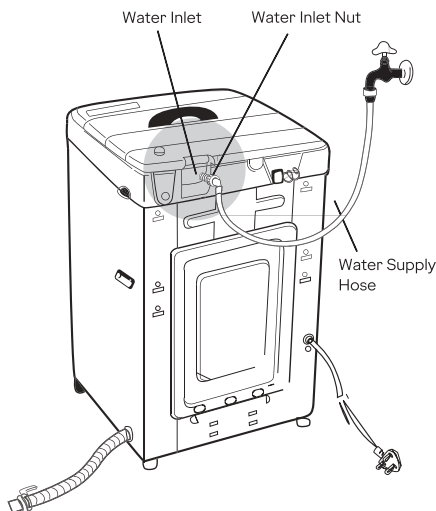

*The image is for representation purpose only.

Description And Operation: Control Panel

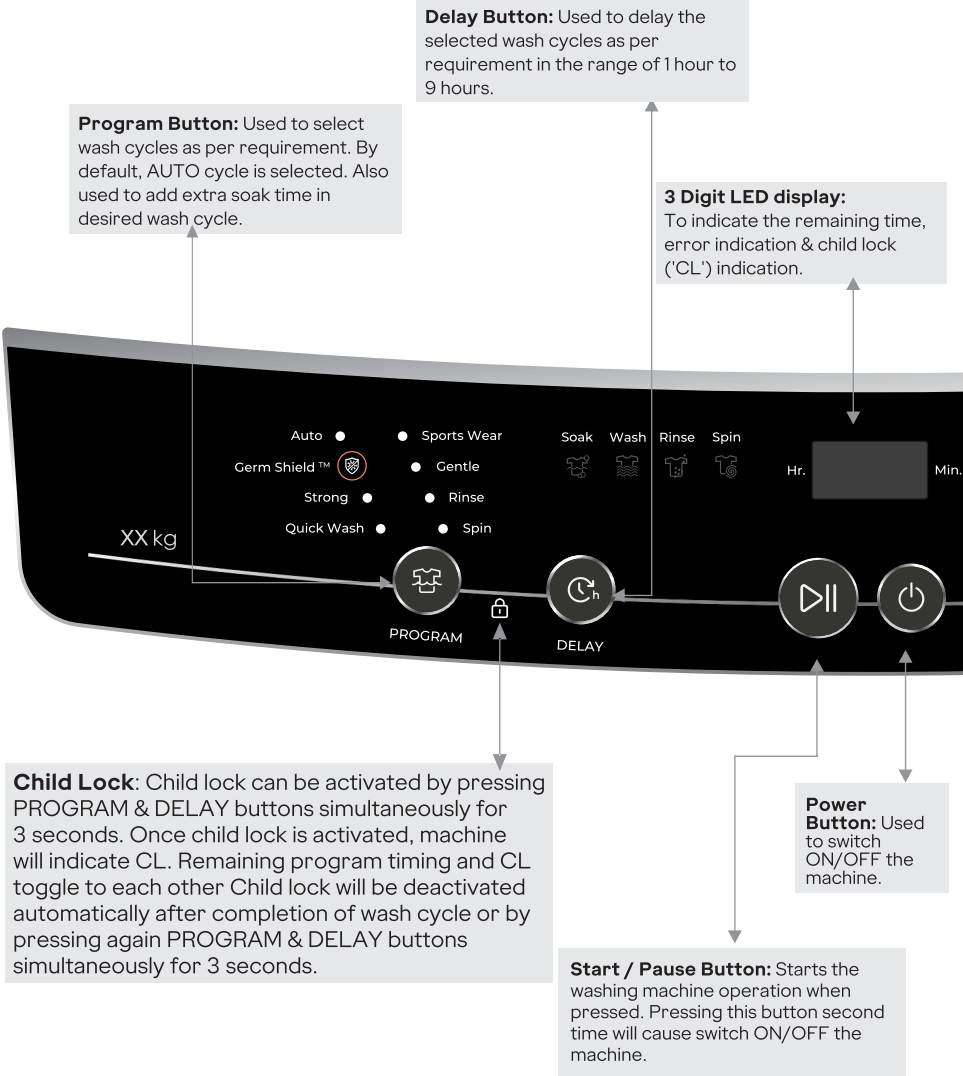

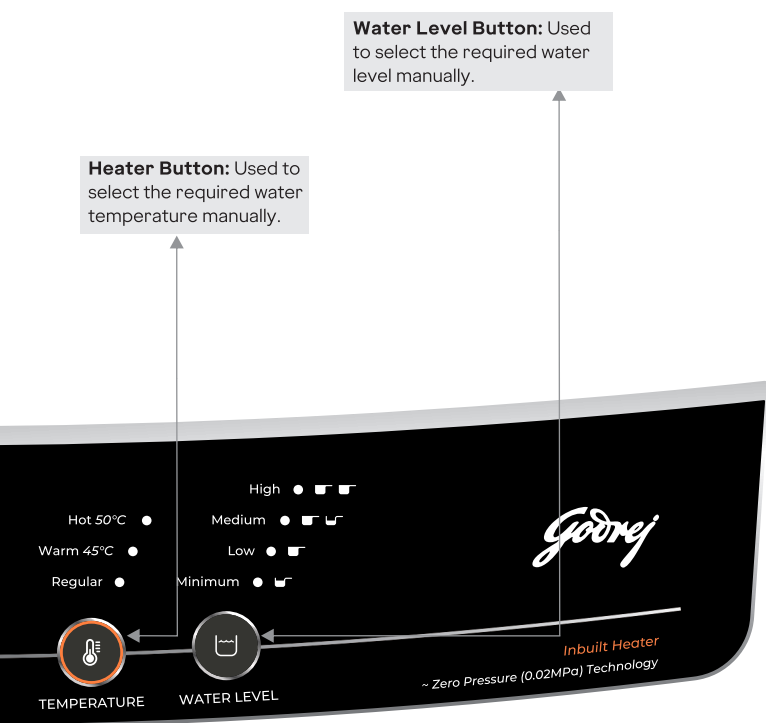

Capacity will vary by model.

Washing Operations

Washing Program	Water Level	Procedure For Setting Wash Cycle	Process Wash	Approx. Total Wash Time				
				Soak	Rinse1	Rinse2	Spin	Total Time
Auto	Min	<ul style="list-style-type: none"> Turn POWER ON button (Auto program gets selected automatically) Water level and wash time is automatically selected by the machine. Press water level button to change water level if desired Press start/pause button to start the machine. 	~4 Mins water in + ~13 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	9 Mins	51 Mins
	Low		~4 Mins water in + ~16 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	9 Mins	54 Min
	Medium		~4 Mins water in + ~19 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	9 Mins	57 Min
	High		~4 Mins water in + ~22 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	9 Mins	01:00 Hours
Auto + Soak	Min	<ul style="list-style-type: none"> Turn POWER ON button (Auto program gets selected automatically) Press program button to Auto soak wash program. (Soak time added in Auto program, Soak ICON GLOW for indication) Water level and wash time is automatically selected by the machine Press water level button to change water level if desired Press start/pause button to start the machine 	~4 Mins water in + ~13 mins wash (+ inbuilt soak)	15 Mins	11 -12 Mins	11 -12 Mins	9 Mins	01:06 Hours
	Low		~4 Mins water in + ~16 mins wash (+ inbuilt soak)	15 Mins	11 -12 Mins	11 -12 Mins	9 Mins	01:09 Hours
	Medium		~4 Mins water in + ~19 mins wash (+ inbuilt soak)	15 Mins	11 -12 Mins	11 -12 Mins	9 Mins	01:12 Hours
	High		~4 Mins water in + ~22 mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	12 -13 Mins	9 Mins	01:15 Hours
Germ Shield™**® (Patent Applied)	Min	<ul style="list-style-type: none"> Turn POWER ON button (Auto program gets selected automatically) Press program button to select Germ Shield wash program Water level and wash time is automatically selected by the machine Press water level button to change water level if desired Press start/pause button to start the machine 	~4 Mins water in + ~17 mins wash (+ inbuilt soak)	0 Mins	13 -14 Mins	13 -14 Mins	8 Mins	56 Mins
Strong	Min	<ul style="list-style-type: none"> Turn POWER ON button (Auto program gets selected automatically) Press program button to select strong wash program. Press water level button to change water level if desired. Press start/pause button to start the machine 	~4 Mins water in + ~19 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	11 Mins	59 Mins
	Low		~4 Mins water in + ~21 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	11 Mins	61 Mins
	Medium		~4 Mins water in + ~23 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	11 Mins	1:03 Hours
	High		~4 Mins water in + ~26 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	11 Mins	1:06 Hours
Strong + Soak	Min	<ul style="list-style-type: none"> Turn POWER ON button (Auto Program gets selected automatically) Press program button to select Strong + Soak wash program. (Soak time added in strong program, Soak ICON GLOW for indication) Water level and wash time is automatically selected by the machine Press water level button to change water level if desired Press start/pause button to start the machine 	~4 Mins water in + ~19 mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	12 -13 Mins	11 Mins	01:19 Hours
	Low		~4 Mins water in + ~21 mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	12 -13 Mins	11 Mins	01:21 Hours
	Medium		~4 Mins water in + ~23 mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	12 -13 Mins	11 Mins	01:23 Hours
	High		~4 Mins water in + ~26 mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	12 -13 Mins	11 Mins	01:26 Hours

Washing Operations

Washing Program	Water Level	Procedure For Setting Wash Cycle	Process Wash	Approx. Total Wash Time				
				Soak	Rinse 1	Rinse 2	Spin	Total Time
Quick Wash	Min/ Low/ Med/ High	<ul style="list-style-type: none"> Turn POWER ON button (Auto program gets selected automatically) Press program button to select Quick wash program Water level and wash time is automatically selected by the machine Press water level button to change water level if desired Press start/pause button to start the machine 	~4 Mins water in + ~07mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	0 Mins	8 Mins	32 Mins
Quick Wash + Soak	Min/ Low/ Med/ High	<ul style="list-style-type: none"> Turn POWER ON button (Auto program gets selected automatically) Press program button to select Quick wash program (Soak time added in Quick Wash program, Soak ICON GLOW for indication) Water level and wash time is automatically selected by the machine Press water level button to change water level if desired Press start/pause button to start the machine 	~4 Mins water in + ~07mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	0 Mins	8 Mins	47 Mins
Sports Wear	Min	<ul style="list-style-type: none"> Turn POWER ON button (Auto program gets selected automatically) 	~4 Mins water in + ~14 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	8 Mins	51 Mins
	Low	<ul style="list-style-type: none"> Press program button to select Sports wear program Water level and wash time is automatically selected by the machine 	~4 Mins water in + ~14 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	8 Mins	53 Mins
	Medium	<ul style="list-style-type: none"> Press water level button to change water level if desired 	~4 Mins water in + ~14 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	8 Mins	55 Mins
	High	<ul style="list-style-type: none"> Press start/pause button to start the machine 	~4 Mins water in + ~14 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	8 Mins	57 Mins
Sports Wear + Soak	Min	<ul style="list-style-type: none"> Turn POWER ON button (Auto program gets selected automatically) 	~4 Mins water in + ~14 mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	12 -13 Mins	8 Mins	01:06 Hours
	Low	<ul style="list-style-type: none"> Press program button to select Sports wear program (Soak time added in Sports wear program, Soak ICON GLOW for indication) 	~4 Mins water in + ~14 mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	12 -13 Mins	8 Mins	01:08 Hours
	Medium	<ul style="list-style-type: none"> Water level and wash time is automatically selected by the machine 	~4 Mins water in + ~14 mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	12 -13 Mins	8 Mins	01:10 Hours
	High	<ul style="list-style-type: none"> Press water level button to change water level if desired Press start/pause button to start the machine 	~4 Mins water in + ~14 mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	12 -13 Mins	8 Mins	01:12 Hours

Washing Operations

Washing Program	Water Level	Procedure For Setting Wash Cycle	Process Wash	Approx. Total Wash Time				
				Soak	Rinse 1	Rinse 2	Spin	Total Time
Gentle	Min	<ul style="list-style-type: none"> Turn POWER ON button (Auto program gets selected automatically) 	~4 Mins water in + ~9 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	7 Mins	45 Mins
	Low	<ul style="list-style-type: none"> Press program button to select Gentle program Water level and wash time is automatically selected by the machine 	~4 Mins water in + ~11 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	7 Mins	47 Mins
	Medium	<ul style="list-style-type: none"> Press water level button to change water level if desired 	~4 Mins water in + ~13 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	7 Mins	49 Mins
	High	<ul style="list-style-type: none"> Press start/pause button to start the machine 	~4 Mins water in + ~15 mins wash (+ inbuilt soak)	0 Mins	12 -13 Mins	12 -13 Mins	7 Mins	51 Mins
Gentle + Soak	Min	<ul style="list-style-type: none"> Turn POWER ON button (Auto Program gets selected automatically) Press Program button to select Gentle + Soak program (Soak time added in Gentle wash program, Soak ICON GLOW for indication) 	~4 Mins water in + ~9 mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	12 -13 Mins	7 Mins	01:00 Hours
	Low	<ul style="list-style-type: none"> Water level and wash time is automatically selected by the machine 	~4 Mins water in + ~11 mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	12 -13 Mins	7 Mins	01:02 Hours
	Medium	<ul style="list-style-type: none"> Press water level button to change water level if desired 	~4 Mins water in + ~13 mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	12 -13 Mins	7 Mins	01:04 Hours
	High	<ul style="list-style-type: none"> Press start/pause button to start the machine 	~4 Mins water in + ~15 mins wash (+ inbuilt soak)	15 Mins	12 -13 Mins	12 -13 Mins	7 Mins	01:06 Hours
Rinse Only	Min/ Low/ Med/ High	<ul style="list-style-type: none"> Turn POWER ON button (Auto program gets selected automatically) Press program button to select Rinse only program Water level and wash time is automatically selected by the machine Press water level button to change water level if desired Press start/pause button to start the machine 	0 mins	0 Mins	12 -13 Mins	12 -13 Mins	0 Mins	26 Mins
Rinse+Spin	Min/ Low/ Med/ High	<ul style="list-style-type: none"> Turn POWER ON button (Auto program gets selected automatically) Press program button to select Rinse +Spin program (Spin time add Rinse Program, Spin ICON glow for indication) Water level and wash time is automatically selected by the machine Press water level button to change water level if desired Press start/pause button to start the machine 	0 mins	0 Mins	12 -13 Mins	12 -13 Mins	12 Mins	37 Mins
Spin Only	Min/ Low/ Med/ High	<ul style="list-style-type: none"> Turn POWER ON button (Auto program gets selected automatically) Press program button to select Spin only program Press start/pause button to start the machine 	0 mins	0 mins	0 mins	0 mins	12 Mins	12 Mins

Washing Operations

Energy label declaration program: After power ON press the 'power key' then press 'Program Key + Water level key' at time for 3 sec "EP" displayed on 7 segment display then press the start key to run the energy program. Note: Time may change due to reasons like water intake pressure variation.

Program	Procedure for selecting Energy Program	Wash (Min)	Rinse1 (min)	Rinse2 (min)	Spin	Total time
Energy Program ('EP')	<ul style="list-style-type: none">• Turn POWER ON Button (Regular program gets selected automatically).• Press program key & Water level key at a time for 3 sec. 'EP' displayed on display.• Water level and wash time is automatically selected by the machine.• Press start/pause button to start the machine.	~4 mins water in + ~24 mins wash + (inbuilt soak)	13-14 Mins	NA	9 Mins	50 Mins

How To Select Water Level And Load Size

How to use water level		
Water Level Setting	Maximum dry cloth load (kg)	Example of Load
High	>3.1	3 trousers, 4 shirts, 2 skirts, 2 night gowns, 1 towel, 4 vests, 2 sarees, 2 dhoti, 2 blouses and 2 petticoat.
Medium	1.51 - 3	3 trousers, 2 shirts, 2 skirts, 1 night gown, 1 towel, 3 Vests, 1 saree, 1 dhoti, 3 Blouses and 1 petticoat.
Low	0.81 - 1.5	1 trouser, 1 shirt, 2 vests, 1 night gown, 2 blouses and 3 skirts.
Min	0 - 0.8	1 trouser, 2 shirt, 2 vests, 2 undergarments, 1 blouse.

While deciding the water requirement for the wash load, check the weight of the clothes and volume occupied by them.

How To Measure Wash Load

Here are some of the average weights of commonly used clothes to help you estimate the weight of the load to be washed.

Approximate Weight Of Clothes			
Item of Clothing	Weight (in gms.)	Item of Clothing	Weight (in gms.)
Double Bedsheet	1000	Single Bedsheet	500
Bath Towel	500	Table cloth	650
Trouser	400	Jeans	600
Shirt	300	Baggies	500
Saree	500	Petticoat	400
Skirt	250	Pyjamas	400
Dhoti	200	Lungi	225
Night Gown	250	Blouse	100
Vest	50		
Undergarment	50		


While deciding the water level requirement for the wash load, check the weight of the clothes and volume occupied by them.

How To Operate

When Using The Auto Cycle:

Preparation

- Ensure that the electrical plug is properly connected.
- Ensure that the water supply and drain hose are correctly installed.

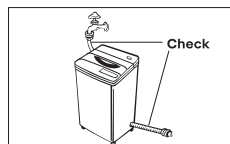

Put detergent only into detergent compartment and laundry in the basket

Add detergent


Add detergent based on the requirement and manufacturer's recommendations into The 'detergent dispenser'. While adding more than 80% of rated capacity cloth load, We recommended to use liquid detergent. In case of low water pressure, distribute The detergent evenly on the basket for proper dispensing. Some detergents must be Fully dissolved before putting into the dispenser for the best results. Check Instructions if specified on the detergent pack. Pre dissolve the detergent powder in One-liter of warm water and pour directly into the basket before adding cloth load, Which can improve wash performance. Good wash performance depends on the right Quality, quantity & method of detergent usage (mentioned above) and even Appropriate voltage and water-inlet pressure for the machine to deliver its optimum Performance.

Turn The Power On

- Close the lid and turn the POWER key ON.

Start The Cycle

- Press the START / PAUSE key to start the machine.
- The machine will run through a full cycle, including RINSE and SPIN.

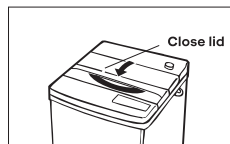

Cycle End

- A buzzer will signal the end of the cycle.
- Turn OFF the water tap.
- Machine will switch OFF after the completion of the cycle.
- Turn OFF the Mains Power Supply and disconnect the Main Power Plug.

Auto Calibration For Auto Load Sensing:

Due to aging, the mechanical friction on the motor belt tension and other mechanical parts. Hence it is required to calibrate the machine for auto load sensing. Calibration can be done by pressing "PROGRAM+START/PAUSE+POWER" button together for 2 sec. and the machine will perform the calibration automatically. The auto calibration should be started with empty tub i.e. without water and clothes inside the tub.

Note: To select other programs, refer washing operations.

*The image is for representation purpose only.

How To Operate

When Washing Using Blankets

Types of blankets which can be washed

Material	100% synthetic fibre
Weight	3 kg. Or less
Size	140 cm x 200 cm or less

Turb the Power ON

- Select the STRONG program with LOW water level selection. Add the detergent in detergent compartment and press the Start/Pause button to allow the water and detergent to mix for about one minute. After one minute passed, turn the power switch OFF to stop the machine.
- Place the blanket into the basket. Press it in all the way down by hand, ensuring that it is fully immersed in water.
- Restart the machine switching ON power button.
- After restarting, press PROGRAM key to select STRONG program.
- Water level will be selected as per cloth load. To manually change water level, select the water level as per requirement and press Start.

Cycle End

- A buzzer will signal the end of the cycle.
- Turn off the water tap.
- Machine will switch off after the completion of the cycle.
- Turn off the mains power supply and disconnect the main power plug.

Germ Shield™*** (Patent Applied)

- Germ Shield program is selected by pressing program key for cleaning cloths in Hot water.
- Water temperature is approx. 60°C.

Heater Function*



- Heater function is selected in Auto, Auto+Soak, Strong+Soak, Gentle wash, Gentle Wash + Soak, Sport Wash, Sport Wash + Soak cycle program by pressing 'Heater' key for cleaning cloths in Warm or Hot water.
- Water temperature option available, by default normal (available water temperature), and pressing 'Heater' key for first time will give Warm (45°C) option and pressing 'Heater' key for second time will give Hot (55°C) option.
- Using this function will delay the total cycle time for water heating.

Washing Tips

- Follow the instructions on the garment labels while washing laundry items. Avoid washing of all natural woolens and delicate knits such as lace knits.
- Turn garments inside out when washing to avoid piling and lint.
- Strings and fasteners of aprons and pillow cases should be fastened or tied.

For hard-to-clean shirt collars and sleeves:

- Apply detergent to the soiled part of the garment and scrub by hands.
- If a garment is exceptionally soiled, soak it in liquid detergent for about 10 minutes before washing.
- Add clothing one by one, remove hooks, pins etc. and pull up all the zips. If the hooks cannot be remove then tie all of them up in one garment.

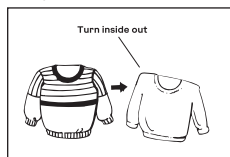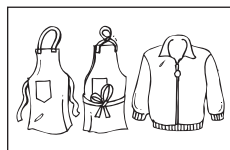

*The image is for representation purpose only.

Safety Instructions

Important Safety Instructions Read Carefully And Keep For Future Reference

- Always use a proper power source.
- Do not use extension cords as these may not be properly earthed.
- Before connecting the power cord make sure to ground otherwise it may cause electric shock.
- Never use damaged electrical cords or plugs.
- This washing machine should be connected through a switch or MCB (6 A for Non heater/16 A for heater model) so that it can be disconnected from power supply.
- Use a secure tap connection to avoid leakage and wastage of water.
- Never place your hand in the basket while it is moving! Do not place your hand under the machine while it is operating. (touching any of the machine's moving parts can be dangerous, even if it is moving slowly.)
- Do not press control panel pads with sharp objects. Using sharp objects to press the panel pads can result in electrical shocks or malfunctions.
- Do not pull the power cord with moist hands.
- Do not get the control panel wet. Getting the operation panel wet can result in shocks or malfunctions.
- Never wash or rinse articles of clothing treated with benzene, thinner, alcohol or other volatile or Organic solvents. The presence of such chemicals can result in a fire.
- Do not use water with temperature over 50°C. Water that is too hot can cause malfunctions and deformation of the machine.
- If it takes 15 seconds or more for the machine to stop moving completely after the lid is opened (during spin cycle with laundry in the basket), the brake is malfunctioning. You should have the machine repaired immediately.
- Do not use this product for business purpose.
- Young children should be supervised to ensure that they do not play with the appliance.
- Remove coins and pins from the pockets etc. As these may damage clothes or the machine.
- Disconnect the power plug when the supply voltage is very high and very low. The machine will detect automatically when supply voltage is very high or very low and display the errors EH or EL.



*The image are for representation purpose only.

Children In The Household

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

⚠ Caution

- Do not put your hand, foot or anything under the washing machine while the washing machine is in operation. There is a rotating mechanism under the machine, so you could be injured.
- Do not put or keep any magnet near the lid of the washer, it will result in malfunctioning of the product.
- Avoid electric heater, candle light, cigarette light, bug smoker, etc. Near the machine. It May ignite or deform the plastic part.


⚠ Warning

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety: children should be supervised to ensure that they do not operate or play with the appliance inconstancy to this may damage the machine, leading to serious injury or electrical shock.
- Disconnect the washer from the household distribution panel by removing the power plug from Power socket outlet before attempting any maintenance or cleaning inconstancy to this may cause electrical shock. Make sure that drainage is working properly. If water is not drained properly, your floor may get flooded. Flooded floors may induce electricity leakage, further resulting in electric shock or fire.
- If, during spinning, opening the lid does not stop the tub within about 15 second, immediately discontinue operating the machine. Call for repair. A machine that spins with its door open may cause injuries.
- Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug. Operating with a damaged plug may cause electric shock.
- Turn off the main power switch, at any time when any person is operating the machine, whether pre or post wash. If any intervention is to be done in between the operation, even then stop operation, turn off the main power switch & then conduct any intended operations.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard..

How To Maintain

Water inlet

If the water fills into the basket too slowly, remove the water supply hose and clean the filter with a brush as shown alongside.

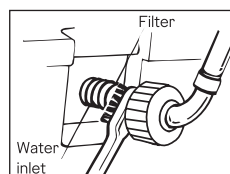

Washing machine body

Before doing any maintenance of your washing machine, be sure to remove the electrical plug from its power source.

Clean the main body and control panel with a soft cloth. Hard-to-remove dirt can be cleaned by wiping with a soft cloth soaked in a mild detergent.

Caution:

Do not clean the body or control panel with benzene, thinner, cleanser or other chemical cleaners. This can discolour or damage your machine's finish.

The Magic Filter


Clean the lint collector after every use. Follow these steps:

Remove the lint collector by pulling it out. If it is difficult to lift it out at the place where the machine has stopped, turn the basket by hand to a more convenient place and remove the lint collector.


Open the cover of the lint collector as shown.

Clean the filter in running water.


When the lint collector has been emptied and cleaned, close the front cover and replace the lint collector by inserting it from the bottom and pressing it back into place.

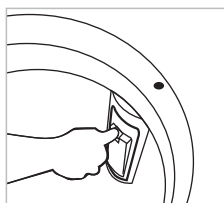

Press the lock to remove the magic filter.

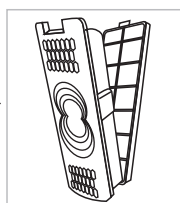

Open the cover and clean the filter in running water.

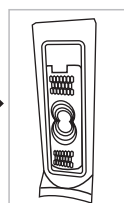

Close the cover and fit the magic filter as shown.

*The image is for representation purpose only.

When Do You Call The Service Personnel

Before you call the service personnel, please check the following:

When your washing machine does not operate,

Check

- Has your machine's plug been inserted properly into the main power supply socket?
- Is the water tap turned on properly?
- Has the drainage hose been placed down to allow drainage?
- Is the power switch ON?
- Is the lid securely closed? (When beginning operation from the WASH & SPIN cycle, you machine will not operate if the lid is open.)
- Is the laundry load unbalanced? Is the warning light ON? If so, correct unbalanced load by manually rearranging the laundry evenly.

When your washing machine leaks,

Check

- Is the hose coupling loose?
- Is the nozzle loose?
- Is the water feed hose connector clogged?
- Is the water inlet nut loose?

When your washing machine makes an unusual noise,

Check

- Is your washing machine installed on an incline or uneven surface?
- Are there any match sticks, hairpins or metal objects being washed with the laundry?
- Is the load unbalanced, causing the basket to spin off-centre?

When your washing machine does not drain,

Check

- Has the WASH-RINSE cycle been selected?
- Is the drainage hose bent?
- Has the drainage hose been placed down to allow proper drainage?
- Is the drainage hose properly connected to your machine?

When the washing cycle takes longer than usual,

Check

- Has the automatic load imbalance correction function (Fill - Agitate - Drain) been activated to correct a load imbalance?
- Is the water intake pressure less?

Don't Worry When

- A small amount of water drains out of the drainage hose the first time you use your washing machine. This is merely the water left over from the performance inspection performed on your washing machine before it was shipped from the factory.
- Buzzing noises occur when the tub fills with water. They are caused by the operation of the water supply valve.
- Sloshing sounds are made by your machine during the spin cycle. These are made by the water in the liquid balancing ring which is meant to maintain balance of the spin tub and does not indicate a malfunction.
- When you restart your machine after opening the lid or pausing the machine during the spin cycle, there may be a small pause before the machine begins to spin as the drainage valve opens. Also, when you start your machine immediately after stopping it, there will be a short pause. This happens for safe operation.

Trouble Shooting

Trouble Indication	Kind of Trouble	Where to Check	How to Resolve the Problem
No LED glow on Panel or No movement inside machine	The washer does not work at all	Check if the power cord is securely plugged in.	If error persists, call an authorized technician
		Press the power ON/OFF button.	
		Press the Start/Pause button.	
		Check whether power failure has occurred. Check the main power fuse or circuit breaker has been activated.	
E1 Error	Water does not flow into wash/spin tub in 15 mins. E1 will be indicated (along with beeps for some time)	Check whether the tap is open.	Check and resolve the problem, then open & close the lid to restart the washer.
		Check whether the water supply hose is frozen	
		Check whether the water supply hose or the metal filter in the water inlet is blocked.	
		Check whether the water is out of supply.	
E2 Error	If the water does not drain from machine E2 error will indicate (along with beeps for some time) after 10 minutes of starting drain operation	Check whether the outfall is too high.	Check and resolve the problem, then open & close the lid to restart the washer
		Check whether the drain hose is placed correctly.	
		Check whether the drain hose is blocked by scrap or debris.	
		Check whether the drain hose is too long or bend.	
E3 Error	When the machine is in running condition, if the lid is opened, E3 error will indicate (along with beeps for some time)	Check whether the lid is open during running operation.	Close the lid to restart the washer
E4 Error	If there is load unbalance for two times, the machine will try to balance it out automatically. If machine for the imbalance third time, E4 error will indicate (along with beeps for some time)	Check whether the washing machine is placed steadily	Balance the clothes evenly and close the lid to restart the washer
		Check whether the cloth load is appropriate	
		Check whether the clothes are spread out evenly in the wash basket	
EH Error	If input voltage from your socket is very high above 285 V, EH error will indicate (along with beeps)	Check the voltage in power socket for proper operating voltage and unplug the machine to avoid further damage or wait till your input voltage becomes normal	If error persists, call an authorized technician
EL Error	If input voltage from your socket is very low below 160V, EL Error will indicate (along with beeps)	Check the voltage in power socket for proper operating voltage and unplug the machine to avoid further damage or Wait till your input voltage becomes normal	If error persists, call an authorized technician
EE Error	Water Level Sensing error	Remove the power plug and put the plug back after one minute.	If error persists, call an authorized technician
H9	If water temperature reaches more than allowable limit of 70° C, by any means, machine will display "H9" error along with the beeps.	Remove the power plug and put the plug after 30 min and start machine.	If error persists, call an authorised technician.
H7	If the temperature is not rising considerably within 45 minutes the machine will display H7 error along with beep.	Remove the power plug and put the plug after one minute and start machine.	If error persists, call an authorised technician.
H8	If heater temperature sensor is not working properly, machine will display "H8" error along with the beeps.	Remove the power plug and put the plug after one minute and start machine.	If error persists, call an authorised technician.

Key Checklist

Almost every district in the country has a Godrej dealer - who has service representatives. Should you need any assistance, please get in touch with the nearest service provider and he'll send a dependable mechanic to you. Your feedback, suggestions and ideas about washing machine care will help us serve you better.

Please check with the dealer of your washing machine as to who would be your service provider. For your convenience, please note down the details below.

Whom to contact in case you need assistance:

Name:

Phone:

Address:

Always quote the following when you require assistance of a Godrej Dealer or Branch.

Washing Machine Model:

Purchased on:

Bill No.:

Machine Sr. No.:

Colour

Purchased from:

Environment & Energy Conservation Suggestions:

Disposal of Packaging Material

After installing the washing machine, recycle/reuse the corrugated box. Fitments and polythene cover/straps - Do not dispose them off as garbage. This helps to conserve natural resources and prevents pollution.

Energy Conservation Tips for Washing Machine Use.

You can help save limited natural resources like oil and coal by saving electricity. Simply follow these guidelines.

1. Use the correct quantity of water depending on the quantity of clothes to be washed.
2. Use less foam making detergent for washing and use the correct quantity of detergent.
3. Use the correct cycle. This helps in saving electricity.
4. At the end of the cycle, please switch off the machine from mains.
5. Reuse the soap water if possible. Please follow the instructions for reuse of soap water.

Warranty

The Godrej Fully Automatic Washing Machine comes with 2 years comprehensive warranty & 10 years motor warranty from the date of purchase, against defective material or workmanship. In case of any such defect, Godrej & Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group) undertakes to get the appliance repaired free of charge during warranty period, subject to terms & conditions below.

Instructions For The Customer

1. Kindly ensure that the dealer fills the warranty card correctly and completely.
2. You should retain the warranty card for record and produce the same in the event of any warranty repairs.
3. In the event of a defect developing in the product, contact the nearest authorised Godrej & Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group) service centre for obtaining warranty service and provide the defect, model details & serial no.
4. Product will function between $\pm 5\%$ of rated volts. For any fluctuation beyond specified limit, company shall not be responsible. In turn, warranty stands terminated.
5. Earthing provision is necessary for the safety.
6. Frequency must be between 5% variation of 50hz. Beyond this, company shall not be liable for any unforeseen hazards like fire, shock etc. & in turn, warranty stands terminated.
7. Appliance or any part thereof is subjected to neglect, abuse or misuse, tampering, alteration, accident, fire, floods or other act of god, or damage by rodents or insects, the company is not responsible for any damage caused to the appliances & shall not be liable for any consequential loss or compensation, not refund of purchase price or replacement of the appliances.
8. In event of repair/replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of warranty. Moreover, the time taken for repair/replacement and in transit whether under the warranty or otherwise shall not be excluded from the warranty period.
9. Water supply required above 0.5 bar i.e. 7.25 psi to operate the fully automatic washing machine. Without This, company shall not be able to install the product.
10. Any damage/defect arising due to entry of coin/foreign particle into the machine, and causes malfunctioning is not covered under warranty. These calls will be chargeable to customer during warranty period.
11. House wiring related issues are not covered under warranty and such calls will be chargeable to customer.
12. Calls related to lint filter or water Inlet filter cleaning are not covered under warranty and are chargeable to customer.

Terms and Conditions

1. Repairs and replacement of parts will be carried out through the authorised customer service centre.
2. All transportation and handling expenses incurred while repairing will be payable by the customer.
3. For appliances installed beyond the municipal limits of the jurisdiction of the authorised service centre, charges towards technician's visit and other incidentals will be borne by the customer.
4. While the company will make every effort to carry out the repairs at the earliest, it however is made expressly Clear that the company is under no obligation to do so in a specified period of time.
5. The company/its authorised service centre will collect any parts, components replaced.
6. Warranty does not cover accessories to the appliance.
7. The company's obligation under this warranty shall be limited to repair or providing replacement of part/s only.
8. In the event of any unforeseen circumstances, and spares not being available, the company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
9. Warranty is not applicable incase the original number (serial no. Sticker) is removed, obliterated or altered from the machine or cabinet.
10. Warranty is confined to the first purchase of the godrej product only and is non-transferable.
11. Proof of purchase (i.e., purchase invoice/receipt, along with corresponding model and/or serial number of the unit must be presented when requesting service under warranty).
12. In case of repairs or replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of warranty.
13. The company or its authorised service providers reserves the right to retain any part/s of component replaced at its discretion, in the event of a defect being noticed in the equipment during warranty period.
14. It is the sole responsibility of the customer to provide necessary support to the company if the unit to be installed is not suitable for the installer or the service engineer to reach.
15. No dealer/distributor/retailer has authority to vary the terms of the above warranty.
16. 2 years warranty is applicable on all the parts except plastic, rubber, and glass parts (i.e., inlet/outlet hose, plastic knobs, top cover, lint filters, glass window, rubber valve etc).
17. Warranty does not cover repairing of any external accessories supplied by dealer/godrej as a promotional scheme.
18. Removal of foreign objects/substances from machines, including the pump and inlet hose filter for example grit, nails, buttons, coins etc. Will not be covered in warranty.
19. Warranty does not cover damage caused by commercial, business, or industrial purpose; this warranty is valid for equipment dedicated to domestic use only.

Branches / Service Connect

For any further assistance

Branches			
Ahmedabad Bangalore Bhopal Bhubaneshwar Chandigarh/Mohali Chennai	Coimbatore Delhi Faridabad Ghaziabad Guwahati Hyderabad	Jaipur Kochi Kolkata Lucknow Mumbai Nagpur	Patna Pune Raipur Ranchi Vijaywada

Call	WhatsApp
080-6743-6743	Text 'hi" To 9321665511 On Whatsapp

24X7 Call Centre | Weekend Service

Website: www.godrejenterprises.com/support
E-mail: smartcare@godrej.com SMS: <godrejcare> to 56677

[illegible]

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)
Customer copy

Model No.
Unit Sr. No.

Date Of Purchase

Customer's Name & Address

Tel. _____

Dealer's Name & Address

Tel. _____

Customer's Signature:

Protection of Environment:

Protection of environment" is one of the core values of Godrej and we seek your co-operation to make sure that the product, packaging and plastic material is not disposed as unsorted municipal waste.



This symbol is known as the "Crossed-out Wheellie Bin Symbol". It means that the product should not be disposed of with your general house-hold waste.

It should be disposed of only through the company's collection points with special treatment so as to prevent any damage to the environment. Please call: **080-6743-6743** for applicable buy back arrangement or www.godrejenterprises.com/green-think for details about authorised collection points.

'This product is RoHS compliant'

Godrej

Godrej and Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group)

Plant 11, Pirojshanagar, Vikhroli (W), Mumbai 400 079.

555101521SD02643

VO_24012025