



How To Get The Best Out Of Your Godrej Washing Machine

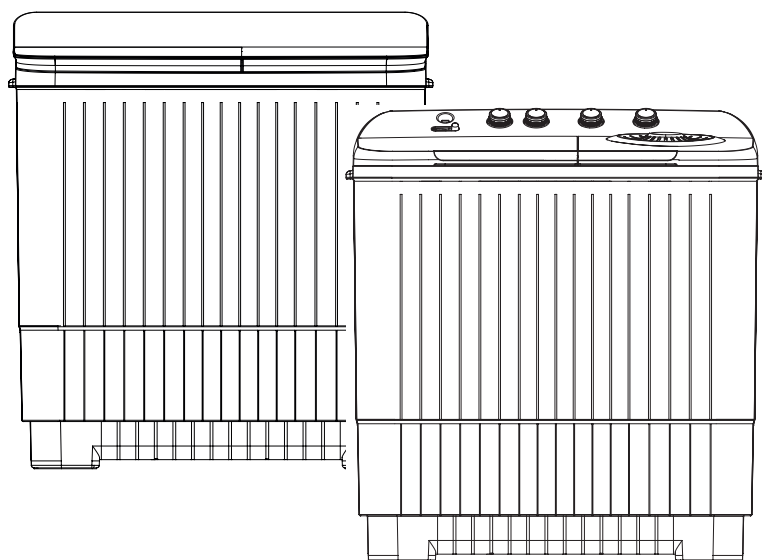


Image shown is for representation purpose only.

Semi Automatic
User Manual
WS EDGE UNO 100 5.0 TB4
WS EDGE UNO 120 5.0 PB4
WS EDGE UNO 120 5.0 TB4


Congratulations!

You are now the proud owner of a new Godrej washing machine. You can look forward to years of smooth, trouble-free washing from your machine, as well as considerable savings in time, money and effort. Please read this manual carefully as it will tell you how to operate your machine optimally in order to get the best results. If you need any further clarifications, do contact your nearest Godrej dealer or any of our service centres/offices. We would be glad to help you. We wish you an easier, more convenient life with your new Godrej washing machine.

Contents

1.	Description Of Parts & Specification	1
2.	Safety Instructions	
	2.1 Safety Instruction	3
	2.2 Recommendation	3
	2.3 Environment & Energy Conservation Suggestion	3
	2.4 Ensuring Proper Earthing	4
3.	Features	
	3.1 Active Soak	6
4.	How To Install	
	4.1 Choosing The Right Location To Install	6
	4.2 Step-by-step Installation	7
5.	How To Wash	
	5.1 Precaution Before Washing	7
	5.2 Washing	8
6.	How To Do Intermediate Spinning	
	6.1 How To Use The Spin Shower	9
7.	How To Rinse	
	7.1 Overflow Rinse	9
	7.2 Caution	10
	7.3 Rinsing With Fixed Amount Of Water	10
8.	How To Spin	
	8.1 Ending The Process	11
	8.2 Caution	11
9.	How To Measure Wash Load & Washing Guide	12
10.	Lint Filter Cleaning Instructions	13
	10.1 How To Clean The Wash Tub	13
	10.2 Cleaning The Magic Filter	13
11.	Warranty	14
12.	Branches / Service Connect	15


1. Description Of Parts & Specifications

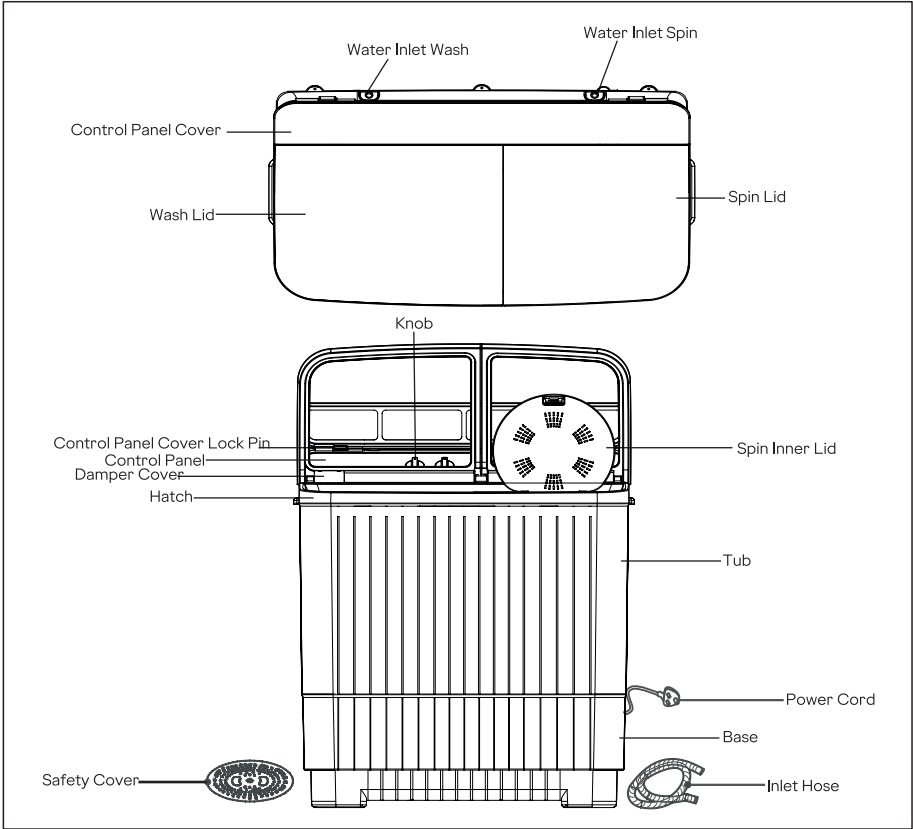

Model/ Specification		WS EDGE UNO 100 5.0 TB4	WS EDGE UNO 120 5.0 TB4
Power Supply		230 V-AC, 50 Hz	230 V-AC, 50 Hz
Wash Capacity		10.0 kg	12.0 kg
Spin Capacity		7.0 kg	7.0 kg
Max. Water Level		103 Liters	103 Liters
Min. Water Level		59 Liters	59 Liters
Power Consumption	Wash	530 W	530 W
	Spin	165 W	165 W
Net Weight		32.0 kg	32.0 kg
Net Dimension (WxDxH) In mm		915 x 555 x 1065	915 x 555 x 1065

In view of godrej policy of continuous development, feature/ specification may change without notice. Features/specifications may vary with products. For specific features, please refer to the catalog/website.

*The diagram shown above is indicative and for reference only

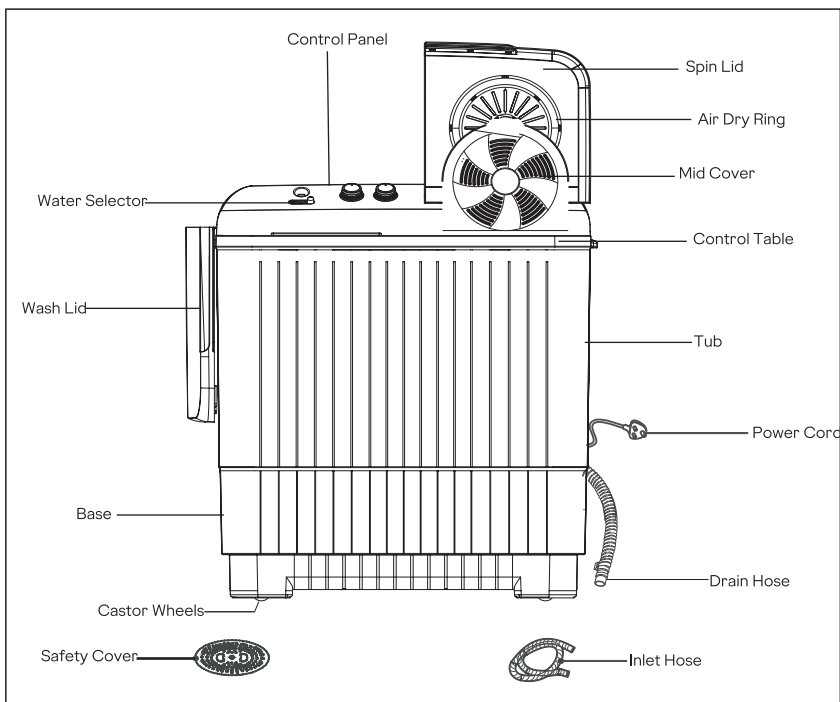

Model/ Specificaion		WS EDGE UNO 120 5.0 PB4
Power Supply		230 V-AC, 50 Hz
Wash Capacity		12.0 kg
Spin Capacity		7.0 kg
Max. Water Level		103 Liters
Min. Water Level		59 Liters
Power Consumption	Wash	550 W
	Spin	165 W
Net Weight		29.0 kg
Net Dimension (WxDxH) in mm		915 x 555 x 1045

In view of godrej policy of continuous development, feature/ specification may change without notice.
Features/specifications may vary with products. For specific features, please refer to the catalog/website.

*The diagram shown above is indicative and for reference only

2. Safety Instructions

Important safety instructions read carefully and keep for future reference

2.1 Safety Instruction

- Ensure that the earthing connection in your electric supply is proper before connecting the power cord.
- Do not use the extension cord as they may not be properly earthed.
- Connect the machine to socket having current & voltage ratings specified on the power cord plug.
- Remove the power plug before moving the machine from its place. Only authorised personnel should repair the machine, warranty stands cancelled if repairs are done by an unauthorized personnel.
- Do not put washing machine in very wet places or near water leakage.
- Check if drain hose is placed correctly so that water drains out smoothly. Kids are forbidden to play with the washing machine. Keep pets away from the washing machine.

2.2 Recommendations

- Use a secure tap connection to avoid leakage & wastage of water.
- Do not use wet hands to insert or pull out the power cord.
- Pull out the power cord when the machine operation is completed (or) under repair (or) during the cleaning process.
- If supply cord is damaged it must be replaced by , its service or similarly qualified persons to avoid a hazard.

2.3 Environment & Energy Conservation Suggestions

- After installing the machine, recycle/reuse the corrugated box.
- Fitments and polythene cover/straps: Do not dispose them off as garbage. This helps to conserve natural resources and prevents pollution.
- Use correct quantity of water depending upon the quantity of clothes to be washed.
- Use less foam making detergent for washing and use correct quantity of detergent.
- Use the correct wash cycle. This helps in saving electricity & water. At the end of the cycle, please switch off the machine from mains. Reuse the soapy water if possible.

Warning For Children In The Household

- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or instructions have been given concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Caution

- Do not put your hand, foot or anything under the washing machine while the washing machine is in operation. There is a rotating mechanism under the machine, so you could be injured.
- Do not put or keep any magnet near lid of washer, it will result in malfunctioning of the product.
- Avoid electric heater, candle light, cigarette light, bug smoker, etc. near the machine. It may ignite or deform the plastic part.

2. Safety Instructions

Their safety: Children should be supervised to ensure that they do not operate or play with the appliance. Inconstancy to this may damage the machine causing serious injury and electric shock.


- Disconnect the washer from the household distribution panel by removing the power plug from power socket outlet before attempting any maintenance or cleaning. Inconstancy to this may cause electrical shock. Make sure that drainage is working properly. If water is not drained properly, your floor may get flooded. Flooded floors may induce electricity leakage, further resulting in electric shock or fire.
- If, during spinning, opening the lid does not stop the tub within about 15 seconds, immediately discontinue operating the machine. Call for repair. A machine that spins with its door open may cause injuries.
- Never reach into the machine while it is running. Wait until the machine has completely stopped before opening the lid. Even slow rotation can cause injury.
- Never attempt to operate this appliance if it is damaged, malfunctioned, partially disassembled, or has missing or broken parts, including a damaged cord or plug. Operating with a damaged plug may cause electric shock.
- Turn off the main power switch, at any time when any person is operating the machine, whether it is pre or post the wash. If any intervention is to be done in between the operation, even then, stop the operation, turn off the main power switch & then conduct any intended operations.
- The washing machine should be plugged into a separate power socket. Do not take power supply for other appliance from the same source.

• 2.4 Ensuring Proper Earthing

- Your washing machine has three core power cords to connect the machine to the power line. Make sure that electrical and earthing connections are done properly in the wall socket. Live and neutral connections in socket should be as per standard.
- Connect the 3 pin power cord to a proper ampere rating socket i.e. 6 amp socket is required for non heater machine & 16 amp socket would be required for heater machine.
- Connect the power cord to Indian standard 3 pin power socket. Never plug it into an ungrounded power socket.


• Grounding Method

- Earth wire must be connected in the wall socket. If the earth wire is not connected, then there is a potential hazard of electric shock caused by the current leakage.
- Note that AC power outlet configurations may differ from country to country.
- If the external socket does not have grounding terminal, then a separate grounding is needed.

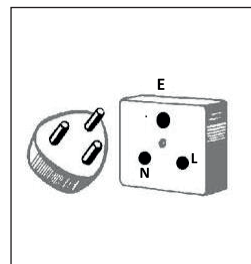


•Other grounding methods (any one to be followed)

- Burying copper plate:
- Connect the ground wire to a ground copper plate and bury it more than 75 cm in the ground (By a qualified engineer.)

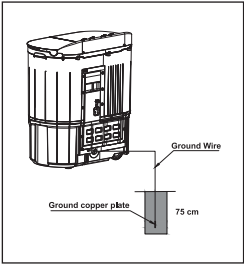

•Using A Short-circuit Breaker:

- If the grounding methods described above are not possible, a separate earth leakage circuit breaker should be employed and installed by a qualified engineer.

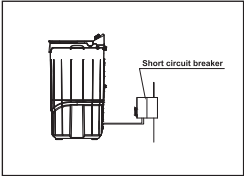

•Never Connect Ground To:

- A gas pipe, telephone wire, lightening rod, neutral, extension cords without ground terminals, plastic, etc.

Note: All electrical wirings & modifications should be done by a qualified engineer only.


3. Features

4 wash cycles	Choose between, 'gentle, baby wear, regular and strong' depending upon the kind of fabric you wish to wash.
Water level indicator	This indicates the level of water that suits the laundry load being washed, ensuring a more elective wash and preventing wastage of water.
4 rinse options	This feature ensures effective removal of detergent with continuous stream of water so that no suds or detergent deposits are left behind on the fabric. Thus, the fabric and your skin are safe.
Spin shower facility	This facility in the spin drying tub ensures that all leftover detergent is removed effectively.
Liquid balancing ring on the spin tub	Liquid filled in the balancing helps to distribute the wash load evenly in the tub so that the machine does not shake during the rotation of the spin tub.
Separate wash & spin timers	This feature gives you the convenience of washing and spin drying the clothes simultaneously.

*The images are for representation purpose only.

3.1 Active Soak

Your Godrej washing machine provides you the flexibility of soaking your bed sheets or heavily soiled clothes in the wash tub itself to facilitate better detergent action. To set the washing machine into soak mode, put your wash load into the machine wash tub. Add desired amount of detergent. Fill water to the set level. Select one of the four cycles using the wash selector.

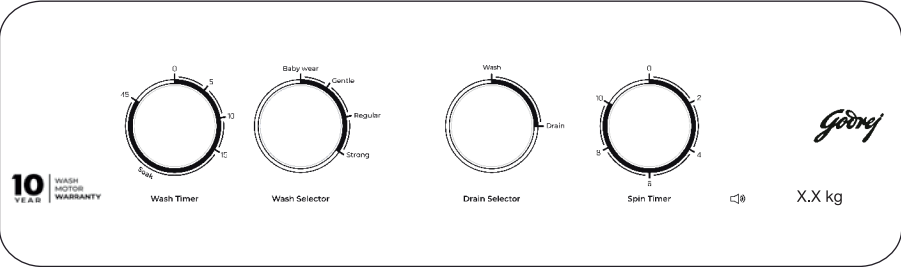


When You Want To	Set Timer Knob To	Approximate Total Time (mins)	Approximate Soak Time (mins)	Approximate Wash Time (mins)
Soak And Wash Heavily Soiled Clothes	Long Soak, Set By Turning Knob Fully	45	30	15
Soak And Wash Not-so-heavily Soiled Clothes	Midway Of Soak Timer	30	15	15
Quick Soak And Full Wash	Short Position Of Soak Timer	20	5	15

4. How To Install

4.1 Choosing The Right Location Removal Of Packaging Material


- Please ensure all packaging and bottom cushions are removed before starting the machine.
- **Caution:** Operating the machine with the packaging may cause

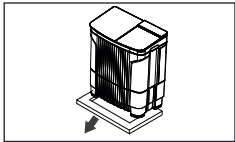


movement/unbalanced condition and can damage the machine parts. Install your Godrej Washing machine in an even, stable & leveled surface.

An unstable location:

- Can be dangerous since vibrations may cause your machine to move.
- Can create noise as your machine may vibrate.

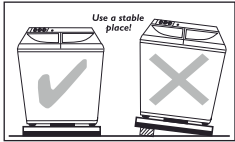

Keep a distance of at least 5 cm from the sides, rear of your machine and the nearest wall. This will reduce noise while operating the machine as well as ensure proper ventilation.





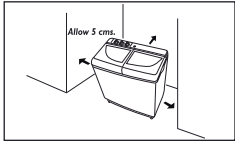


*The images are for representation purpose only.

- Do not keep the washing machine exposed to direct sunlight, snow and rain or in highly humid, oily, dusty or wet areas, like bathrooms.
- Outside surface, glass or electrical equipment may get damaged.
- The washing machine is provided with castor wheels which gives flexibility to move the machine to a convenient location, free from high humidity and direct sunlight.

4.2 Step-by-step Installation


- Lower the drain hose to the floor. Make sure that the drain hose is not kept too high, else it may not drain water from the tub properly.
- Connect the water supply pipe to the water inlet.
- Plug in the power cord into power supply socket. This machine requires a 230 V, 50 Hz, 6/16 Amp AC supply.
- Place your machine on leveled ground, if the floor is uneven, place a board underneath and bring it to a leveled position.
- To check if your machine is on leveled ground, use a weight attached to a string. The distance between the string and your machine should be the same from top to bottom.

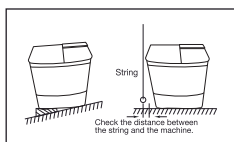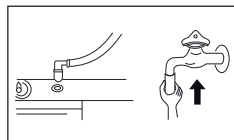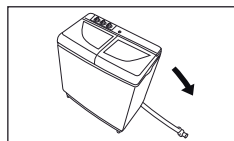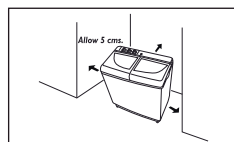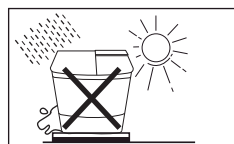

5. How To Wash





5.1 Precautions before washing

- Put your delicate clothes and undergarments in a washing net. This will prevent clothes from getting entangled during wash and protect your clothes. The washing nets are available in the market.
- Strings of aprons, petticoats, pyjamas etc. should be tied as this will prevent clothes from getting entangled.

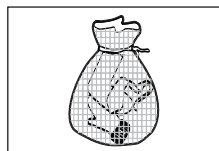

*The images are for representation purpose only.

- Close fasteners/zippers of trousers and jeans as this will prevent scratching of the wash tub.
- Remove articles like match sticks, hair pins etc. from pockets before washing.
Add clothes one by one. Remove hooks, laces, pins and pull up all the zips. If the hooks cannot be removed tie all of them up in one garment. Failure to do so will damage the machine.

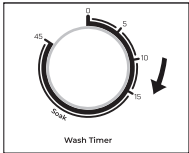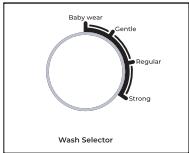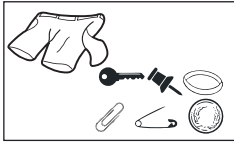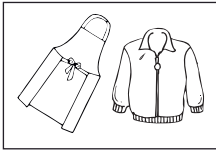

Applicable for
WS EDGE UNO 100 5.0 TB4
WS EDGE UNO 120 5.0 PB4
WS EDGE UNO 120 5.0 TB4

5.2 Washing


- Shift the wash selector knob to 'Baby wear, Gentle, Regular or Strong' depending upon the type of cloth and shift the water supply knob to 'Wash Tub'.
- Set the water level depending on the wash load.
- Turn on the water supply and allow water to fill 2-3 cms lower than the water level selected. Add the detergent and mix properly so that the detergent dissolves fully in the water.

Note: If water flows out of the water feed indicator outlet located in the wash tub it indicates that the water is flowing at a high speed which could cause water to spill over into the spin tub. Reduce the water flow till water stops flowing out of the water feed indicator outlet.

- Now put the wash load in to the Wash Tub and fill water up to the water level selected.
- Select the cycle required for washing depending on the quantity of clothes to be washed, the type of fabric and the dirt levels of the clothes. Choose between regular and gentle by turning the wash selector knob.
- Select the wash time required. The time will vary depending on the number of clothes and type of fabric.
- Set the wash time by turning the Wash Timer clockwise. The machine starts working immediately on turning the knob.
- After washing has stopped, shift the Wash selector knob to 'Drain' position to drain out the water from the wash tub.

6. How To Do Intermediate Spinning

After completion of the wash cycle it is suggested that an intermediate spin cycle with the spin shower facility to be carried out. This helps to remove the detergent solution from the clothes and rinsing becomes more effective.

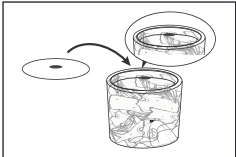

*The images are for representation purpose only.

6.1 How To Use The Spin Shower

- Remove the washed clothes from the wash tub and transfer them uniformly into the spin tub as shown in Fig A
- The spin cap needs to be placed horizontally above clothes as shown in Fig A. Even in case of a small lot of clothes, spin cap should be placed above clothes. This is a safety requirement. The clothes and spin cap should not be placed as shown in Fig. B as this could lead to vibrations and cause a rattling sound during spin cycle.
- Shift the water selector to 'Spin' and allow water to flow for about 1 min
- Turn off the water supply, close the Inner spin lid and Spin tub lid.

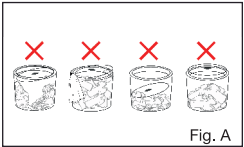



Fig. A



Fig. B

Note: Spinning will not start till the Spin tub lid is closed completely. For safety reasons this machine is provided with a brake mechanism which gets activated as soon as the spin tub lid is opened. This is a safeguard against accidental opening of Spin tub lid when the tub is spinning at a high speed.

Set the spin timer by turning the knob clockwise. Choose between 1-10 minutes depending upon type and number of clothes.

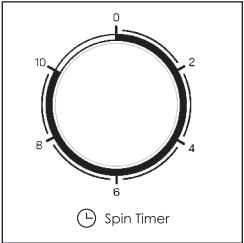

*It is recommended not to perform spin operations when tap is open. This will make sure that water reaches all the clothes inside the basket, before the spinning begins.



7. How To Rinse

- After the wash and intermediate Spin cycle, use the Rinse cycle. This helps to remove detergent from the clothes and makes them soap-free. Rinsing can be done in two ways:

7.1 Overflow Rinse

In this mode water is continuously supplied to Wash tub during rinsing and the dirty water flows out through the drain hose. In this mode very efficient rinsing can be done since the concentration of detergent in water is lowered significantly.

- Transfer the wash clothes from spin tub to wash tub after intermediate spin cycle.
- Shift the Wash/Drain selector knob to 'Wash' position.
- Shift the water selector to Wash position.
- Start the flow of water, and set the wash timer between 6-8 minutes and rinse under continuous water flow.
- For best results repeat this process twice.

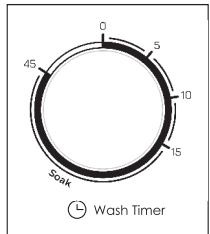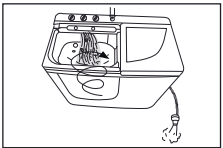

Applicable for
WS EDGE UNO 100 5.0 TB4
WS EDGE UNO 120 5.0 PB4
WS EDGE UNO 120 5.0 TB4

*The images are for representation purpose only.

7.2 Caution

- Adjust the water flow while looking at the water level or the water may spill out (Refer Image A)
- Cover the Wash tub with Wash tub lid while rinsing using the 'Overflow rinse' option as this will prevent water spilling/ splashing.




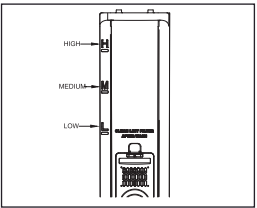


Image A

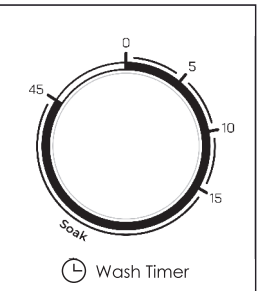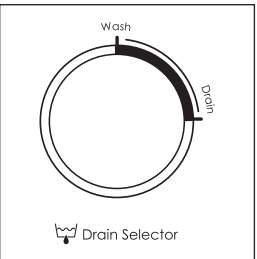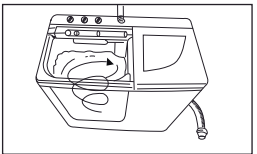

Applicable for
WS EDGE UNO 100 5.0 TB4
WS EDGE UNO 120 5.0 PB4
WS EDGE UNO 120 5.0 TB4

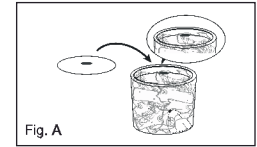


Fig. A

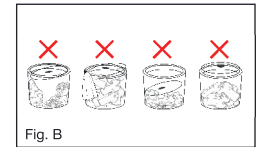


Fig. B

7.3 Rinsing with fixed amount of water

- Transfer the washed clothes from the spin tub to the wash tub after intermediate spin cycle.
- Shift the Wash/Drain selector knob to 'Wash' position
- Fill water up to 'High' level. Set the wash timer to 5 minutes
- After the rinsing cycle is over, shift the Wash/ Drain selector knob to 'Drain position'. This will drain out the water from the wash tub.
- Transfer the clothes to spin tub for intermediate spinning
- Repeat this process two to three times for best results

8. How To Spin

- Remove washed clothes from the Wash tub and transfer clothes uniformly into the Spin tub as shown in Fig A. The Spin cap must be placed horizontally above the clothes as shown in Fig A. Even in case of a small lot of clothes, Spin cap must be placed above the clothes. This is a safety requirement.
- The clothes and the spin cap should not be placed as shown in Fig. B, as this could lead to vibrations and cause a rattling sound during spin cycle.

*The images are for representation purpose only.

- Close the Spin tub inner lid and Spin tub lid.

Note: Spinning operation will start in the spin tub once the spin lid get closed. If the customer opens the spin lid during spinning , the brake mechanism provided in the machine for the customer’s safety get activated and stops the rotation of the spin tub.

- In case you notice excessive vibration or abnormal noises along with machine movement during spinning, immediately open the Spin lid & Cap, rearrange the clothes evenly & resume spinning.

- Set the spin timer by turning the Spin timer clockwise. Refer to the table on right side providing guidelines for setting a spin time.
- Once the set spin time is over, the timer returns to its original position and the spinning activity stops.

Type Of Fabric	Spin time
Synthetic Clothes	1 minute
Woolens	1.2 minutes
Shirts / Trousers	2-3 minutes
Bedsheets/ Towels	5 minutes

8.1 Ending The Process

- Switch off main power supply and unplug the power cord
- Drain the water completely from drain pipe. Then hang the drainage hose on the hook provided on the side of the machine.
- Shift the Wash selector to 'Wash' position.

8.2 Caution

- If bleaching powder or starch is used for washing, rinse the wash tub and spin tub with water and drain it. This is required to remove any leftover bleach/starch which may otherwise damage the Wash/Spin tub.
- Remove the water supply joint first and then remove the water supply hose as this prevents water from spilling on to the controls of machine

9. How To Measure Wash Load And Washing Guide

Here are some of the average weights of commonly used clothes to help you estimate the weight of the load to be washed.

Approximate Dry Weight Of Clothes (grams)			
Item of clothing	Weight	Item of clothing	Weight
Double bed sheets	1000	Single bed sheets	500
Bath towels	500	Table cloth	650
Trousers	400	Jeans	600
Shirt	300	Baggies	500
Sari	500	Petticoat	400
Pyjamas	400	Dhoti	200
Skirt	250	Nightgown	250
Lungi	225	Banlian	50
Blouse	100	Undergarment	50

How To Select Wash Cycle Settings, Wash Time And Water Level.

Washing (weight)	Water Level	Cycle Setting	Fabric Material	Wash Time
Less Than 4.5 kgs	Low	Gentle	Synthetic, Woolen	5 Mins
		Regular	Cotton Hand Spun	7 Mins
Less Than 4.5 kgs	Medium	Regular	Spoiled Cotton, Hand Spun, School School Uniforms	10 Mins
			Synthetic, Clothes	10 Mins
7.5 - Max kgs.	High	Strong	Cotton, Linen	7-10 Mins
			Soiled Cotton, Bed Sheets, Pillow Covers, Towels, School Uniforms	10-15 Mins

* For energy saving course refer to the instructions below in Wash/Rinse/Spin Function.

1. Select 'Gentle' wash program and fill water up to the 'Overflow' mark in wash tub.
2. Refer to the following functions & time selection.



*Under test condition when tested in accordance with standard IEC 60456 : 2010
WS EDGE UNO 100 5.0 TB4/WS EDGE UNO 120 5.0 PB4/WS EDGE UNO 120 5.0 TB4

10. Lint Filter Cleaning Instructions

Most Importantly, before you start cleaning the tub of your washing machine, please ensure that the electrical plug pin is disconnected and unplugged from the main power supply socket.




10.1 How To Clean The Wash Tub

When the wash tub becomes dirty, clean it with the soft brush. Do not use a scrubber or hard brush as this could scratch the wash tub.

10.2 Cleaning Of The Lint Filter

To clean the lint filter after every wash, follow these steps:

- To remove the lint filter, press the latch/lock which is on top of the filter & pull it outward simultaneously.
- Open the lint filter back as shown by pulling it out
- Clean the filter under running water to remove all collected lint particles.
- When the lint has been emptied and cleaned, place the lint filter back. To assemble it, locate the bottom part of the lint filter and push it in the direction of the arrow, as shown. A tickling sound from the latch will confirm that the lint filter is locked in the tub.

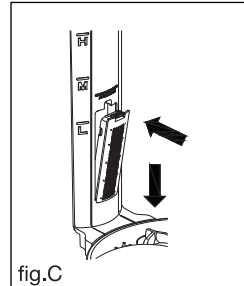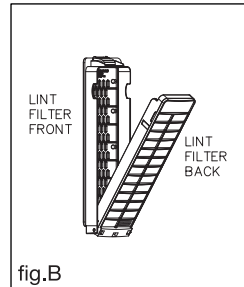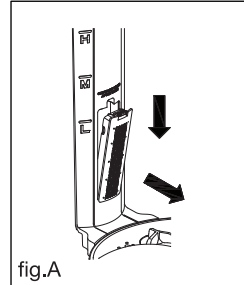

*The images are for representation purpose only.

11. Warranty

The godrej washing machine comes with 10 years warranty on wash motor 2 years warranty on rest of functional parts from the date of purchase, against defective material or workmanship. In case of any such defect, Godrej & Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group) division undertakes to get the appliance repaired free of charge during warranty period, subject to terms and conditions below.

Instructions For The Customer

1. Kindly ensure that the dealer fills the warranty card correctly and completely.
2. You should retain the warranty card for record and produce the same in the event of any warranty repairs.
3. In the event of a defect developing in the product, contact the nearest authorised godrej & boyce service centre for obtaining warranty service and provide the defect, model details & serial no.
4. Product will function between +/- 5% of rated volts. For any fluctuation beyond specified limit, company shall not be responsible. In turn, warranty stands terminated.
5. Earthing provision is necessary for the safety.
6. Frequency must be between 5% variation of 50Hz. Beyond this, company shall not be liable for any unforeseen hazards like fire, shock etc. & in turn, warranty stands terminated.
7. Appliance or any part thereof is subjected to neglect, abuse or misuse, tampering, alteration, accident, fire, floods or other act of god, or damage by rodents or insects, the company is not responsible for any damage caused to the appliances & shall not be liable for any consequential loss or compensation, not refund of purchase price or replacement of the appliances.
8. In event of repair/replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of warranty. Moreover, the time taken for repair/replacement and in transit whether under the warranty or otherwise shall not be excluded from the warranty period.
9. Any damage/defect arising due to entry of coin/foreign particle into the machine, and causes malfunctioning is not covered under warranty. These calls will be chargeable to customer during warranty period.
10. House wiring related issues are not covered under warranty and such calls will be chargeable to customer.
11. Calls related to lint filter or water Inlet filter cleaning are not covered under warranty and are chargeable to customer.

Terms and Conditions

1. Repairs and replacement of parts will be carried out through the authorised customer service centre.
2. All transportation and handling expenses incurred while repairing will be payable by the customer.
3. For appliances installed beyond the municipal limits of the jurisdiction of the authorised service centre, charges towards technician's visit and other incidentals will be borne by the customer.
4. While the company will make every effort to carry out the repairs at the earliest, it however is made expressly Clear that the company is under no obligation to do so in a specified period of time.
5. The company/its authorised service centre will collect any parts, components replaced.
6. Warranty does not cover accessories to the appliance.
7. The company's obligation under this warranty shall be limited to repair or providing replacement of part/s only.
8. In the event of any unforeseen circumstances, and spares not being available, the company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
9. Warranty is not applicable in case the original number (serial no. Sticker) is removed, obliterated or altered from the machine or cabinet.
10. Warranty is confined to the first purchase of the godrej product only and is non-transferable.
11. Proof of purchase (i.e., purchase invoice/receipt, along with corresponding model and /or serial number of the unit must be presented when requesting service under warranty).
12. In case of repairs or replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of warranty.
13. The company or its authorised service providers reserves the right to retain any part/s of component replaced at its discretion, in the event of a defect being noticed in the equipment during warranty period.
14. It is the sole responsibility of the customer to provide necessary support to the company if the unit to be installed is not suitable for the installer or the service engineer to reach.
15. No dealer/distributor/retailer has authority to vary the terms of the above warranty.
16. 2 years warranty is applicable on all the parts except plastic, rubber, and glass parts (i.e., inlet/outlet hose, plastic knobs, top cover, lint filters, glass window, rubber valve etc).
17. Warranty does not cover repairing of any external accessories supplied by dealer/godrej as a promotional scheme.
18. Removal of foreign objects/substances from machines, including the pump and inlet hose filter for example grit, nails, buttons, coins etc. Will not be covered in warranty.
19. Warranty does not cover damage caused by commercial, business, or industrial purpose; this warranty is valid for equipment dedicated to domestic use only.

12. Branches/ Service Connect

For any further assistance.

Branches			
Ahmedabad Bangalore Bhopal Bhubaneshwar Chandigarh/Mohali Chennai	Coimbatore Delhi Faridabad Ghaziabad Guwahati Hyderabad	Jaipur Kochi Kolkata Lucknow Mumbai Nagpur	Patna Pune Raipur Ranchi Vijaywada

Call	WhatsApp
080-6743-6743	Text 'hi" To 9321665511 On Whatsapp

24 X 7 Call Centre • Weekend Service

Website: www.godrejenterprises.com/support
E-mail: smartcare@godrej.com SMS: <godrejcare> to 56677

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)
Customer copy

Model No.

Unit Sr. No.

Date Of Purchase

Customer's Name & Address

Tel. _____

Dealer's Name & Address

Tel. _____

Customer's Signature:

Protection of Environment:

Protection of environment" is one of the core values of Godrej and we seek your co-operation to make sure that the product, packaging and plastic material is not disposed as unsorted municipal waste.



This symbol is known as the "Crossed-out Wheellie Bin Symbol". It means that the product should not be disposed of with your general house-hold waste.

It should be disposed of only through the company's collection points with special treatment so as to prevent any damage to the environment. Please call: **080-6743-6743** for applicable buy back arrangement or www.godrejenterprises.com/green-think for details about authorised collection points.

'This product is RoHS compliant'

Godrej and Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group)

Plant 11, Pirojshanagar, Vikhroli (W), Mumbai 400 079.