




How to get the best of your Godrej Washing Machine

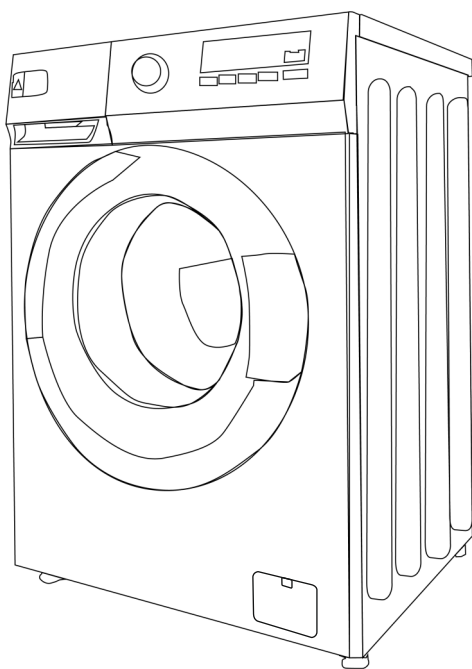

Fully Automatic Front Load

User Manual

WFEON CEL 8014 IEBT SLR

WFEON CEL 9014 IEBT SLR

WFEON CEL 1014 IEBT SLR

Image shown is for representation purpose only.

Contents

Safety Instructions

■ Safety Instructions	2
-----------------------------	---

Installation

■ Product Description	6
■ Installation	7

Operation

■ Quick Start	10
■ Before Each Washing	11
■ Detergent Dispenser	12
■ Control Panel	14
■ Programmes.....	15

Maintenance

■ Cleaning and Care	20
■ Trouble Shooting	23
■ Warranty.....	25

Safety Instructions

Important Safety Instructions: Read carefully and keep it for future reference

Please read the following safety information thoroughly and follow it strictly to minimize the risk of fire or explosion, electric shock, and to prevent property damage, personal injury, or loss of life. Failing to follow these instructions shall void any warranty.

Warning!

This combination of symbol and signal word indicates a potentially dangerous situation that may result in death or serious injuries unless it's avoided.

Caution!

This combination of symbol and signal word indicates a potentially dangerous situation that may result in slight or minor injuries or damage to property and the environment.

Note!

This combination of symbol and signal word indicates a potentially dangerous situation that may result in slight or minor injuries.

Warning!

Electric Shock Hazard

- If the supply cord is damaged, it must be replaced by the manufacturer, the service agent, or similarly qualified persons in order to avoid a hazard.
- If the machine is damaged, it must not be operated unless repaired by the manufacturer, the service agent, or similarly qualified persons. Risk of electric shock!

Safety Instructions

- The appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or a lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- "Children should be supervised so that they do not play with, on, or inside the appliances."
- Children 3 years and under shall be kept away from the appliance and continuously supervised.
- Animals and children may climb into the machine. Check the machine before every operation.
- Do not climb or sit on the appliance.

Installation Location and Surrounding

- All washing and additional substances are to be kept in a safe place out of the reach of children.
- Do not install the machine on a carpeted floor. The obstruction of the openings by a carpet can damage the machine.
- Keep the appliance clear from direct sunlight, heating sources, and rain exposure to avoid plastic and rubber parts deformation, electric shock, fire, or breakdown.
- Do not use the appliance in humid environments or rooms containing explosive or caustic gas. In case of water leakage or water splashes, let the appliance dry in the open air.
- The appliance must not be installed behind a lockable door, a sliding door, or a door with a hinge on the opposite side to that of the washing machine.

Safety Instructions

- Do not operate the machine in rooms with a temperature of below 5°C. This can damage the machine. If it is unavoidable, make sure to drain the water completely from the appliance after every use (see "Maintenance – Cleaning of drain pump filter") to avoid damages caused by frost.
- Never use flammable sprays or substances in the immediate proximity of the appliance.

Installation

- Remove all packaging material and transport bolts before using the appliance. Otherwise, it may result in serious damage.
- This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
- The mains plug must be accessible after installation.
- Before washing clothes for the first time, the product shall be operated once throughout all the procedures without any clothes inside.
- Before using the washing machine, the product shall be balanced on the ground.
- Do not put any excessively heavy objects on the appliance, like water containers or heating devices.
- The new hose sets supplied with the appliance are to be used. Do not reuse old hose set.
- Maximum inlet water pressure: 1 Mpa (10 Kgf/cm²). Minimum inlet water pressure: 0.05 Mpa (0.5 Kgf/cm²).

Electrical Connection

- Make sure the supply cable is not trapped by the machine; it can get damaged.
- Connect the product to a grounded outlet protected by a fuse complying with the values in the "Technical specifications" table. The grounding installation has to be made by a qualified electrician. Ensure that the machine is installed in accordance with the local regulations.

Safety Instructions

Water and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.



Warning!

- Don't use multiple plugs or extension cords.
 - The appliance must not have an external switching device, such as a timer, or be connected to a circuit that is regularly switched on and off.
 - Do not pull the plug out of the mains outlet if there is flammable gas around.
 - Never pull out the power plug with wet hands.
 - Always pull at the plug, not at the cable.
 - Always unplug the appliance if it is not being used.
 - Improperly connected grounding conductors may cause electric shock.
- Do not connect the ground wire to plastic plumbing, gas lines, or hot wire pipes.

Water Connections

- Check the connections of the water inlet tubes, the water tap, and the outlet hose for possible problems due to changes in water pressure. If the connections loosen or leak, close the water tap and get it repaired. Do not use the appliance before the pipes and hoses are installed properly by qualified persons.
- The glass door may become very hot during the operation. Keep children and pets far away from the machine while it is operating. Do not touch the door during & immediately post operation.
- The water inlet and outlet hoses have to be safely installed and remain undamaged. Otherwise, water leakage can occur.
- Do not remove the drain pump filter while there is still water in the appliance. Big quantities of water can leak out, and there is a risk of scalding due to hot water.

Safety Instructions Operation and Maintenance

- Never use any flammable, explosive, or toxic solvents. Do not use gasoline, alcohol, etc., as detergents. Only select detergents that are suitable for machine washing.
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones, etc. may cause serious damage to this machine.
- Remove all objects from pockets, such as lighters and matches, before using the appliance.
- Thoroughly rinse items that have been washed by hand.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, wax, and wax removers should be washed in hot water with an extra amount of detergent before being dried in the appliance.
- Items containing foam rubber (latex foam), shower caps, waterproof textiles, rubber-backed articles, and clothes or pillows fitted with foam rubber pads should not be dried in the machine.

Safety Instructions

- Fabric softeners or similar products should be used as recommended in their instructions.
- Never try to open the door forcefully. The door will unlock shortly after the end of a cycle.
- Please do not close the door with excessive force. If it is found difficult to close the door, please check if the clothes are properly inserted and distributed.
- Always unplug the appliance and close the water tap before cleaning and maintenance and after each use.
- Never pour water over the appliance for cleaning purposes. It can cause an electric shock.
- Repairs shall only be carried out by the manufacturer, a service agent, or similarly qualified persons in order to avoid a hazard. The producer will not be responsible for damages caused by the intervention of non-authorized persons.

Transport

- Before Transport:
 - Bolts shall be reinstalled to the machine by a specialized person.
 - Accumulated water shall be drained out of the machine.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.

Intended Use

The product is intended only for home use and for textiles in household amounts suitable for machine washing and drying. This appliance is for indoor use only and not intended for built-in use.

Only use according to these instructions. The appliance is not intended for commercial use.

Any other use is considered as improper use. The producer is not responsible for any damage or injuries that may result from it.

- This appliance is intended to be used in households and similar applications.


Packaging/Old appliance



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.

Installation


Product Description

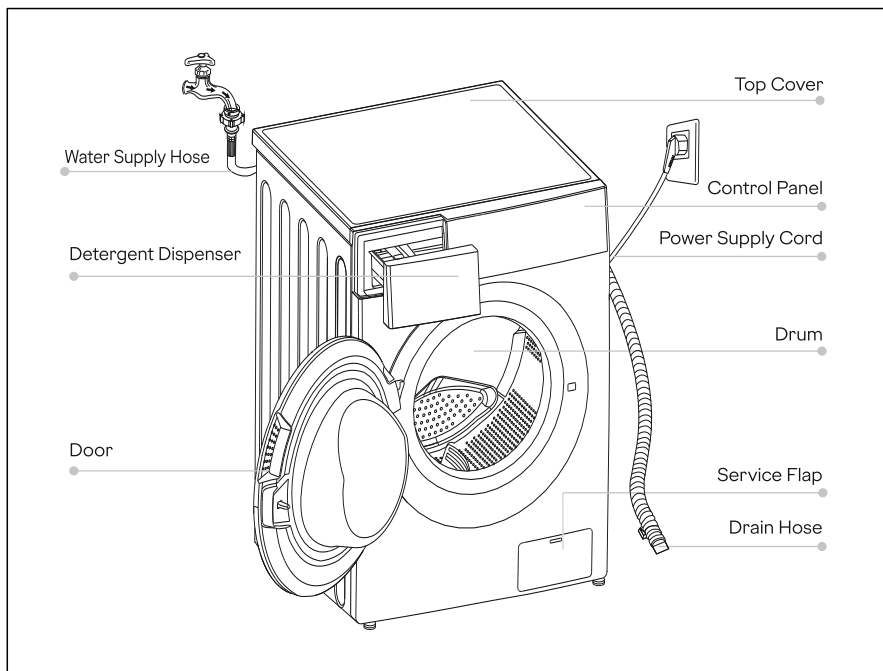


Note!

The product picture is for illustration only; please refer to the real product as a reference.


Accessories

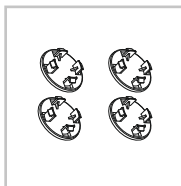


4 x Cover caps

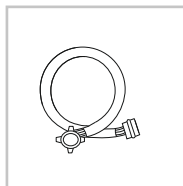

1 x Supply hose cold water

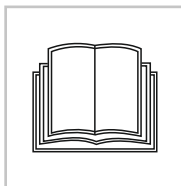

1 x Owner's manual

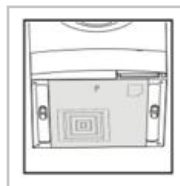

Rat Mat

*The image is for representation purpose only.


Installation

Installation Area




Warning!

- Stability is important to prevent the product from wandering! Make sure the machine is standing level and stable.
- Make sure that the product does not stand on the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture.
- It is advisable to avoid usage of the trolley & the movement of the washing machine after installation. It may disturb the leveling of the washing machine and can create excessive noise & vibration.

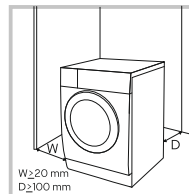

Before installing the machine, the location characterized as follows shall be selected:

1. Rigid, dry, and level surface
2. Avoid direct sunlight
3. Sufficient ventilation
4. Room temperature is above 0°C.
5. Keep far away from the heat sources, such as coal or gas-burning appliances.
6. Do not install the washing machine on a platform or a poorly supported structure.

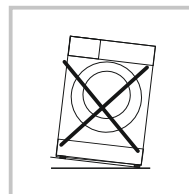


Unpacking the Washing Machine



Warning!

- Packaging material (e.g., films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation! Keep all packaging well away from children.

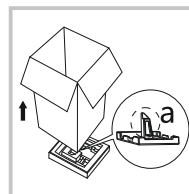

1. Remove the cardboard box and styrofoam packing.
2. Lift the washing machine and remove the base packaging. Make sure the small triangle foam (a) is removed with the bottom packaging together. If not, lay the unit down on the side surface and remove it manually.
3. Remove the tape securing the power supply cord and drain hose.
4. Remove the inlet hose from the drum.

Installation


Remove Transport Bolts

Warning!


- You must remove the transport bolts from the backside before using the product.



Loosen the 4 transport bolts with a spanner.

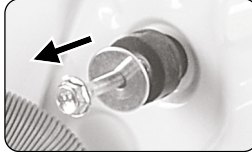

Remove the bolts including the rubber parts and keep them for future use.

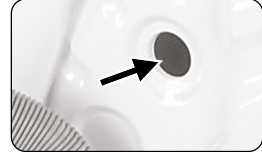


Close the holes using the cover caps.

Levelling the Washing Machine

Warning!

- The lock nuts on all four feet must be screwed tightly against the housing.

1. Loosen the lock nut.
2. Turn the foot until it reaches the floor.
3. Adjust the legs and lock the nuts with a spanner. Make sure the machine is level and steady.

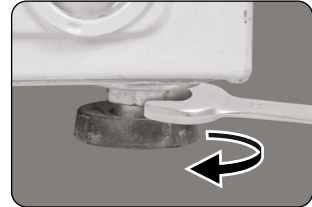

Connect the Water Supply Hose

Warning!

- To prevent leakage or water damage, follow the instructions in this chapter
- Do not kink, crush or modify water inlet hose.



Connect the water supply hose to the water inlet valve and a water tap with cold water as indicated.



Note!

- Connect manually, do not use tools. Check if the connections are tight.

*The image is for representation purpose only.



Drain Hose

Warning!

- Do not kink or protract the drain hose.
- Position drain hose properly, or it may cause water leakage.

There are two ways to place the end of drain hose:

1. Put it into the water trough.
2. Connect it to the branch drain pipe of the trough.

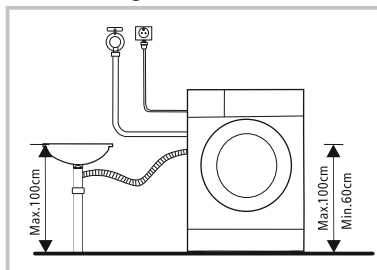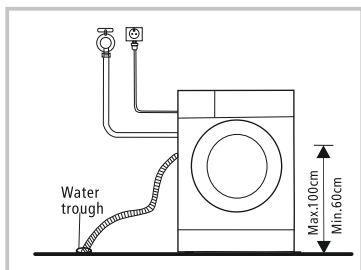


Insallation Instruction of Rat Resistance Panel

Before disassembling the shipping bolt, the rat resistance panel should be installed.


Please follow the steps below to install the panel.

1. Incline the machine to a suitable angle for installation. Packaging pad can be used under the machine. When inclining the machine, make sure no damage to it.
2. Remove the tapes pasted on four sides of panel.
3. Adjust the panel as per marked direction to the correct position, make sure the mark "F" leads to the front of the machine.
4. Stick the panel to the machine.


After all the steps above finished, please upright the machine to the correct position.

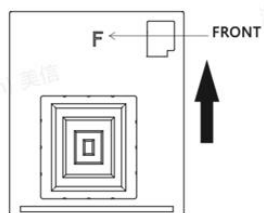

Arrow instruction of the inserting direction

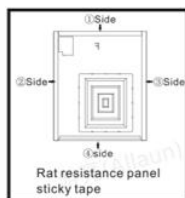


First step

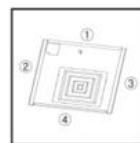

Second step



Third step

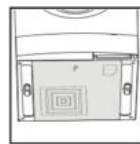

Last step

Operation

Quick Start

⚠ Caution!

- Before washing, please make sure the washing machine is installed properly.
- Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odours, it's recommended to clean your appliance before first use. For this reason, start the Cotton program at 90°C without laundry and detergent.

📌 Calibration

It's recommended to calibrate the washing machine, so that provide the best performance.


The appliance is able to detect the amount of laundry loaded. This function is optimizing the product performance by minimizing energy and water consumption, saving you money and time. For this reason it's recommended to calibrate the appliance for best use.

- 1 - Remove all accessories from the drum and close the door;
- 2 - Insert the mains plug to the socket;
- 3 - Switch on the washing machine, and within 10 seconds, press "Delay" and "Temp." simultaneously and continuously (normally 3 seconds) until "t19" is displayed on the knob.
- 4 - For 8 kg - Press ▷|| to start the appliance, Initially 00 is displayed and then some numbers will be displayed on the control panel to indicate the real time drum speed. When the number reached a certain value. Once the machine display goes off . It means the washing machine is successfully calibrated.

Please power OFF/ON the machine to operate normal functions.

- 5 - For 9 & 10 kg - Press ▷|| to start the appliance and wait till "****" is displayed.

1. Before Washing

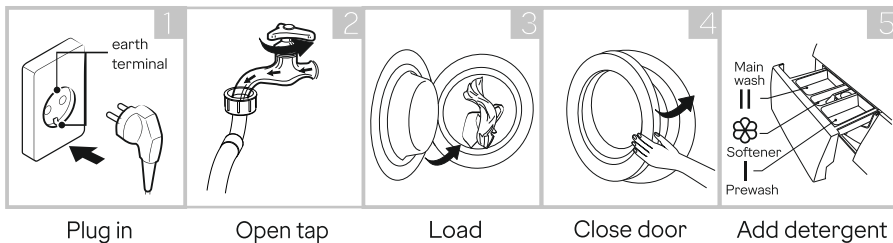


📌 Note!


- Detergent needs to be added in compartment I if the pre-wash function is selected.

*The image is for representation purpose only.

2. Washing

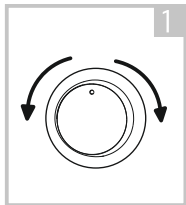

Select Programme

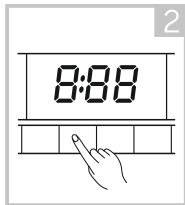

Select function or remain default settings



Press Start/Pause to start the program


3. After Washing

Buzzer beep and "End" on display.


Operation

Before each Washing


- The ambient temperature of the washing machine should be 5-40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before wash. Use non-foaming or less-foaming detergent suitable for machine washing properly.

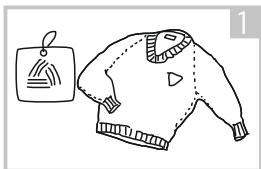


Check the care label

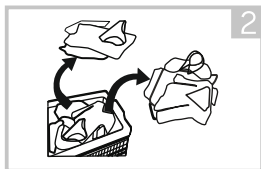


Sort laundry according to color and textile type

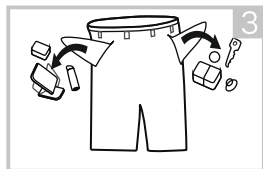


Take all items out of the pockets

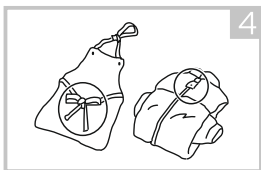

Tie together long textile strips and belts, close zips and button

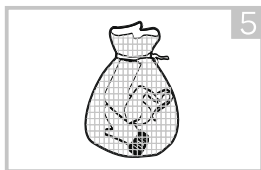

Put small items into a laundry bag

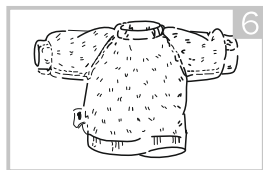

Turn easy-pilling and long-pile fabric inside out

*The image is for representation purpose only.


⚠ Warning!

- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances like wax, oil, paint, gasoline, alcohol, kerosene, and other flammable materials
- Washing single clothes items may easily create big eccentricity and cause alarm due to unbalance. Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.

Operation

Detergent Dispenser

- I Pre wash
- II Main wash
- ☼ Softener
- ⊞ Release button to pull out the dispenser

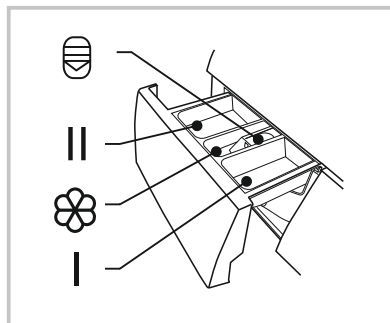

⚠ Caution!

Detergent only need to be added in “compartment” I after selecting pre-wash function.

Programme	I	II	☼	Programme	I	II	☼
Cotton	○	●	○	Bulky	○	●	○
Synthetic	○	●	○	Baby Care	○	●	○
Mix Fabric	○	●	○	Woollens		●	○
Denim	○	●	○	Sports Wear	○	●	○
Spin Only				Rapid 45'	○	●	○
Rinse & Spin			○	Quick 15'		●	○
Eco Wash		●	○	Intensive Wash		●	○
Colors		●	○				

● Means must ○ Means optional

*The image is for representation purpose only.

Operation

Detergent Recommendation

Recommended washing detergent	Wash cycles	Washing temp. in °C	Type of laundry and textile
Heavy-duty detergent with bleaching agents and optical brighteners	Cotton, Eco Wash	40/60°C	White laundry made from boil-proof cotton or linen
Colour detergent without bleaching agent and optical brighteners	Cotton	20/40°C	Coloured laundry made from cotton or linen
Color or mild detergent without optical brighteners	Cotton, Synthetic	20/40°C	Coloured laundry made from easy care fibers or synthetic materials
Mild washing detergent	Synthetic	20°C	Delicate textiles, silk, viscose
Special wool detergent	Woollens	20/40°C	Wool



Note!

- Agglomerating or ropy detergent or additive can be diluted in some water before pouring it into the detergent dispenser, to avoid its inlet to get blocked and thus cause a water overflow.
- Please choose the suitable type of detergent to get a maximum of washing performance and a minimum of water and energy consumption
- To achieve the best cleaning result a proper detergent dosing is important.
- Use a reduced detergent amount if the drum is not filled completely.
- Always adjust the amount of detergent to the water hardness, if your tap water is soft, use less detergent.
- Dose according to how dirty your laundry is, less dirty clothes require less detergent.
- Highly concentrated (compact detergent) requires particularly accurate dosing

Following symptoms are a sign of detergent overdosing:

- Heavy foam formation
- Poor washing and rinsing result


Following symptoms are a sign of detergent underdosing:

- Laundry turns grey
- Built-up of lime scale deposits on the drum, the heating element and/or the laundry

Operation

Control Panel

Model: WFEON CEL 8014 IEBT SLR
WFEON CEL 9014 IEBT SLR
WFEON CEL 1014 IEBT SLR

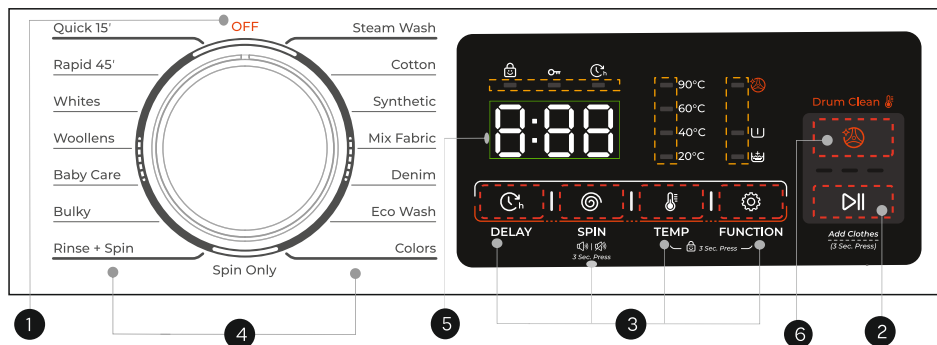

1 Off

Turn the appliance on and off

2 Start/Pause

Start or pause your programme.

3 Option

This allows you to select additional functions and will light when selected.

4 Programmes


Available according to the laundry type.

5 Display

The display shows settings, estimated remaining time, options and status messages

6 Drum Clean

Specially set in this machine to clean the drum and tube.

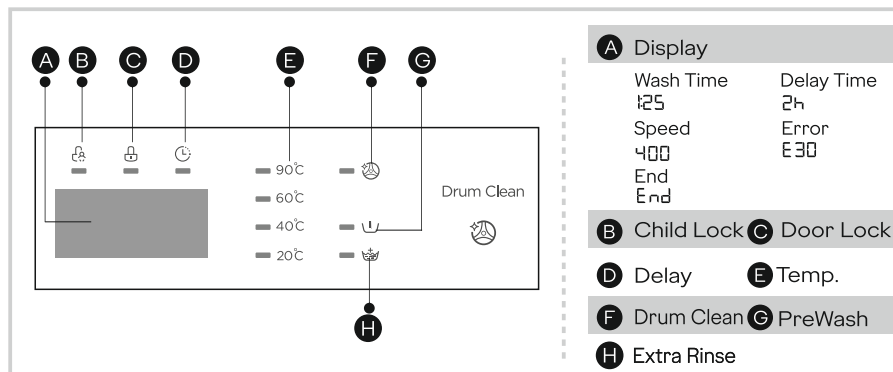

*The image is for representation purpose only.

Operation

Programmes

Model: WFEON CEL 8014 IEBT SLSR

WFEON CEL 9014 IEBT SLSR

WFEON CEL 1014 IEBT SLSR

Programme:	Load (kg)	Display Time	Load (kg)	Display Time	Load (kg)	Display Time
	8.0		9.0		10.0	
Steam Wash	4.0	1:48	4.5	1:48	5.0	1:48
Cotton	8.0	1:28	9.0	3:39	10.0	1:28
Synthetic	4.0	1:58	4.5	3:18	5.0	1:25
Mix Fabric	8.0	1:20	9.0	1:20	10.0	1:20
Denim	8.0	1:40	9.0	1:40	10.0	1:40
Eco Wash	8.0	3:38	9.0	3:48	10.0	3:59
Colors	4.0	1:01	4.5	1:01	5.0	1:01
Spin Only	8.0	0:12	9.0	0:12	10.0	0:12
Rinse + Spin	8.0	0:20	9.0	0:20	10.0	0:20
Bulky	8.0	1:48	9.0	1:48	10.0	1:48
Baby Care	8.0	1:42	9.0	2:01	10.0	2:01
Woolens	2.0	1:07	2.0	1:07	2.0	1:07
Sports Wear	4.0	0:47	9.0	0:47	10.0	0:47
Rapid 45'	2.0	0:45	2.0	0:45	2.0	0:45
Quick 15'	2.0	0:15	2.0	0:15	2.0	0:15
Drum Clean	0	1:18	–	1:18	–	1:18



Note!

- The parameters in this table are only for user's reference. The actual parameters may be different with the parameters in above mentioned table.

Operation

Programmes

Programmes are available according to the laundry type.

Programmes	
Cotton	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
Synthetic	Wash synthetic articles, for example: shirts, coats, blending. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.
Baby Care	Washing the baby's clothes, cleans baby wear to protect the baby's skin.
Rapid 45'	Washing few and not very dirty clothes quickly.
Mix Fabric	Mixed load consisting of textiles made of cotton and synthetics.
Denim	Specially for denim material clothing like jeans etc.
Colors	Washing brightly colored clothes, it can protect the colors better.
Quick 15'	Extra short programme, suitable for lightly soiled, small load of laundry.
Woollens	Hand or machine-washable wool or richwool textiles. Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor).
Spin Only	Extra spin with selectable spin speed.
Rinse + Spin	Extra rinse with spin.
Sports Wear	Washing the active wear.
Bulky	This program is specially designed for washing Bulky/Bedlinen like bedsheets, blankets etc.
Intensive Wash	To increase the washing effects, washing time is increased.
Eco Wash	Default 40°C, not selectable, suitable for laundry washing at about 40°C-60°C.
Drum Clean	Specially set in this machine to clean the drum and tub. It applies 90 °C high temperature sterilization to make the clothes washing more green. When this programme is performed, the clothes or other washing cannot be added. When proper amount of chlorine bleaching agent is put in, the barrel cleaning effect will be better. The customer can use this programme regularly according to the need.



Note!

Reference to your product to select the programmes.

Operation

Option

Cycle	Default Temp.°C	Default spin speed in rpm			Additional functions
Wash cycles		8 kg	9 kg	10 kg	
Cotton	40	1000	1400	1000	Delay, 
Steam Wash	40	800	1000	1000	Delay,
Synthetic	40	800	1200	1000	Delay, 
Mix Fabric	40	1000	1000	1000	Delay, 
Denim	60	800	800	800	Delay, 
Eco Wash	--	1400	1400	1400	Delay,
Colors	20	1000	1000	1000	Delay, 
Spin Only	--	1000	1000	1000	Delay,
Rinse + Spin	--	1000	1000	1000	Delay, 
Bulky	40	1000	1000	1000	Delay, 
Baby Care	60	1000	1000	1000	Delay, 
Woollens	40	600	600	600	Delay, 
Sports Wear	20	800	800	800	Delay, 
Rapid 45'	20	800	800	800	Delay, 
Quick 15'	Cold	800	800	800	Delay,

Note!

- For the maximum spin speed, program time, and other details of the Eco Wash program, please refer to the content on the Product Fiche page.
- The table shows which cycle offers which options for adjustment. If an adjustment is not possible for a cycle.

For Energy Program, Select Cotton program and set temperature at 60°C and rpm at 1400. Options for test in accordance or in conformity in standards IEC : 60456 : 2010 & BEE Schedule 12.

Operation

Spin Speed

When needed, the spinning speed can be adjusted pressing the Speed button in the following steps: 0-400-600-800-1000-1200-1400

Delay

Set the Delay function:

1. Select a programme;
2. Press the Delay button to choose the time (the delaying time is 0-24 H.);
3. Press [Start/Pause] to commence the delay operation



Choose the Programme

Setting time

Start

Cancel the Delay Function:

Press the [Delay] button until the display shows/OH. It should be pressed before starting the programme. If the programme is already started, switch off programme to reset a new one.

PreWash

Extra washing function before the main washing cycle starts to increase the washing performance.

Note: Detergent needs to be added to the compartment I.

Extra Rinse

The laundry will undergo extra rinse once after you select it.

Drum Clean

After completing the set counting period of 25 cycles, the drum clean lamp flashes, reminding the user to run the program. The water temperature of 90 degrees enhances the effectiveness of drum cleaning, ensuring superior cleanliness.

Release condition:

1. Press and hold the Drum Clean button for 3 seconds; the drum clean reminder will be cancelled, and the washing cycles will be recounted for another 25 cycles.
 2. The counted cycles will be recounted when the Drum Clean programme is completed.
-

Temp.

When needed, the washing temperature can be adjusted by pressing the temperature button in the following steps: Cold - 20°C - 40°C - 60°C - 90°C.

Operation



Child Lock

To avoid mis operation by children.



Choose the Programme



Start



Press [Temp] and [Function]
3 sec. till buzzer beep.

! Caution!

When child lock is activated and program starts, child lock indicator will switch on, "CL" and remaining time on the display are alternately displayed. On pressing the other buttons will make child lock indicator flash. When the program finishes, "CL" and "END" will alternate on the display.

- Only press and hold the two button can release child lock, even power off, switch off and program end
- The "Child Lock" will lock all buttons except Power button and Child Lock button
- Please release child lock before selecting program and starting washing.



Mute the buzzer



Choose the Programme



Press the [Spin] button for 3sec.,
the buzzer is mute.

To activate the buzzer function, press the button again for 3 seconds. The setting will be kept until the next reset.

! Caution!

After Muting the buzzer function, the sounds will not be activated any more.



Reload

This operation can be executed during the washing progress. When the drum is still rolling and there is large amount of water with high temperature in the drum. The state is unsafe and the door cannot be opened forcefully. To Press

[▶||] 3sec. to reload, and start the clothes adding in the midway function. Please follow the steps as below:

1. Wait until the drum stops rotation.
2. The door lock is unlocked.
3. Close the door when the clothes are reloaded and press the [Start/Pause] button.



Press[3s for Reload]3sec.



Reload the clothes



Start


Maintenance

Warning!

- Always unplug the appliance and close the water tap before cleaning and maintenance.

Cleaning the Cabinet

Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted, nonabrasive, neutral detergents when necessary. If there is any water overflow, use a cloth to wipe it off immediately. Never use sharp items to clean the appliance.

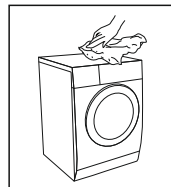

Caution!

- Never use abrasive or caustic agents. Formic acid or its diluted solvents or similar substances, like alcohol or chemical products.

Cleaning the Drum

Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!


Note!

- Keep any laundry away from the machine while cleaning the drum.

Cleaning the Door Seal and Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up, it can cause leakages. Remove any coins, buttons, and other objects from the seal after each wash.

Clean the door seal and glass every month to ensure the normal operation of the appliance.

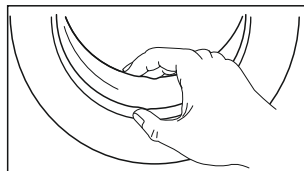

*The image is for representation purpose only.

Maintenance




Cleaning the Inlet Filter



Note!


- Diminishing water flow is a sign that the filter needs to be cleaned.

1. Close the tap and remove the water supply hose from it.
2. Clean the filter with a brush.
3. Unscrew the water supply hose from the backside of the machine. Pull out the filter with long-nose pliers.
4. Use a brush to clean the filter.
5. Reinstall the filter to the water inlet and reconnect the water supply hose.
6. Clean the inlet filter every 3 months to ensure the normal operation of the appliance.

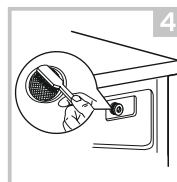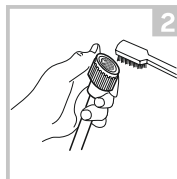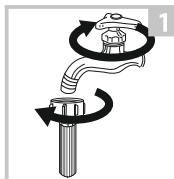


Clean the Detergent Dispenser


1. Press down the release [🔽] on the softener cover and pull the dispenser drawer out of the recess. Clean the inside of the recess with a brush.
2. Lift the softener cover off the dispenser drawer and wash both items with water.
3. Restore the softener cover and push the drawer back into the recess.

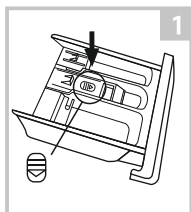


Press the release and remove the dispenser drawer

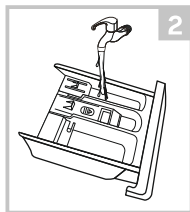

Clean the dispenser drawer and the softener cover under water

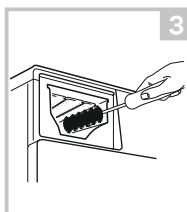

Clean the recess with an soft brush

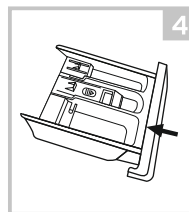

Insert the dispenser drawer



Note!

- Do not use abrasive or caustic agents to clean plastic parts.
- Clean the detergent dispenser every 3 months to ensure the normal operation of the appliance.


*The image is for representation purpose only.

Maintenance


Cleaning the Drain Pump Filter

Warning!


- Make sure that the machine has finished the washing cycle and is empty. Switch it off and unplug it before cleaning the drain pump filter.
- Be careful of hot water. Allow the water to cool down. Or else, there is a risk of scalding.
- Clean the filter periodically every 3 months to ensure the normal operation of the appliance.

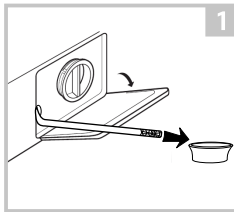


Open the filter door. Unplug the drain plug and allow the water to flow out. Use any container to collect water flowing on the floor

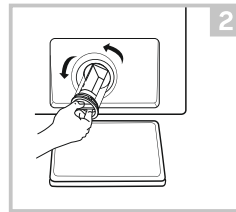

Open the filter by turning it counterclockwise

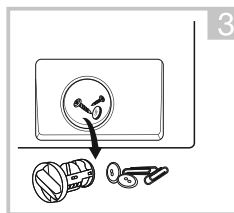

Remove extraneous matter

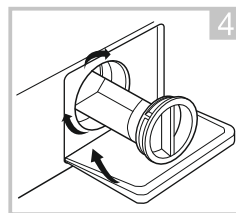

Close the lower cover cap

Caution!

When the appliance is in use and depending on the programme selected, there can be hot water in the pump. Never remove the pump cover during a wash cycle; always wait until the appliance has finished the cycle and is empty. When replacing the cover, ensure it is securely retightened.

*The image is for representation purpose only.

Maintenance

Trouble Shooting

Whenever there is a problem with the appliance, check if you can solve it, following the resolutions below. If the problem persists, please contact the customer service.

Description	Possible cause	Solution
Appliance does not start	Door is not closed properly. Clothes are stuck.	Close the door properly and restart. Check the laundry.
Door can't be opened	Safety protection is activated.	Disconnect the power and restart.
Water leakage	Connections are not tight enough.	Check and fasten the water inlet pipe. Check and clean the outlet hose.
Detergent residues in the detergent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.
Indicator or display does not work	PC board or harness have connection problems.	Switch off the power and check if the mains plug is connected properly.
Abnormal noise	Fixing bolts still in place. Floor is not solid or level.	Check if the fixing bolts have been removed Make sure the appliance is installed on a solid and level floor.

Error Codes

Description	Possible cause	Solution
E30	Door is not closed properly	Close the door properly and restart.
E10	Water injecting problem during wash cycle.	Check if the water pressure is high enough. Straighten the water pipe. Clean the inlet valve filter.
E21	Overtime water draining	Check the drain hose for blockage.
E12	Water overflow	Restart the appliance.
EXX	Others	Restart the appliance. If problem persists, please contact the customer service.

*The image is for representation purpose only.

Maintenance

Customer service

Warning!

Risk of Electric Shock

- Never try to repair an appliance that is defective or presumed to be defective.
You may put your own and future users' lives in danger. Only authorized specialists are allowed to carry out this repair work.
- Improper repair will void the warranty, and subsequent damages can't be recognised!

Transport

Important Steps when Moving the Appliance


- Unplug the appliance and close the water inlet tap.
- Check if the door and the detergent dispenser are closed properly.
- Remove the water inlet pipe and the outlet hose from the house installations.
- Let the water drain completely from the appliance (see "Maintenance Cleaning the drain pump filter").
- Important: Reinstall the 4 transport bolts in the back of the appliance.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.

Technical Specifications

Power Supply **220-240 V~,50 Hz**

MAX.Current 10 A

Standard Water Pressure 0.05 Mpa~1 Mpa

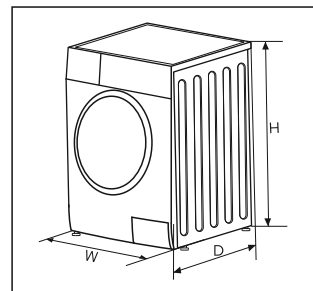

Model	Washing Capacity (kg)	Dimension (W*D*Hmm)	Net Weight (kg)	Rated Power
WFEON CEL 8014 IEBT SLSR	8	595*565*850	68	2000W
WFEON CEL 9014 IEBT SLSR	9	595*565*850	68	2000W
WFEON CEL 1014 IEBT SLSR	10	595*535*850	61	2000W

*The image is for representation purpose only.

Warranty

The Godrej Fully Automatic Washing Machine comes with a 2-year comprehensive warranty & a 10-year motor warranty from the date of purchase against defective material or workmanship. In case of any such defect, Godrej & Boyce Manufacturing Company Ltd. (a part of the Godrej Enterprises Group) undertakes to get the appliance repaired free of charge during the warranty period, subject to the terms & conditions below.

Instructions For The Customer

1. Kindly ensure that the dealer fills the warranty card correctly and completely.
2. You should retain the warranty card for record and produce the same in the event of any warranty repairs.
3. In the event of a defect developing in the product, contact the nearest authorised godrej & boyce service centre for obtaining warranty service and provide the defect, model details & serial no.
4. Product will function between +/- 5% of rated volts. For any fluctuation beyond specified limit, company shall not be responsible. In turn, warranty stands terminated.
5. Earthing provision is necessary for the safety.
6. Frequency must be between 5% variation of 50 Hz. Beyond this, company shall not be liable for any unforeseen hazards like fire, shock etc. & in turn, warranty stands terminated.
7. Appliance or any part thereof is subjected to neglect, abuse or misuse, tampering, alteration, accident, fire, floods or other act of god, or damage by rodents or insects, the company is not responsible for any damage caused to the appliances & shall not be liable for any consequential loss or compensation, not refund of purchase price or replacement of the appliances.
8. In event of repair/replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of warranty. Moreover, the time taken for repair/replacement and in transit whether under the warranty or otherwise shall not be excluded from the warranty period.
9. Water supply required above 0.5 bar i.e. 7.25 PSI to operate the fully automatic washing machine. Without This, company shall not be able to install the product.
10. Any damage/defect arising due to entry of coin/foreign particle into the machine, and causes malfunctioning is not covered under warranty. These calls will be chargeable to customer during warranty period.
11. House wiring related issues are not covered under warranty and such calls will be chargeable to customer.
12. Calls related to lint filter or water Inlet filter cleaning are not covered under warranty and are chargeable to customer.

Terms and Conditions

1. Repairs and replacement of parts will be carried out through the authorized customer service center.
2. All transportation and handling expenses incurred while repairing will be payable by the customer.
3. For appliances installed beyond the municipal limits of the jurisdiction of the authorized service center, charges towards the technician's visit and other incidentals will be borne by the customer.
4. While the company will make every effort to carry out the repairs at the earliest, it is, however, made expressly clear that the company is under no obligation to do so in a specified period of time.
5. The company/its authorized service center will collect any parts or components replaced.
6. Warranty does not cover accessories to the appliance.
7. The company's obligation under this warranty shall be limited to repair or providing replacement of part/s only.
8. In the event of any unforeseen circumstances and spares not being available, the company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
9. Warranty is not applicable in case the original number (serial no. sticker) is removed, obliterated, or altered from the machine or cabinet.
10. The warranty is confined to the first purchase of the Godrej product only and is non-transferable.
11. Proof of purchase (i.e., purchase invoice/receipt, along with the corresponding model and/or serial number of the unit, must be presented when requesting service under warranty).
12. In case of repairs or replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of warranty.
13. The company or its authorized service providers reserves the right to retain any part(s) of the component replaced at its discretion in the event of a defect being noticed in the equipment during the warranty period.
14. It is the sole responsibility of the customer to provide necessary support to the company if the unit to be installed is not suitable for the installer or the service engineer to reach.
15. No dealer/distributor/retailer has authority to vary the terms of the above warranty.
16. A 2-year warranty is applicable on all the parts except plastic, rubber, and glass parts (i.e., the inlet/outlet hose, plastic knobs, top cover, lint filters, glass window, rubber valve, etc.).
17. Warranty does not cover repairing of any external accessories supplied by dealer/Godrej as a promotional scheme.
18. Removal of foreign objects/substances from machines, including the pump and inlet hose filter; for example, grit, nails, buttons, coins, etc. Will not be covered in warranty.
19. The warranty does not cover damage caused by commercial, business, or industrial purposes; this warranty is valid for equipment dedicated to domestic use only.

This warranty is valid only if it is filled in and stamped by our authorised dealer stating the date of purchase. Warranty Voids If:

1. The warranty card is not completed properly at the time of purchase.
2. The completed warranty card is not presented to the authorised personnel at the time of service of the product.
3. The appliance is not operated according to instructions given in the "User Guide/Manual".
4. Defects are caused by improper use, which shall be determined by the company's authorised personnel.
5. Unauthorized persons carry out any repair work.
6. Defects are caused by reasons beyond control, like abnormal voltage, acts of God or while in transit to service centre or purchaser's residence.
7. The warranty is not valid in case the serial number is deleted, defaced or altered.
8. Damage to the appliance or any parts due to transportation or shifting is not covered by the warranty.
9. The warranty automatically expires after 2 years from the original date of purchase, even if the appliance may not have been in use for any time for whatever reasons during the warranty period.

Branches / Service Connect

For any further assistance.

Branches			
Ahmedabad Bangalore Bhopal Bhubaneshwar Chandigarh/Mohali Chennai	Coimbatore Delhi Faridabad Ghaziabad Guwahati Hyderabad	Jaipur Kochi Kolkata Lucknow Mumbai Nagpur	Patna Pune Raipur Ranchi Vijaywada

Call	WhatsApp
080-6743-6743	Text 'hi' To 9321665511 On Whatsapp

24 X 7 Call Centre • Weekend Service

Website: www.godrejenterprises.com/support
E-mail: smartcare@godrej.com SMS: <godrejcare> to 56677

[illegible]

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

This image shows a single page of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)
Customer copy

Model No.

Unit Sr. No.

Date Of Purchase

Customer's Name & Address

Tel. _____

Dealer's Name & Address

Tel. _____

Customer's Signature:

Protection of Environment:

Protection of environment" is one of the core values of Godrej and we seek your co-operation to make sure that the product, packaging and plastic material is not disposed as unsorted municipal waste.



This symbol is known as the "Crossed-out Wheellie Bin Symbol". It means that the product should not be disposed of with your general house-hold waste.

It should be disposed of only through the company's collection points with special treatment so as to prevent any damage to the environment. Please call: **080-6743-6743** for applicable buy back arrangement or www.godrejenterprises.com/green-think for details about authorised collection points.

'This product is RoHS compliant'

Godrej

Godrej and Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group)

Plant 11, Pirojshanagar, Vikhroli (W), Mumbai 400 079.

VO 07012025