



Manuals.plus / > Panasonic / > Panasonic NA-147MR2L01 7Kg Front Load Washing Machine User Manual

Panasonic NA-147MR2L01

Sign in to save this manual

Sign in to bookmark this manual and keep private notes.

Panasonic NA-147MR2L01 7Kg Front Load Washing Machine User Manual

Model: NA-147MR2L01

Advertisements

1. INTRODUCTION

Thank you for purchasing the Panasonic NA-147MR2L01 7Kg Front Load Washing Machine. This manual provides essential information for the safe and efficient operation, installation, maintenance, and troubleshooting of your appliance. Please read this manual thoroughly before using the washing machine and retain it for future reference.

2. SAFETY INFORMATION

To prevent injury to yourself and others, and to avoid property damage, observe all safety instructions. Incorrect use due to disregard of instructions may cause harm or damage.

Advertisements



- Ensure the washing machine is installed on a firm, level surface to prevent vibration and noise.
- Do not allow children to play with or operate the appliance. Activate the Child Lock feature when necessary.
- Do not wash items that are soiled with flammable substances (e.g., gasoline, oil) as this may cause fire or explosion.
- Always unplug the appliance from the power outlet before cleaning or performing any maintenance.
- Do not open the door forcefully during operation, especially during high-temperature cycles.
- Ensure the power cord is not damaged and is properly grounded.

3. PRODUCT OVERVIEW

The Panasonic NA-147MR2L01 is a 7Kg capacity front-load washing machine designed for efficient and gentle laundry care. It features a 1400 RPM spin speed for faster drying and 15 wash programs to suit various fabric types and soil levels.

Advertisements





Front view of the Panasonic NA-147MR2L01 7Kg Front Load Washing Machine, dark silver in color, showing the control panel, detergent drawer, and main drum door.

4. SETUP AND INSTALLATION

4.1 Unpacking

Carefully remove all packaging materials. Ensure all components, including the water inlet hose and rat cover, are present. Dispose of packaging responsibly.

Advertisements



4.2 Location Requirements

- Place the machine on a solid, level floor. Adjust the leveling feet if necessary to ensure stability.
- Ensure adequate space around the machine for ventilation and access.
- The location should have a cold water supply, a suitable drain, and a grounded electrical outlet.

4.3 Water Connection

Connect the provided water inlet hose to the cold water tap and the inlet valve at the back of the washing machine. Ensure connections are tight to prevent leaks.

4.4 Drain Hose Installation

Position the drain hose securely into a standpipe or over the edge of a sink, ensuring it is not kinked or blocked. The end of the drain hose should be at an appropriate height as specified in the full installation guide.

Advertisements



4.5 Power Connection

Plug the power cord into a grounded 230V AC electrical outlet. Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

5.1 Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. Close the door firmly.

5.2 Adding Detergent and Softener

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent to the main wash compartment and fabric softener to its designated compartment. Refer to detergent packaging for dosage recommendations.

Advertisements



5.3 Selecting a Wash Program

Turn the program selector knob to choose one of the 15 available wash programs. The display will show the default settings for the selected program. You can adjust temperature, spin speed, and

other options as needed.

5.4 Starting a Cycle

Press the Start/Pause button to begin the wash cycle. The machine will automatically proceed through the selected program.

5.5 Child Lock Function

To prevent accidental changes to settings or operation by children, activate the Child Lock function. Refer to the control panel instructions for specific activation steps.

Advertisements



6. WASH PROGRAMS

The NA-147MR2L01 offers 15 wash programs, including specialized cycles for various fabric types and cleaning needs. These programs are designed to optimize water usage, temperature, and spin speed for best results.

- **Gentle Kizukai Wash:** A specialized program for delicate items, ensuring gentle yet effective cleaning.
- **Rinse&Spin:** For rinsing and spinning items without a full wash cycle.
- Other programs typically include options for Cotton, Synthetics, Mixed Load, Wool, Quick Wash, etc. Consult the control panel for the full list and specific details.

The machine features a **1400 RPM** spin speed, which significantly aids in faster drying of clothes by extracting more water.

Advertisements



7. MIRAIE FEATURES

The MirAie platform integrates smart features to enhance your washing experience:

- **Wash Wizard:** Provides recommendations for optimal wash cycles based on load type and soil level.
- **Stain Genius:** Offers specialized advice and settings for effective stain removal.
- **Water & Energy Tracking:** Monitors and displays water and energy consumption, helping you manage resources.
- **Maintenance Alert:** Notifies you when maintenance tasks, such as cleaning the filter, are due.

- **One Touch Service:** Simplifies service requests and support.
- **Weather Alert & Recommendation:** Provides relevant washing recommendations based on local weather conditions.

8. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

Advertisements



8.1 Cleaning the Drum

Run a drum clean cycle (if available) or a hot wash with no laundry and a descaling agent or white vinegar periodically to prevent odor and residue buildup.

8.2 Cleaning the Detergent Dispenser

Remove the detergent drawer and rinse it under running water to clear any detergent or softener residue. Clean the housing with a brush if necessary.

8.3 Cleaning the Drain Filter

Locate the drain filter (usually at the bottom front of the machine). Place a shallow tray underneath to catch water. Unscrew the filter, remove any lint or debris, and clean it thoroughly. Reinstall securely.

Advertisements



8.4 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

9. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

- **Machine does not start:** Check if the power cord is plugged in, the door is closed properly, and the Start/Pause button has been pressed.
- **No water filling:** Ensure the water tap is open and the water inlet hose is not kinked. Check water supply pressure.
- **Water not draining:** Check if the drain hose is kinked or blocked. Clean the drain filter.

- **Excessive vibration/noise:** Ensure the machine is level and all transit bolts (if applicable) have been removed. Distribute laundry evenly in the drum.
- **Error codes:** If an error code appears on the display, consult the full user manual or contact customer support for specific guidance.

Advertisements



10. SPECIFICATIONS

Feature	Specification
Model Number	NA-147MR2L01
Capacity	7 Kilograms
Spin Speed	1400 RPM
Number of Wash Cycles	15
Drum Material	Stainless Steel
Operation Mode	Automatic
Product Dimensions (LxWxH)	49.5 x 59.5 x 85 Centimeters
Item Weight	41.3 Kilograms
Voltage	230 Volts
Special Features	Child Lock, Drynamic Spin, Gentle Kizukai Wash Lite, Rinse&Spin
Energy Rating	5 Star, Energy Star
Included Components	1 Machine, 1 water inlet hose, rat cover, user manual

11. WARRANTY AND SUPPORT

11.1 Warranty Information

This Panasonic washing machine comes with a **2-year warranty**. Please retain your purchase receipt for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product.

11.2 Customer Support

For technical assistance, service requests, or further inquiries, please contact Panasonic customer support. You can also visit the official Panasonic store for more information:

[Visit the Panasonic Store on Amazon.in](#)

Advertisements



Manufacturer Address: Panasonic Life Solutions India Private Limited, 12th Floor, Ambience Tower I, Ambience Island NH-8, Gurgaon, Haryana-122002, India. Tel: +91-0124-487-1300.

Advertisements



Related Documents - NA-147MR2L01

	Panasonic NA-S106FR2 Washing Machine User Guide User guide for the Panasonic NA-S106FR2 washing machine, detailing various wash cycles, features, and operation.
	Panasonic Washing Machine Service Manual Comprehensive service manual for Panasonic fully automatic washing machines (household use). Includes safety precautions, part names, specifications, technical descriptions, installation guides, and troubleshooting tips.
	Panasonic Washing Machine Operating and Installation Manual for NA-V10FX1, NA-V95FX1, NA-V85FX1, NA-V85FB1 This comprehensive manual provides detailed operating and installation instructions for Panasonic front-load washing machines (models NA-V10FX1, NA-V95FX1, NA-V85FX1, NA-V85FB1), covering safety, usage, maintenance, and troubleshooting.

	Panasonic Washing Machine NA-20VDR1, NA-19VDG1, NA-18VDG1 Operating & Installation Instructions Comprehensive operating and installation instructions for Panasonic washing machine models NA-20VDR1, NA-19VDG1, and NA-18VDG1. Includes safety guidelines, maintenance, and troubleshooting.
	Panasonic NA-24VDW1, NA-22VDW1, NA-20VDW1 Washing Machine Operating & Installation Instructions Comprehensive operating and installation instructions for the Panasonic NA-24VDW1, NA-22VDW1, and NA-20VDW1 front-load washing machines. Includes setup, maintenance, troubleshooting, and MyPanasonic+ app integration guides.
	Panasonic Fully Automatic Washing Machine Operating & Installation Instructions Comprehensive guide for Panasonic Fully Automatic Washing Machines (Models NA-F75S7, NA-F70S7, NA-F65S7, NA-F75V7, NA-F70V7, NA-F65V7, NA-F62V7, NA-F70X7, NA-F65X7, NA-F62X7). Includes safety, installation, operation, maintenance, and troubleshooting instructions.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Advertisements



PANASONIC NA-147MR2L01

KEEP EXPLORING MANUALS, GUIDES, AND SUPPORT DOCS.

Search model numbers, browse help resources, and jump straight into the next PDF manual or troubleshooting page without losing your place.

Panasonic NA-147MR2L01

Search Manuals+

EXPLORE

[Deep Search](#)

[Upload](#)

[Login](#)

MANUALS+

[Home](#)

[About Us](#)

[Privacy Policy](#)

[Login](#)

GUIDES

[Amazon Manuals](#)

[AliExpress Manuals](#)

[Video Guides](#)

[Login](#)

FOLLOW

[@manualsplus](#)

[YouTube](#)

[LinkedIn](#)

[Facebook](#)

[Login](#)

Manuals+

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners.

SAVE MANUALS, NOTES, UPLOADS, AND QUESTIONS

Sign in with Google, X, or a passkey to keep private notes on saved manuals, track public uploads, and revisit questions you posted.

[Open login options](#)