

BRAND INTRODUCTION / 01 PRODUCTS / 02

NAME OF PARTS	02
SAFETY PRECAUTIONS	03-04
PACKING LIST	05
SPECIFICATION	05
INSTALLATION AND ADJUSTMENT	05
USAGE OF DRAIN HOSE	06
CONFIRM THE WATER FAUCET	06-07
PREPARATION BEFORE WASHING	08
THE MUST IN WASHING	08
USAGE OF DETERGENT	09
USAGE OF THE OPERATION BUTTONS	09-12
OPERATING PROCEDURE	12-13
FINISH WASHING	13
AFTER WASHING	13 14
TROUBLE SHOOTING ANSWER TO QUESTION	14-15
E-WASTE GUIDELINE	16-17
WARRANTY CARD	18

01 BRAND INTRODUCTION


Haier Group—
Established in 1984, Haier Group is a world-leading provider of solutions to beautiful life. Haier has topped Euromonitor's World Home Appliance Brands and its subsidiary Haier Smart Home Co., Ltd. is among the Fortune Global 500 Companies. Thank you for purchasing Haier product.

Haier


06 USAGE OF DRAIN HOSE

The drainage shall be smooth with the drain hose.

- The drain hose should be installed at height less than 10cm for smooth drainage.

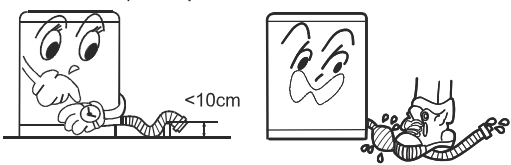


- Do not trample or press the drain hose

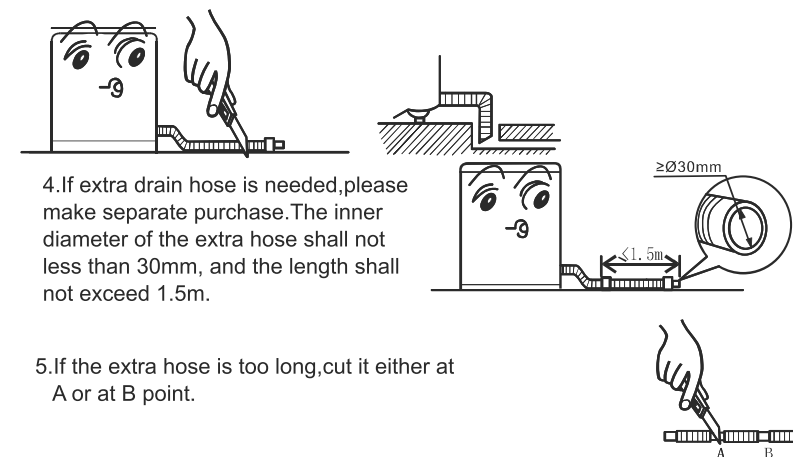

Note: The instructions for appliances connected to the water mains by detachable hose-sets shall state that the new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.


06 CONFIRM THE WATER FAUCET

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused

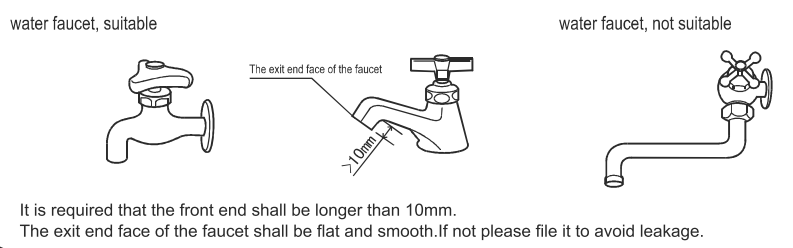

It is required that the front end shall be longer than 10mm. The exit end face of the faucet shall be flat and smooth. If not please file it to avoid leakage.

02 NAME OF PARTS

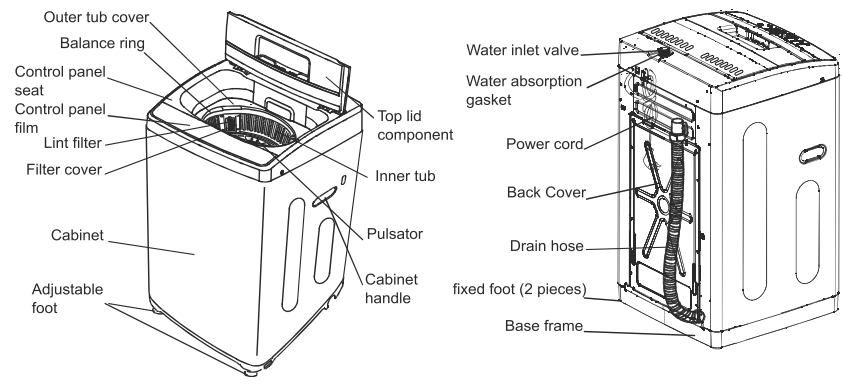

Reference machine snap for all TL model



Notes: All illustrations in this manual are given for reference only. Your products and accessories may show differences from these illustrations due to our continuous improvement.

MEANING AND DESCRIPTION OF THE SYMBOLS

Warning sign 	Contents marked with that symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the contents, otherwise it may cause damage of the machine or endanger the personal safety of the user.
Forbidding sign 	Contents marked with that symbol are actions forbidden to perform. Performing of those actions may result in damage of the machine or endanger the personal safety of the user.


- Please check if the power receptacle has good earthing condition before using to guarantee your safety.

03 SAFETY PRECAUTION

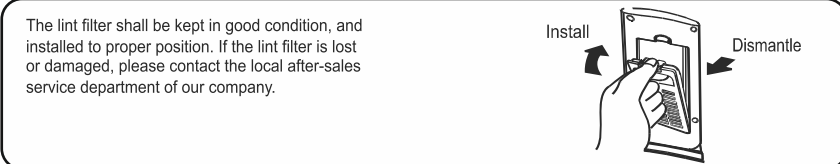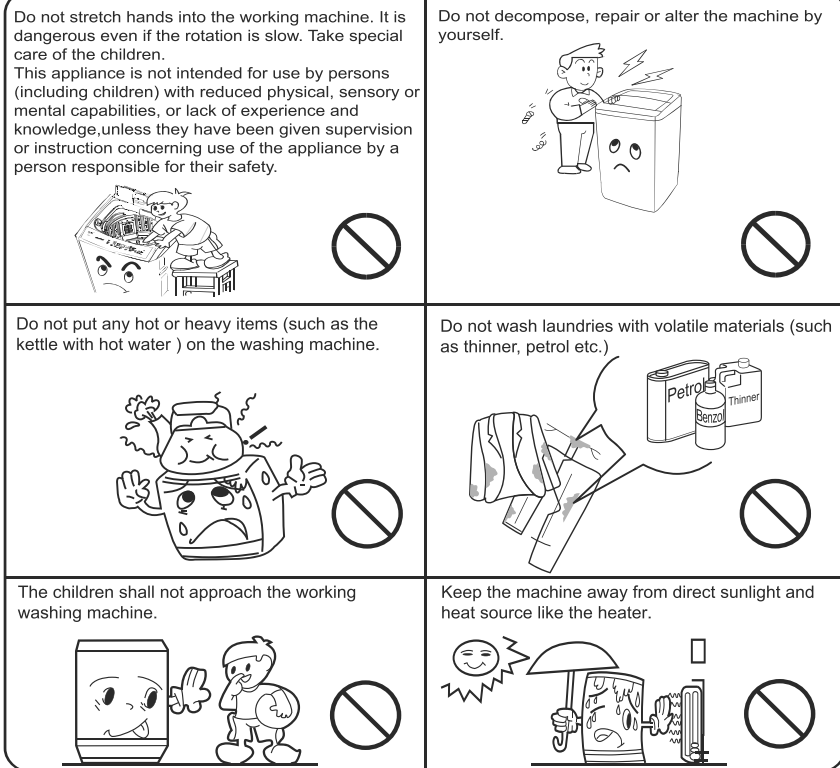

- If power cord or other parts of this machine become damaged or faulty, please contact a technician to have it repaired. Do not attempt repairs by yourself as this may cause personal harm or void warranty.
- Smart hinge prevents sudden closing of the lid. Lid is heavy, be careful while closing of the lid. Do not let your hands or any other material be caught below the lid. It might cause injury or damage. Lid closing time is dependent on ambient temperature. The higher the ambient temperature, the shorter the lid closing time and vice versa. Smart closing lid performs best when lid is closed from full open condition.
- * Smart hinge available only in selected models

08 PREPARATION BEFORE WASHING

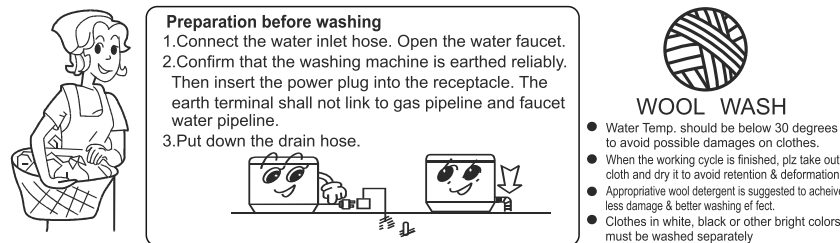

SORTING

- Soil** (Light, Normal, Heavy) Sort clothes based on their type and level of dirt.
- Color** (Darks, Lights, Whites) Separate white fabrics from colored fabrics.
- Lint** (Light, Normal, Heavy) Separate lint producers and lint collectors. Lint producers: Towels, Terry clothes, Nappies, Chenille. Lint collectors: Synthetic, Corduroy, Permanent, Press, Socks.


PAY ATTENTION TO FOLLOWING BEFORE WASHING

Check if the laundries has any special requirement for washing. (fabric should be marked machine wash)	Clear the pocket. Take out the coins, keys hairpins etc.	Tie the long strips; fasten the buttons; close zippers.	The quantity of the laundries shall not be too large. Stretch and loosen the laundries before putting them in the tub.	When the pulsator is running, the buttons of the laundries may cause noise. For the sake of discretion, please wash the laundries with buttons separately (along with laundry washing bag).
a. Check if the laundries are applicable for washing in machine.	b. Washing lint-shedding and lint-attracting clothes together may affect wash quality.	c. Lint-producing fabrics with lint-collector clothes can reduce washing effectiveness.	d. For those laundries with heavy soil, please first remove the dirt like mud or dust, for the parts with heavy soil, please apply detergent on them in advance, which can make it easier to remove the soil.	e. For those laundries that may get lint ball and those with long fur, turn it over before putting in machine.
f. Do not put the laundries polluted by chemicals into the washing machine directly.				


08 THE MUST IN WASHING MACHINE

- The capacity of washing and spinning of the machine refer to the largest weight of the standard laundries under dry condition that can be washed or spinned in one time. One time washing quantity shall be lower than the rated capacity.
- The thickness, size, type of the cloth will influence the actual washing capacity. It is suitable for one time washing to put in reasonable amount of laundries and the laundries can be turned round in washing.
- Do not select the high water level for laundries less than 1.0kg, so as to avoid splashing of water.

04 SAFETY PRECAUTION

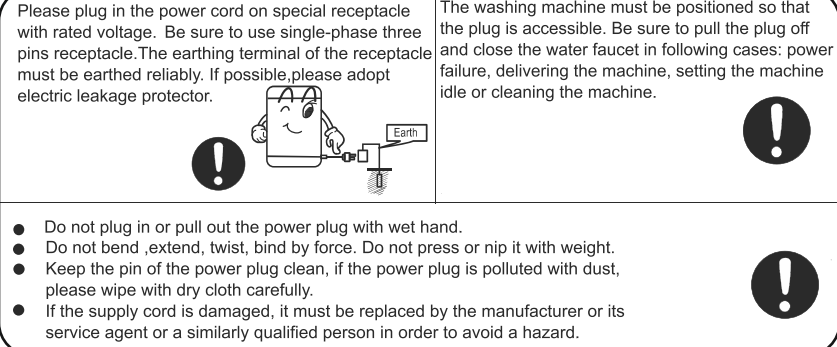

*Motor used in machine is having Thermal Overload protection. So, in case of excessive heating, motor might trip and stop for cooling. In such case, it is suggested to wait till the temperature goes down before starting.

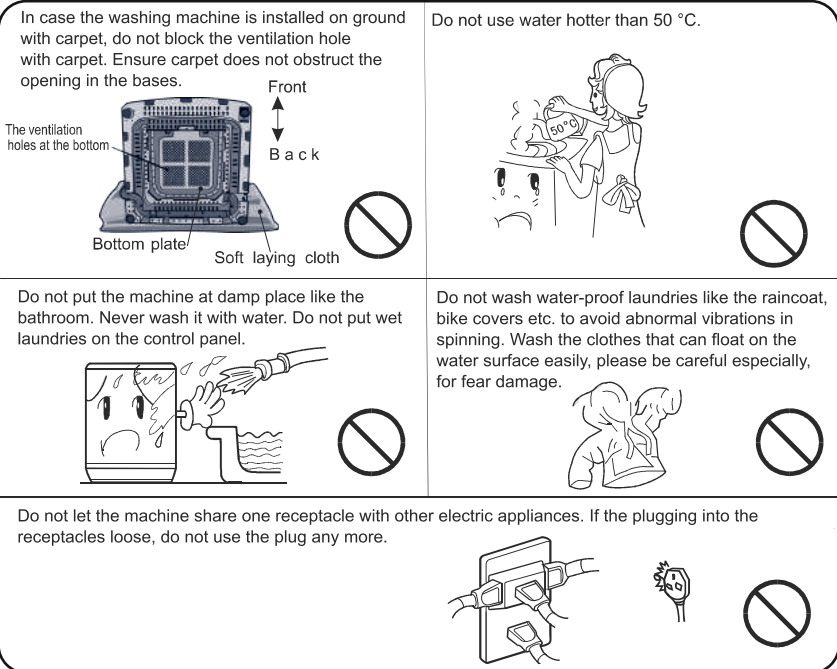


Protection against High Voltage.

- It is recommended to Plug the appliance into an outlet that is protected by a Miniature Circuit Breaker (MCB) to safeguard against electrical overloads sudden spikes and short circuits.
- The MCB should be the correct type and rating suitable for the appliance.
- Regularly check the MCB for any signs of damage or wear. If the MCB trips, reset it only after checking the appliance for faults.
- If the MCB trips frequently, consult a certified electrician to inspect the appliance and electrical circuit for potential issues.

09 USAGE OF THE DETERGENT

- It is suggested to add washing powder into the tub directly under fuzzy program and reserve program.
- Dissolve directly inside the washing machine: (not applicable for fuzzy and reserve program) 1. Add some water (select "1" water level). 2. Add washing powder. Run for about 30s to fully dissolve the powder. Then push the "Start/Pause" button. 3. Put in laundries. Select suitable water level. Push the "Start/Pause" button again.
- Washing powder with poor quality or long-time storage may get caked. Please clean the detergent box duly in usage.
- Quick dissolving of washing powder: 1. Prepare warm water of 30°C and container. 2. Add washing powder while stirring to dissolve it completely.
- Please add suitable washing powder as per the laundries quantity, the set water level and water quantity.
- If you select "Quick" program, it is suggested to use liquid detergent instead of washing powder to guarantee the washing effect.
- It is not recommended to use rich-foam washing powder.

HOW TO USE DETERGENT

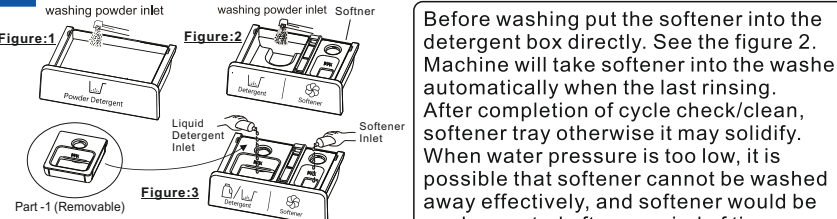

- Softener Usage: Figure 2** Before washing put the softener into the detergent box directly. See the figure 2. Machine will take softener into the washer automatically when the last rinsing. After completion of cycle check/clean, softener tray otherwise it may solidify. When water pressure is too low, it is possible that softener cannot be washed away effectively, and softener would be agglomerated after a period of time. * For usage of powder follow the fig. 1
- Powder/Liquid & Softener Usage: Figure 3** During the usage of liquid detergent put the part-1 (Removable) in the detergent box and when using the powder detergent same part-1 can be remove as per Figure 3.


* For the additional softener and Liquid Detergent box is available in selected models only.

CLOSE THE LID

If you open the lid during running condition the machine will stop with E2 error on display and audible alarm will sound.


09 USAGE OF OPERATION BUTTONS

Explanation of Buttons (Applicable for 826 Series)

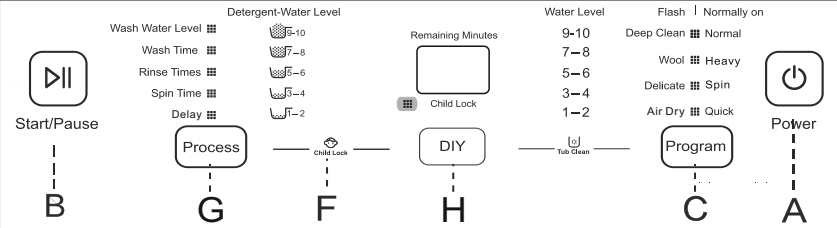

*Above image is only pictorial view, Actual may vary depending on model capacity.

Explanation of Buttons (Applicable for 316, 326, CAF & C3P Series)

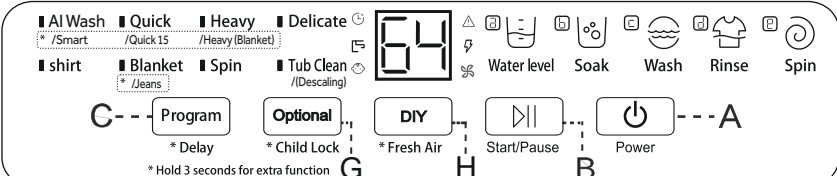

*Above image is only pictorial view, Actual may vary depending on model capacity.

05 PACKING LIST

Name	Quantity	Storage Location
• Automatic washing machine	• One	
• Bottom plate	• One	• Placed inside the Washing machine inner drum.
• User manual	• One	• Inside bag
• Components of the water inlet hose	• One	• Inside Accessory bag
• Warranty Card	• One	• Inside user manual.

05 SPECIFICATION


Capacity Series	Water Level / Water Quantity	Injection Pressure (MPa)	Rated Voltage Frequency	Wash & Spin Capacity
HWV7580-826NZP Series	1/18 2/24 3/30 4/36 5/42 6/48 7/54 8/60 9/65 10/70	0.03MPa-1.0MPa	220V~50Hz	7.5kg/8.0kg
HWV80-316 Series	1/18 2/24 3/30 4/36 5/42 6/48 7/54 8/60 9/65 10/70	0.01MPa-1.0MPa		8.0kg
HWV80-688 Series	1/14 2/18 3/22 4/26 5/30 6/36 7/42 8/48 9/54 10/58	0.01MPa-1.0MPa		8.0kg
HWV80-688 Series	1/15 2/20 3/26 4/31 5/38 6/42 7/48 8/54 9/57 10/62	0.01MPa-1.0MPa		9.0kg
HWV105-316 Series	1/20 2/23 3/28 4/32 5/37 6/43 7/50 8/54 9/60 10/68	0.01MPa-1.0MPa		10.5kg
HWV105-688 Series	1/20 2/23 3/28 4/32 5/37 6/43 7/50 8/54 9/60 10/68	0.01MPa-1.0MPa		10.5kg
ETL105-CAF Series	1/20 2/23 3/28 4/32 5/37 6/43 7/50 8/54 9/60 10/68	0.01MPa-1.0MPa		10.5kg
HWV85-326 Series	1/20 2/25 3/31 4/37 5/41 6/48 7/50 8/55 9/60 10/68	0.01MPa-1.0MPa		8.5kg
HWV85-316 Series	1/20 2/25 3/31 4/37 5/41 6/48 7/50 8/55 9/60 10/68	0.01MPa-1.0MPa		8.5kg
ETL100-C3P Series	1/25 2/29 3/35 4/40 5/45 6/52 7/55 8/60 9/65 10/70	0.01MPa-1.0MPa		10.0kg
ETL00-C858 Series	1/15 2/20 3/26 4/31 5/38 6/42 7/48 8/54 9/57 10/62	0.01MPa-1.0MPa		9.0kg

05 INSTALLATION AND ADJUSTMENT


Please install and adjust the machine according to the requirement of the manual. It is very important for your safety and for operating the machine correctly

INSTALL THE BOTTOM PLATE

- Place the washing machine on the soft laying cloth, the face is towards the upper.
- Insert the bottom cover into the slots of the bottom cover, and then lock in the fitment area.
- Install the washing machine on a solid, flat floor without using stand.

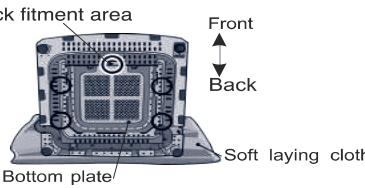

 
If the floor is uneven, adjust the adjustable feet of the washing machine to level position. Uplift the feet slightly and turn the feet to level position. The distance between the washing machine and wall: at least 20 mm. Max. tilt angle on the supporting face 2°.



Adjust the installation position

10 USAGE OF OPERATION BUTTONS

Explanation of Buttons (Applicable for C8 & 688 Non Heater Series)

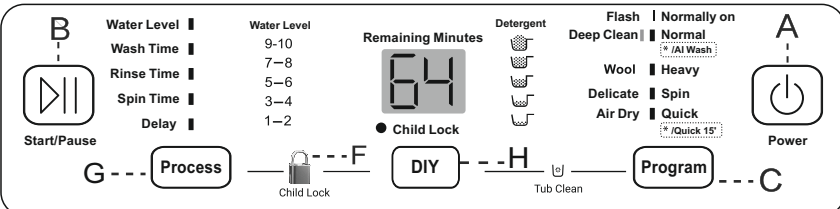


*Above image is only pictorial view, Actual may vary depending on model/capacity.

Indicator mode and meaning

- Off
- Flashing: indicate the running program, or indicate the selected mode or indicate the water level
- On: indicate the program about to run, or indicate the selected mode or indicate the water level

DIGITAL TUBE

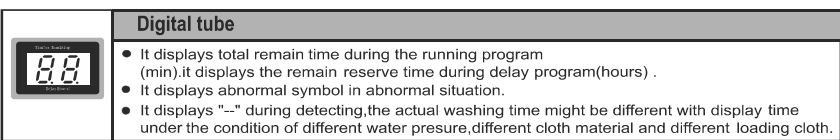


CHILD LOCK FUNCTION

- Child lock function**
 - The function is intended for children safety and preventing the washing program from accidental changes by children
 - Applicable for 316, 326, CAF, & C3P Series :**
 - The function is intended for children safety and preventing children from accidental changes to waiting programs.
 - Press Power button set the desired washing program, after setting, press Start/Pause button, then press Optional button and hold for 3 seconds. The digiton displays "CL", the child lock will activate. All of the buttons are locked and have no function.
 - Release the child lock function: press Optional button and hold for more than 3 seconds. After three beep sound, the child lock function is release. The child lock light goes out.

- (Applicable for 826, C8 and 688 non heater Series)**
 - Press the Start/Pause button, and washing machine begin to run. Then hold the Process and DIY button at the same time for 3 seconds, you will hear 3 beep sound and Child lock will activate and "CL" will display.
 - Release the child function: Press the Process button and DIY button at the same time for more than 3 seconds. After three beep sound, the child lock function is released, or the machine will set to child lock function automatically for using every time.

Note: if you open the lid when the child lock activates, digital tube displays "E2", beeps and stops running; if the safety can be sured and you need to go on with running, you need close the lid, press the water level button and delay button at the same time for more than 3 seconds to released the child lock function and then continue running, or the washing machine will drain after 10 seconds and power will be off after 10 minutes.

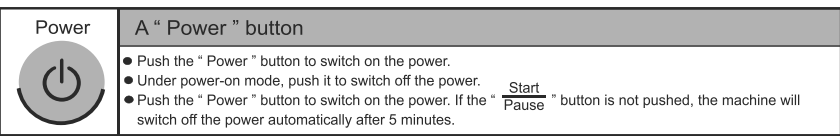

11 USAGE OF OPERATION BUTTONS



START/PAUSE

B "Start/Pause" button

- After the power is switched on, press it to start the machine .
- During working, push it to pause.
- During pause, push it to restart and go on working.



Program

C "Program" button			
Program	Application	Program	Application
Wash	Just run the washing cycle without drainage cycle, the detergent will be left in the tub and can be recycled.		Recommended for mixed fabrics and general clothing items.
Rinse	Remove the left detergent from the clothes and then rinse the clothes.		Ideal Cleaning Program. Haier Recommends to use Ariel/ Tide Cycle for best stain removal in 1Wash.
Spin	Start extraction program when the wash program ends or the clothes are wet.	Soak	Washing the relatively big thick or very dirty laundries.
Tub Dry	The purpose is drying the inner tub and the outer tub, which can avoid growing mildew.	Delicate	Washing for light-soil saving laundries.
		Quick	Quick washing for normal laundries.

For 316 Series 326 Series CAF Series C3P Series	C "Program" select	
	Program	Application
Program	Smart/AI Wash	Use recommended for general clothing items.
	Quick/Quick 15'	Quick wash suitable for a small amount of slightly soiled clothes.
	Heavy/(Blanket)	Suitable for washing large and thick clothes
	Delicate	Use this cycle to wash lightly soiled garments and delicate clothes that need gentle washing.
	Shirt	Special designed for Silk clothes.
	Blanket /Jeans	Use this cycle to wash heavy/large items such as comforters, sleeping bags and blankets. In order to ensure the washing effect, it is recommended that there be no more than two parts
	Spin	Use this program to remove water from clean clothes.
	Tub Clean / (Descaling)	This function is suitable for the cleaning of the inner barrel, keep the inner drum clean, remove the mold and smell. This program will be run for 2 hours. Note: you don't have laundry clothes when you choose this feature.

	G "Process/Optional" button & H "DIY" button	
Process	● To select water level, wash time, rinse time, spin time and When the process is selected, push DIY button and then adjust the parameters.	
DIY	● During operation, the digital tube will display the remaining time. Press the "DIY" button. User can adjust "water level", "wash time", "rinse times", "Spin time".	
Optional	● For 316/326 Series: The user can press "Optional" button to select "Water level", "Soak time", "Wash time", "Rinse time", "Spin time", and the after selection, they can push "Set" button to freeze the setting.	

E "Water Level" button

During the Normal, cycles the washing machine will detect the size of the laundry and automatically select the water level between levels 4,6 or 8.

- To change the water level, press the Start/Pause button and make your selection by pressing the "Water Level" button until desired level is shown (1-8).
If there is water inside the tub and the machine cannot detect the laundry load, it will display water level "4". If there is wet clothes in the tub, it may display water level "8", you must select suitable water level by yourself.
- During operation of the wash, or rinse program, you can adjust the water level by pressing the Water Level button.
- The water level of the wool/Blanket cycles can select between 2-6.
- The water level may vary due to the different moisture level of the laundry items.

15 TROUBLE SHOOTING ANSWER TO QUESTION

Wash Spin	● The water tap is not open. ● The water inlet valve is blocked. ● The water pressure is too low and the current is too small.	● Open the tap, Press the Start/Pause button once. ● Clean the water inlet valve. Press the Start/Pause button. Wait for the normal water pressure before use.
No or slow drain, the digitron displays "E1", buzzing.	● Is the drain hose put down? ● Is the drain hose blocked by foreign material?	● Put down the drain hose Open and close the top lid once, then press the START/PAUSE button. ● Clean the foreign material Open and close the top lid once, then press the START/PAUSE button.
The machine stops running. The display shows E2.	● The top lid is not closed.	● Close the top lid Press the Start/Pause button once more.
Safety switch activates, not spin, (after self-correction twice), the digitron displays "E4", buzzing.	● Are the laundries put slantingly? ● Are the machines slanting?	● Re-order the laundries. Close the top lid and press the START/PAUSE button. ● Level the machine in right position
No or slow water filling, the digitron displays "E4", buzzing.	● The water tap is not open. ● The water inlet valve is blocked. ● The water pressure is too low and the current is too small.	● Open the tap Open and close the top lid once, then press the START/PAUSE button. ● Clean the water inlet valve Open and close the top lid once then press the START/PAUSE button. ● Wait for the normal water pressure before use.
The display shows F2.	● Overflow Error	● Please contact Customer Care.
the digitron displays "FA", buzzing	● Water level sensor is abnormal?	● Please contact with after-sales service department.
Not wash	● Is there power failure? ● Is the power plug inserted tightly? ● Is the water level reached preset position? ● Is the lid closed?	● Use it when there's power supply. ● Insert the power plug tightly. ● Fill water to the preset position. ● Close the top lid
The machine does not act.	● Is the power plug inserted tightly? ● Is the top lid closed reliably? ● Are the laundries set flat?	● Insert the power plug tightly. ● Close the top lid. ● Set the laundries flat.
There's abnormal sound inside the machine	● Is the machine slanting? ● Are the laundries put slantingly in spinning?	● Adjust the machine to be even. ● Re-order the laundries and close the top lid.
The water tap leaks	● Is the pointer of water inlet hose loose or twisted away?	● Fasten the jointer properly.
The display shows PH	● Voltage too high	● Don't worry, wait until the voltage is normal.

Note: when the digital tub displays the abnormal symbol during working, it buzzs once in succession every two minutes, then the power will be cut automatically after ten minutes.

B "START/PAUSE" button	
After the power is switched on, press the "Start/Pause" button to start the machine. ● During operation, push the Start/Pause button to pause the machine. ● Push the Start/Pause button again to start the machine.	

COMMON PHENOMENA

Phenomena	Explanation
● The spinning is intermittent when it starts. ● Select spin program, but it does not work.	● Balance the laundries to avoid slanting. ● The program is setting the drain time, certain period is needed before it starts spinning.
● There may be some water flowing out of the drain hose in the first use of the machine. ● The pulsator pauses during water inlet in wash and rinse.	● It is the water remained performance inspection by the factory. ● It is to avoid splashing during water inlet.
● When the power plug is inserted, computer board indicator is switched on, and the machine starts working.	● It is the special resume function. In the case of power failure or the power plug is loose during washing, the machine can save the running program, and resume the program after the power supply is recovered. You do not need to set the program again.

COMMON OCCURRENCE

Situation	Cause
The Spinning is intermittent after it starts. Select spin program, but it does not work.	Redistribute the load evenly close the top lid.
There may be water in the Drain Pipe.	The program is setting the drain time, there will be a pause before the spin program starts. It may be residual water after performance inspection by the factory.

12 USAGE OF OPERATION BUTTONS

Delay	D "Delay" button - During operation, the digitron tube will display the remained time (hours). - Push down the delay button. The delay indicator light is on, the digitron displays the delay time of finish washing (in hour). The point light flashes to indicate in the reverse mode.	
Tub clean	"Tub clean/Descaling" function - You can use this function to clean the inner tub and outer tub of washing machine. - Total time is 12 hours to make sure better clean effect. - Do not put clothes during tub clean process.	

12 OPERATING PROCEDURE

- Push the button to switch on the power
- Push the button to select suitable automatic program
- Push the button, select suitable water level
- Push the button, select suitable procedure
- Push the button to select suitable reserve wash program

After switching on the power, when the normal program is selected, the washing machine will execute fuzzy program automatically to detect the cloth. After detection, it can set the water level automatically. To select other fully-auto program, please push the "Program" button till the corresponding indicator is light.
For an example: select Quick for the quick washing of the laundries with light dirt.

After switching on the power, when the normal program is selected, the washing machine will execute fuzzy program automatically to detect the cloth. After detection, it can set the water level automatically.

After switching on the power, the reserve time program is set to off mode automatically. If you need to set the washing procedure to be finished at delay time, please push the "Delay" button to set the reserve washing program.

- Confirm the reserve program
- When the "Delay" function is activated, the indicator light of the program you have set will be off. The "Delay Time" and "Remaining Time" indicator lights will be on.
- During reserve procedure, push the "Delay" button to display the delay mode.
- To change the running program or cancel the delay setting, you need to switch off the power and make new selection.

- Push the button to select suitable water level, wash time, rinse times and spin time
- Push the button, close the top lid
- Push the button to select the suitable time
- Push the button, close the top lid

* For 316, 326, CAF, & C3P Series :

- Press the button to switch on the power.
- Press the button to select suitable automatic program.

16 E-WASTE GUIDELINE FOR HAIER INDIA

What is E-Waste or Electronic Waste?
Electronic waste (e-waste is a term which refers to unusable, discarded and old, electric & electronic appliances such as refrigerators, LED/LCD/TV, microwave oven, washing machines, home air conditioner etc. As per E-waste (Management and Handling) Rules, 2022 (amended up to date) "e-waste" means electrical and electronic equipment, including solar photo-voltaic modules or panels or cells, whole or in part discarded as waste, as well as rejects from manufacturing, refurbishment and repair processes.
E-waste has been categorized into seven (07) main categories, i.e., Consumer Electronics/home appliances, IT & Telecom, Toys, Large and Small Electrical and Electronic Equipment, Leisure and Sports Equipment, Electrical and Electronic Toys (With the exception of large-scale Stationary Industrial Tools), Medical Devices (With the Exception of All implanted and Infected Products) & Laboratory Instruments, Refrigerators, washing machines, home air conditioner, LED/LCD etc. represents Consumer Electronics home appliances & water heater, Microwave Oven deep freezers etc. represents Large and Small Electrical and Electronic Equipment. On the other hand computers, desktop, laptop, mobile phones etc. and its component represent Telecom & IT. E-waste broadly covers waste from all electronic and electrical appliances and contains different hazardous materials which are harmful to human health and the environment if not disposed of carefully. While some naturally occurring substances are harmless in nature, their use in the manufacture of electronic equipment often results in compounds which are hazardous for example chromium becomes chromium VI. Thus Ministry of Environment, Forest & Climate Change, Govt. of India had listed issued directions for reduction in the use of hazardous substances in the manufacture of electrical and electronic equipment and their components or consumables, or parts or spares.
The Ministry of Environment, Forest & Climate Change, Govt. of India in furtherance of its effort to reduce the hazard occurring from rapid growth in the Consumer Electronics and IT-Telecom sector had taken various rules called as E-Waste Management Rules, 2022 under Environment Protection Act.

HAZARDS OF IMPROPER HANDLING AND/OR IMPROPER RECYCLING OF ELECTRONIC WASTE
Electronic equipments contain many hazardous metallic contaminants such as lead, cadmium, and beryllium and brominated flame-retardants. An improper handling and/or improper recycling of the Electronic Waste results in these hazardous metals/substances getting released into our eco and biological system, thereby leading to various health hazards. The Hazardous contents in the electronic equipment include:
Health:- The informal method of recycling extended health hazards. For example, primary and secondary exposure to toxic metals, such as lead, results generally from open-air burning used to retrieve valuable components such as gold. Incineration from burning e-waste creates fine particulate matter, which is linked to pulmonary and cardiovascular disease.
Environment:- The informal method of recycling extended environment hazards too. For example when different e-waste is burnt to extract metals from it, toxic chemicals are released in to the air, damaging the atmosphere.

Without safe recycling, most of these toxic components will end in land fill-polluting soil and water.									
Toxic Metals	Birth Defects	Brain Damage	Heart, Liver, Lung & Spleen Damage	Kidney Damage	Nervous/ Reproductive System Damage	Skeletal System Damage			
Barium		X	X						
Cadmium			X						
Lead	X			X	X	X			
Lithium	X	X			X	X			
Mercury	X	X	X	X	X	X			
Nickel	X	X	X	X	X	X			
Palladium	X	X	X	X	X	X			
Rhodium	X		X	X	X	X			
Silver		X	X						

The Do's of Electronic Waste Recycling:

- Give the discarded Electronic Equipment's only at the authorized collection centers so that the same can be properly recycled
 - Drop the discarded Electronic Equipment's only in the bins meant for the Electronic Waste.
 - Consult the authorized service center as to whether the Electronic Equipment can be repaired or not, before discarding the same
 - Tel your neighbors and other persons about the hazards of improper disposal of handling or improper recycling of the Electronic Waste.
 - If the unwanted Electronic Equipment still work or can be repaired then consider donating them
- The Don'ts of Electronic Waste Recycling:**
1. Don't dump the discarded Electronic Equipment's in open or in any Land Fill Site as the same will result in contaminating the Soil and the ground water
2. Don't dispose of the discarded Electronic Equipment's in household bins or Municipal Bin
3. Don't sell or give your discarded Electronic Equipment's to any Trash Dealer or Kabadwala
4. Recycling Electronic Equipment's helps to save natural finite resources and also reduces the environmental and health risks associated with improper handling/disposing the Electronic Waste
5. To minimize our impact on the earth and to protect the environment for future generations return your discarded Electronic Equipment's here for safe recycling.

13 OPERATING PROCEDURE

After the power is switched on, "Normal" is automatically set. To select other program, please press the "program" button till the corresponding indicator is light. Refer to the "program" button on page 11-12.

- Press the button to select different setting.
a, b, c, d for extra function "a Water level/ b Soak/ c Wash / d Rinse/ e Spin"
 - Press the button to adjust water level, wash time, rinse times and other parameters.
 - Close the top lid, Press the button.
- For Ultra Fresh Air Program:
Hold DIY button for 3 second to turn ON Ultra Fresh Air function mode, and machine will start & run with pre-defined time interval for 8 hours to keep your cloths fresh.
- Note: Indication of ultra fresh air function mode " " will light up and around display light will run continuously for 8 hours as per shown in picture. Function will end & display light goes off if user open the lid in mid of cycle.

Delay Function:
Hold Program button for 3 second to turn ON Delay function then press the DIY and set 1-24 hours delay time.
In "Tub Clean" mode can not select the Delay function.
Important Notice: At maximum load, it is crucial to manually adjust the clothes after loading to prevent them from scattering during or after the wash cycle.

13 FINISH WASHING

The machine will beep to indicate the end of the cycle then automatically cut the power off

13 AFTER WASHING

- Please first pull off the power plug from the receptacle before cleaning.
 - After using, please clean the lint and foreign materials of the lint filter and overflow filter in time. Otherwise it may influence your using the machine.
 - The lint filter must be used during washing.
 - It must be cleaned in time after each using filter.
- The methods of dismantle and install lint filter as follows:
1. Push down the spring piece of the top lint filter to make the claws out of the filter cover, and then pull out the lint filter to get it down (figure 1)
2. Pull the back cover of the lint filter, and then you can get down it off the front cover (figure 2) of the lint filter (figure 2)
3. Sweep the rubbish in the lint filter.
4. Put the back cover of the lint filter into the front cover.
5. Put the lint filter into filter cover, and make it tight.
6. Make sure the lint filter is well installed, or it can influence your use.

If the cabinet is dirty, wipe it with wet cloth
● Do not flush it directly with water.
● Wipe it with neutral detergent.
● Do not wipe it with thinner, petrol, alcohol etc.

- After washing, close the water faucet. (If needed, you can dismantle the water inlet hose.)
- Do not store water in the washing machine for a long period. Drain the water completely
- After using Be sure to pull off the power plug before maintenance.

17 E-WASTE GUIDELINE FOR HAIER INDIA

Why proper handling and management of e-waste is required?

According to MoEF, the electrical and electronic equipment (EEE) have valuable materials and hazardous/toxics substances in their components. The electronic products and electrical equipment after their useful life may not cause any harm if it is stored safely in households/stores. However, if the E-waste is opened/ or attempts are made for retrieval of useful components or material in an un-scientific manner or if the material is disposed in open, then it may cause health risks and damage to environment. E-waste can be considered as a resource that contains useful material of economic benefit for recovery of plastics, iron, glass, aluminum, copper and precious metals such as silver, gold, platinum, and palladium and lead, cadmium, mercury etc. However, at the same time presence of heavy metals (As, Cd, Hg, Pb etc.) and other toxic substances such as polychlorinated bi-phenyls (PCBs), etched chemicals, etc. may pose risk to health and environment during handling and recovery operations. E-waste is a problem of increasing proportions especially when crude methods are adopted for recovery of useful components from E-waste. Thus, there is a need to encourage recycling of all useful and valuable material from e-waste so as to conserve the ever depleting natural resources. Electronic components are increasingly made from plastic for making more LCDs, more than 50% of India is sourced by recycling used LCDs. The e-waste thus presents a scenario of urban mining for recovery of ferrous/non-ferrous/ rare earth metal and precious metal in addition to plastics and glass. However, presence of hazardous and toxic substances in the component of e-waste necessitates environmentally sound management of e-waste including collection and recycling/treatment in an environmentally sound manner.

Management and Effect on sustainable future:-
Sustainable development as defined by Brundtland Commission "is development that meets the needs of the present without compromising the ability of future generations to meet their own needs".
The e-waste since a long time had been seen as an easy and cheapest source of metals. However due to lack of proper consideration for such source of metals as well as proper methods of recycling in India, we sent our e-waste to the improper channel and thereby participated in degrading the environment. Moreover, through this improper method of extraction of metals we till date had wasted at least forty percent of the precious metals and simultaneously caused damage to our environment. If we opt the proper way to extract metals through proper channel of recycling then we can achieve Ninety percent of extraction rate of our metals as well as a better world for our environment. However, if today while selling off our material to improper channel we will not think about our sustainable future then it is for sure that the coming generations will be facing crisis of the metals.

Customer / end user Responsibility
1. Consumers shall ensure that there end of life product/e-waste is channelized through collection center or dealer of authorized producer or dismantler or recycler or through the designated take back service provider of the producer to authorized dismantler or recycler;
2. Consumers shall ensure that such end-of-life electrical and electronic equipment are not admixed with e-waste containing radioactive material;
Bulk Consumer Responsibility:-
1. Bulk consumers of electrical and electronic equipment shall ensure that e-waste generated by them is channelized through collection center or dealer of authorized producer or dismantler or recycler or through the designated take back service provider of the producer to authorized dismantler or recycler;
2. Bulk consumers of electrical and electronic equipment shall ensure that such end-of-life electrical and electronic equipment are not admixed with e-waste containing radioactive material as covered under the provisions of the Atomic Energy Act, 1962 (33 of 1962) and make such records available for scrutiny by the concerned State Pollution Control Board;
3. Bulk consumers of electrical and electronic equipment listed in Schedule I shall file annual returns in Form-3, to the concerned State Pollution Control Board on or before the 30th day of June following the financial year to which that return relates;
4. Bulk consumers of electrical and electronic equipment listed in Schedule I shall file annual returns in Form-3, to the concerned State Pollution Control Board on or before the 30th day of June following the financial year to which that return relates;
5. In case of the bulk consumer with multiple offices in a State, one annual return combining information from all the offices shall be filed to the concerned State Pollution Control Board on or before the 30th day of June following the financial year to which that return relates.

Haier's Responsibility
Haier India being responsible and trustworthy brand is taking all the necessary and expected steps for betterment of the environment as well as living beings. Haier had joined hands with number of recyclers to ensure environment friendly recycling of the electronic items, such as refrigerators, washing machines, air conditioners etc. that are either achieved their end of life or are old, unusable etc.
Apart from above, Haier had taken the following steps for proper recycling of e-waste of its customers:-
1. Collection and Channelization of e-waste:- Haier had setup toll free Number where the customers can call and registered their products for recycling. As soon as e-waste pick up is registered, by customer a representative will come to collect the product.
2. Dismantling & recycling of e-waste:- Haier has appointed number of recycler who are the leading name in the recycling industry to responsibly and in environment friendly manner recycle the e-waste generated in India.
3. Awareness for e-waste:- Haier is actively joining Infographic & engagement points on its social platforms to create more awareness about e-waste and its hazardous. In addition Haier is also conducting awareness programs in Schools, RWAs, and Office Clusters etc. to create awareness.

Contact for further information:
Haier Appliances (India) Pvt. Ltd.
Building Number 1, Okhla Industrial Estate, Phase III, Opposite Modi Mill, New Delhi-110020
Toll Free Hotline Number 1800-419-9999 | 1800-102-9999 Query Between: 9:00 AM to 9:00 PM (Monday to Saturday)
Email- customercare@haierindia.com

Our E-waste Partner (as on date)
1. Ms WEEE- PRO RESOURCE RECOVERY SOLUTIONS PRIVATE LIMITED
Contact Details : Mr Shagwan Prasad Surran
Ph No. 9958445860 | info@weee-pro.org




14 AFTER WASHING

- Hang up the power cord and drain hose.
- Wipe off the water drops on the surface of the machine and inside the tub. Open the top lid for some time (about 1 hour), then close the top lid.

PRE-FILTER CLEANING (CONTINUE)

Pre-filter Cleaning (After every 15 Days)

- Take off water supply pipe by pulling down and pressing the Joinder
 - Open the pre-filter cap by rotating in direction of arrow as given in Fig. 2
 - Open the Inner Mesh by pulling up
 - Use brush and water for cleaning the Inner Mesh
 - After Cleaning the Inner Filter, assemble Pre-filter back to as before
- * Note: Pre-filter available in selected models only.

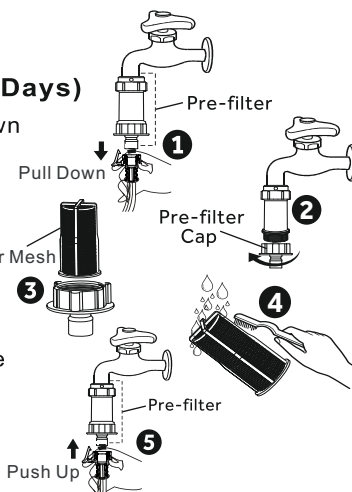

ENERGY SAVING GUIDE

To enter into the Energy Saving Mode follow below guide:
1. Press the **Power** button to turn Power On.
2. Press the **Program** button to select the Delicate Program.
3. Select maximum water level & select rinse 1 time.
4. Then press **Start/Pause** button to start the machine.

Program Followed :

Program	Water Level	No. of Rinse
Delicate	Maximum	1

NOTE
* Under test conditions, When tested accordance with standards IEC 60456: 2010 & BEE schedule 12 (Revision-3)
Actual Performance of machine will depend on how the appliance is being used.
* For best washing result we recommend to mix the detergent powder in warm water and pour directly into the drum tub before putting the clothes. (Rated Capacity Load)

14 TROUBLE SHOOTING ANSWER TO QUESTION

(If there's breakdown, please pull off the power plug before checking) The following phenomena are not breakdown sometimes. Please confirm again before sending it to repair.
If there are real breakdown, please come to the special maintenance department or after-sale service department of our company. Do not repair it by yourself.

Phenomena	The reason	How to settle
The digitron displays E2.	● The top lid is not closed.	● Close the top lid and press the START/PAUSE button
Rinse Spin	● Is the drain hose blocked?	● Remove the blockage ● Press the Start/Pause button once.
Wash Rinse Spin	● The top lid is not closed.	● Close the top lid. ● Press the Start/Pause button once.
Wash Rinse Spin	● Has the laundry been placed unevenly in the machine? ● Is the machine level?	● Redistribute the load evenly. Press the Start/Pause button.
Wash Rinse Spin Tub Dry	● The water level sensor has failed.	● Level the machine. ● Please contact Customer Care

- Please read this manual carefully before using washing machine.
- Retain it for future reference.

18 WARRANTY CARD

Customer Name Address.....
Serial No. Date of purchase..... Model No.....
Dealer Seal.....

HAIER WARRANTY
HAIER APPLIANCES (INDIA) PVT. LTD. (hereinafter referred to as "the Company") hereby offers the following warranty to the original domestic purchaser commencing from the date of the purchase. The Company, at its sole discretion, will free of charge repair or replace any defective part or parts which prove to be defective in workmanship and/or materials and not due to abnormal or improper usage.

Product	Warranty Period	Parts not Covered
HMW580-826NZP Series HWM80-316 Series HWM80-316 Series HWM85-326 Series HWM85-316 Series HWM80-688 Series HWM90-688 Series ETL105-CAF Series ETL100-C3P Series ETL90-C8S8 Series	Comprehensive - 24 Months Motor- 120 Months	Plastic Parts, Top Lids, Drain Pipe, Inlet Pipe, Lint Filter, Magic Filter Consumable & Low-voltage Parts

- CONDITIONS OF WARRANTY**
- This warranty will automatically terminate on the expiry of the warranty period from the date of delivery.
 - The Company is not liable for any delay in servicing to reach beyond the control of the Company or any of its authorised service centres.
 - Parts replaced or repaired under this warranty are warranted throughout the remaining of the original warranty period.
 - It is entirely left to the Company's discretion to repair/replace parts at the site of installation or at the authorised service centre of the Company.
 - This warranty shall be strictly limited to the repairs or replacement of defective parts specified in the warranty. This warranty shall not cover any consequential or resulting liability.
 - This warranty shall not, in any case, extend towards payment of any monetary consideration whatsoever or replacement or return of the product.
 - The Company may repair/supply parts free of cost during the warranty period. This warranty does not cover any Excise duty, Central or Sales tax, Octroi and other local taxes or levies on the components/parts.
 - The parts shall be replaced by functionally operating equivalent material only and not with brand new ones and are likely to be different from the one originally fitted. The parts thus removed shall be taken back by the Company.
 - The Company reserves the right to retain any part or component replaced at its sole discretion during the warranty period.
 - In no event the Company or its authorised service centre be liable for any consequential damages or resulting liability, damage or loss arising directly or indirectly out of any defect in the product.
 - This warranty is not valid in case of the following events:
 - If the Product has been Installed/Service/Repaired/Opened or Tampered by any unauthorised personnel.
 - If defects arise/caused by accidents, alteration, misuse, neglect, substitution of original components with spurious/non-genuine components, attacked by household pest / rodents, fire, flood, earthquake, lightning and/or any other act of God/natural calamities.
 - The product is shifted outside India.
 - (a) For any service under this warranty beyond city/town/municipal limits from the Company/authorised service centre, a fixed charge of Rs. 50 will be collected from the customer in addition to the actual to and fro charges by the shortest route
(b) Service charges applicable after expiry of comprehensive warranty.
 - Any change of location or change in the ownership during the warranty period must be intimated in writing to the Company.
 - The Company's employees or its authorised representatives have no authority to vary the terms of this warranty.
 - This warranty is effected in New Delhi and claims, if any, shall be made only before the courts having jurisdiction in New Delhi and no claim shall be made against the Company outside New Delhi notwithstanding that the Appliance may have been sold or delivered elsewhere.

HAIER APPLIANCES (INDIA) P. LTD., Building No.-1, Okhla Industrial Estate, Phase-III, New Delhi-110020
Tel.: 011-39496000, 30674000, fax: 011-30674088, Website: www.haier.com/in

Customer Name Address.....
Serial No. Date of purchase..... Model No.....
Dealer Seal.....



QR Code to directly chat with customer care executive.
(Customer Care WhatsApp No.: +91 8553049999)

Haier
WASHING MACHINE
USER MANUAL
HWM75-826 Series
HWM80-826 Series
HWM80-316 Series
HWM80-688 Series
HWM90-688 Series
HWM105-316 Series
HWM105-688 Series
ETL105-CAF Series
HWM85-326 Series
ETL100-C3P Series
HWM85-316 Series
ETL90-C8S8 Series