

[Manuals.plus](#) /

› [Haier](#) /

› Haier 8 Kg 5-Star Fully Automatic Top Loading Washing Machine HWM80-H826S6 User Manual

Haier HWM80-H826S6

Haier 8 Kg 5-Star Fully Automatic Top Loading Washing Machine HWM80-H826S6 User Manual

Model: HWM80-H826S6

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Haier 8 Kg 5-Star Fully Automatic Top Loading Washing Machine, model HWM80-H826S6. Please read these instructions carefully before using the appliance and retain them for future reference.

WHY CHOOSE HAIER?

Dual Magic Filter for lint-free clothes



Ocean Wave Drum for a powerful ocean-like wash



Powerful Storm Pulsator for deep cleaning



15 Wash Programs for every fabric



Auto Restart for uninterrupted washing



5-Star Efficiency, saving energy



CAPACITY : 8 KG
Suitable For Medium Size Families

Figure 1: Front view of the Haier HWM80-H826S6 washing machine.

Key Features:

- **Capacity:** 8 kg, suitable for large families.
- **Energy Rating:** 5 Star for high energy efficiency.
- **In-Built Heater:** For 99.9% germ-free laundry and effective stain removal.
- **Oceanus Wave Drum:** Generates powerful water waves for deep cleaning.
- **15+ Wash Programs:** Versatile options for various fabric types and washing needs.
- **Dual Magic Filter:** For lint-free clothes.
- **Softfall Technology:** Ensures gentle closing of the lid.
- **Near Zero Pressure Technology:** Operates efficiently even with low water pressure.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent accidents and ensure proper operation of the appliance.

Electrical Safety:

- Ensure the power supply voltage matches the rating label on the machine.
- Do not use extension cords or adapters.
- Always unplug the machine before cleaning or maintenance.
- Do not operate the machine with wet hands.

Water and Plumbing:

- Ensure water inlet and drain hoses are securely connected to prevent leaks.
- Do not use hot water above 60°C.
- Keep the area around the machine dry.

General Safety:

- Keep children and pets away from the machine during operation.
- Do not climb on or lean against the machine.
- Do not wash items contaminated with flammable substances.
- In case of malfunction, switch off the machine and unplug it immediately.

3. WHAT'S IN THE BOX

Upon unpacking, verify that all the following components are included:

- 1 x Haier Washing Machine (HWM80-H826S6)
- 1 x User Manual
- 1 x Bottom Plate
- 1 x Water Inlet Hose
- 1 x Warranty Card

4. INSTALLATION

Professional on-site installation is recommended for this appliance. Please ensure the following conditions are met before installation.

4.1 Placement

- Place the washing machine on a firm, level surface to minimize vibration and noise.
- Ensure adequate space around the machine for ventilation and maintenance.
- Avoid direct sunlight or placing near heat sources.

4.2 Water Connection

Connect the water inlet hose to a cold water tap with a standard thread. Ensure the connection is tight to prevent leaks.

4.3 Drain Hose

Position the drain hose correctly to allow for proper water drainage. Ensure it is not kinked or blocked.

CUSTOMIZED LAUNDRY EXPERIENCE

With 15+ Wash Programs

P1 Heavy	P6 Wool			
P2 Sports	P7 Baby Care	Allergen	Normal	Delicate
P3 Eco	P8 Synthetic	Hot	Shirts	Quick
P4 Silk	P9 Rinse + Spin	Warm	Spin	P1-PA
P5 Soak	PA Air Dry			



Figure 2: Rear view of the washing machine with water inlet and drain hose connections.

4.4 Power Connection

Plug the power cord into a grounded electrical outlet. Do not share the outlet with other high-power appliances.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and various wash programs for optimal laundry results.

OCEANUS WAVE DRUM

Generates powerful water waves that penetrate deeply into fabrics, effectively removing dirt & stains



Abrasion Free



Fast Cleaning

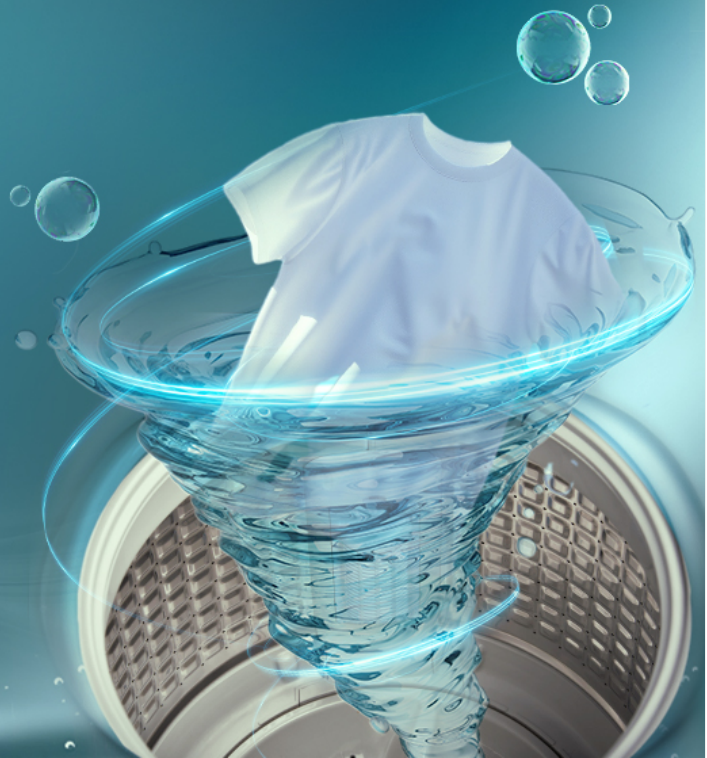


Figure 3: Control panel with wash program selections.

5.1 Control Panel Overview

The digital display shows current settings, remaining wash time, and other relevant information. Buttons allow selection of wash programs, water level, temperature, and special functions.

5.2 Wash Programs

Select the appropriate wash program based on fabric type and soil level. The machine offers over 15 programs, including:

- **Heavy:** For heavily soiled items.
- **Sports:** Designed for sportswear.
- **Eco:** Energy-saving wash cycle.
- **Silk:** Gentle wash for delicate silk garments.
- **Soak:** For pre-soaking heavily stained clothes.
- **Wool:** Specific program for woolens.
- **Baby Care:** Thorough cleaning for baby clothes.
- **Synthetic:** For synthetic fabrics.
- **Rinse + Spin:** For rinsing and spinning only.
- **Air Dry:** For air drying clothes.
- **Allergen:** For removing allergens.
- **Hot/Warm/Normal:** Temperature options for various washes.
- **Quick:** For lightly soiled items requiring a fast wash (e.g., 15 minutes).



Figure 4: Quick Wash feature for efficient cleaning.

5.3 Using the In-Built Heater

The in-built heater provides hot water for enhanced cleaning and germ removal. Select the 'Hot' or 'Warm' temperature option for programs that support heating. The heater ensures 30% uniform heating and helps remove tough stains and 99.9% of germs.



Figure 5: In-built heater for germ-free and stain-free laundry.

5.4 Oceanus Wave Drum

The unique Oceanus Wave Drum design generates powerful water waves that penetrate deep into fabrics, effectively removing dirt and stains while being abrasion-free and ensuring fast cleaning.



Figure 6: Oceanus Wave Drum for powerful and gentle washing.

5.5 Child Lock

Activate the Child Lock function to prevent accidental changes to settings during operation. Refer to the control panel for specific activation instructions.

5.6 Auto Restart

In case of a power outage, the machine will automatically resume the wash cycle from where it left off once power is restored.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Cleaning the Dual Magic Filter

The Dual Magic Filter collects lint and debris during the wash cycle. Clean it regularly to maintain washing efficiency and prevent lint accumulation on clothes.

1. Open the filter cover.
2. Remove the filter and clean it under running water.
3. Reinsert the clean filter and close the cover securely.



Figure 7: Dual Magic Filter for lint collection.

6.2 Cleaning the Drum and Exterior

- Use a soft cloth and mild detergent to wipe the exterior of the machine.
- Run a 'Tub Dry' or 'Tub Clean' cycle periodically to clean the inner drum and prevent mold/mildew buildup.
- Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, lid not closed, power outage.	Check power connection, ensure lid is closed, wait for power to resume.
Water does not fill	Water tap closed, water inlet hose kinked, water supply issue.	Open water tap, straighten hose, check household water supply.
Water does not drain	Drain hose kinked or blocked, filter clogged.	Straighten drain hose, clean drain filter.
Excessive vibration/noise	Machine not level, transport bolts not removed, uneven load.	Adjust leveling feet, ensure transport bolts are removed (if applicable), redistribute laundry.
Clothes still have lint	Dual Magic Filter clogged.	Clean the Dual Magic Filter as per maintenance instructions.

If the problem persists after attempting these solutions, please contact Haier customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Haier HWM80-H826S6 washing machine:

Feature	Specification
Brand	Haier
Model	HWM80-H826S6

Feature	Specification
Capacity	8 Kilograms
Installation Type	On Site
Form Factor	Top Loading
Special Features	Energy Efficient, In-Built Heater, Oceanus Wave Drum, Toughened Glass, Softfall Technology, Magic Filter, Voltage Protection, Shock Proof, Fuzzy Logic, Quick Wash, Tub Dry, Auto Restart, Child Lock, Anti Rat Mesh
Colour	Grey
Access Location	Top Load
Voltage	220.0 V
Fuel Type	Electric
Motor Speed	780 RPM
Drum Material	Fully Stainless Steel
Item Weight	37 kg
Item Dimensions (LxWxH)	57 x 52 x 97 Centimeters

3 HOT WATER MODES

Experience versatile washing with three hot water modes up to 60°C. Choose warm, hot, or allergen-free for tailored fabric care and optimal garment washing.



Figure 8: Washing machine dimensions and energy guide.

9. WARRANTY AND SUPPORT

Your Haier washing machine is covered by a comprehensive warranty to ensure peace of mind.

9.1 Warranty Details

- **Comprehensive Warranty:** 4 Years
- **Motor Warranty:** 10 Years

To avail warranty services, please retain your Amazon invoice as proof of purchase. The user manual can also be accessed from the official Haier website.

9.2 Customer Support

Haier provides extensive customer support with over 800 service centers and 3000+ technicians across 19000+ pincodes and 170+ locations. For service requests or inquiries, please refer to the contact information provided on your warranty card or the official Haier website.