




How to get the best of your Godrej Washing Machine

Semi Automatic
User Manual
Edge Ultima/Steelnox

1. Description Of Parts

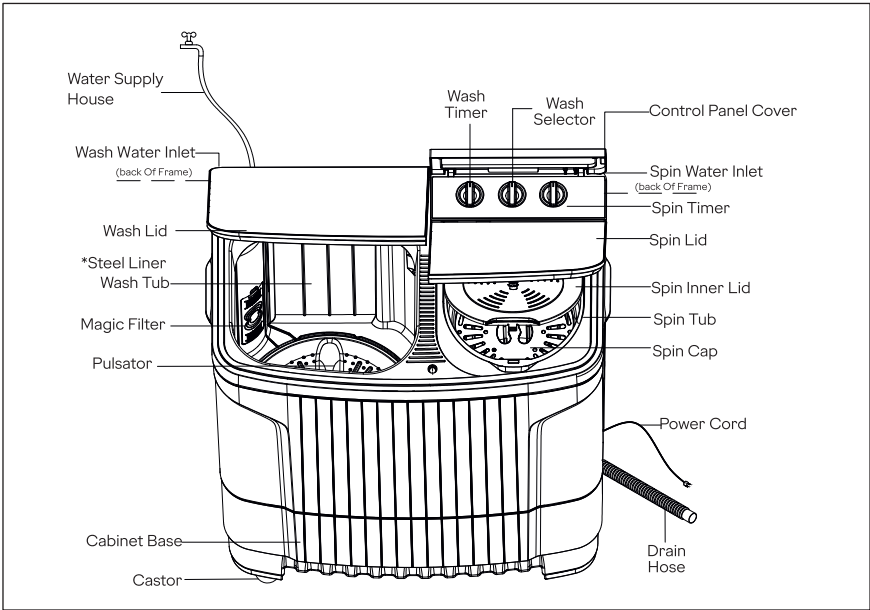

* feature only in selected models.

2. Specifications

Edge Ultima / Ultima Steelnox						
Model	WSEGE ULT 80	WSEGE ULT 85	WSEGE ULT 90	WSEGE ULTS 80	WSEGE ULTS 85	WSEGE ULTS 90
Capacity(maximum Dry Cloth Load) kg	8 kg	8.5 kg	9 kg	8 kg	8.5 kg	9 kg
Tub Type	Polypropylene			Steel Liner + Steel Drum		
Power Source	230 V, AC, 50 Hz			230 V, AC, 50 Hz		
Input Wattage (Wash)	370 W	460 W		460 W	460 W	
Input Wattage (Spin)	200 W	200 W		200 W	200 W	
Water Consumption (High)	70 L	70 L		75 L	75 L	
Water Consumption (Low)	54 L	54 L		54 L	54 L	
Net Dimension (WxDxH) mm	806 X 492 X 935		806 X 492 X 960	821 X 492 X 935		821 X 492 X 975
Net Weight (kg)	27.0 kg		27.5 kg	29.5 kg		30.2 kg

In the view of godrej policy of continuous development & improvement, specification may change without prior notice.
 Images shown in the user manual are for illustration purpose only.

2.1 Electrical

Important Safety Instructions Read Carefully And Keep For Future Reference

1. Ensure that the earthing connection in your electric supply is proper before connecting the power cord.
2. Do not use the extension cord as it may not be properly earthed.
3. Connect the machine to socket having current & voltage rating as specified on the power cord plug.
4. Remove the power plug before moving the machine from its place. Only authorised personnel should repair the machine. **Warranty stands cancelled if repairs are done by an unauthorized personnel.**
5. Pull out the power cord when the machine operation is completed (or) under repair (or) during the cleaning process.
6. Do not place any magnet near the lid of the machine, it will result in malfunctioning of the product.
7. Avoid electric heater, candle light, cigarette light, bug smoker, etc. Near the machine. It may ignite or deform the plastic parts.
8. Disconnect the appliance from the household distribution panel by removing the power from socket outlet before attempting any maintenance or cleansing to prevent electrical shock.
9. If any intervention is to be done in between the operation, stop operation, turn off main power switch & then conduct intended operation.
10. Switch off the power supply immediately if the supply voltage drops abnormally. Low voltage power supply may result in overheating of electric parts of the machine.
11. Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug. Operating with a damaged plug may cause electric shock.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

2.2 Water & Chemicals

1. Check if drain hose is placed correctly so that water drains out smoothly.
2. Do not use wet hands to insert or pull out the power cord.
3. Do not spill water on control panel, this may lead to electric shock. Do not try to clean the control panel with chemicals like benzene, thinner etc. This may deform the parts of colour & text may fade.
4. Avoid installation of the machine in areas exposed to high humidity, snow, rain and direct sunlight. It may cause electric shock, discoloration or deformity in the product.
5. Keep the area around washing machine dry.
6. Never put organic chemicals like benzene, alcohol or thinner or even clothes stained with such chemicals in the washing machine as this may lead to fire hazard.
7. Do not pour hot water of temperatures above 50 degrees into wash or spin tub as this may result in deformation & damage to plastic parts.
8. Make sure that drainage is working properly. If water is not drained out properly, your floor may get flooded. Flooded floors may induce electricity leakage, further resulting in electric shock or fire. It can also cause people to slip.

2.3 Avoid Unnecessary Human Intervention

1. Never reach into the machine while it is running. Wait until the machine has completely stopped before opening the lid. Even slow rotation can cause injury.
2. Do not put your hand, foot or any other part under the washing machine while it is in operation. There is a rotating mechanism under the machine, so you could get injured.
3. This appliance is not for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been under supervision or give instruction concerning use of the appliance by a person responsible for their safety.
4. The washing machine should be plugged into separate power socket. Do not take power supply for other appliance from the same source.
5. Keep kids away from the washing machine and do not let them play with it.

Note: Keep pets away from the machine.

2.4 Ensuring Proper Earthing

Your washing machine has three core power cords to connect the machine to the power line. Make sure that electrical and earthing connections are done properly in the wall socket. Live and neutral connections in socket should be as per standard.


Connect the 3-pin power cord to a proper ampere rating socket. 6 a socket is required for non heater machine & 16 a socket would be required for heater machine. Connect the power cord to indian standard 3 pin power socket. Never plug it into an ungrounded power socket.

Grounding Method

Earth wire must be connected in the wall socket. if the earth wire is not connected, then there is a potential hazard of electric shock caused by the current leakage.

Note that ac power outlet configurations may differ from country to country.

If the external socket does not have grounding terminal, separate grounding is needed.

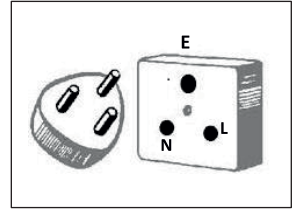

Other Grounding Methods (any one to be followed)



1. Burying copper plate
2. Connect the ground wire to a ground copper plate and bury it more than 75cm in the ground (by a qualified engineer.)

Using A Short-circuit Breaker:

1. If the grounding methods described above are not possible, a separate earth leakage circuit breaker should be employed and installed by a qualified engineer.

Never Connect Ground Wire To:

1. A gas pipe, telephone wire, lightening rod, neutral, extension cords without ground terminals, plastic, etc.

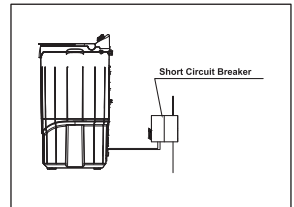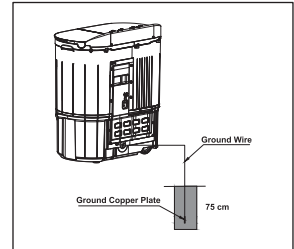

Note: All electrical wirings & modifications should be done by a qualified engineer only.

*the images are for representation purpose only.

3. Installation

3.1 Choosing The Right Location

Removal Of Packaging Material




- Please ensure all packaging / bottom cushion is removed before starting machine.
- **Caution:** operating the machine with the packaging may cause movement/unbalanced condition and can damage the machine parts. Install your godrej washing machine in an even, stable & leveled surface.

An Unstable Location:

- Can be dangerous since vibrations may cause your machine to move
- Can create noise as your machine may vibrate




Keep a distance of at least 5 cm from the sides, rear of your machine and the nearest wall. This will reduce noise while operating the machine as well as ensure proper ventilation.

- Do not keep the washing machine exposed to direct sunlight, snow And rain or in highly humid, oily, dusty or wet areas. Outside surface, Glass or electrical equipment may get damaged.
- The washing machine is provided with castor wheels which gives flexibility to move the machine to a convenient location free from high humidity and direct sunlight.

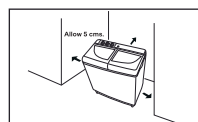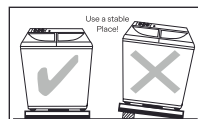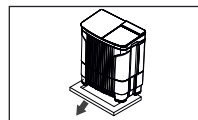

3.2 Step-by-step Installation

- Lower the drain hose to the floor. Make sure that the drain hose is not kept too high, else it may not drain water from the tub properly.
- Connect the water supply pipe to the water inlet.
- Plug in the power cord into power supply socket. This machine requires a 230 V, 50 Hz, 6/16 Amp AC supply.
- Place your machine on levelled ground, if the floor is uneven, place a board underneath and bring it to level position.
- To check if your machine is on levelled ground, use a weight attached to a string. The distance between the string and your machine should be the same from top to bottom.

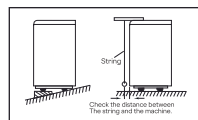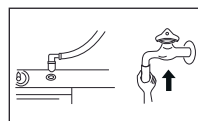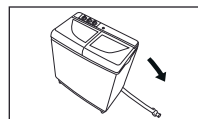


*The images are for representation purpose only.

4. How To Wash


4.1 Precaution Before Washing

- Put your delicate clothes and undergarments in a washing net. This will prevent clothes from getting entangled during wash and protect them. The washing nets are easily available in the market.
- Strings of aprons, petticoats, pyjamas etc. Should be tied as this will prevent clothes from getting entangled
- Close the fastener/zippers of trousers and jeans as this will prevent scratching of wash tub.
- Remove articles like match sticks, hair pins, coins etc. From pockets before washing.

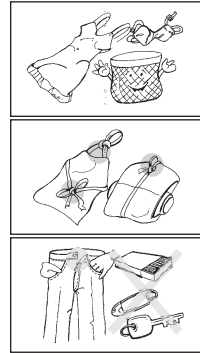


4.2 Washing

- Connect the water supply hose to wash side and set the wash selector knob to regular/ strong position.

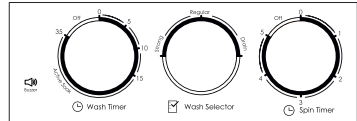

- Maintain the water level depending upon the cloth load
- Turn on the water supply and allow water to fill 2-3 cm lower than water level selected.
- Add the detergent and mix properly, so that detergent dissolves fully in water
- Now put the cloth load into wash tub and fill water up to water level selected .

- Select the required wash program for washing depending upon quantity of clothes to be washed, the type of fabric and the dirt levels of the clothes.

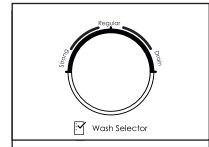

- Select the wash time required. This time will vary depending on the number of clothes and type of fabric.
- Set the wash time by turning the wash timer clockwise. The machine starts working immediately on turning the knob. A buzzer will indicate the completion of wash cycle. After washing has stopped, shift the wash selector knob to drain position to drain out the water from the wash tub


4.3 Spinning

1. Never put your hands in the spin tub while it is rotating.
2. It is necessary to use spin cap for the spinning operation. The cap holds the clothes in its place during spinning and prevents them from flying off.
3. If, during spinning, opening the lid does not stop the tub within about 15 second, immediately discontinue operating the machine. Call for repair assistance. A machine that spins with its door open may cause injuries.

*the images are for representation purpose only.

*For energy saving course refer below instructions in wash/rinse/spin function.

1. Select "regular" wash program and fill water up to mark "overflow" in wash tub.
2. Refer following function & time selection:

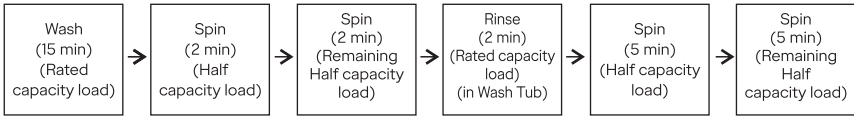

*Under test conditions, when tested in accordance with standard iec 60456: 2010 & bee schedule-12 (revision:03)

Actual performance of machine will depend on how the appliance is being used.

5. Cleaning Instructions

Most important: before you start cleaning the tub of your washing machine, please ensure electrical plug pin is disconnected/ unplugged from mains power supply socket.




5.1 How To Clean The Wash Tub

- if the wash tub becomes dirty, clean it with a mild soap and soft brush. Do not use a scrubber or hard brush as this could scratch the wash tub.

5.2 Cleaning Of The Magic Filter

Clean the magic filter after every wash. Follow these steps:

1. To remove the magic filter, press the latch/lock which is there on top of the filter & pull it out ward simultaneously. (ref fig. A)
2. 1. Open the magic filter back as shown by pulling it out.
2. Clean the filter in running water to remove all collected lint particles (ref fig. B)
3. When the magic filter has been emptied and cleaned, close the magic filter back. To assemble it in machine first locate bottom part of magic filter and then push it in the direction of the arrow, as shown. A click sound of the latch will confirm that the magic filter is locked in the tub. (ref fig. C)

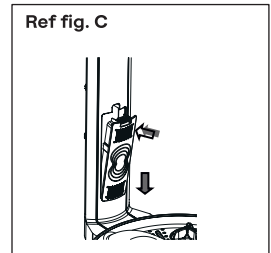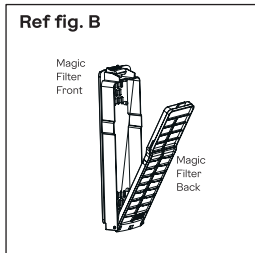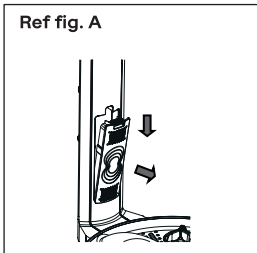

*The images are for representation purpose only.

6. Warranty

The Godrej washing machine comes with 5 years warranty on wash motor 2 years warranty on rest of functional parts from the date of purchase, against defective material or workmanship. In case of any such defect, Godrej & Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group) division undertakes to get the appliance repaired free of charge during warranty period, subject to terms and conditions below.

Instructions For The Customer

1. Kindly ensure that the dealer fills the warranty card correctly and completely.
2. You should retain the warranty card for record and produce the same in the event of any warranty repairs.
3. In the event of a defect developing in the product, contact the nearest authorised godrej & boyce service centre for obtaining warranty service and provide the defect, model details & serial no.
4. Product will function between +/- 5% of rated volts. For any fluctuation beyond specified limit, company shall not be responsible. In turn, warranty stands terminated.
5. Earthing provision is necessary for the safety.
6. Frequency must be between 5% variation of 50Hz. Beyond this, company shall not be liable for any unforeseen hazards like fire, shock etc. & in turn, warranty stands terminated.
7. Appliance or any part thereof is subjected to neglect, abuse or misuse, tampering, alteration, accident, fire, floods or other act of god, or damage by rodents or insects, the company is not responsible for any damage caused to the appliances & shall not be liable for any consequential loss or compensation, not refund of purchase price or replacement of the appliances.
8. In event of repair/replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of warranty. Moreover, the time taken for repair/replacement and in transit whether under the warranty or otherwise shall not be excluded from the warranty period.
9. Any damage/defect arising due to entry of coin/foreign particle into the machine, and causes malfunctioning is not covered under warranty. These calls will be chargeable to customer during warranty period.
10. House wiring related issues are not covered under warranty and such calls will be chargeable to customer.
11. Calls related to lint filter or water Inlet filter cleaning are not covered under warranty and are chargeable to customer.

Terms and Conditions

1. Repairs and replacement of parts will be carried out through the authorised customer service centre.
2. All transportation and handling expenses incurred while repairing will be payable by the customer.
3. For appliances installed beyond the municipal limits of the jurisdiction of the authorised service centre, charges towards technician's visit and other incidentals will be borne by the customer.
4. While the company will make every effort to carry out the repairs at the earliest, it however is made expressly Clear that the company is under no obligation to do so in a specified period of time.
5. The company/its authorised service centre will collect any parts, components replaced.
6. Warranty does not cover accessories to the appliance.
7. The company's obligation under this warranty shall be limited to repair or providing replacement of part/s only.
8. In the event of any unforeseen circumstances, and spares not being available, the company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
9. Warranty is not applicable incase the original number (serial no. Sticker) is removed, obliterated or altered from the machine or cabinet.
10. Warranty is confined to the first purchase of the godrej product only and is non-transferable.
11. Proof of purchase (i.e., purchase invoice/receipt, along with corresponding model and /or serial number of the unit must be presented when requesting service under warranty).
12. In case of repairs or replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of warranty.
13. The company or its authorised service providers reserves the right to retain any part/s of component replaced at its discretion, in the event of a defect being noticed in the equipment during warranty period.
14. It is the sole responsibility of the customer to provide necessary support to the company if the unit to be installed is not suitable for the installer or the service engineer to reach.
15. No dealer/distributor/retailer has authority to vary the terms of the above warranty.
16. 2 years warranty is applicable on all the parts except plastic, rubber, and glass parts (i.e., inlet/outlet hose, plastic knobs, top cover, lint filters, glass window, rubber valve etc).
17. Warranty does not cover repairing of any external accessories supplied by dealer/godrej as a promotional scheme.
18. Removal of foreign objects/substances from machines, including the pump and inlet hose filter for example grit, nails, buttons, coins etc. Will not be covered in warranty.
19. Warranty does not cover damage caused by commercial, business, or industrial purpose; this warranty is valid for equipment dedicated to domestic use only.

7. Branches / Service Connect

For any further assistance.

Branches			
Ahmedabad Bangalore Bhopal Bhubaneshwar Chandigarh/Mohali Chennai	Coimbatore Delhi Faridabad Ghaziabad Guwahati Hyderabad	Jaipur Kochi Kolkata Lucknow Mumbai Nagpur	Patna Pune Raipur Ranchi Vijaywada

Call	WhatsApp
080-6743-6743	Text 'hi" To 9321665511 On Whatsapp

24 X 7 Call Centre • Weekend Service

Website: www.godrejenterprises.com/support
E-mail: smartcare@godrej.com SMS: <godreicare> to 56677

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)
Customer copy

Model No.

Unit Sr. No.

Customer's Name & Address

Tel. _____

Date Of Purchase

Dealer's Name & Address

Tel. _____

Customer's Signature:

--

Protection of Environment:

Protection of environment* is one of the core values of Godrej and we seek your co-operation to make sure that the product, packaging and plastic material is not disposed as unsorted municipal waste.



This symbol is known as the "Crossed-out Wheellie Bin Symbol". It means that the product should not be disposed of with your general house-hold waste.

It should be disposed of only through the company's collection points with special treatment so as to prevent any damage to the environment. Please call: **080-6743-6743** for applicable buy back arrangement or www.godrejenterprises.com/green-think for details about authorised collection points.

'This product is RoHS compliant'

Godrej and Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group)
Plant 11, Pirojshanagar, Vikhroli (W), Mumbai 400 079.

55101521SD02052

VO 11012025