


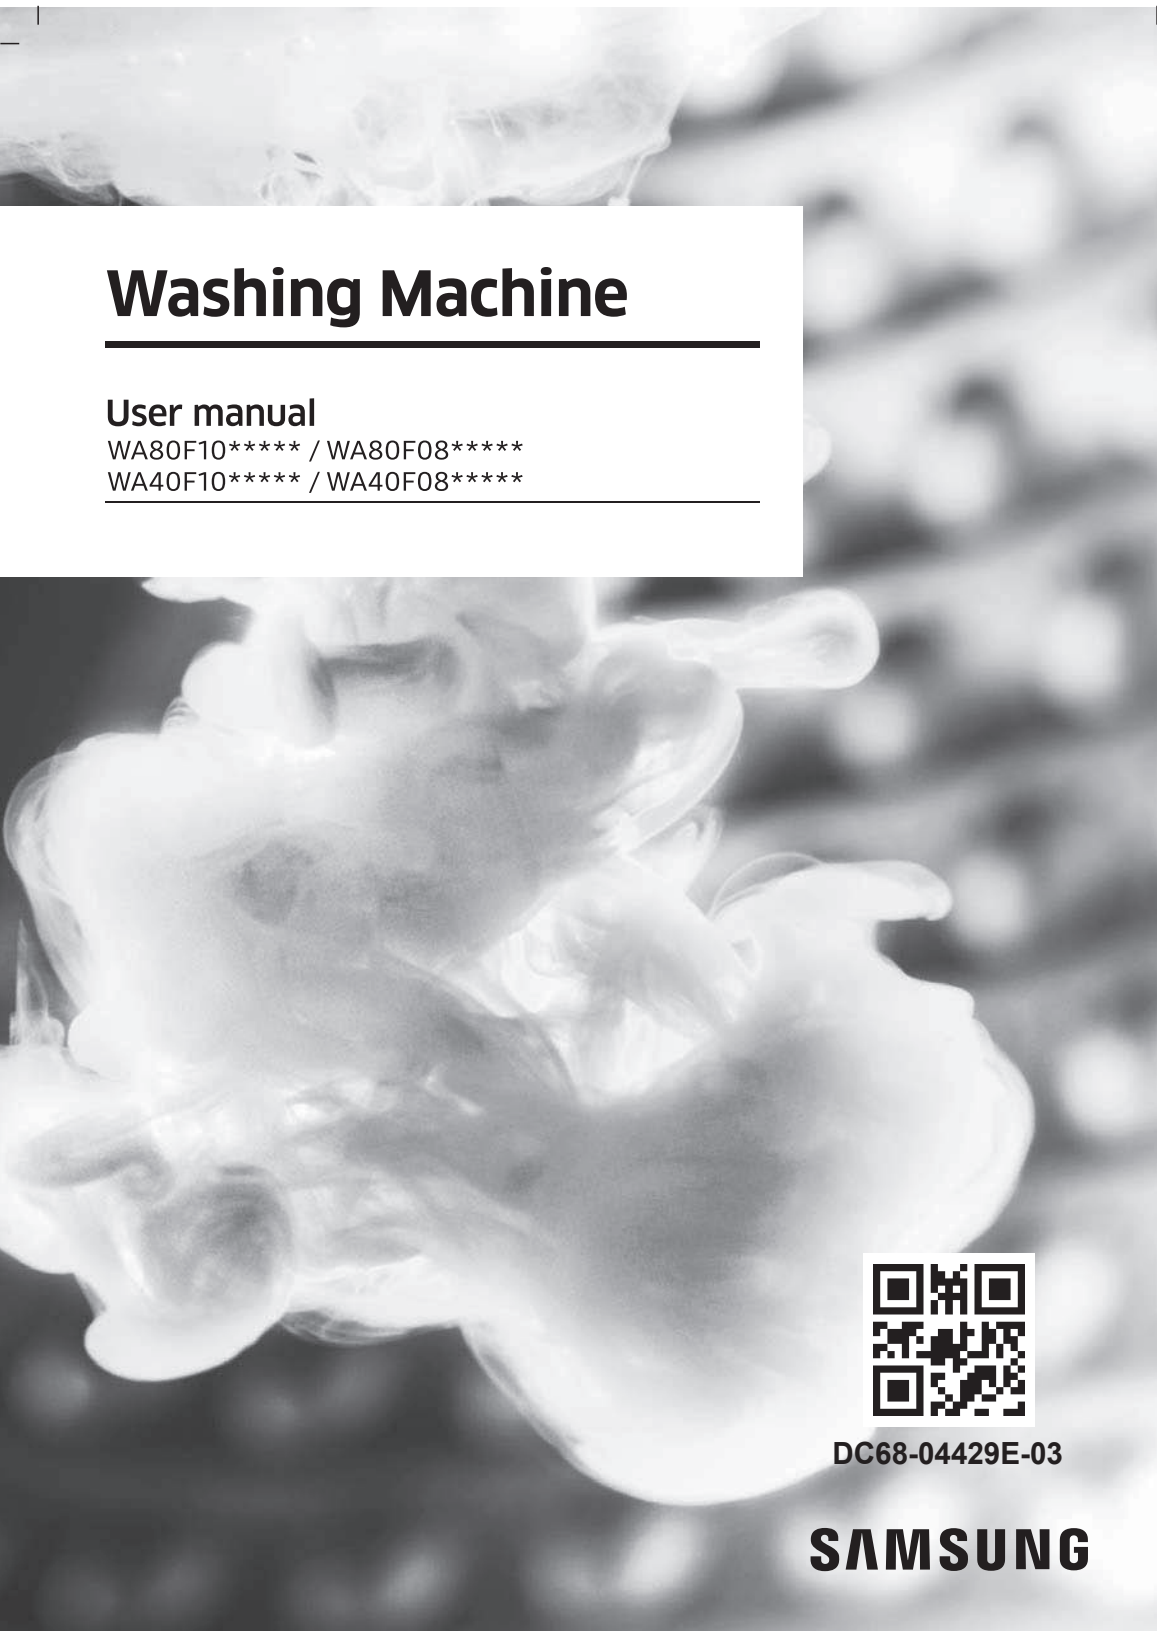

Washing Machine

User manual

WA80F10***** / WA80F08*****
WA40F10***** / WA40F08*****



DC68-04429E-03

SAMSUNG

Contents

Safety information	3
What you need to know about the safety instructions	3
Important safety symbols	3
Important safety precautions	4
Instructions about the WEEE	12
Installation	13
What's included	13
Installation requirements	14
Step-by-step installation	15
Before you start	22
The basics	22
Smart Check	23
Laundry guidelines	24
Operations	28
Control panel	28
Simple steps to start	29
Auto cycles	30
Manual cycles	31
Special features	32
Maintenance	33
Cleaning	33
Troubleshooting	38
Checkpoints	38
Information codes	42
Specifications	44
Specification sheet	44
Terms of Warranty	45
Warranty not applicable in any of the following cases	45

2 English



DC68-04429E-03

Safety information

Congratulations on your new Samsung washing machine. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washing machine's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine. Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

⚠ WARNING

Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage**

English 3

Safety information

Critical installation warnings

⚠ WARNING

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

Plug the power cord into a wall socket or higher and use the socket for this appliance only. Never use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.

- Ensure that the power voltage, frequency, and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

- Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.

- Failure to do so may result in electric shock or fire.

- Plug the power plug into the wall socket so that the cord is running towards the floor. If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

- This appliance must be properly grounded.

English 7

Installation

Step-by-step installation

 
 
 
STEP 1 Select a location

Location requirements:

- Solid**, level surface without carpeting or flooring that may obstruct ventilation
- Away from direct sunlight
- Adequate room for ventilation and wiring
- The ambient temperature is always higher than the freezing point (0°C)
- Away from a heat source

Assembling the rat protection panel (applicable models only)

Tilt the washing machine a little, insert the shutter and finally fix the shutter with screw to the base as shown in the picture.



English 15

Before you start

The basics

Detergent Box

- To add a laundry-specific detergent, follow these steps:
 - Open the door then the Built-in sink to reveal the tub.
 - Open the detergent box by pulling in the direction of the arrow as shown in the figure and then put the detergent in the detergent box.
 - Put in one-time amount of detergent evenly so the detergent may not brim over the box.
 - Add fabric softener as recommended by the manufacturer, and then close the cover.

- Press **POWER** to turn on the washing machine.
- Press and hold **Wash time + Rinse times** simultaneously for 3 seconds to enter the Smart Check mode.
- The washing machine starts the self-diagnosis procedure and displays an information code if a problem code is detected.
- Run the **Samsung Washer** app on your mobile device, and tap **Smart Check**.
- Put the mobile device close to the washing machine's display so that the mobile device and the washing machine face each other. Then, the information code will be recognized automatically by the app.
- When the information code is recognized correctly, the app provides detailed information about the problem with applicable solutions.

Smart Check

To enable this function, you must first download the **Samsung Washer** app at the **Play Store** or the **Apple Store**, and install it on a mobile device featuring a camera function.

- Press **POWER** to turn on the washing machine.
- Press and hold **Wash time + Rinse times** simultaneously for 3 seconds to enter the Smart Check mode.
- The washing machine starts the self-diagnosis procedure and displays an information code if a problem code is detected.
- Run the **Samsung Washer** app on your mobile device, and tap **Smart Check**.
- Put the mobile device close to the washing machine's display so that the mobile device and the washing machine face each other. Then, the information code will be recognized automatically by the app.
- When the information code is recognized correctly, the app provides detailed information about the problem with applicable solutions.

Smart Check

- After connecting your smartphone to a Wi-Fi router, run the Smart things app.
- On the Home screen, select Add Device
- Please choose a washing machine
- Press Start
- Please select the place where the washing machine is installed.
- Please choose a room
- After turning on the washing machine, press and hold the Smart Control button for more than 3 seconds until the AP is displayed.
- Connecting to the washing machine.
- To set up the washing machine, first select a Wi-Fi network.
- Registering the washing machine device to your Samsung account.
- The connection is complete.

English 23

Safety information

⚠ CAUTION

Hazards or unsafe practices that may result in **personal injury and/or property damage**

📌 NOTE

Indicates that a risk of personal injury or material damage exists.

These warning signs are here to prevent injury to yourself and others. Please follow them explicitly.

After reading this manual, store it in a safe place for future reference. Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

Important safety precautions

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

English 4

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national regulations.

Do not install this appliance near a heater or any inflammable material. Do not install this appliance in a humid, oily or dusty location, or in a location exposed to direct sunlight or water (rain drops).

Do not install this appliance in a location exposed to low temperatures.

- Frost may cause the tubes to burst.
 - Do not use an electric transformer.
 - This may result in electric shock or fire.
 - Do not use a damaged power plug, damaged power cord, or loose wall socket.
 - This may result in electric shock or fire.
 - Do not pull or excessively bend the power cord.
 - Do not twist or tie the power cord.
 - Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.
 - This may result in electric shock or fire.
- This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

English 8

STEP 2 Adjust the levelling feet (WA80F10**** Model has 2 levelling feet)

Unpack the product package.

- Gently slide the washing machine into position. Excessive force may damage the levelling feet (A).
- Level the washing machine by manually adjusting the levelling feet.

- When levelling is complete, tighten the nuts (B) if provided (applicable models only).

 
⚠ WARNING

Packaging materials can be dangerous to children. Dispose all packaging material (plastic bags, polystyrene, etc.) out of children's reach.

STEP 3 Connect the water hose

Connect the water hose to the water tap.

- Remove the adaptor (A) from the water hose (B).



English 16

Before you start

Laundry guidelines

Checkpoints

- Check for stains or dirt. Apply a little detergent to a white towel. Rub the white towel and the dirty clothes together to transfer the dirt or colour to the white towel.
- Before washing, pre-treat the sleeves, collars, dress hems, and pockets by brushing with detergent.
- Wrinkle-processed clothes made of wool must be specially treated by tightening them with threads before washing. Remove the threads after washing and drying is complete.

⚠ CAUTION

- Do not keep heavy clothes or objects in the tub.
- Do not put candles or a heat source in or on the washing machine.
- Do not wash these clothes:
 - Neckties, brassieres, jackets, suits, and coats can be easily deformed by shrinking or discolouring on the surface. These clothes are mostly made of rayon, polyimide, silk, and/or blended fabric.
 - Wrinkle-processed, embossed, or resin processed clothes easily deform merely by soaking in water.
 - Clothes that are easily discoloured made from cotton, wool, wrinkled silk, leather wear and accessories, and leather ornamented clothes and accessories.
- Waterproof sheets, mattresses, or specific items (*)
- Thick and hard mattresses, even if they are marked Washable on the care label. Mattresses may cause vibrations, resulting in physical injury, or damage to the machine, wall, or floor as well as the laundry itself. * Wool quilts, rain covers, fishing jackets and trousers, skiwear, sleeping bags, diaper covers, sweat suits, vehicle covers for automobiles, bicycles, and motorcycles, bath rugs, and other waterproof items.

English 24

- For use in Europe:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Children should be supervised to ensure that they do not play with the appliance.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

- The new hose-sets supplied with the appliance are to be that old hose-sets should not be used and reused.

English 5

Installation cautions

⚠ CAUTION

This appliance should be positioned in such a way that the power plug is easily accessible.

- Failure to do so may result in electric shock or fire due to electric leakage.

Critical usage warnings

⚠ WARNING

If the appliance is flooded, turn off the water & power supplies immediately and contact your nearest service centre.

- Do not touch the power plug with wet hands.

If the appliance generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest Samsung Customer Service.

- Failure to do so may result in electric shock or fire.

English 9

Installation

- Use a Philips screwdriver to loosen four screws on the adaptor.
- Hold the adaptor and turn part (C) in the arrow direction to loosen it by 5 mm (1).
- Insert the adaptor into the water tap, and tighten the screws while lifting up the adaptor.
- While holding down part (D), connect the water hose to the adaptor. Then, release part (D). The hose fits into the adaptor with a clicking sound.

English 17

STEP 1 Sort

Sort the laundry according to these criteria:

- Care Label:** Sort the laundry into cottons, mixed fibres, synthetics, silks, wools, and rayon.
- Colour:** Separate whites from colours.
- Size:** Mixing different-sized items together in the tub improves the washing performance.
- Sensitivity:** Follow the cloth-specific instructions on the care label of delicate items such as pure, new, woolen items, curtains, and silk items.

📌 NOTE

Make sure to check the care label on the clothing, and sort them accordingly before starting the wash.

STEP 2 Empty pockets

Empty all the pockets of your laundry items, and remove dirt and/or soils from them.

- Metal objects such as coins, pins, and buckles on clothing may damage other laundry items as well as the tub.
- Turn clothing with buttons and embroideries inside out.
- If pants or jacket zippers are open while washing, the tub may be damaged.
- Zippers should be closed and fixed with a string.
- Clothing with long strings may become entangled with other clothes. Make sure to tie the strings before washing.

STEP 3 Use a laundry net

- Brassieres (water washable) must be placed in a laundry net. Metal parts of the brassieres may break through and tear other laundry items.
- Cashmere, large volume garments, and lightweight clothes (lace-decorated clothes, lingerie, nylon stocking, and synthetic fabrics) may float on water during washing and cause problems to the machine. Use the laundry net or wash them separately.
- Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and result in injury.

English 25

- This appliance is intended to be used in household only and it is not intended to be used such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

- For washing machines having ventilation openings in the base, the installation instructions shall state that the openings must not be obstructed by a carpet.

- For use in Europe:** Children of less than 3 years should be kept away unless continuously supervised.

Safety information

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.
- Do not let children play in or on the washing machine. In addition, when disposing of the appliance, remove the lid.
- If trapped inside the product, children may suffocate to death.
- Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive substances.
- This may result in electric shock, fire, or an explosion.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not insert your hand or a metal object under the washing machine while an operation is in progress.

- This may result in injury.
- Do not attempt to repair, disassemble, or modify the appliance yourself.
- Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.
- When the appliance needs to be repaired or reinstalled, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.
- In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from doing it.
- Unplug the power plug when the appliance is not being used for long periods of time or during a thunder or lightning storm.
- Failure to do so may result in electric shock or fire.
- Do not put your hand into the spinning tub during the spin cycle.
- This may result in injury. If the tub does not stop spinning within 15 seconds after you open the lid, contact your nearest Samsung Customer Service.

English 10

Safety information

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

Usage cautions

⚠ CAUTION

When the washing machine is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washing machine using a damp, soft cloth.

- Failure to do so may result in discolouration, deformation, damage, or rust.
- The product you have purchased is designed for domestic use only. Using the product for business purposes qualifies as a product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.
- Do not stand on the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.
- Do not press the buttons using sharp objects such as pins, knives, fingernails, etc.
- This may result in electric shock or injury.

Critical cleaning warnings

⚠ WARNING

Do not clean the appliance by spraying water directly onto it.

Do not use the strong acid cleaning agent.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

English 11

Installation

📌 NOTE

- After connecting the water hose to the adaptor, check if it is connected properly by pulling the water hose downwards.
- Use a standard type of water tap. If the tap is square-shaped or too big, remove the spacer ring before inserting the tap into the adaptor.

STEP 4 Position the drain hose

- General type**
 - Press and hold down the joint ring, and insert it into the drain hose.

- Insert the drain hose into the drain outlet. Make sure to connect them firmly using the joint ring. The drain hose is extensible. Adjust the length of the drain hose as needed.

English 19

Instructions about the WEEE

- Correct Disposal of This Product (Waste Electrical & Electronic Equipment)** (Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

For more information on safe disposal and recycling, visit our website www.samsung.com or contact our Helpline numbers on the last page.

English 12


Installation

Follow these instructions carefully to ensure proper installation of the washing machine and to prevent accidents when doing laundry.

What's included

Make sure all the parts are included in the product package.

If you have missing or defective parts, contact a local Samsung customer centre or the retailer.

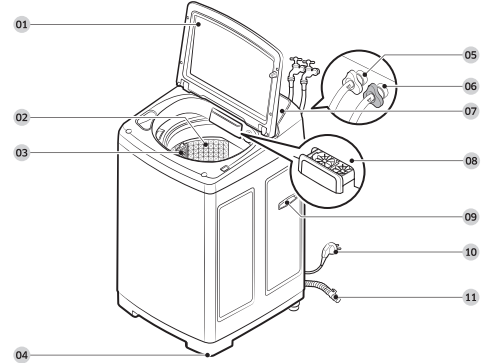

- | | | |
|-------------------|----------------------|------------------------|
| 01 Door | 02 Tub | 03 Lint filter* |
| 04 Levelling Feet | 05 Water Hose (Cold) | 06 Water Hose (Hot)* |
| 07 Control Panel | 08 Detergent Box | 09 Handle (for moving) |
| 10 Power Cord | 11 Drain Hose | |

English 13

Installation

⚠ CAUTION

- Do not exceed 3 m (1) for the total length of extended hoses.
- Do not let the drain hose run over doorills that protrude 5 cm (1) or more from the floor.
- Do not run the drain hose under the bottom of the machine.

STEP 5 Power on

Plug the power cord into a wall socket featuring an AC 220-240 V / 50 Hz approved electrical outlet protected by a fuse or circuit breaker. Then, press **POWER** to turn on the washing machine.

Make sure to use detergent as appropriate. An excessive amount of detergent may not dissolve well.

- Do not add too much softener. This may reduce the performance.
- Do not leave softener into the softener dispenser for a long time. The softener becomes hardened and may not dissolve well.
- Do not remove the nozzle. It can affect performance.
- Please mix water when using softener.

Add only liquid chlorine bleach to the bleach compartment. Do not exceed the max. line.

Do not add undiluted liquid chlorine bleach directly to the load or to the tub. This may cause fabric damage.

English 21

NOTE

- Availability of parts with an asterisk (*) depends on the model.
- Door: Make sure to keep the door closed while the washing machine is operating.
- Lint filter: This collects lint that builds up from the laundry being washed.
- Grounding lead: Cover this lead if wired to a metal part for earth-grounding.
- Levelling feet: Adjust the feet to level the washing machine on a flat floor.

Installation requirements

⚠ WARNING

- AC 220-240 V / 50 Hz fuse or circuit breaker is required.
 - Use an individual branch circuit specific to the washing machine.
 - Do NOT use an extension cord.
 - Use only the power cord that comes with the washing machine.
 - Do NOT connect the ground wire to plastic plumbing, gas lines, or hot water pipes.
- Drain**
- Make sure the drain hose is not clogged.
 - We recommend a standpipe in height of 90-10

Before you start

STEP 5 Determine the load capacity

Do not overload the washing machine. Overloading may cause the washing machine to not wash properly.

NOTE

When washing bedding or bedding covers, the wash time may be lengthened or the spin efficiency may be reduced. For bedding or bedding covers, the recommended load capacity is 3.0 kg or less.

If the laundry is unbalanced and the "Ub" information code is displayed, redistribute the load. Unbalanced laundry may reduce the spinning performance.

STEP 6 Apply a proper detergent type

The type of detergent depends on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.

CAUTION

- Use an appropriate amount of detergent. Excess amounts of detergent do not produce much improvement in washing results but cause damage to the laundry due to deteriorated rinsing performance.
- Bleach is strong alkali in nature, causing damage to or discoloration of the laundry.
- Use a longer or added rinse cycle when using powder detergent that is very likely to remain on the laundry and cause bad odours after washing is completed.
- If an excessive amount of detergent is used especially in cold water, the detergent doesn't dissolve well, ending up with contaminated laundry, hoses, and/or tub.
- In case of timed washing, do not apply detergent directly to laundry or the tub. The laundry may be discoloured. Use the detergent box.
- When washing wool using the Wool cycle, use only a neutral detergent to avoid discoloring the laundry.


NOTE

Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your local area. If you are not sure about the water hardness, contact a local water authority.

Do not use detergent that tends to be hardened or solidified. This detergent may remain after the rinse process, blocking the drain outlet.

Operations

Control panel


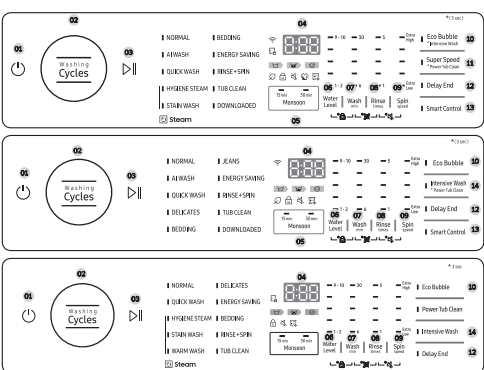


Caution The course and button of the Control Panel may differ depending on the model.

01 Power	Power on or off the washing machine.
02 Cycle	Press to select a desired cycle. The selected cycles indicator will light up.
03 Start/Pause	Select a cycle and press START/PAUSE to start the cycle. To stop the current operation, Press START/PAUSE.
04 Display	Displays the current cycle information and estimated time remaining or an information code if the washing machine needs to be checked.
05 Monsoon	Use this option to speed up the drying process. Press the button to select the times 15min-30min.

28 English

Maintenance

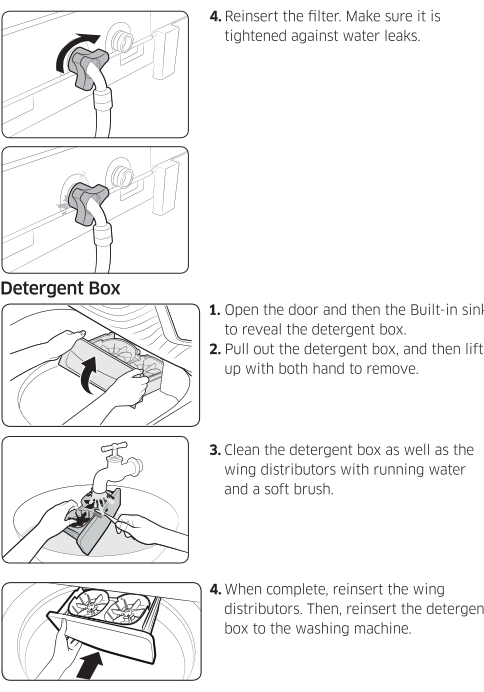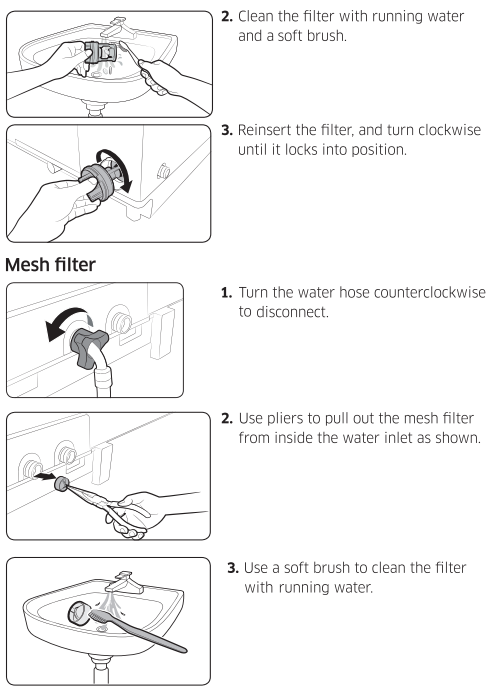

36 English

Troubleshooting

CL, dC	Child Lock is activated unexpectedly. - While the information code blinks at a 0.5 second intervals, water drains with an alarm. - To clear the information code, close the door when draining is complete, and then restart the washing machine by pressing the START/PAUSE button.
LC	- Check if the end of the drain hose is placed on the floor. (The hose should be hung over the pump - hose guide.) - Check if the drain hose is clogged by any foreign substances. - If the error remains, call the customer care. Check the MEMS sensor. - Power the washer off. Wait 2-3 minutes, power the washer on, and then try again. - If the problem continues, call for service. The electronic control needs to be checked (Over Voltage Error). - Check if power is supplied properly. - Turn off the washer, unplug it, wait one minute, and then plug the washer in again. If the information code remains, contact a Samsung customer service center.
9C1	Low voltage detected. - Check if the power cord is plugged in. - Turn off the washer, unplug it, wait one minute, and then plug the washer in again. If the information code remains, contact a Samsung customer service center.
9C2	When position of the clutch can't be detected. Turn off the washer, unplug it, wait one minute, and then plug the washer in again. If the information code remains, contact a Samsung customer service center.
PC	After position of the clutch is detected, if the signal from the clutch hall is incorrect. Turn off the washer, unplug it, wait one minute, and then plug the washer in again. If the information code remains, contact a Samsung customer service center.
PC1	Display for additional rinsing. - Appears when additional rinsing cycle senses that tub is unbalanced. - Press any button/key to release the display.
Ur	High temperature heating check. Turn off the washer, unplug it, wait one minute, and then plug the washer in again. If the information code remains, contact a Samsung customer service center.
HC	If any information code keeps appearing on the screen, contact a local Samsung service centre.

Specifications

Specification sheet

Type		Top loading washing machine	
		W80F08***** /WA40F08*****	W80F10***** /WA40F10*****
Max load (kg)		8.0	10.0
Power consumption (W)	Washing	220-240W	
KC220-240V/50Hz	Washing and Heating	1220-1240W (W80F08*****/W80F10*****)	W440F***** Models only
Dimensions (mm)		540*568*988	540*568*1008
Net Weight (kg)		29.5	30
Water pressure		0.05-0.78 (0.5-8.0) Mpa (kgf/cm ²)	
Washing type		Stirring type	
Water Level (L)	10	62	68
	9	60	66
	8	58	64
	7	54	60
	6	49	56
	5	45	52
	4	40	45
Spin speed (rpm)	3	37	39
	2	33	33
	1	31	31
	Water usage (L)	160	
Spin speed (rpm)	700		

NOTE (Only Applicable to India)

- Asterisk (*) means variant model and can be varied (B-9) or (A-2).
- The design and specifications are subject to change without notice for quality improvement purposes.
- The washing machine can operate under low water pressure conditions, but its performance may be affected.
- The energy label specifications have been determined by using following program according to IEC 60456
- The program is:
All models : Energy saving course, Water level 10

Terms of Warranty (Only Applicable to India)

Warranty not applicable in any of the following cases

- The complete warranty Card is not presented to the Service engineer at the time of repairs being undertaken/ requested.
- The Product is not purchased from an Authorized Samsung Sales Dealer.
- The Product purchased is not used according to the instruction given in the INSTRUCTION MANUAL, as determined by company personnel.
- Defect Caused by improper use, as determined by the authorized service centers/ Company Personnel.
- Modification or alterations of any nature made in the circuitry by the Purchaser or unauthorized Personnel, as determined by Company personnel.
- The Warranty is not applicable if the washing machine used for commercial purpose or Public places like Hotels, training centers and other similar applications.
- The Original Serial number is removed, obliterated or altered from the Product.
- Defect due to causes beyond control like lightning, abnormal voltage, acts of god or while in transit to service center or to the purchaser's residence.
- Correcting the installation for example leveling the product, adjustment of drain hose, Adjustment of Tap adapter.
- Noise or vibration that is considered as normal for example water drain sound, spin sound or warning beeps.
- Removal of foreign objects/substances from machine, including the Drain Valve and inlet hose filter for example coin, Grit, safety pin, buttons, hooks, Dirt accumulation etc.
- Replace fuse, correcting house wiring, house plumbing and defect or damage caused by household pets, rats, cockroaches or any other animals or insects.


For warranty conditions refer warranty card.

English 43

Operations

06 Water Level	The water level is adjusted according to the cycle. However you can change the level manually.
07 Wash	Press to run a wash-only cycle or to select a washing time between 6minutes and 30 minutes. To run a wash-only cycle, press and hold this button for 3 seconds.
08 Rinse	Press to run a rinse-only cycle or change the rinse count up to 5. To run a rinse-only cycle, press and hold this button for 3 seconds.
09 Spin	Press to run a spin-only cycle or select a desired spin time to run a spin-only cycle, press and hold this button for 3 seconds.
10 Bubble Wash	Wash faster, more efficient. Bubble-powered washing the power of bubbles.
11 Super Speed Normal cycle	Wash in 29 minutes* / Super-fast washing. Effective wash 40% faster washing*.
12 Delay End	Delay the end of any cycle for up to 24 hours in one-hour increments. The displayed hour indicates the time the cycle will end.
13 Smart Control	Save time and ensure clothes are washed properly. Smart Control lets you remotely monitor and control the washing machine using the SmartThings App.
14 Intensive Wash	Press this button when laundry is heavily soiled and needs to be washed intensively. The cycle time will be increased if intensive Wash is on.

Simple steps to start

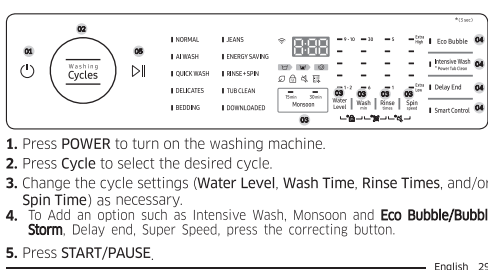

30 English

Maintenance

Cleaning

Power Tub Clean

Use this function if you have not performed the Tub Clean cycle or need more powerful Tub cleaning performance. You can add detergent to clean the tub more thoroughly.

- Make sure the tub is empty.
- Press power to turn on the washing machine.
- Press and hold **Super Speed / intensive Wash** for 3 seconds.
* Pour 200 ml of chlorine bleach evenly on the bottom of the tub.
- Press Start/PAUSE.

WARNING

- Do not put any items in the tub while running the Power Tub Clean cycle. The items may get damaged or discoloured.
- Depending on the conditions and surroundings in which the washing machine is used, the degree of contamination in the tub or the result of the Power Tub Clean cycle may vary.

36 English

Operations

To change the cycle during operation

- Press **START/PAUSE** to stop operation.
- Select a different cycle, and repeat steps 2-4 above if necessary.
- Press **START/PAUSE** again to start the new cycle.

Auto cycles

Cycle	Description
Normal	For most fabrics including cottons, linens, and normally soiled items that you want to finish washing quickly.
Quick Wash	For lightly soiled items that you want to finish washing quickly.
Delicates	Select this for delicate items such as sweaters, cardigans, or wool clothes. For bulky and large items, such as comforters, blankets, and sheets, and waterproof or water resistant items. When washing comforters, use liquid detergent.
Bedding	For heavily soiled, colorful garments.
Hygiene Steam Jeans	Suitable for clothes that require a thorough wash.
Energy Saving	Use this course to save energy.
Rinse + Spin	For loads that need rinsing only or to add rinsing-added fabric softener to.
Tub Clean	Select this to clean the tub. The powerful spinning force removes impurities and bad odors from inside the tub. A blinking indicator reminds you that it is time to clean the tub using 'Tub Clean'. For details, see the cleaning section in this manual.
AI Wash	Adjusts the cycle according to the laundry type.
Stain Wash	Select this cycle to remove heavy stains from highly soiled and stained clothes.
Downloaded	Select this for downloaded cycles using application.
Warm Wash	Select this cycle to remove moderate stains and to kill germs from clothes.

After continuous usage of 5 times particular cycle, the same cycle will be set as default cycle.

NOTE:

- Press **POWER** to turn on the washing machine.
- Press **Cycle** to select the desired cycle.
- Change the cycle settings (Water Level, Wash Time, Rinse Times, and/or Spin Time) as necessary.
- Press **START/PAUSE** to start the cycle.
- Press **START/PAUSE** again to start the new cycle.

30 English

Troubleshooting

Checkpoints

If you encounter an issue to check with the washing machine, first check the table below and try the suggestions.

Symptom	Action
Does not turn on.	- Make sure you use rated power for the product. - Make sure the power cord is completely plugged in. - Check the fuse or reset the circuit breaker. - Make sure the door is closed. - Make sure the water taps are open. - Make sure to press or tap Start/PAUSE to start the washing machine. - Make sure Child Lock is not activated. - Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and does a quick drain. - Was the door opened during the spinning cycle? Close the door, and press or tap Start/PAUSE to resume. - The machine enters Standby or is in a soaking cycle. Please wait. - Check the fuse or reset the circuit breaker.
Does not start.	- Make sure you press or tap Start/PAUSE after selecting the water supply. - Make sure the water taps are open. - Is the filter net at the water supply hose connector clogged? Clean the filter net by brushing with a toothbrush. - Is the water supply cut off? If the water supply is cut off, close the tap and power off. - Straighten the water supply hoses. - Open and close the door, then press or tap Start/PAUSE. - If the water pressure is low, it takes longer to start washing. - If the water level is not as high as necessary or lower than expected, use the level selector to adjust the water level.
Water is not supplied.	

38 English

Manual cycles

You might want to use a single cycle to wash less soiled clothes. For example, you can run the wash cycle once for nighttime.

- Press **POWER** to turn on the washing machine.
- Press **Wash/Rinse/Spin** to turn the individual cycle to your needs. The duration or count of each cycle can be adjusted by pressing the applicable button as many times as needed.
- If you want to run a combination of cycles, press applicable cycle buttons as below:

Wash Time	Rinse Times	Spin Time
6-30 minutes	1-5 times	Extra low - Extra High (Spin time varies by selection)

Wash + Rinse	Rinse + Spin	Wash + Rinse + Spin
Rinsing after washing	Spinning after rinsing	Washing, rinsing, and then spinning in sequence

- Press **Start/PAUSE**.
 - Intensive** : For Badly Soiled Laundry. The operation time for each cycle is longer than normal.
 - AI Energy Mode** : Smart energy savings when Smart Things AI Energy mode is activated on smart appliances.

30 English

Troubleshooting

Symptom	Action
After a cycle, detergent remains in the automatic dispenser.	- Make sure the washing machine is running with sufficient water pressure. - Make sure the detergent box is properly inserted. - Remove and clean the detergent box, and then try again.
Vibrates excessively or makes noise.	- Make sure the washing machine is set on a level floor. If the floor is not level, use the leveling feet to adjust the washing machine. - Make sure the hoses are connected to the correct water taps. Flush water lines. - Make sure the washing machine is not contacting any other object. - Make sure the laundry load is balanced. - Make sure the laundry is spread evenly in the washing machine. Spread out the laundry evenly and start again. - Make sure the space around the washing machine is free of objects. - Humming is produced normally during operation. Objects such as coins can cause noise. Remove these objects from the washing machine after washing is complete. - Plug the power cord into a live electrical outlet. - Check the fuse or reset the circuit breaker. - Close the door, and press or tap Start/PAUSE to start the washing machine. For your safety, the washing machine will not spin unless the door is closed. - Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and does a quick drain. - There may be a pause or soak period in the cycle. Wait briefly and the washing machine may start. - Straighten the drain hose, if there is a drain restriction, call for service. - Make sure the inlet hose screens at the taps are not clogged. Periodically clean the screens. - This symptom occurs temporarily due to low voltages, and will be solved when power recovers.
Slows.	

30 English

Operations

Special features

Child Lock

- All models : Water Level + Wash Time

Child Lock is designed to prevent accidents by children or infants, such as drowning in the tub.

To activate the Child Lock

Press and hold **Water Level** and **Wash Time** simultaneously for 3 seconds. The **CL** indicator blinks.

To deactivate the Child Lock

Press and hold **Water Level** and **Wash Time** simultaneously for 3 seconds. The **CL** indicator turns off. If the tub has contained water, simply restart the machine and press and hold **Water Level** and **Wash Time** simultaneously for 3 seconds to deactivate the Child Lock.

- If the door is left open for 30 seconds with the tub containing water, the machine drains the water with the "CL" code, which you cannot stop.
- To add detergent or more laundry in the tub, or to change the cycle settings, you must first deactivate the Child Lock.

Delay End

You can set the washing machine to finish a cycle later. The hour displayed indicates the time the wash will finish.

- Select a cycle. Then, change the cycle settings if necessary.
- Press **Delay End** repeatedly until a desired time is set.
- Press **START/PAUSE**. The lamp indicator next to the **Delay End** button turns on, and the timer starts.
- To cancel **Delay End**, restart the washing machine by pressing **POWER**. Real-life case:
You want to finish a two-hour cycle 3 hours from now. To do this, add the **Delay End** option to the current cycle with a 3-hour setting, and then press **START/PAUSE** at 2:00 pm. The washing machine starts operating at 3:00 pm and ends at 5:00 pm. Provided below is the timeline for this example.

30 English

Troubleshooting

Symptom	Action
The Tub Clean does not turn off.	- When the machine is diagnosed to be cleaned, the CL indicator blinks for an hour. This recurs consecutively times until you run the 'Tub Clean' cycle. This is normal, and not a system failure. To keep the tub clean, it is recommended to run the cycle once every 1-3 months. - Fully open both water taps. - Make sure the temperature selection is correct. - Make sure the hoses are connected to the correct water taps. Flush water lines. - Disconnect the hoses and clean the screens. The hose filter screens may be clogged. - While the washing machine fills, the water temperature may change as the automatic temperature control feature checks incoming water temperature. This is normal. - While the washing machine fills, you may notice just hot and/or just cold water going through the dispenser when cold or warm temperatures are selected. This is a normal function of the automatic temperature control feature as the washing machine determines the water temperature.
Fills with the wrong temperature water.	- While the washing machine is operating, press or tap Start/PAUSE to stop the washing machine. - It may take a few moments for the door lock mechanism to disengage. - Check the fuse or reset the circuit breaker. - Make sure the electrical voltage is normal. - Make sure the washing machine is plugged in. - Make sure the drain hose is pointed downward. (Natural drain models only.) - Make sure the drain hose is not clogged. - Make sure the drain hose is not kinked. - Straighten the drain hose, if there is a drain restriction, call for service. - Close the door, and press or tap Start/PAUSE. For your safety, the washing machine will not spin unless the door is closed.
Door (Lid) locked or will not open.	
Does not drain and/or spin.	

40 English

Maintenance

Cleaning

Keep the washing machine clean to prevent deteriorated performance and to preserve its life cycle.

Exterior

- Clean the control panel with a soft, damp cloth. Do not use abrasive powders or cleaning pads. Do not spray cleaners directly on the panels.

Tub Clean

Regularly run this cycle to clean the tub and to remove bacteria from it.

- Make sure the tub is completely empty.
- Press **POWER** to turn on the washing machine.
- Press **Cycle** to select **Tub Clean**. You can also use **Delay End** with Tub Clean.
- Press **START/PAUSE**.

CAUTION

Only run Tub Clean when the tub is completely empty. This may cause damage to the laundry or a problem with the washing machine.

TUB CLEAN reminder

- The **CL** indicator reminds you of cleaning the tub when necessary. If you happen to see the indicator blinking after washing is complete, remove the laundry and run the 'Tub Clean' cycle.
- You can ignore this reminder and continue to run cycles normally because this is not a system failure. However, the reminder remains active for consecutive cycles immediately after each cycle is complete.
- The reminder is activated once every 1-3 months, depending on the cycle count.
- To keep the tub clean, it is recommended to run TUB CLEAN on a regular basis.

Sound On/Off

You can turn on or off the key. Your setting will remain effective after you restart the machine.


- To mute/unmute the sound, hold down **Rinse times** and **Spin speed** simultaneously for 3 seconds.

30 English


Maintenance

Cleaning the lint filter

Clean the filter net often to keep the washing machine clean.

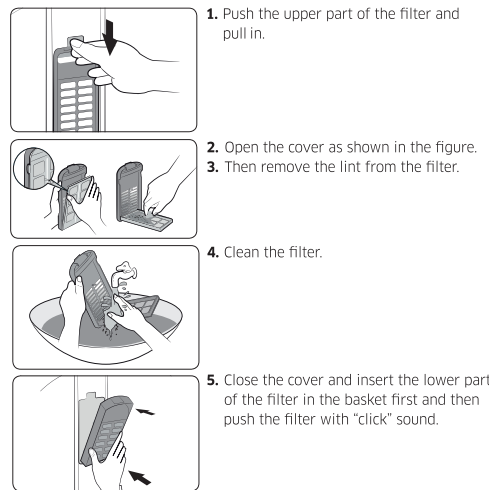

Pump filter (applicable models only)

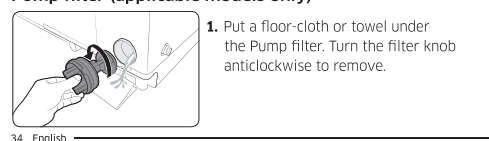

34 English

Troubleshooting

Symptom	Action
Water drains out immediately.	Make sure the drain hose is installed correctly. See the installation section of this user manual and advise the position of the drain hose as instructed.
Stains on clothes.	Clean the magic filter.
Has odours.	- Excessive suds collect in recesses and can cause foul odours. - Run cleaning cycles to sanitize periodically. - Dry the washing machine interior after a cycle has finished.
a symptom continues to happen, contact a local Samsung service centre.	
Information codes	
If the washing machine fails to operate, you may see an information code on the display. Check the table below and try the suggestions.	
Code	Action
5C	Water does not drain. - Make sure the drain hose is not bent, frozen, or clogged. - If the water does not drain in 30 minutes, an alarm will sound with the information code of '5C' on the display.
4C	Water is not supplied. - Make sure the water taps are open. - Make sure the water hoses are not clogged. - Make sure the washing machine is operating with sufficient water pressure. - Make sure that the cold water tap and the hot water tap are properly connected.
Ub	The spinning process does not operate. Clean the mesh filter as it may be clogged.
0C	Water overflow. - Run the spinning process to drain water, and restart the machine. - Upr the end of the drain hose to prevent water from draining. Fill the spin basket halfway with water, and then run spinning after releasing the drain hose.
1C	The Water Level sensor is not working properly. - Try power off and restarting the cycle. - If the information code remains, contact a customer service centre.

42 English

SAMSUNG

SAMSUNG

Helpline - Call : 1800 40 7267864 (1800 40 SAMSUNG) / 1800 5 7267864 (1800 5 SAMSUNG)

This warranty card gives the key points related to warranty claim, for further details log on to www.samsung.com/in/support.

Warranty Card (Only Applicable to India)

- Proof of purchase is a pre-requisite to claim warranty.
- The product should have been purchased from an authorised Samsung Sales Dealer in India.
- Warranty can be claimed only if the repair was carried out by the Samsung authorised service center.
- Carry-in service or In-Home service applicability depends on the product category and Samsung policy.
- Free installation or demo of the product, if applicable, can be availed only once and within 6 months from the date of purchase. In case of free installation, any additional material required over and above the standard installation kit shall be on the chargeable basis.
- In case of defective accessory, only the accessory will be repaired or replaced.
- Cosmetic/Aesthetic / Plastic / Glass Parts / Bulbs / Cable / Wiring / Piping / Consumables are not covered under warranty.
- The defective parts/ products which were replaced by Samsung under this warranty shall be the property of Samsung.
- While carrying out repair, Samsung may use accessories or parts that are new or refurbished or reconditioned.
- Samsung shall not be liable for any losses or consequential losses due to product failure or the installed software.
- Samsung shall be free to decide on whether or not to provide a software update for its products.
- Samsung shall not be responsible for any loss or misuse of data, personal information, setting, third party software during product usage or repair or software update.
- Samsung shall not be liable for any loss, cost, expense, inconvenience or damage that may result from use inability to use the product. Under no circumstances shall Samsung be liable for any loss, cost, expense, inconvenience or damage exceeding the purchase price of the product.
- Defects caused by customer negligence, tampering shall void the product warranty.
- Any extended/addition warranty offered by Samsung has to be supported by relevant proofs.
- Usage of power stabilizers of proper rating is necessary unless explicitly mentioned by Samsung on product literature/instruction booklet.
- In case of defect arising out of installation done by party other than Samsung authorised party, the limited warranty will be applicable as per revised T&C as Samsung shall deem fit.
- Regular upkeep, maintenance and cleaning of parts are necessary in certain products. Such periodic maintenance shall be on chargeable basis unless otherwise provided and not covered under warranty.
- In the event of any unforeseen circumstances, and spares not being available Samsung's prevailing depreciation rules will be binding on the purchaser and same shall be considered as a commercial solution in lieu of repairs.
- Defects arising out of the following are not covered under warranty like Mishandling/Misuse, Improper ventilation, Improper voltage, Use of external material, Normal wear and tear, Physical damage and / or electrical damage caused by physical impact.
- Complaints related to playability, printability, compatibility with external accessories, software, file systems, third party applications, CODECs, signals, Networks& ISP bandwidth shall not be considered as defect in product and not covered under warranty.
- This warranty covers only the defects in products arising out of manufacturing or faulty workmanship.
- This warranty covers repair/replacement of parts.
- Warranty period of parts / accessories may vary from product to product.
- Maximum liability out of this warranty is limited to the product purchase value/MRP.
- No warranty on certain parts/conditions/types of product failures.
- Under certain conditions where warranty obligations cannot be met, depreciation will be applicable on the existing product.

CUSTOMER DETAILS COM WARRANTY CARD

Model No. : _____

Product Serial No. : _____

Name : _____

Address in Full : _____

Telephone No. : _____

Model No. : _____

Dealer Name & Address : _____

Customer copy (to be retained by customer):

Customer's Signature & Date (I accept the Terms & Conditions of warranty)

Dealer's Signature with rubber stamp

(Only Applicable to India)

The Warranty shall be null and void in any of the following cases, and in such cases Samsung may at its sole discretion repair the equipment on a chargeable basis. The decision of Samsung, whether a complaint falls in any of these categories or not shall be binding on the Purchaser.

- The fully filled warranty card/proof of purchase is not presented to the service engineer at the time of repairs being undertaken / requested.
- The original serial number of the