

[Manuals.plus](#) /

› [Voltas Beko](#) /

› Voltas Beko 10 Kg 5 Star Semi-Automatic Top Load Washing Machine WTT100UPA/GR5KPTD User Manual

Voltas Beko WTT100UPA/GR5KPTD

Voltas Beko 10 Kg 5 Star Semi-Automatic Top Load Washing Machine User Manual

Model: WTT100UPA/GR5KPTD

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Voltas Beko 10 Kg 5 Star Semi-Automatic Top Load Washing Machine (Model: WTT100UPA/GR5KPTD). Please read these instructions carefully before using the appliance and retain them for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the washing machine is installed on a stable, level surface.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not reach into the machine while it is operating.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not wash items that are soiled with flammable substances.

SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your washing machine.

Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage incurred during transit. Report any damage to your dealer immediately.

Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and operation. The appliance is designed for freestanding installation.



Image: Product dimensions (56.5D x 92W x 106H Centimeters) and energy efficiency guide.

Water Connection

Connect the water inlet hose to a suitable water tap. Ensure all connections are secure to prevent leaks. The machine includes a drain hose for water discharge.

Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance (230 Volts).

Rodent Control

The machine features a rodent control base structure to protect internal components.

OPERATING INSTRUCTIONS

Your Voltas Beko semi-automatic washing machine offers efficient washing and drying capabilities.

Control Panel Overview

The machine is equipped with a 5-knob control panel, which is IPX4 protected against water splashes, ensuring durability and safety.



Image: The 5-knob control panel and indication of 4 wash programs.

Washing Process

1. **Load Laundry:** Place clothes into the wash tub. The machine has a 10 kg capacity.

2. **Add Detergent:** Add the appropriate amount of detergent. The Double Waterfall feature ensures effective mixing of detergent for thorough cleaning.
3. **Select Water Level:** Use the water level selector to choose the desired water volume.
4. **Choose Wash Program:** Select one of the 4 available wash programs:
 - **Gentle:** For delicate fabrics.
 - **Normal:** For everyday laundry.
 - **Strong:** For heavily soiled items.
 - **Heavy:** For very tough stains and durable fabrics.
5. **Start Wash:** Turn the wash timer knob to begin the wash cycle. The Special Pulsator technology helps remove tough stains effectively.
6. **Lint Filtration:** During the wash cycle, the 2 Cassette Filters collect lint from the water, ensuring cleaner clothes.
7. **End of Cycle:** A buzzer will sound to signal the completion of the wash cycle.



Image: Illustration of Fast Dry and Double Waterfall features.

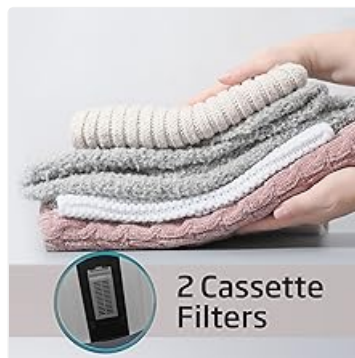


Image: Close-up of the Special Pulsator and Water Level Selector mechanism.

Drying Process (Spin Cycle)

After the wash cycle, transfer the clothes to the spin tub.

- Close the spin tub lid securely.
- Set the spin timer. The machine features a high spin speed of 1350 RPM for faster drying.
- The Fast Dry feature utilizes additional air vents to remove excess moisture from clothes.



Image: The transparent lid for visibility and the buzzer icon.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and efficient operation of your washing machine.

Cleaning the Lint Filters

The machine is equipped with 2 cassette filters that collect lint. Regularly remove and clean these filters to maintain washing efficiency and prevent lint transfer to clothes.



Image: Close-up of the 2 Cassette Filters and the IPX4 protected control panel.

Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents. The plastic body is designed to be non-corrosive and rust-proof.



Image: Rear view of the washing machine highlighting its rust-free plastic body.

Interior Cleaning

Periodically clean the wash and spin tubs. Run an empty wash cycle with a washing machine cleaner or a cup of white vinegar to remove detergent residue and odors.

TROUBLESHOOTING GUIDE

Before contacting customer service, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Power outage; Lid not closed properly.	Check power connection; Restore power; Ensure lids are fully closed.
No water filling	Water tap closed; Water inlet hose kinked or blocked.	Open water tap; Straighten hose; Clean filter if blocked.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Straighten drain hose; Clear any blockages; Clean drain pump filter.
Excessive vibration/noise	Machine not level; Uneven load; Transit bolts not removed.	Adjust leveling feet; Redistribute laundry evenly; Ensure all transit bolts are removed during installation.
Poor washing results	Too much/too little detergent; Overloading; Lint filters clogged.	Use correct detergent amount; Do not overload; Clean lint filters regularly.

SPECIFICATIONS

Detailed technical specifications for your Voltas Beko washing machine:

Feature	Specification
Brand	Voltas Beko
Model Name	WTT100UPA/GR5KPTD
Capacity	10 kg
Product Dimensions (D x W x H)	56.5D x 92W x 106H Centimeters
Item Weight	27000 Grams
Operation Mode	Semi Automatic
Max Rotational Speed	1350 RPM
Voltage	230 Volts
Noise Level	60 Decibels
Installation Type	Freestanding
Number of Programs	4 (Gentle, Normal, Strong, Heavy)
Material Type (Body & Drum)	Plastic

Feature	Specification
Special Features	High Efficiency, Double Waterfall, End Of Cycle Signal, Special Pulsator, 2 Cassette Filters, Fast Dry, IPX4 Protected Panel, Rodent Control Base Structure, Water Level Adjuster
Energy Star Rating	5 Star (Energy consumption: 0.0107 KWh/kg/cycle; Water Consumption: 21 L/Kg/Cycle)
Included Components	Washing Machine, Drain Hose

WARRANTY INFORMATION

Your Voltas Beko washing machine comes with the following manufacturer's warranty:

- **Comprehensive Warranty:** 2 Years on the entire product.
- **Wash Motor Warranty:** 10 Years.
- **Spin Motor Warranty:** 5 Years.

Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects under normal use conditions.

CUSTOMER SUPPORT

For any service, support, or inquiries regarding your Voltas Beko washing machine, please contact the manufacturer directly:

- **Manufacturer:** VOLTAS BEKO, Voltbek Home Appliances Pvt. Ltd.
- **Address:** Voltas House A, Chinchpokli, Mumbai-400033
- **Contact Number:** 1860 599 4444

You can also visit the official [Voltas Beko Store](#) for more product information and support resources.