


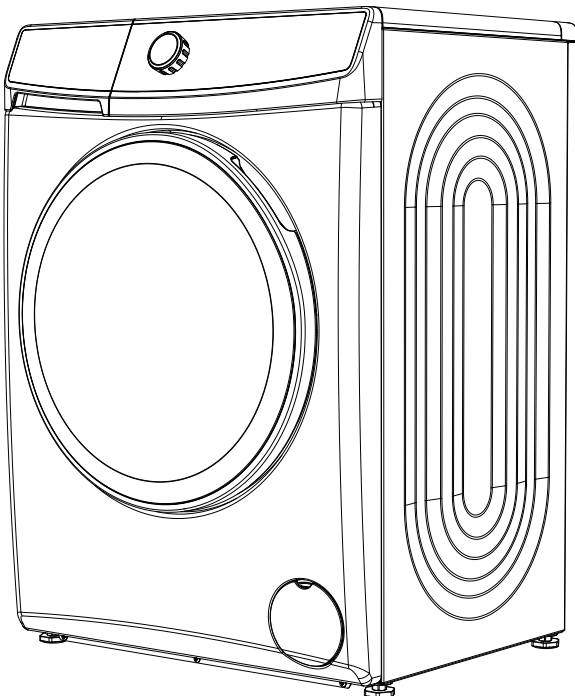

How to get the best out of your Godrej Washing Machine



Fully Automatic Front Load

User Manual

WFEON RGL 9014 5.0

WFEON RGL 8514 5.0

WFEON RGL 8014 5.0

WFEON ZUS 9014 5.0

Image shown is for representation purpose only.

Contents

Safety Instructions

■ Safety Instructions	2
-----------------------------	---

Installation

■ Product Description	6
■ Installation	7

Operation

■ Quick Start	10
■ Before each Washing	12
■ Detergent Dispenser	13
■ Control Panel	15
■ Programmes	16
■ Option	17

Maintenance

■ Cleaning and Care	22
■ Trouble Shooting	24
■ Warranty	26
■ Branches/Service Connect	27

Safety Instructions

Important Safety Instructions: Read carefully and keep it for future reference

Please read the following safety information thoroughly and follow it strictly to minimize the risk of fire or explosion, electric shock, and to prevent property damage, personal injury, or loss of life. Failing to follow these instructions shall void any warranty.



Warning!

This combination of symbol and signal word indicates a potentially dangerous situation that may result in death or serious injuries unless it's avoided.



Caution!

This combination of symbol and signal word indicates a potentially dangerous situation that may result in slight or minor injuries or damage to property and the environment.



Note!

This combination of symbol and signal word indicates a potentially dangerous situation that may result in slight or minor injuries.



Warning!

Electric Shock Hazard

- If the supply cord is damaged, it must be replaced by the manufacturer, the service agent, or similarly qualified persons in order to avoid a hazard
- If the machine is damaged, it must not be operated unless repaired by the manufacturer, the service agent, or similarly qualified persons. Risk of electric shock!

Safety Instructions

- The appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or a lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- "Children should be supervised so that they do not play with, on, or inside the appliances."
- Children 3 years and under shall be kept away from the appliance and continuously supervised.
- Animals and children may climb into the machine. Check the machine before every operation.
- Do not climb or sit on the appliance.

Installation Location and Surrounding

- All washing and additional substances are to be kept in a safe place out of the reach of children.
- Do not install the machine on a carpeted floor. The obstruction of the openings by a carpet can damage the machine.
- Keep the appliance clear from direct sunlight, heating sources, and rain exposure to avoid plastic and rubber parts deformation, electric shock, fire, or breakdown.
- Do not use the appliance in humid environments or rooms containing explosive or caustic gas. In case of water leakage or water splashes, let the appliance dry in the open air.
- The appliance must not be installed behind a lockable door, a sliding door, or a door with a hinge on the opposite side to that of the washing machine.

Safety Instructions

- Do not operate the machine in rooms with a temperature of below 5°C. This can damage the machine. If it is unavoidable, make sure to drain the water completely from the appliance after every use (see "Maintenance - Cleaning of drain pump filter") to avoid damages caused by frost.
- Never use flammable sprays or substances in the immediate proximity of the appliance.

Installation

- Remove all packaging material and transport bolts before using the appliance. Otherwise, it may result in serious damage.
- This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
- The mains plug must be accessible after installation.
- Before washing clothes for the first time, the product shall be operated once throughout all the procedures without any clothes inside.
- Before using the washing machine, the product shall be balanced on the ground.
- Do not put any excessively heavy objects on the appliance, like water containers or heating devices.
- The new hose sets supplied with the appliance are to be used.
Do not reuse old hose set.
- Maximum inlet water pressure: 1 Mpa (10 Kgf/cm²). Minimum inlet water pressure: 0.05 Mpa (0.5 Kgf/cm²).

Electrical Connection

- Make sure the supply cable is not trapped by the machine; it can get damaged.
- Connect the product to a grounded outlet protected by a fuse complying with the values in the "Technical specifications" table. The grounding installation has to be made by a qualified electrician. Ensure that the machine is installed in accordance with the local regulations.

Safety Instructions

Water and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.



Warning!

- Don't use multiple plugs or extension cords.
- The appliance must not have an external switching device, such as a timer, or be connected to a circuit that is regularly switched on and off.
- Do not pull the plug out of the mains outlet if there is flammable gas around.
- Never pull out the power plug with wet hands.
- Always pull at the plug, not at the cable.
- Always unplug the appliance if it is not being used.
- Improperly connected grounding conductors may cause electric shock.
Do not connect the ground wire to plastic plumbing, gas lines, or hot wire pipes.

Water Connections

- Check the connections of the water inlet tubes, the water tap, and the outlet hose for possible problems due to changes in water pressure. If the connections loosen or leak, close the water tap and get it repaired. Do not use the appliance before the pipes and hoses are installed properly by qualified persons.
- The glass door may become very hot during the operation. Keep children and pets faraway from the machine while it is operating. Do not touch the door during & immediately post operation.
- The water inlet and outlet hoses have to be safely installed and remain undamaged. Otherwise, water leakage can occur.
- Do not remove the drain pump filter while there is still water in the appliance. Big quantities of water can leak out, and there is a risk of scalding due to hot water.

Safety Instructions Operation and Maintenance

- Never use any flammable, explosive, or toxic solvents. Do not use gasoline, alcohol, etc., as detergents. Only select detergents that are suitable for machine washing.
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones, etc. may cause serious damage to this machine.
- Remove all objects from pockets, such as lighters and matches, before using the appliance.
- Thoroughly rinse items that have been washed by hand.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, wax, and wax removers should be washed in hot water with an extra amount of detergent before being dried in the appliance.
- Items containing foam rubber (latex foam), shower caps, waterproof textiles, rubber-backed articles, and clothes or pillows fitted with foam rubber pads should not be dried in the machine.

Safety Instructions

- Fabric softeners or similar products should be used as recommended in their instructions.
- Never try to open the door forcefully. The door will unlock shortly after the end of a cycle.
- Please do not close the door with excessive force. If it is found difficult to close the door, please check if the clothes are properly inserted and distributed.
- Always unplug the appliance and close the water tap before cleaning and maintenance and after each use.
- Never pour water over the appliance for cleaning purposes. It can cause an electric shock.
- Repairs shall only be carried out by the manufacturer, a service agent, or similarly qualified persons in order to avoid a hazard. The producer will not be responsible for damages caused by the intervention of non-authorized persons.

Transport

- Before Transport:
 - Bolts shall be reinstalled to the machine by a specialized person.
 - Accumulated water shall be drained out of the machine.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.

Intended Use

The product is intended only for home use and for textiles in household amounts suitable for machine washing and drying. This appliance is for indoor use only and not intended for built-in use.


Only use according to these instructions. The appliance is not intended for commercial use.

Any other use is considered as improper use. The producer is not responsible for any damage or injuries that may result from it.

- This appliance is intended to be used in households and similar applications.

Installation


Product Description

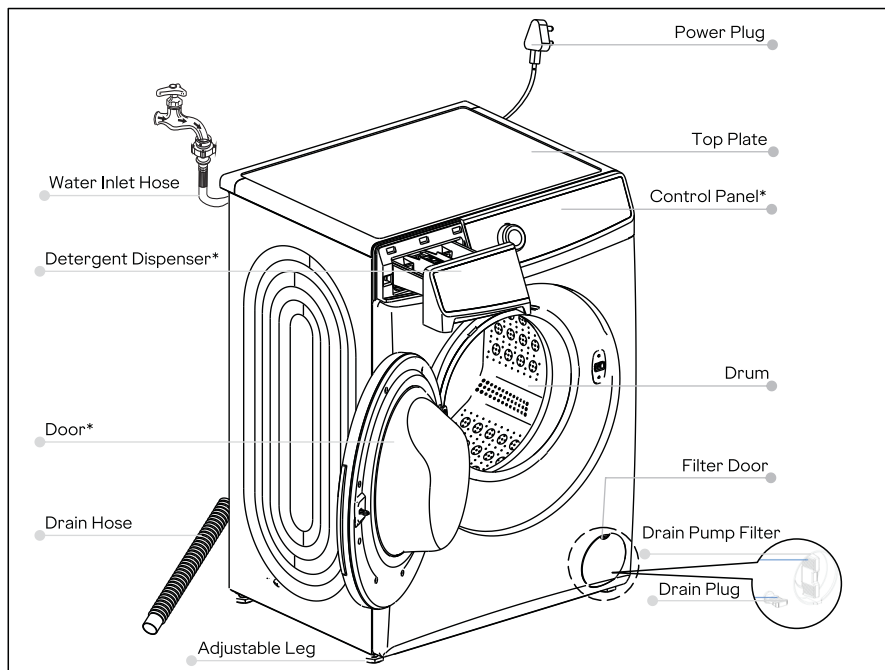


Note!

The product picture is for illustration only; please refer to the real product as a reference.


Accessories

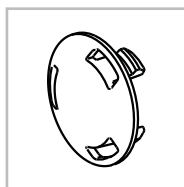


Transport Plug

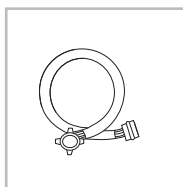

Water Inlet
Hose

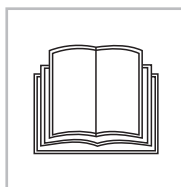

User Manual

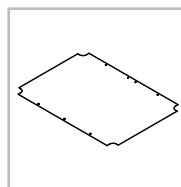

Antiratt Cover



Note!

1. Transport Plug: For covering the holes after removing transit bolts. The provided number of caps (4 to 5) depends on the model.
2. Water Inlet Hose: For supplying water to the washing machine.


*The image is for representation purpose only.

Installation

Installation Area


Warning!

- Stability is important to prevent the product from wandering! Make sure the machine is standing level and stable.
- Make sure that the product does not stand on the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture.
- It is advisable to avoid usage of the trolley & the movement of the washing machine after installation. It may disturb the leveling of the washing machine and can create excessive noise & vibration.

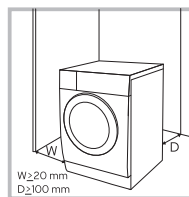

Before installing the machine, the location characterized as follows shall be selected:


1. Rigid, dry, and level surface
2. Avoid direct sunlight
3. Sufficient ventilation
4. Room temperature is above 0°C.
5. Keep far away from the heat sources, such as coal or gas-burning appliances.
6. Do not install the washing machine on a platform or a poorly supported structure.

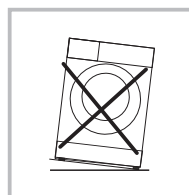

Unpacking the Washing Machine

Warning!

- Packaging material (e.g., films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation! Keep all packaging well away from children.

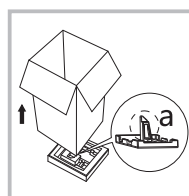

1. Remove the cardboard box and styrofoam packing.
2. Lift the washing machine and remove the base packaging. Make sure the small triangle foam (a) is removed with the bottom packaging together. If not, lay the unit down on the side surface and remove it manually.
3. Remove the tape securing the power supply cord and drain hose.
4. Remove the inlet hose from the drum.

*The image is for representation purpose only.

Installation

Installation Instruction of Antirat Cover

Before disassembling the transport bolts, the anti-rat cover should be installed. Please follow the steps.

1. Incline the machine to a suitable angle for installation. Packaging material can be used under the machine. When inclining the machine, make sure there is no damage to it.
2. Put the anti-rat cover on the machine bottom into the opening.
3. Fix the anti-rat cover with screws. 4-Nos provided in accessories.

After all the steps above are finished, please upright the machine to the correct position. If the anti-rat cover is not fixed, rats may enter the machine and bite electrical wires.



First step



Second step



Third step


Remove Transport Bolts

Warning!


- You must remove the transport bolts from the backside before using the product.



Loosen the 4 transport bolts with a spanner

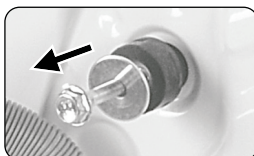

Remove the bolts, including the rubber parts, and keep them for future use

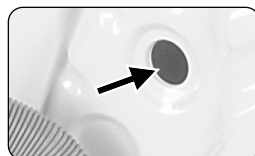

Close the holes using the transport plug


*The image is for representation purpose only.

Levelling the Washing Machine

Warning!

- The adjustable leg on all four feet must be screwed tightly against the housing.

1. Loosen the lock nut.
2. Turn the foot until it reaches the floor.
3. Make sure all the legs of the machine are resting on the floor surface to avoid machine movement and noise generation due to vibration. Then, check for machine rocking by pushing the top plate diagonally.
4. If rocking is observed, adjust the leg again; if rocking is not observed, tighten the nuts.

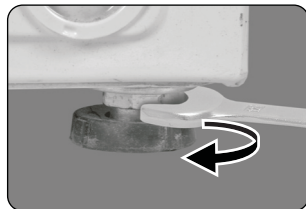

Connect the Water Supply Hose

Warning!

To prevent leakage or water damage, follow the instructions in this chapter

- Do not kink, crush, or modify the water inlet hose.



Connect the water supply hose to the water inlet valve and a water tap with cold water as indicated.



Note!

- Connect manually; do not use tools. Check if the connections are tight.

*The image is for representation purpose only.

Drain Hose



Warning!

- Do not kink or protract the drain hose.
- Position the drain hose properly, or it may cause water leakage.

There are two ways to place the end of the drain hose:

1. Put it into the water trough.

2. Connect it to the branch drain pipe of the trough.

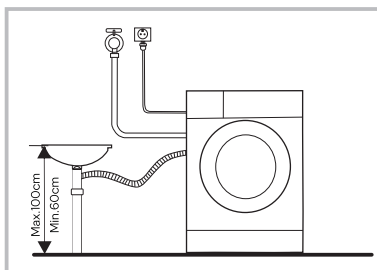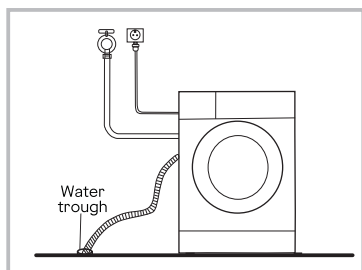

Note!

- The drain hose should not be placed higher than 100 cm above the floor.
- Proper securing of the drain hose will protect the floor from getting wet due to water leakage.

Electrical supply & Grounding

- AC 220-240 V / 50 Hz Supply required for appliances with fuses or circuit breakers
- Connect appliances to an earthed socket in accordance with current regulations.

Operation

Quick Start

Caution!

- Before washing, please make sure the washing machine is installed properly.
- Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it is recommended to clean your appliances before first use. For this reason:
- Select a cycle (Cotton 60°C and half load of detergent) and allow the washing machine to wash without a cloth load.

Caring for Washing

Care Label: Look for the care label present on your clothes. This will help you to identify your garment type and how it should be washed.


Color: Separate whites from colors.

Size: Mix different-sized items together to get improved wash performance.

Sort: To get the best results, sort the cloth loads that can be washed in the same wash cycle. Different fabrics need to be washed in different ways, i.e., at different water temperatures or at different spin speeds.

If possible, do not wash heavily soiled items and lightly soiled items together.


1. Before Washing

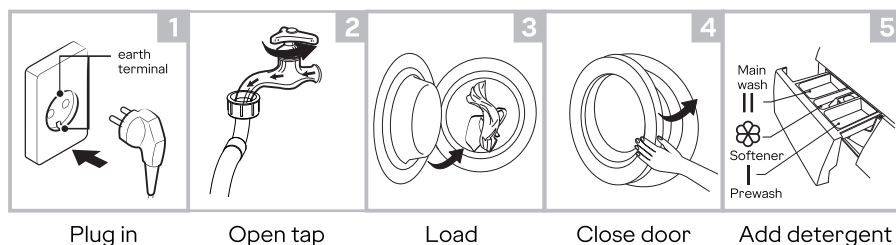

Note!

- Detergent needs to be added in compartment I if the pre-wash function is selected.

2. Washing

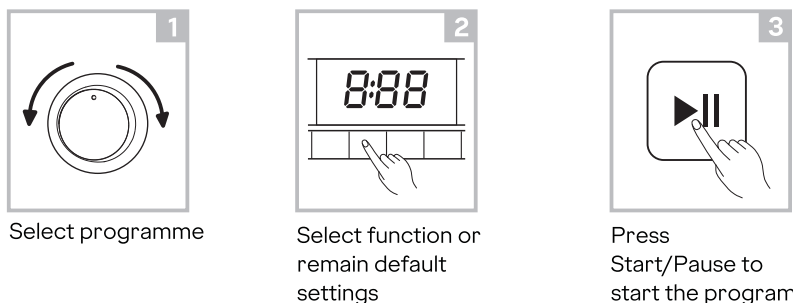


3. After Washing

Buzzer beep and “End” on display.


Operation

Before each Washing


- The ambient temperature of the washing machine should be 5–40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before washing. Use non-foaming or less-foaming detergent suitable for machine washing properly.

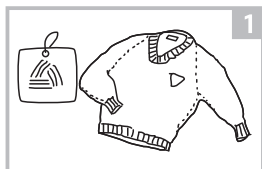


Check the care label

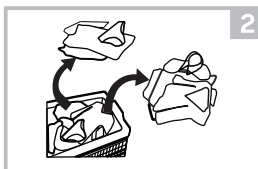


Sort laundry according to color and textile type

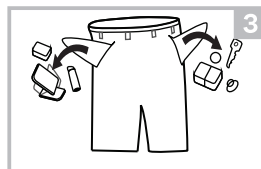


Take all items out of the pockets

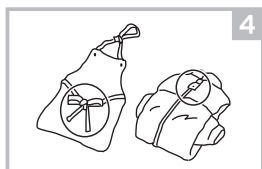

Tie together long textile strips and belts, close zips and button

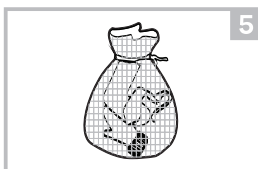

Put small items into a laundry bag

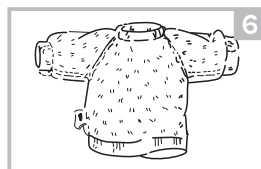

Turn easy-pilling and long-pile fabric inside out




Warning!

- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances like wax, oil, paint, gasoline, alcohol, kerosene, and other flammable materials.
- Washing single clothing items may easily create big eccentricity and cause alarm due to unbalance. Therefore, it is suggested to add one or two more laundry items to the wash so that the spin can be done smoothly.

Operation

Detergent Dispenser

- I **Prewash:** Apply prewash detergent.
- II **Main Wash:** Apply main wash detergent.
-  **Fabric Softener:** Apply additives such as Fabric Softener. Do not exceed the **Max. Limit**.
-  Release the button to pull out the dispenser.

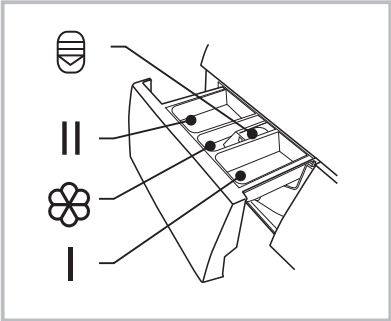

Caution!

Detergent only needs to be added in “compartment” I after selecting the pre-wash function.
 “Do not open the detergent dispenser while the washing machine is operating.”

Program Name	I	II	
Mix Fabric	○	●	●
Cotton	○	●	●
Eco Wash	○	●	●
Whites	○	●	●
Gentle Wash		●	●
Refresh		●	●
Rinse+ Spin		●	●
Baby Care	○	●	●
Sports Shoe		●	●
Woolens		●	●
Bulky	○	●	●
Quick 15'		●	●
Spin Only			
Tub Clean		●	●

● Means must ○ Means optional

Operation

Detergent Recommendation

Recommended washing detergent	Wash cycles	Washing temp. in °C	Type of laundry and textile
Heavy-duty detergent with bleaching agents and optical brighteners	Cotton Eco Wash Whites	60°C 40°C 60°C, 95°C	White laundry made from boil-proof cotton or linen
Colour detergent without bleaching agents and optical brighteners	Cotton	60°C	Coloured laundry made from cotton or linen
Color or mild detergent without optical brighteners	Cotton	60°C	Coloured laundry made from easy-care fibers or synthetic materials
Mild washing detergent	Gentle wash	--°C, 40°C	Delicate textiles, silk, viscose
Special wool detergent	Woollens	--°C, 40°C	Wool



Note!

Adding Detergent:

- Follow the detergent manufacturer's recommendations based on the weight of laundry, soiling levels, and the hardness of water in your local area.
- If your tap water is soft, use less detergent.
- Always use detergents that are specifically designed for washing machine use.
- We recommend using front-load Matic detergent or liquid detergent for better wash performance.
- Do not use detergent that tends to solidify or harden. They may remain after the rinse cycle and can block the drain outlet.
- Always use "Low Suds" detergent. If too much detergent is used, too many suds will occur; this will decrease washing results and can cause a heavy load on the motor.
- If you wish to use liquid detergent, follow instructions given by the detergent manufacturer.
- If you are starting the washing cycle immediately, you can pour liquid detergent in the main wash compartment. Do not put liquid detergent in the main wash if you are using the "time delay" option.


Adding Fabric Softener:

- Always put fabric softener in the designated compartment before the start of the wash cycle
- Do not pour softener directly on the clothes.
- Do not exceed the max. limit of the fabric softener compartment.
- Softener will be automatically added during the last rinse cycle.
- Do not open detergent dispenser when water is being supplied.

Operation

Control Panel

Model: WFEON RGL 9014 5.0 / WFEON RGL 8514 5.0 / WFEON RGL 8014 5.0 /WFEON ZUS 9014 5.0

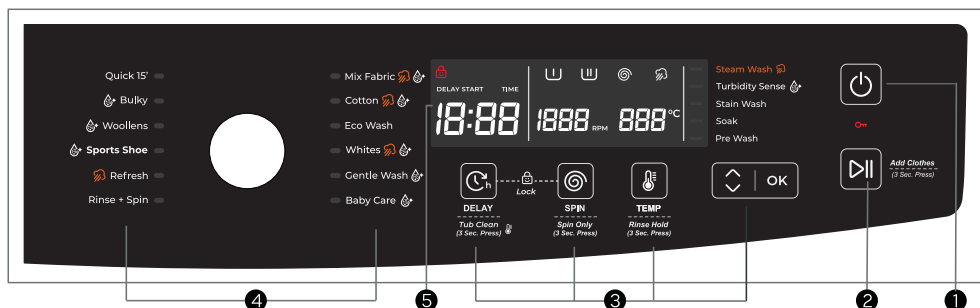

1 Power

Turn the appliance on and off.

2 Start/Pause

Start or pause your programme.

3 Option

This allows you to select & deselect additional functions.


- **Tub Clean**—specially set in this machine to clean the drum and tub.
- **Spin Only**: Special program to run spin.
- **Rinse Hold**: Special function to pause program during final rinse.

4 Programmes

Available according to the laundry type.

5 Display

The display shows settings, estimated remaining time, options, and error messages.

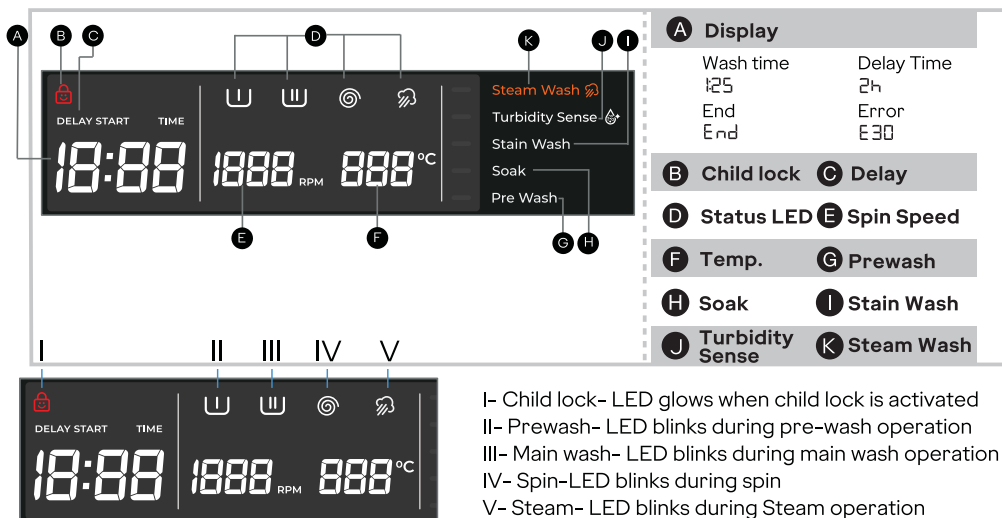

*The image is for representation purpose only.

Operation Programmes

Model: WFEON RGL 9014 5.0** / WFEON RGL 8514 5.0 / WFEON RGL 8014 5.0 / WFEON ZUS 9014 5.0

Programs, Descriptions and Default Settings

Program Name	Program Descriptions	Program Timings	Maximum Dry Cloth Load (kg)	Default Temp	Default Spin Speed (rpm)
Mix Fabric	This program handles a combination of cotton, synthetic, and easy-care clothes. Except special clothing like wool, dark clothes, and delicates.	01:19	8/8.5/9	40°C	1000 rpm
Cotton	This program allows cotton clothing items such as shirts, pants, and uniforms to be washed at high or moderate temperatures without any damage.	01:45	8/8.5/9	40°C	1200 rpm
Eco Wash	The default temperature for laundry is 40°C, but delicate garments can be washed at temperatures between 40°C and 60°C.	01:30	8/8.5/9	40°C	1400 rpm
Whites	It is suitable for white clothes and can withstand heat for improved washing and vibrant colours.	02:06	5	40°C	1000 rpm
Gentle Wash	This program can effectively clean delicate fabrics like silk, lingerie, satin, and sheer fabrics, as if they were hand-washed.	00:54	2	--°C	600 rpm
Baby Care	The program is designed to wash baby clothes with special attention to keeping the baby's skin safe.	02:18	3	60°C	800 rpm
Rinse+Spin	This includes both—a combination of "Rinse+Spin" functions.	00:22	8/8.5/9	--°C	1200 rpm
Refresh	This program is designed to eliminate odour and dewrinkle clothes made of cotton, mixed fabrics, and synthetic materials.	00:31	1	--°C	No spin
Sports Shoe	Only sports shoes and linen shoes with soft soles can be washed. Avoid washing leather or shoes with hard soles.	01:02	1 pair	--°C	400 rpm
Woollens	It is recommended to wash only "Machine Washable" wool garments. Use a gentle wash program to avoid shrinking. It is suggested to use a neutral wool wash detergent.	00:46	2	--°C	600 rpm
Bulky	This efficiently cleans large items like blankets, pillow cases, sheets, and sofa covers.	01:27	3.5	40°C	800 rpm
Quick 15'	This program refers to short programs for lightly dirty colored fabrics such as cotton, linen, or mixed fabrics.	00:15	4	--°C	800 rpm
Spin Only	This refers to a spinning action that allows users to choose different speeds for the spin.	00:16	8/8.5/9	--°C	1200 rpm
Tub clean	This program prevents sediment from building up in the tub and drum by using a high-temperature sterilization process. During this program, clothes cannot be added. The right amount of bleach is used to improve the cleaning effectiveness.	2:01	No Load	60°C	No spin

Energy program- Eco wash with temperature 60°C and spin speed 1400rpm.

* Under test condition when tested in accordance with standard IEC 60456 : 2010

** Under test condition when tested in accordance with standard IEC 60456 : 2022



Note!

- The parameters in this table are only for the user's reference. The actual parameters may be different from the parameters in the above-mentioned table.

Operation

Option

WFEON RGL 9014 5.0 / WFEON RGL 8514 5.0 / WFEON RGL 8014 5.0 / WFEON ZUS 9014 5.0

Program Name	Delay	Spin speed available							Temp. available						Pre-wash	Soak	Stain wash	Turbidity Sense	Steam Wash
	0-12H	No spin	400	600	800	1000	1200	1400	--°C	30°C	40°C	60°C	80°C	95°C					
Mix Fabric	✓	✓	✓	✓	✓	✓	✓	✗	✓	✓	✓	✓	✗	✗	✓	✓	✓	✓	✓
Cotton	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Eco Wash	✓	✓	✓	✓	✓	✓	✓	✓	✓	✗	✓	✓	✗	✗	✓	✓	✓	✗	✗
Whites	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Gentle Wash	✓	✓	✓	✓	✗	✗	✗	✗	✓	✓	✓	✗	✗	✗	✗	✓	✗	✓	✗
Baby Care	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	✓	✓	✓	✗	✓	✓	✓	✓	✗
Rinse+ Spin	✓	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗
Refresh	✓	✓	✗	✗	✗	✗	✗	✗	✓	✗	✗	✗	✗	✗	✗	✗	✗	✗	✓*
Sports Shoe	✓	✓	✓	✓	✓	✓	✗	✗	✓	✓	✓	✓	✗	✗	✗	✓	✓	✓	✗
Woollens	✓	✓	✓	✓	✗	✗	✗	✗	✓	✓	✓	✗	✗	✗	✗	✓	✗	✓	✗
Bulky	✓	✓	✓	✓	✓	✓	✗	✗	✓	✓	✓	✓	✗	✗	✓	✓	✓	✓	✗
Quick 15'	✓	✓	✓	✓	✓	✓	✗	✗	✓	✓	✓	✓	✗	✗	✗	✗	✗	✗	✗
Spin Only	NA	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗
Tub Clean	NA	✓	✗	✗	✗	✗	✗	✗	✓	✓	✓	✓	✓	✓	✗	✗	✗	✗	✗



Note!

- The table shows option available for selection in each program.

- Due to the continuous improvement policy, available options setting may get updated without notice.
 - ✓ Option available and can be selected
 - ✗ Option not available for selection
 - ✓ * Available by default and cannot be deselected

Operation

Power ON

- On pressing power key,  will glow indicating machine is in ON state
- Power saving during machine operation: The display LED brightness will automatically reduce and the backlight for Power and Start/Pause keys will turn OFF after 2 minutes of inactivity.
- The original brightness of the display will be restored once the user interacts with any key.

Pause

- Press start/ pause key to enter pause state
- In pause state,  LED will blink. Press start key again to resume the program.

Door Lock

- The Key icon  will glow once the door is locked.

Spin speed

- Press to select required spin speed

Temperature

- Press to select required temperature

Delay

To set the delay function:

- Select a program
- Press delay key to choose delay time from 0 to 12 hours (0 to 12h)
- Press start key
- “Delay start” will glow to indicate delay phase
- Once delay time is completed, program will automatically resume.



Choose the Programme



Setting time



Start

To cancel the delay function:

- Press delay key till “0h” is shown during selection
- Press power key to reset delay function during selection as well as running state

⌂ Option Selection And Ok

- To select available option such pre-wash/ soak/ stain wash/ turbidity Sense/ steam wash*,
press arrow key to scroll upwards and then press “OK” when LED corresponding to the desired option blinks.
- LED corresponding to the selected option to glow on selection
- To deselect, press arrow key and then press “OK” when LED corresponding to the desired option blinks. LED corresponding to the selected option to

Operation

Pre- Wash

- Preliminary wash for the clothes before main wash. It increases the washing performance.

Note- Detergent need to be added in the compartment I

Soak

- Soak helps to loosen up stains by soaking clothes in water for a specified time
-

Stain Wash

- Additional washing to remove* different types of tough stains.
-

Turbidity Sense (I Sense)

- This feature will ensure clothes cleaning even in more soapy and dirty water by adding extra rinse in selected programs.
 - This feature is applicable in Mix Fabrics, Cotton, Whites, Gentle wash, Baby care, Sports Shoe, Woollens and Bulky program
 - It will be activated if "Turbidity Sense" option is selected by pressing arrow and OK key when the LED corresponding to turbidity sense blinks.
 - Machine will detect the water quality before the final rinse. If the water quality is not good, additional rinses will be added automatically till water quality improves.
 - During additional rinse operation, "I Sense On" rolling message will be displayed and LED corresponding to "Turbidity Sense" will blink
 - Maximum three additional rinses will be added based on the soapy or dirty water present during rinsing.
 - If default water in inlet is dirty, then I sense feature will not be efficient.
-

Steam Wash

- User can select Steam Wash features with selected programmes to reduce wrinkles, creases, and germs in cloths.
- To select steam wash, press the arrow key till the "Steam Wash" option LED blinks and press the OK key. LED to glow continuously to indicate selection.
- To deselect, press the arrow key till the "Steam Wash" option LED blinks and press the OK key. LED to turn OFF to indicate deselection.
- After selected, steam will be produced inside the drum at two different stages.
- The steam wash option is available in mixed fabrics, cotton, and whites.
- Steam wash LED to blink during steam operation.
- "Cloth Cooling" message is displayed at the final stage of the cycle if the drum temperature is higher. During that time, the door cannot be unlocked.

Caution: Do not attempt to open the door forcefully during steam operation. Steam can cause severe burns

Refresh Program

This program will reduce wrinkles, odors, and dust from clothes.

- Select the Refresh Program by rotating the program knob and press the start key.
- User can add deodorizer/cloth wash fragrance.

*Applicable for selected models only.

Spin Only

- Press Spin key for 3 secs to run Spin Only program.
- "SP1" is displayed during selection and operation with the remaining program.

Rinse Hold

- Select to pause the programme during the final rinse to avoid creasing that can occur if clothes remain inside the machine for a long period of time after spinning.
- Press the "Temp" key for 3 secs to select the rinse hold option. At the rinse hold stage,  the tub symbol will blink.
- Select the required spin speed and press the start key to continue the programme..

Tub Clean

- Run this program to remove scaling, leftover impurities, and unpleasant smells.
- Empty the drum before starting the programme.
- Press the "Delay" key for 3 sec to select the tub clean programme.
- "Tub cln" and programme time to be shown to indicate tub clean selection
- The tub clean reminder will appear after every 45 cycles. Run or skip based on the requirement.
- "Run tub clean" rolling message is displayed at the end of every 45 cycles to notify the customer to run tub clean.

Child Lock

- To enable child lock, press the 'Delay' and 'Spin' keys simultaneously.
- The child lock symbol with "lock" text will glow on the display when activated.
- No changes can be made when the programme is in a running state.
- To disable child lock, press 'Delay' and 'Spin' keys simultaneously.
- Press the power key to reset the programme if required.



Child lock

To avoid misoperation by children.



Choose the
programme



Start



Press [Delay] and [Spin]
for 3 seconds till the buzzer beeps

Add Clothes Function

- Allows user to Add forgotten clothes by pausing the machine in middle of a running cycle.
- Press start/ pause key for 3sec to interrupt the cycle and change or add/remove laundry.
- Function will work during first 5 min. of Main wash.


Maintenance

Warning!

- Always unplug the appliance and close the water tap before cleaning and maintenance.

Cleaning the Cabinet

Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted, nonabrasive, neutral detergents when necessary. If there is any water overflow, use a cloth to wipe it off immediately. Never use sharp items to clean the appliance.

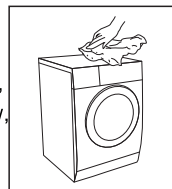

Caution!

- Never use abrasive or caustic agents. Formic acid or its diluted solvents or similar substances, like alcohol or chemical products.

Cleaning the Drum

Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!


Note!

- Keep any laundry away from the machine while cleaning the drum.

Cleaning the Door Seal and Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up, it can cause leakages. Remove any coins, buttons, and other objects from the seal after each wash.

Clean the door seal and glass every month to ensure the normal operation of the appliance.

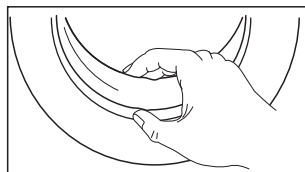

*The image is for representation purpose only.

Maintenance




Cleaning the Inlet Filter



Note!


- Diminishing water flow is a sign that the filter needs to be cleaned.

1. Close the tap and remove the water supply hose from it.
2. Clean the filter with a brush.
3. Unscrew the water supply hose from the backside of the machine. Pull out the filter with long-nose pliers.
4. Use a brush to clean the filter.
5. Reinstall the filter to the water inlet and reconnect the water supply hose.
6. Clean the inlet filter every 3 months to ensure the normal operation of the appliance.

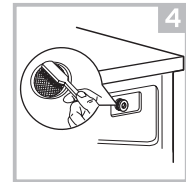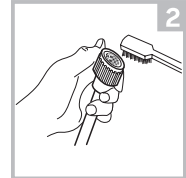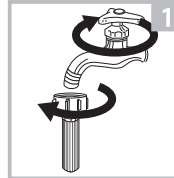


Clean the Detergent Dispenser


1. Press down the release  on the softener cover and pull the dispenser drawer out of the recess. Clean the inside of the recess with a brush.
2. Lift the softener cover off the dispenser drawer and wash both items with water.
3. Restore the softener cover and push the drawer back into the recess.

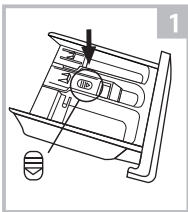


Press the release and remove the dispenser drawer

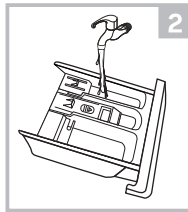

Clean the dispenser drawer and the softener cover under water

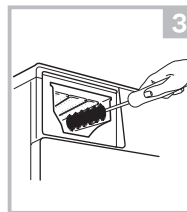

Clean the recess with an soft brush

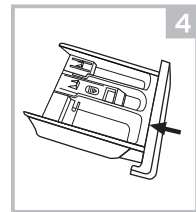

Insert the dispenser drawer



Note!

- Do not use abrasive or caustic agents to clean plastic parts.
- Clean the detergent dispenser every 3 months to ensure the normal operation of the appliance.


*The image is for representation purpose only.

Maintenance


Cleaning the Drain Pump Filter

Warning!


- Make sure that the machine has finished the washing cycle and is empty. Switch it off and unplug it before cleaning the drain pump filter.
- Be careful of hot water. Allow the water to cool down. Or else, there is a risk of scalding.
- Clean the filter periodically every 3 months to ensure the normal operation of the appliance.

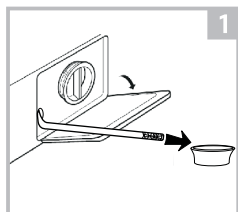


Open the filter door. Unplug the drain plug and allow the water to flow out. Use any container to collect water flowing on the floor

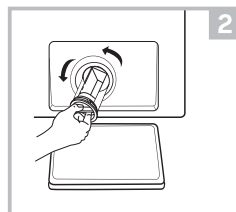

Open the filter by turning it counterclockwise

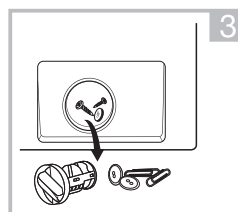

Remove extraneous matter

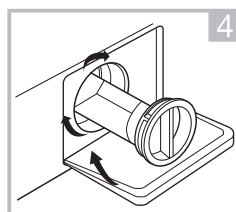

Close the lower cover cap

Caution!

When the appliance is in use and depending on the programme selected, there can be hot water in the pump. Never remove the pump cover during a wash cycle; always wait until the appliance has finished the cycle and is empty. When replacing the cover, ensure it is securely retightened.

*The image is for representation purpose only.

Maintenance

Trouble shooting

Whenever there is a problem with the appliance, check if you can solve it, following the resolutions below. If the problem persists, please contact customer service.

Description	Possible cause	Solution
Appliance does not start	Door is not closed properly. Clothes are stuck	Close the door properly and restart. Check the laundry.
Door can't be opened	Safety protection is activated.	Disconnect the power and restart.
Water leakage	Connections are not tight enough.	Check and fasten the water inlet pipe. Check and clean the outlet hose.
Detergent residues in the detergent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.
Indicator or display does not work	No power to machine	Switch off the power and check if the mains plug is connected properly. Clean the control panel with a dry cloth.
Abnormal noise	Transport bolts still in place. Floor is not solid or level.	Check if the transport bolts have been removed. Make sure the appliance is installed on a solid and level floor.

Error Codes and Solution

Error	Possible Cause	Solution
CLOSE THE DOOR	Door open/ not closed properly	Close the door properly
d0	Error is shown if the door opens during program operation	Close the door properly and restart the machine. If error persists, call service technician
dC	Error is shown if door is not getting unlocked at the end of the cycle	Restart the machine and check. If error persists, call service technician
tP	No water supply or low water pressure	Check the water supply/ water pressure/ inlet filter blockage
dP	Drain path is clogged or drain pump is not working or filter is blocked	Restart the machine and check. If error persists, call service technician
PS	Water level sensor not in order	Restart the machine. If error persists, call service technician
OH	Maximum temperature reached	Restart the machine. If error persists, call service technician
nt	Temperature probe not in order	Error is shown at the end of the cycle. Restart the machine. If error persists, call service technician
ht	Water is not getting hot	Error is shown at the end of the cycle. Restart the machine. If error persists, call service technician
LE	Input supply voltage is low	Machine will continue the operation once recovery voltage is achieved (>160V)
HE	Input voltage is high	Machine will continue the operation once recovery voltage is achieved (<270V)
OF	Water overflow	Restart the machine and check. If error persists, call service technician
Ub	Load unbalance during spin	Error is shown at the end of the cycle. Restart the machine. If error persists, call service technician
EXX (E20- E26)	Motor related errors	Restart the machine and check. If error persists, call service technician
tS	Turbidity sensing calibration required	Error is shown at the end of the cycle. Call service technician

Maintenance

Customer Service

Warning!

Risk of Electric Shock

- Never try to repair an appliance that is defective or presumed to be defective.
You may put your own and future users' lives in danger. Only authorized specialists are allowed to carry out this repair work.
- Improper repair will void the warranty, and subsequent damages can't be recognised!

Transport

Important Steps when Moving the Appliance


- Unplug the appliance and close the water inlet tap.
- Check, if the door and the detergent dispenser are closed properly.
- Remove the water inlet pipe and the outlet hose from the house installations.
- Let the water drain completely from the appliance (see "Maintenance Cleaning the drain pump filter").
- Important: Reinstall the 4 transport bolts in the back of the appliance.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.

Technical Specifications

Power supply 220 V-240 V, 50 Hz

MAX.Current 16 A

Water pressure 0.05 Mpa- 1 Mpa

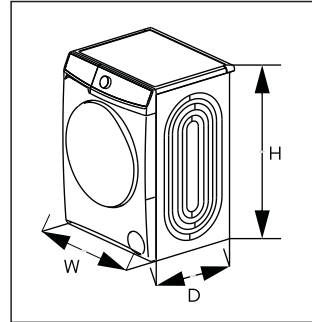

Model	Washing capacity—maximum dry cloth load (kg)	Max Spin Speed (rpm)	Net Dimensions (W*D*H) mm	Net Weight (kg)	Rated Power (W)
WFEON RGL 9014 5.0	9.0	1400	596 x 554 x 840	64.50	2300
WFEON RGL 8514 5.0	8.5	1400	596 x 554 x 840	64.50	2300
WFEON RGL 8014 5.0	8.0	1400	596 x 554 x 840	64.50	2300
WFEON ZUS 9014 5.0	9.0	1400	596 x 554 x 840	64.50	2300

Warranty

The Godrej Fully Automatic Washing Machine comes with 2 years and 4 years comprehensive warranty & 10 years motor warranty from the date of purchase, against defective material or workmanship. In case of any such defect, Godrej & Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group) undertakes to get the appliance repaired free of charge during warranty period, subject to terms & conditions below.

*10 years motor warranty and 4 years comprehensive warranty applicable for below models.

WFEON RGL 8014 5.0 IDCRM MTBK

WFEON RGL 8514 5.0 IDCRM CHGD

WFEON RGL 8514 5.0 IDCRM RSGD

WFEON RGL 9014 5.0 IDCRM MTBK

WFEON RGL 9014 5.0 IDCRM CHGD

WFEON RGL 9014 5.0 IDCRM RSGD

*10 years motor warranty and 2 years comprehensive warranty applicable for below models.

WFEON ZUS 9014 5.0 IDCRM GLWH

Instructions For The Customer

1. Kindly ensure that the dealer fills the warranty card correctly and completely.
2. You should retain the warranty card for record and produce the same in the event of any warranty repairs.
3. In the event of a defect developing in the product, contact the nearest authorized Godrej & Boyce service center for obtaining warranty service and provide the defect, model details, & serial no.
4. The product will function between +/- 5% of rated volts. For any fluctuation beyond the specified limit, the company shall not be responsible. In turn, the warranty stands terminated.
5. Earthing provision is necessary for safety.
6. Frequency must be within a 5% variation of 50Hz. Beyond this, the company shall not be liable for any unforeseen hazards like fire, shock, etc., and in turn, the warranty stands terminated.
7. If the appliance or any part thereof is subjected to neglect, abuse, or misuse; tampering; alteration; accident; fire; floods; or other acts of God; or damage by rodents or insects, the company is not responsible for any damage caused to the appliances & shall not be liable for any consequential loss or compensation, nor refund of purchase price or replacement of the appliances.
8. In the event of repair/replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of warranty. Moreover, the time taken for repair/replacement and in transit, whether under the warranty or otherwise, shall not be excluded from the warranty period.
9. Water supply is required above 0.5 bar, i.e., 7.25 PSI, to operate the fully automatic washing machine. Without this, the company shall not be able to install the product.
10. Any damage/defect arising due to the entry of a coin/foreign particle into the machine, which causes malfunctioning, is not covered under warranty. These calls will be chargeable to the customer during the warranty period.
11. House wiring-related issues are not covered under warranty, and such calls will be chargeable to the customer.
12. Calls related to lint filter or water inlet filter cleaning are not covered under warranty and are chargeable to the customer.

Terms and Conditions

1. Repairs and replacement of parts will be carried out through the authorized customer service center.
2. All transportation and handling expenses incurred while repairing will be payable by the customer.
3. For appliances installed beyond the municipal limits of the jurisdiction of the authorized service center, charges towards the technician's visit and other incidentals will be borne by the customer.
4. While the company will make every effort to carry out the repairs at the earliest, it is, however, made expressly clear that the company is under no obligation to do so in a specified period of time.
5. The company/its authorized service center will collect any parts or components replaced.
6. Warranty does not cover accessories to the appliance.
7. The company's obligation under this warranty shall be limited to repair or providing replacement of part/s only.
8. In the event of any unforeseen circumstances and spares not being available, the company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs..
9. Warranty is not applicable in case the original number (serial no. sticker) is removed, obliterated, or altered from the machine or cabinet.
10. The warranty is confined to the first purchase of the Godrej product only and is non-transferable.
11. Proof of purchase (i.e., purchase invoice/receipt, along with the corresponding model and/or serial number of the unit, must be presented when requesting service under warranty).
12. In case of repairs or replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of warranty.
13. The company or its authorized service providers reserves the right to retain any part(s) of the component replaced at its discretion in the event of a defect being noticed in the equipment during the warranty period.
14. It is the sole responsibility of the customer to provide necessary support to the company if the unit to be installed is not suitable for the installer or the service engineer to reach.
15. No dealer/distributor/retailer has authority to vary the terms of the above warranty.
16. A 2-year warranty is applicable on all the parts except plastic, rubber, and glass parts (i.e., the inlet/outlet hose, plastic knobs, top cover, lint filters, glass window, rubber valve, etc.).
17. Warranty does not cover repairing of any external accessories supplied by dealer/Godrej as a promotional scheme.
18. Removal of foreign objects/substances from machines, including the pump and inlet hose filter, for example, grit, nails, buttons, coins, etc. Will not be covered in warranty.
19. The warranty does not cover damage caused by commercial, business, or industrial purposes; this warranty is valid for equipment dedicated to domestic use only.

Branches / Service Connect

For any further assistance.

Branches			
Ahmedabad Bangalore Bhopal Bhubaneswar Chandigarh/Mohali Chennai	Coimbatore Delhi Faridabad Ghaziabad Guwahati Hyderabad	Jaipur Kochi Kolkata Lucknow Mumbai Nagpur	Patna Pune Raipur Ranchi Vijaywada

Call	WhatsApp
080-6743-6743	Text 'hi' To 9321665511 On Whatsapp

24 X 7 Call Centre • Weekend Service

Website: www.godrejenterprises.com/support
E-mail: smartcare@godrej.com SMS: <godrejcare> to 56677

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

This image shows a full page of blank white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page, providing a template for writing or drawing. There are no margins, text, or other markings on the page.

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)
Customer copy

Model No.

Unit Sr. No.

Date Of Purchase

Customer's Name & Address

Tel. _____

Dealer's Name & Address

Tel. _____

Customer's Signature:

Protection of Environment:

Protection of environment* is one of the core values of Godrej and we seek your co-operation to make sure that the product, packaging and plastic material is not disposed as unsorted municipal waste.



This symbol is known as the "Crossed-out Wheellie Bin Symbol". It means that the product should not be disposed of with your general house-hold waste.

It should be disposed of only through the company's collection points with special treatment so as to prevent any damage to the environment. Please call: **080-6743-6743** for applicable buy back arrangement or www.godrejenterprises.com/green-think for details about authorised collection points.

'This product is RoHS compliant'

The Godrej logo, written in a stylized, cursive script font.

Godrej and Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group)

Plant II, Pirojshanagar, Vikhroli (W), Mumbai 400 079.