



Scan the QR code to see the manual.



OWNER'S MANUAL

WASHING MACHINE



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

ENGLISH

P900S7* / PX900H9* / PX900H7* / PX900H3* / PX850O3* / PX800O3* / P120A7*
/ PX120A9* / PX120B7* / PX120A3* / PX110A3* / PX110B3* / PX100B3*



MFL72021949
Rev.01_071026

www.lg.com

Copyright © 2026 LG Electronics. All Rights Reserved

TABLE OF CONTENTS

This manual may contain images or content that may be different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE.....	3
WARNING	3
CARING FOR THE ENVIRONMENT	8

INSTALLATION

Parts and Specifications	10
Installation Place Requirements	11
Installing the Drain Hose	12

OPERATION

Preparing the Wash Load	14
Control Panel	15
Operating the Appliance	16

MAINTENANCE

Cleaning after Every Wash	19
Cleaning the Appliance Periodically	19
Caring the Appliance	20

TROUBLESHOOTING

Before Calling for Service	22
----------------------------------	----

APPENDIX

Reference	23
Reminder Information.....	24

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

Safety Messages



This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION

This indicates that the failure to follow the instructions can cause minor injury or damage to the product.

WARNING



WARNING

- To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Technical Safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

4 SAFETY INSTRUCTIONS

- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Ventilation openings must not be obstructed by a carpet.
- This appliance is intended to be used in household only.
- Use a new hose or hose-set supplied with the appliance. Reusing old hoses can cause a water leak and subsequent property damage.
- The inlet water pressure must be less than 100 kPa.

Maximum Capacity

The maximum capacity in some cycles for dry clothes to be used is:

PX 800 O3 *	PX 850 O3 *	P9 00S 7* / PX 900 H9 * / PX 900 H9 * / PX 900 H3 *	PX 100 B3 *	PX 110 A3 * / PX 110 B3 *	P1 20 A7 * / PX 120 A9 * / PX 120 B7 * / PX 120 A3 *
8.0 kg	8.5 kg	9.0 kg	10. 0 kg	11. 0 kg	12. 0 kg

Installation

- Never attempt to operate the appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- This appliance should only be transported by two or more people holding the appliance securely.
- Do not install the appliance in a damp and dusty place. Do not install or store the appliance in any outdoor area, or any area that is subject to weathering conditions such as direct sunlight, wind, rain, or temperatures below freezing.
- Make sure the power plug is completely pushed into the power outlet.
- Do not plug the appliance into multiple outlet sockets or an extension power cable.
- Do not modify the power plug provided with the appliance. If it does not fit the power outlet, have a proper outlet installed by a qualified electrician.
- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance is equipped with a power cord having an equipment-grounding conductor and a grounding power plug. The power plug must be plugged into an appropriate outlet socket that is installed and grounded in accordance with all local codes and ordinances.
- Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the appliance is properly grounded.
- Tighten and secure the drain hose at connecting ends to avoid separation.

Operation

- Do not attempt to separate any panels or disassemble the appliance.

6 SAFETY INSTRUCTIONS

- Do not repair or replace any part of the appliance. All repairs and servicing must be performed by qualified service personnel unless specifically recommended in this Owner's Manual. Use only authorized factory parts.
- Do not leave the appliance door open. Children may hang on the door or crawl inside the appliance, causing damage or injury.
- Do not put in, wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as waxes, wax removers, oil, paint, gasoline, degreasers, drycleaning solvents, kerosene, petrol, spot removers, turpentine, vegetable oil, cooking oil, acetone, alcohol, etc.). Improper use can cause fire or explosion.
- Do not use or store flammable or combustible substances (ether, benzene, alcohol, chemical, LPG, combustible spray, insecticide, air freshener, cosmetics, etc.) near the appliance.
- Do not place flammable objects (such as candles, lamps, etc.) or heating devices (such as stoves, heaters, etc.) on the appliance.
- Never reach into the appliance while it is operating. Wait until the drum has completely stopped.
- In case of a water leak from the appliance, disconnect the power plug and contact the LG Electronics customer information centre.
- Turn off water taps to relieve pressure on hoses and valves and to minimize leakage if a break or rupture should occur. Check the condition of the fill hoses; they may need replacement after 5 years.
- If there is a gas leakage (isobutane, propane, natural gas, etc.) within the home, do not touch the appliance or power plug and ventilate the area immediately.
- If the drain hose or inlet hose is frozen during winter, use it only after thawing.
- Keep all washing detergents, softener and bleach away from children.
- Do not touch the power plug or the appliance controls with wet hands.
- Do not bend the power cable excessively or place a heavy object on it.

- Wipe off dirt or dust on the contacts of the power plug.
- Do not fill the washing machine with more than 50 °C water. It may deform plastic parts or cause malfunctions.
- Do not drain water from the wash tub while the spin tub is operating.
- Always unplug the power cord after use.
- During washing spinning and drain, check that drain hose is lowered.

Maintenance

- Disconnect the appliance from the power supply before cleaning the appliance. Setting the controls to the OFF or stand by position does not disconnect this appliance from the power supply.
- Securely plug the power plug in the outlet socket after completely removing any moisture and dust.
- Do not spray water inside or outside the appliance to clean it.
- Never unplug the appliance by pulling on the power cable. Always grip the power plug firmly and pull straight out from the outlet socket.
- Only qualified service personnel from LG Electronics service centre should disassemble, repair, or modify the appliance. Contact an LG Electronics customer information centre if you move and install the appliance in a different location.

Disposal

- Before discarding an old appliance, unplug it. Cut off the cable directly behind the appliance to prevent misuse.
- Dispose of all packaging materials (such as plastic bags and styrofoam) away from children. The packaging materials can cause suffocation.

8 SAFETY INSTRUCTIONS

CARING FOR THE ENVIRONMENT

Disposal of Your Old Appliance (as per e-waste Rules)



1. When this crossed out wheeled bin symbol is depicted on the product and its operator's manual, it means the product is covered by E-Waste Management Rules India published by MoEF & CC, Govt. of India and are meant to be recycled, dismantled, refurbished or disposed off.

Do's

- a. The product is required to be handed over only to the authorized recycler for disposal.
- b. Keep the product in isolated area, after it becomes non-functional/unreparable so as to prevent its accidental breakage.

Don'ts


- a. The product should not be opened by the user himself/herself, but only by authorized service personnel.
- b. The product is not meant for re-sale to any unauthorized agencies/scrap dealer/kabariwalah.
- c. The product is not meant for mixing into household waste stream.
- d. Do not keep any replaced spare part(s) from the product in exposed area.

3. Any disposal through unauthorized agencies/person will attract action under Environment (Protection) Act 1986.

4. This product is complied with the requirement of Hazardous Substances as specified under E-Waste Management Rules India published by MoEF & CC, Govt. of India.

5. To locate a nearest collection centre or call for pick-up (limited area only) for disposal of this appliance, please contact No. 08069379999, Toll Free No. 1800-315-9999 for details. All collection centre and pick up facilities are done by third parties with LG Electronics India Ltd. Merely as a facilitator. For more detailed information, please visit : <http://www.lg.com/in>.

अपने पुराने उपकरण का निपटान (ई-अपशिष्ट नियम के अनुसार)

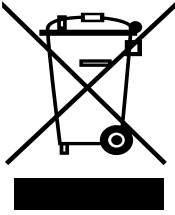

1. जब इस काटे गए पहिये वाले बिन का चिन्ह किसी उपकरण और इसके ऑपरेटर की पुस्तिका के साथ संलग्न होता है तो इसका मतलब है कि इसे "ई-अपशिष्ट" (प्रबंधन और हथालन) नियम के अंतर्गत सम्मिलित किया गया है, और इसे नवीनीकरण, विघटन और निपटान के लिए बनाया गया है। MoEF & CC भारत सरकार द्वारा प्रकाशित (भारतीय "ई-अपशिष्ट" (प्रबंधन और हथालन))
2. **करें**
 - क. उपकरण को सिर्फ अधिकृत पुनः नवीनीकरणकर्ता को ही निपटारण करने हेतु हस्तांतरित करें।
 - ख. जब उपकरण कार्यरत न हो इसे अलग क्षेत्र में रखें ताकि उपकरण से होने वाली दुर्घटनाओं से बचा जा सके।
- ना करें**
 - क. इस उपकरण को स्वयं/खुद नहीं खोलना चाहिए। उपकरण को केवल अधिकृत अधिकारी के द्वारा ही खोला जाना चाहिए।
 - ख. इस उपकरण को पुनः बिक्री के लिए किसी भी कबाड़ीवाला/भंगारवाला/अनाधिकृत संस्था को न दें।
 - ग. इस उपकरण को किसी घरेलू अपशिष्ट सामान के साथ मिलाकर न रखें।
 - घ. उपकरण के बदले हुए या आंतरिक पुर्जों को खुले क्षेत्र में न रखें।
3. यदि किसी अनाधिकृत विभाग या व्यक्ति के द्वारा निपटारण किया जाता है तो यह पर्यावरण (सुरक्षा) धारा 1986 के अंतर्गत आता है।
4. यह उत्पाद ई-अपशिष्ट (प्रबंधन और हथालन) नियम के तहत निर्दिष्ट खतरनाक पदार्थों की आवश्यकता का पालन करता है। MoEF & CC भारत सरकार द्वारा प्रकाशित (भारतीय "ई-अपशिष्ट" (प्रबंधन और हथालन))
5. उपरोक्त पदार्थों के निपटारण के लिए नजदीकी निपटारण संस्थान (संकीर्ण क्षेत्र) में कॉल करें। अधिक जानकारी के लिए हमारे टेलीफोन नंबर **08069379999** / टोल फ्री नंबर **1800-315-9999** पर कॉल करें। सभी संग्रहण केंद्र व पिक-अप की सुविधाएं किसी थर्ड पार्टी जो **LG Electronics India Ltd.** को अपनी सेवाएं प्रदान कर रही हों, से करवाएं। ज्यादा जानकारी के लिए देखें वेब साइट: <http://www.lg.com/in>

10 INSTALLATION


INSTALLATION

Parts and Specifications

NOTE


- Appearance and specifications may change without notice to improve the quality of the appliance.

Front View

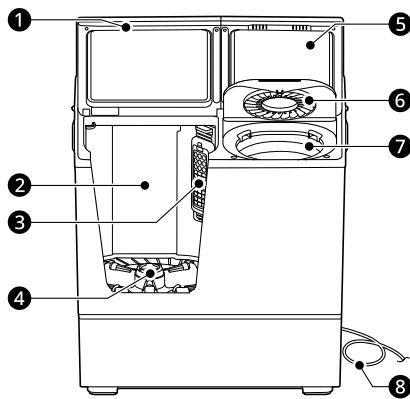

- ❶ Washing Cover
- ❷ Cabinet
- ❸ Filter
- ❹ Pulsator
- ❺ Spin Dryer Cover
- ❻ Safety Cover
- ❼ Spin Dryer Basket
- ❽ Power Cord

Accessories

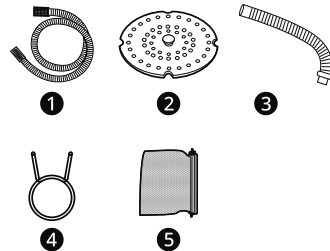


- ❶ Inlet Hose
- ❷ Safety Cover
- ❸ Drain Hose
- ❹ Snap Ring
- ❺ Rotation Filter-C*¹

*1 The included accessories vary depending on the model you purchased.

Specifications

Dimension(mm) & Weight (kg)

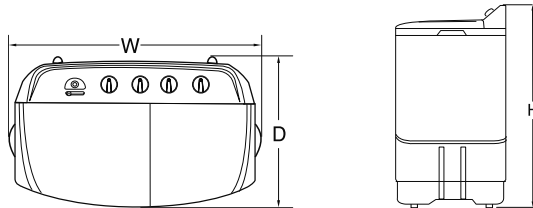


ENGLISH

Model	Dimension (mm)			Weight (kg)
	W	D	H	
P120A7* / PX120A9* / PX120B7*	904	548	1020	32.5
P900S7* / PX900H7* / PX900H9*	791	488	1002	28.0
PX120A3* / PX110A3* / PX110B3* / PX100B3*	904	548	1020	29.5
PX900H3*	791	488	1002	26.0
PX850O3* / PX800O3*	791	488	972	25.0

Installation Place Requirements

Before installing the appliance, check the following information in order to install the appliance in a correct place.

carton. Remove the plastic bag and all other packing material.

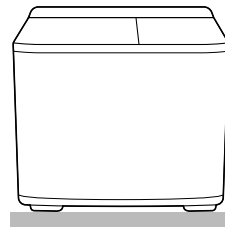

Unpacking Shipping Material


- 1 Remove packing bands from the carton. Open upper flaps and fold them back. Lift off the
- 2 Lift the washing machine and remove the base packing.

12 INSTALLATION

- 3 Remove the tape securing the power supply cord and drain hose.

- 4 Remove the inlet hose and filter from the accessory bag.

- Insert the power cord plug into the power socket-outlet. Use 3 pin socket only with proper earthing.

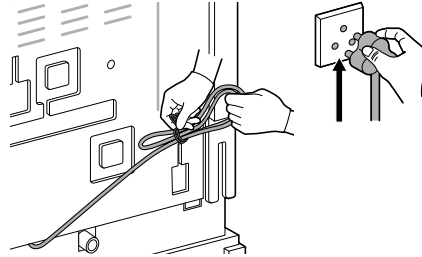


Installation Location


- For placing & leveling the machine
 - Select flat & firm floor.



- Maintain more than 15cm gap between the side of drain hose and the wall.

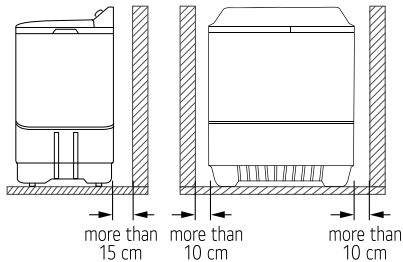

- The base openings must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.
- Fix the Inlet hose (kept inside the accessory bag).

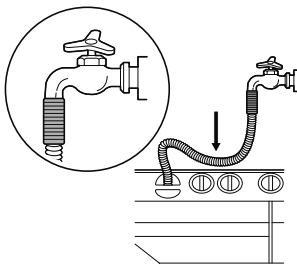

- For drain hose fixing method and positioning (Refer Installing the Drain Hose Guide).

NOTE


- The machine has mobility function by manual intervention, care to be taken to avoid any body parts coming under wheels.
- Install the washing machine on a horizontal support. Otherwise, it may cause vibration and noise.
- Incorrect installation may cause severe noise and break down.
- Rat away is a way to reduce damage caused by specific categories of rats and may not be effective on all rodents. Actual results may vary depending on actual product use conditions.

Installing the Drain Hose


Before connecting the drain hose, check your drain hose model and follow the instructions for that model.

Installing the Drain Hose


- 1 Fix the snap ring ① to the drain hose.

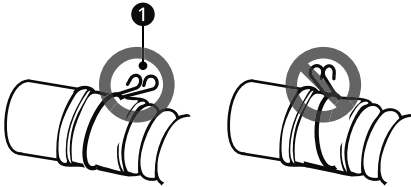

- 2 Align the drain hose with drain outlet

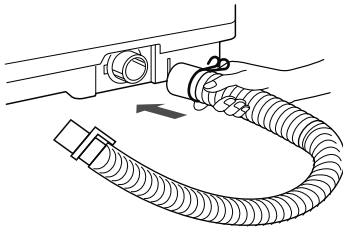

- 3 Press hose clip and push the hose towards the body of the washing machine and release the snap ring.

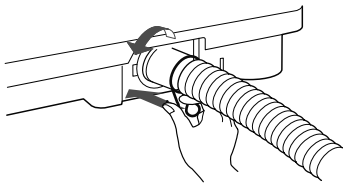

NOTE

 
- Be sure to re-route the drain hose so that it is not kinked or has sharp bends which will prevent proper drainage.
- Use only new hose set provided with the machine.

⚠ WARNING


- Packaging materials (such as plastic bags and thermocol) should be kept away from children.

Positioning the Drain Hose


- Always keep the level of drain hose slightly lower than the lowest part of the washing machine.
- Make sure the drain hose should remain straight.
- Do not place the drain hose more than 6 cm above the floor.

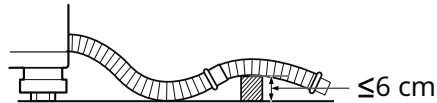

- The outlet of the drain hose should not be submerged in water.

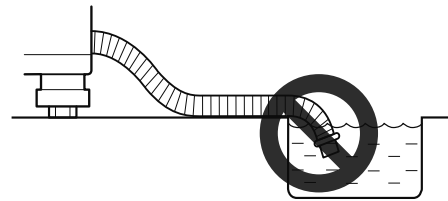

- Do not crush hose. Make sure to maintain gap of more than 15cm between the side of drain hose and the wall.
- Make sure the drain hose is not kinked.

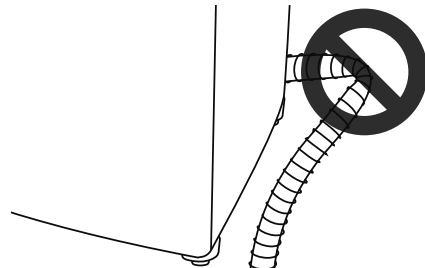


14 OPERATION

OPERATION

Preparing the Wash Load

Sort the wash load for best washing results, and then prepare the clothes according to the symbols on their care labels.

Preparing

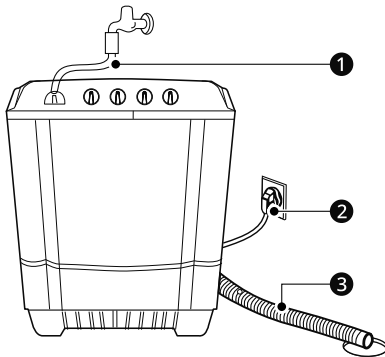

- Connect the water supply hose ① to the water supply inlet.
- Connect the power cord ② to the electrical outlet.
- Always keep the level of drain hose ③ slightly lower than the lowest part of the washing machine.
- Use new inlet hose available with machine.
- Set the water selector lever to **WASH** for washing/rinsing & to **SPIN** for interim spin rinse.

NOTE

 

- The water selector lever should not be placed near the center otherwise water flows to the wash and spin tub simultaneously.



- For your convenience hang up the wash cover on the left side of the washing machine tub when not in use.

Checking the clothes before Washing

- Check the washing instructions labels on the clothing to be washed.
- Don't forget to remove any objects from the pockets of the clothing. Object left in the pockets will damage the clothing or washing machine (especially cause clogging of the drain hose).

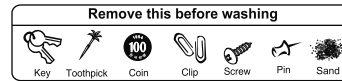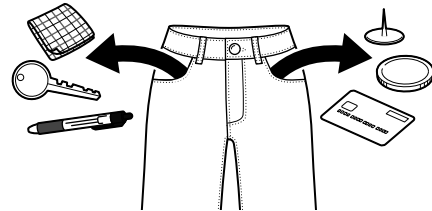


- Start washing after separating an oiled or dye laundry.

Control Panel

Control Panel and Functions

ENGLISH

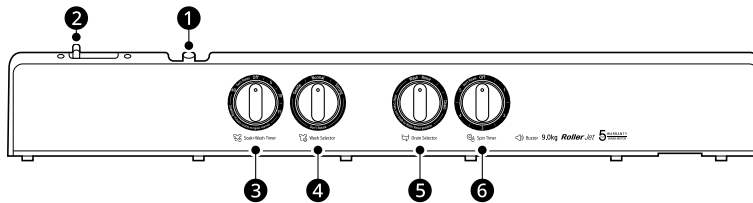

1 Water Supply Inlet

- Connect here with the Inlet hose from the water tap to feed water to the tub.

2 Water Selector

- Select **WASH** to supply water for washing and rinsing and **SPIN** for spin shower rinse.

3 Soak + Wash Timer

- The **Wash Timer** can be used for soak, wash and rinse operations. Select the desired time for soak, wash and rinse following the below combinations.

- 1) Soak+Wash : Select the desired soak time by setting the timer between 15~35/40 min then total wash time will be selected soak time + 15 min of wash time

35 min Soak Timer : 20 min Soak + 15 min Wash, **40 min Soak Timer** : 25 min Soak + 15 min Wash

- 2) Wash/Rinse : Any Wash/Rinse time 1~15 min can be selected by setting the timer between 1~15 min. Washing will take place for the set period, then machine stops automatically.
- 3) In Soak option, machine operates for 1~2 min & remains off for 5 min. This cycle continues for selected soak time.

Soak Function : Soaking is provided for better cleaning of clothes as detergent water goes to inner pores of clothing resulting dirt removal in better way.

4 Wash Selector

- Set the selector to **Gentle**, **Normal**, **Strong** according to kinds and quantity of the laundry.

5 Drain Selector

- Select **Wash.Rinse** for washing and rinsing, and **Drain** to drain the water from the tub.

6 Spin Timer

- Turn the timer to select the desired spinning time.
- Don't rotate the knob more than prescribed limit.

NOTE

- Please do not match this figure with model as it may be different from your model, these are schematic diagram only.

16 OPERATION

Operating the Appliance


Washing

- 1 Set the **Drain Selector** to **Wash.Rinse** position.




Drain Selector

- 2 Set the **Water Selector** to **WASH**.

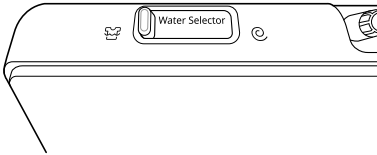

- 3 Open the water tap and fill water in the wash tub about halfway to the desired water level.

- 4 For models without detergent box
 - Put the appropriate amount of detergent and the laundry into the wash tub and add water to the required level.

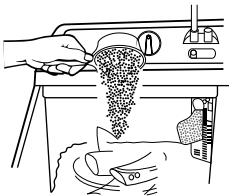

- 5 Select the **Wash Selector** to **Gentle**, **Normal**, **Strong** according to kinds and quantity of the laundry.



Wash Selector

- 6 Set the desired wash time.



Soak + Wash Timer

- 7 When washing is finished, select the **Drain Selector** to **Drain** position and drain the water out.



Drain Selector

⚠ CAUTION

- Washing machine is provided with different water level selection options for washing and rinsing processes such as, L (Low), M (Medium), H (High). H represents the Maximum water level available.
 - Fill the adequate water quantity as per the laundry load so that clothes can absorb the required amount of water and water will not be short.

Rinsing

Continuous water supply rinse


The course is to rinse while feeding water continuously.

- 1 Select the **Drain Selector** to **Wash.Rinse** position.



- 2 Put the laundry into the wash tub and open the water tap.

- 3 Set the rinse time with the **Wash Timer** and feed water continuously.

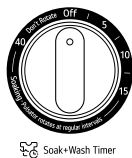


Interim spin rinse

Interim spin rinse prior to regular rinsing will remove sudsy water from the laundry and improve rinsing efficiency.


- 1 After washing
 - Put the laundry into the spin dryer basket.
 - Place the safety cover horizontally on the laundry.

- 2 Set the **Water Selector** to **SPIN** and open the tap.

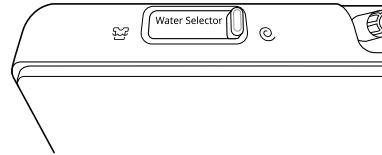


- 3 Supply water for about 1 minute. Adjust the water flow to prevent overflow from the wash tub.

- 4 Turn off the water supply close the safety cover-1 ① and spin dryer cover.

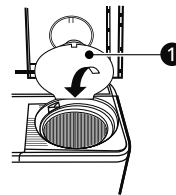

- 5 Set the desired spin time with the **Spin Timer**.

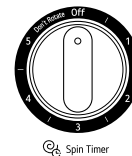

- 6 After spinning, put the laundry into the wash tub and rinse.


⚠ CAUTION

- Do not operate the spin with water supply on.


18 OPERATION

Spinning

- 1 Put the laundry evenly into the spin dryer basket.
 - Transfer the clothes from wash tub to spin dryer basket one by one.
- 2 Put the laundry down lightly.
- 3 Place the safety cover ② horizontally on the top of the laundry inside the basket.

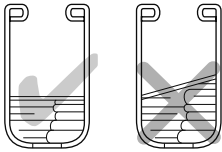

- 4 Close the safety cover-1 ① and then spin dryer cover.

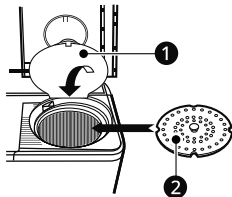

- 5 Set the **Spin Timer**.

Spin Time Guide

Type of clothing	Spin Time
Thin fabrics (synthetic fabrics, mixed fabrics) / Sweaters	1 min
Silk (synthetic fabrics)	1 - 3 min
Cotton underwear	3 - 5 min
Sheets / Towels	5 - 10 min

- Do not drain the water out of the wash tub while the spin dryer basket is in operation. Otherwise the spin motor could be damaged.
- If the spin dryer basket is off- balance and vibrates excessively, stop the spinning, rearrange the clothes evenly, and then resume spinning.
- If the spinning fail to stop when the spin dryer cover is opened, the brake is out of order. Immediately stop using the machine and request repair service.

NOTE

- For wollen clothes, spin for 1 min only for clothes protection.

CAUTION

- Do not continue Spin over 3 consecutive cycles. After 3 consecutive spin cycles, stop spinning more then 1 hour. Spin motor may stop operation or may be damaged.

After Finishing Wash

- 1 Remove the laundry from the spin dryer basket and close the spin dryer cover.
- 2 If there is water in the wash tub, set the **Drain Selector** to **Drain** in order to drain it out.
- 3 Disconnect the power cord from the electrical outlet.
- 4 Clean the washing machine.

MAINTENANCE


Cleaning after Every Wash

Washing Machine

If the washing machine itself becomes dirty.


- The washing machine can be cleaned with cloth soaked in mild liquid detergent. Never use abrasive cleaner or chemical such as benzene or thinner to clean washing machine, because these materials will damage the plastic parts.

- 3 Fit the filter to its original position. Press the filter until you hear a click sound.

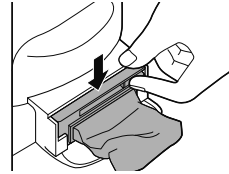

Smart Filter

- 1 Push down release tab given on up side and pull forward.

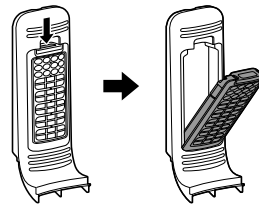


Cleaning the Appliance Periodically


Filter

Lint Filter


- 1 Pull out lint filter.

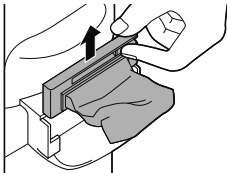


- 2 Open the lid and remove the lint.

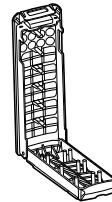 

- 2 Turn the net over and rinse in water.

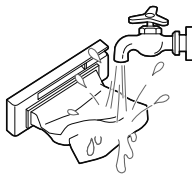


- 3 Wash the filter.

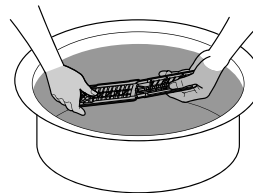

20 MAINTENANCE

 - 4 Close the lid and then insert the lower part of the filter. Press the top of the filter until you hear a click sound.

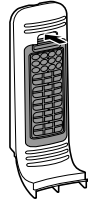

- 4 After 15 minutes wash, rotate the **Drain Selector** knob from **Wash.Rinse** to **Drain** and again back to **Wash.Rinse** position. Repeat this process 5-7 times. This will remove scaling.




Regular Cleaning


- 1 Keep **Drain Selector** knob at **Wash.Rinse** position.



- 2 Fill 1-2 buckets of warm water (temperature less than 50 °C) in wash tub.

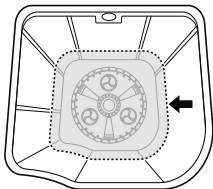

- 3 Select wash time for 15 minutes and operate. Do not put detergent powder or cloth in the machine.

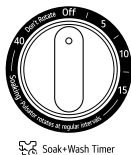

Caring the Appliance


Pulsator

If a button or some other object gets caught in the pulsator.

- 1 Take out the pulsator cap with "-" type screw driver.



- 2 Use a screwdriver to unscrew the screw in the center of the pulsator and lift the pulsator straight up in order to remove the button or other object.

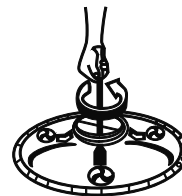


- 3 Place the pulsator at its original position and tighten the screw.

- 4 Place the pulsator cap at its original position.

Water Leakage

In case water leakage is observed, rotate **Drain Selector** 5-7 times. By doing so, any obstructed foreign particle will drain off.

- Perform the above steps again, till the problem is resolved.

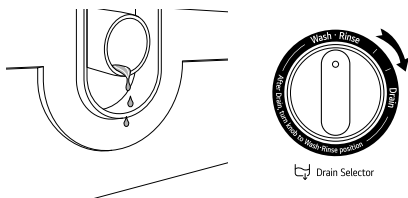

22 TROUBLESHOOTING

TROUBLESHOOTING

Before Calling for Service

Operation of the appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. You can remedy most of the problems by yourself, consequently save time and money, since you do not need to call LG Electronics service centre. The following table should assist you by troubleshooting.

Operation

Symptoms	Possible Cause & Solution
Appliance will not operate.	Appliance is unplugged. Make sure that the cord is plugged securely into a working outlet.
	Controls are not set properly. Make sure the Wash Timer knob or the Spin Timer knob is not in the "0" position.
Appliance will not drain water.	Drain hose is kinked. Ensure that the drain hose is not kinked.
	Drain is located higher than 1.0 m above the floor. Make sure that the drain hose is no higher than 1.0 m above the bottom of the appliance.
Rattling and clanking noise	Foreign objects, such as keys, coins, or safety pins may be in the drum. Stop the appliance, check the drum for foreign objects. If noise continues after the appliance is restarted, call for service.
Thumping sound	Heavy laundry may produce a thumping sound. This is usually normal. If the sound continues, the appliance is probably out of balance. Stop and redistribute the laundry.
	The laundry may be out of balance. Pause the cycle and redistribute the laundry.
Vibrating noise	The laundry may be unevenly distributed in the drum. Pause the cycle and redistribute the laundry.

APPENDIX

Reference

Weight Guide for Clothes

ENGLISH

Type of clothing	Type of fabric	Weight per piece
Under Shirt	Cotton	150 g
Handkerchief	Cotton	50 g
Bath Towel	Cotton	300 g
Shirt	Mixed Fabric	200 g
Socks (1 Pair)	Mixed fabric	50 g
Pajama (Shirt & Pants)	Cotton	500 g
Winter Undershirt	Woollen	600 g
Workclothes	Mixed Fabric	800 g
Blouse	Mixed Fabric	200 g

Guide for Washing

2. GUIDE FOR WASHING (WITH SOAK)

Type of fabric	Wash Selector	Wash time (Minute)	Amount of laundry (kg)	Water level	Amount of water (L)	Amount of detergent (g)
Woollen, Knits	Gentle	~5	0.5~2.0	H	84	70~85
Synthetics, Silk	Soak-Gentle	15+15	5.0~6.0	L	61	61~70
			6.0~7.0	M	73	70~75
			7.0~12.0	H	84	75~85
Soiled	Soak-Normal	20+15	4.0~5.0	S	51	55~60
Cotton, Linen etc			5.0~6.0	L	61	61~70
			6.0~7.0	M	73	70~75
			7.0~12.0	H	84	75~85

24 APPENDIX

Type of fabric	Wash Selector	Wash time (Minute)	Amount of laundry (kg)	Water level	Amount of water (L)	Amount of detergent (g)
Very soiled cotton and linen etc.	Soak-Strong	20/25+15	4.0~5.0	S	51	55~60
			5.0~6.0	L	61	61~70
			6.0~7.0	M	73	70~75
			7.0~12.0	H	84	75~95

NOTE

- Amount of laundry is a weight of dry laundry.
- Detergent is a general synthetic detergent.
- IMPORTANT INSTRUCTION : Fill Water in wash tub to height 20 mm above the level you desire, when washing will start water level will automatically adjust to the level you desire.

Product Features

Model	Time (Minutes)			Water Level	Filter	Wheel
	Wash	Soak	Spin			
P120A7* / PX120A9* / PX120B7*	40	25	5	90	Y	Y
P900S7* / PX900H7* / PX900H9*	40	25	5	66	Y	Y
PX120A3* / PX110A3* / PX110B3* / PX100B3*	35	20	5	90	Y	Y
PX900H3*	35	20	5	66	Y	Y
PX850O3* / PX800O3*	35	20	5	60	Y	Y

Reminder Information

Energy Saving Guide

Refer below instructions for Wash / Rinse / Spin Function

- In models having water level selection, the lever should be at "H" Level.
- Water filling to be done in wash tub till water start flowing from drain hose.
- Do not select soak time during washing and rinsing function.
- Rinse to be done in washing tub only.
- Input the detergent directly inside the wash tub input clothes.

Function & Time Selection

- **For Model capacity : 8.5 kg or more**

	Step-1	Step-2	Step-3	Step-4	Step-5	Step-6
Cycle	Wash	Spin	Spin	Rinse	Spin	Spin
Time (in Minutes)	15	3	3	4	3	3
Load	Rated Capacity Load	Half Capacity Load	Remain Half Capacity Load	Rated Capacity Load (in wash tub)	Half Capacity Load	Remain Half Capacity Load

- **For Model capacity : 8.0 kg**

	Step-1	Step-2	Step-3	Step-4	Step-5	Step-6
Cycle	Wash	Spin	Spin	Rinse	Spin	Spin
Time (in Minutes)	15	2	2	4	2	2
Load	Rated Capacity Load	Half Capacity Load	Remain Half Capacity Load	Rated Capacity Load (in wash tub)	Half Capacity Load	Remain Half Capacity Load

Mode Selection

- Washing / Rinsing : **Normal** mode for model P120A7* / PX120A9* / PX120B7* / PX120A3* / P900S7* / PX900H9* / PX900H7* / PX900H3* and gentle mode for remaining models.

NOTE

- Under test conditions, when tested in accordance with standard IEC 60456 : 2010 & BEE Schedule-12 (Revision : 03) actual performance of machine will depend on how the appliance is being used.

26 APPENDIX

Warranty and Service Information

WARRANTY

The Washing Machine (hereinafter referred as product) comes with 2 year warranty on all parts (except Plastic parts, Consumables, Loose Plastic Parts, Filters, Knobs, Top covers, Inlet/outlet hose) and thereafter a 3 years additional warranty only on the wash motor from the date of purchases on producing the tax paid invoice of the product provided always that the warranty card bears the rubber stamp, date and signature of our authorized dealer.

3 YEAR ADDITIONAL WARRANTY ON THE WASH MOTOR

The 3 Year warranty on the Wash Motor will continue even after the expiry of 2 year period from the date of purchase. During the additional warranty period, it does not cover parts such as Controller Assembly, Timers, Spin motor, Tub assembly, etc. The standard visiting charges will be applicable within municipal limit of town where LG Electronics India Ltd. (LGEIL) has its Authorized Service Centre. Service Outside municipal limit will attract to and fro travelling, other incidental expense in addition to standard visiting charges, as per the prevailing from time to time. During the additional warranty period only the parts replaced or repaired shall be free of costs, but service charges shall always be payable by the customer.

COMMON TERMS & CONDITIONS APPLICABLE FOR WARRANTIES AS MENTIONED ABOVE

- 1) The warranty is confined to the first purchaser of the washing machine only & is non-transferable.
- 2) Repairs & replacements will be carried out through the Authorized Service Centres of LG Electronics India Ltd. (hereinafter referred as LG or LGEIL). The customer may place their service call through the LG customer care or through the dealer from whom the product has been purchased. In case the customer shifts the place of residence during the warranty period, it is advised to contact our helpline.
- 3) Repairs under warranty shall be carried out by an authorized service personnel only. The details of centralized help lines are attached.
- 4) For units installed beyond municipal limits of the jurisdiction of the company's Authorized Service Centre, it is the responsibility of the purchaser to contact the nearest authorized service centre and bring the unit to the authorized service at its own cost and risk. All expense incurred in collecting the units or parts thereof from the company's authorized service centre, as well as expenses incurred with deputing of service personnel/technician toward conveyance and other incidentals etc. will be borne by the customer. Local charges for transportation and handling charges may vary from location to location. Customers are advised to verify before. In case the customer desires to bring the unit on its own to the Authorized Service Centre, the same shall be at its own risks & consequences.
- 5) The concerned authorized service centre will advise the customer whether to effect the repairs at site or at the authorized service centre.
- 6) Call registered with the centralized helpline/Authorized service centre, wherein only cleaning of the unit/parts in the unit due to dust accumulation on portions of the units are not to be considered as defects.
- 7) In case of repairs or replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty. LGEIL may use parts that are new or refurbished and equivalent to new in performance and reliability. Replacement of parts would be purely at the discretion of LGEIL alone. In case the replacement of the entire unit is being made, (subject to the sole discretion of LGEIL), the same model shall be replaced and in the event such model has been discontinued, it shall be replaced with the model price equivalent at the time of purchase.
- 8) In case of any damage to the product/customer abuse/repairs by un-authorized personnel's/ misuse detected/ by the Authorized Service Centre personnel, the warranty conditions are not applicable and repairs will be done subject to availability of parts and on a chargeable basis only.
- 9) This warranty shall not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly out of any defect being noticed in the equipment during the warranty

period of the Washing Machine. The company's obligation under this warranty shall be limited to repair or providing replacement of defective parts only under the warranty period.

- 10) The company or its Authorized Service Centre reserves the right to retain any part/s or component replaced its discretion, in the event of defect being noticed in the equipment during warranty period.
- 11) While the company will make every effort to carry out repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.
- 12) Warranty does not cover accessories external to the equipment supplied by the dealer.
- 13) In the event of any unforeseen circumstance, and spares not being available, the company's prevailing depreciation rules may apply on the purchaser to accept as a commercial solution in lieu of repairs.
- 14) If any coloured internal or external components are replaced, there will be no commitment to ensure that the shades match with the original or other components. The replaced shades, patterns, tints may vary from the customer's unit due to continuous usage of the unit. Any matching components changed at customer's request will be chargeable basis, except the component which actually needed.
- 15) Free Installation or Demo of the product, can be availed only once & within 3 months from the date of purchase.
- 16) Any extended warranty offered by LGEIL has to be supported by relevant proof.
- 17) Warranty shall expire after the warranty period as mentioned above even if the Washing Machine may not be in use for any time during the warranty period for any reason.
- 18) Only courts in state of Delhi and places where LGEIL has its branch office shall have the jurisdiction for settling any claims, disputes arising under the warranty.

Warranty is not applicable in any of the following cases :

- 1) The warranty card is not completed properly at the time of purchase.
- 2) The completed warranty card is not presented to authorized service personnel at the time of service of the product.
- 3) The product is not operated according to instructions given in the Operating Instruction Booklet / Owner's Manual.
- 4) The product is used for commercial purposes.
- 5) The product is used at any places such as public bathroom, lodging house, training center, dormitory etc.
- 6) The product has failed under certain conditions like waterlogging, flood, fire, misuse etc.
- 7) Defects/malfunction are caused by improper or reckless use, which shall be determined by the company personnel.
- 8) Any repair work is carried out by persons other than authorized service personnel.
- 9) Defect/malfunction are caused which are beyond control like lightening, abnormal voltage, Acts of God, virus etc.
- 10) Any issue is caused by usage of 3rd party product like voltage stabilizer, power outlet socket, MCB, extension board etc.
- 11) Defects/malfunction caused while in transit to service centre or purchaser's residence.
- 12) Defects caused by rodents bite or by pests and vermin ants/Insects/animals/birds etc.
- 13) The serial number is deleted, defected or altered.
- 14) Damage is caused to the product or any part/s due to transportation or shifting.

28 APPENDIX

- 15) Any accessory external to the equipment are supplied by dealer or LG.

CUSTOMER'S COPY

MODEL No. :

DATE OF PURCHASE :

UNIT SERIAL No. :

CUSTOMER'S NAME & ADDRESS


TEL. _____

DEALER'S NAME & ADDRESS

TEL. _____

Customer's Signature



Dealer's Signature

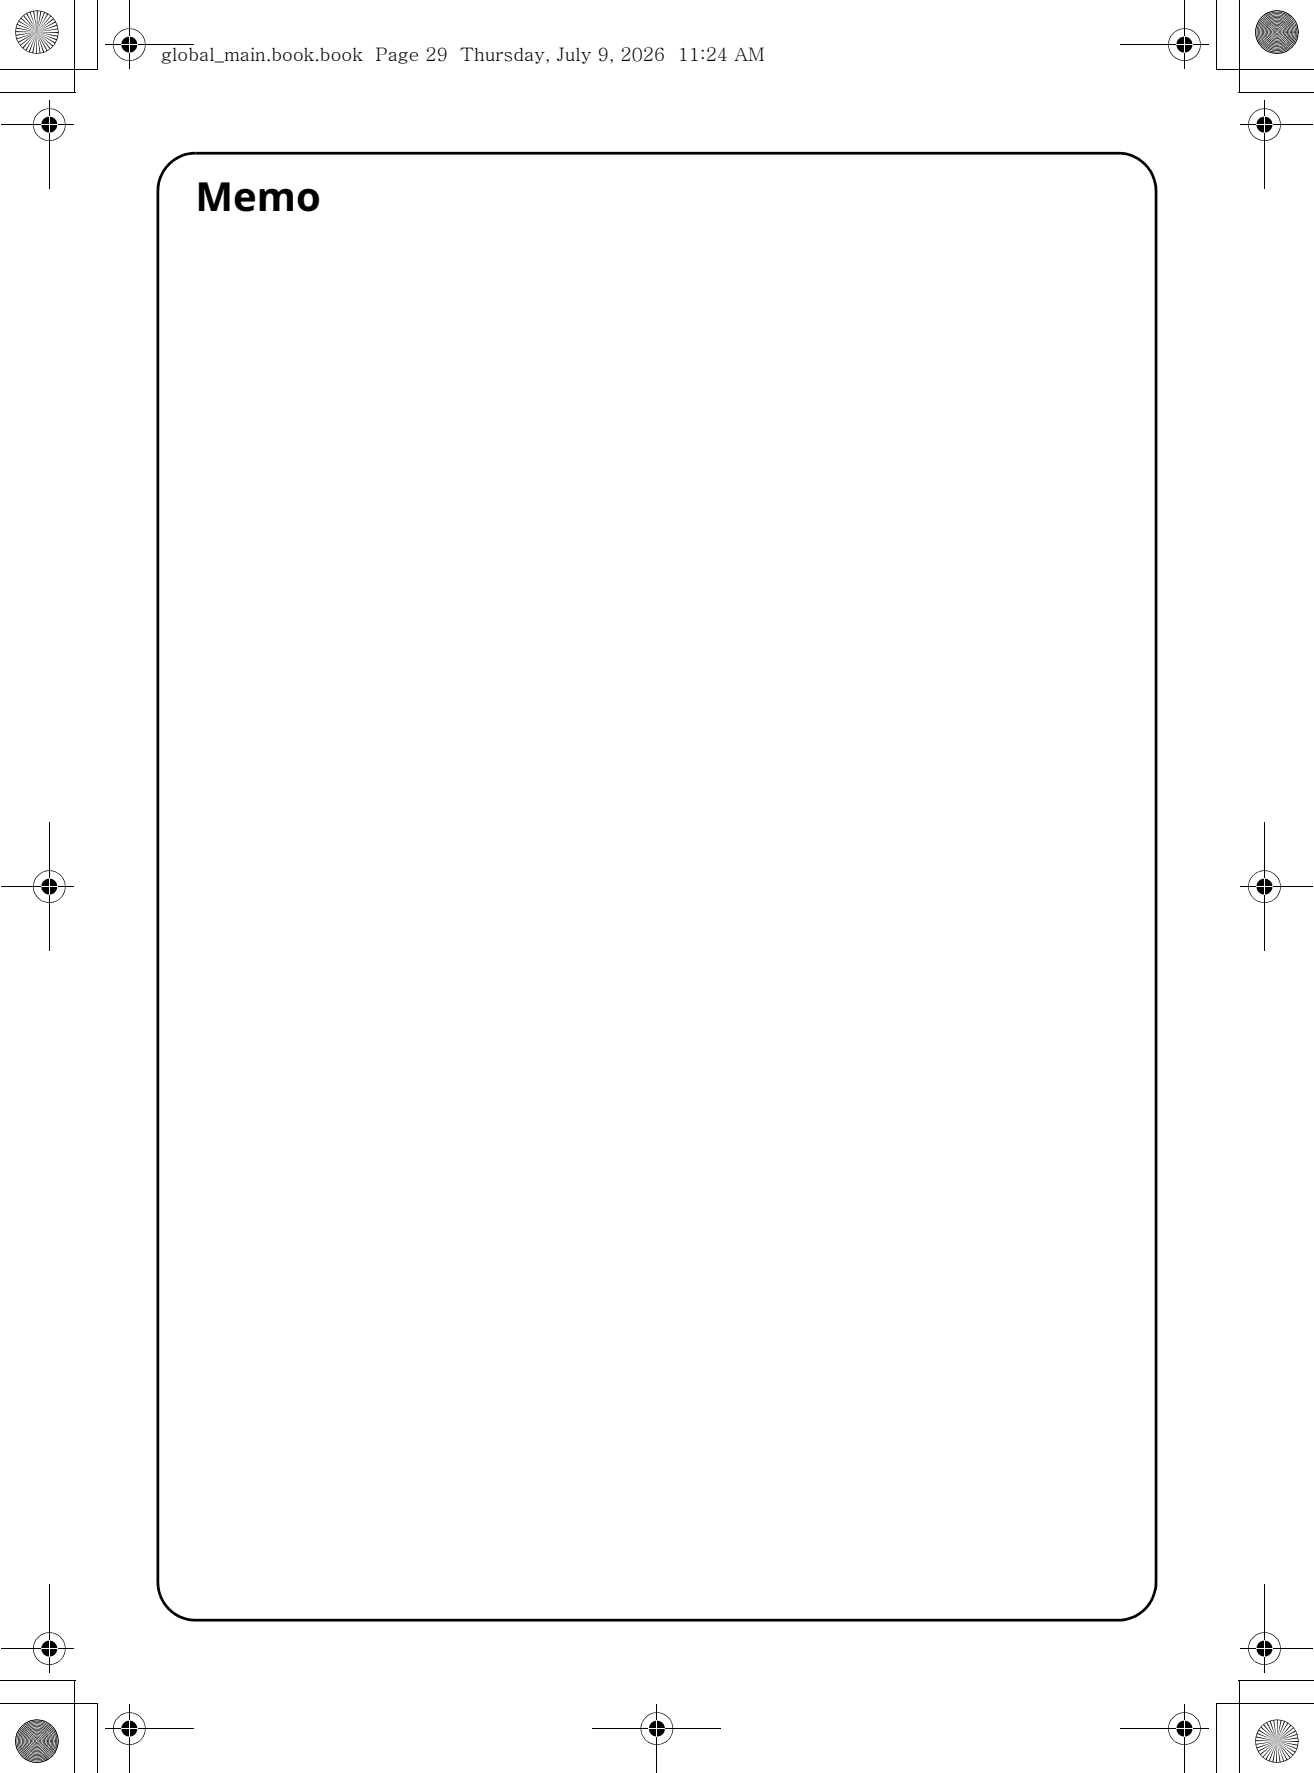


Memo




  Memo



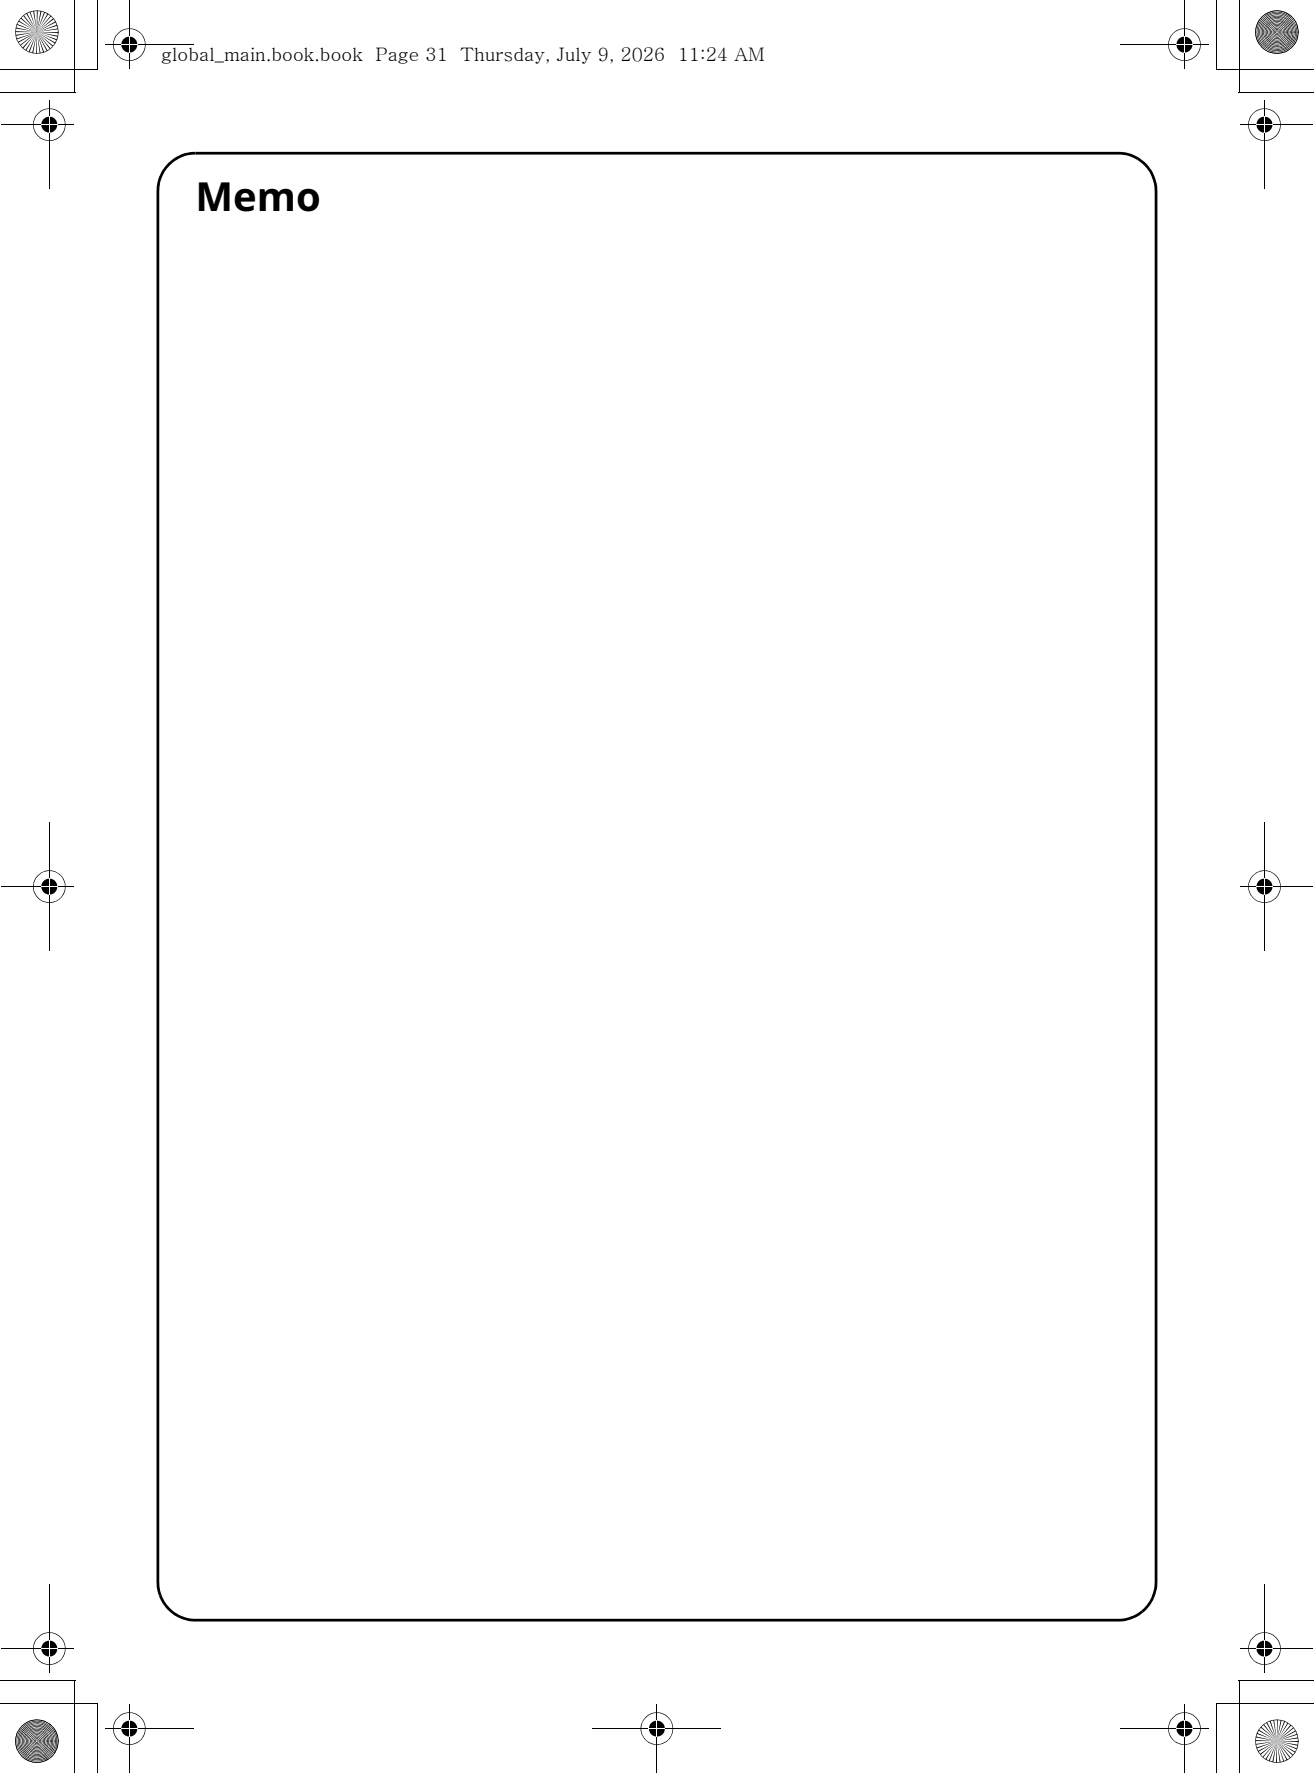

Memo

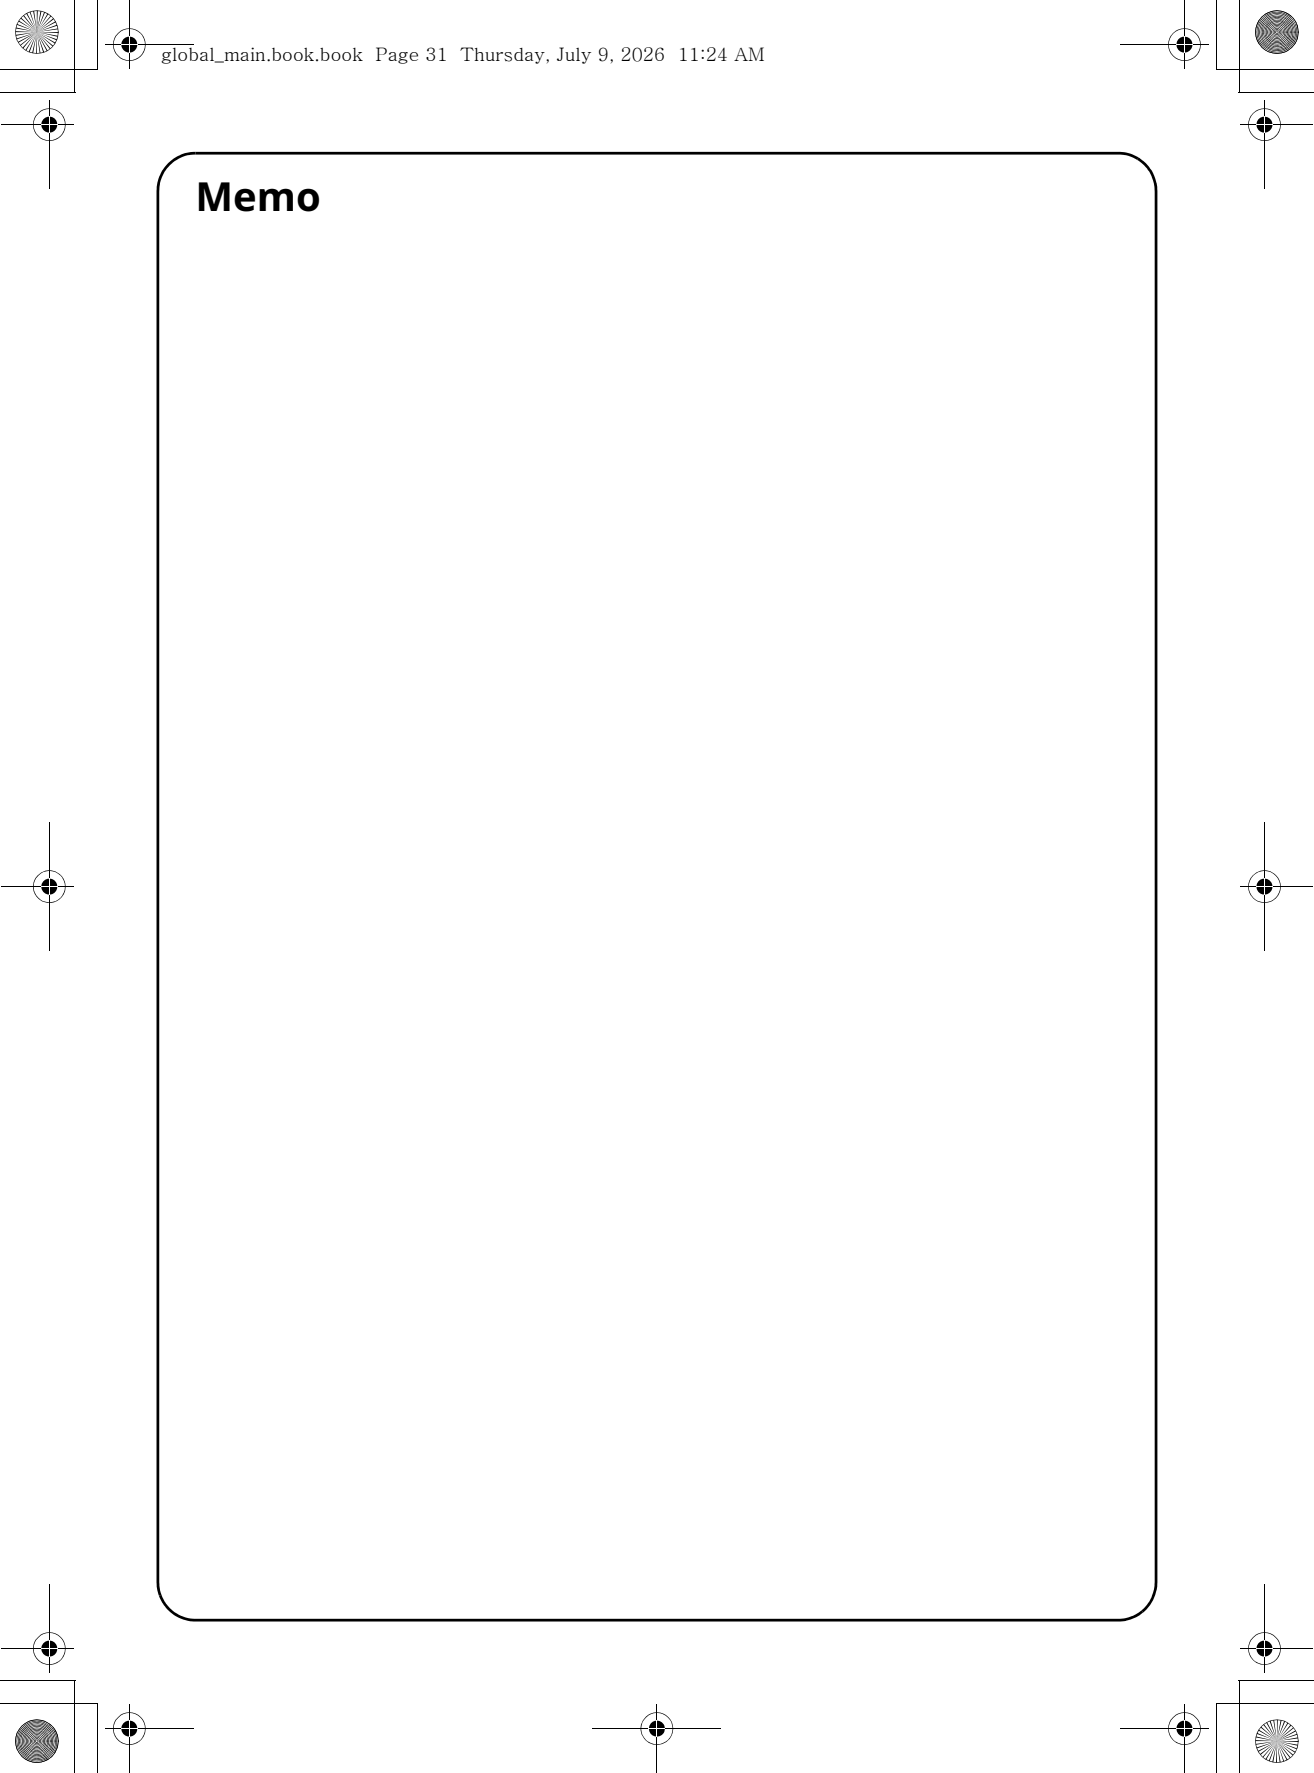

**Brand Owner (LG Electronics India Ltd.) & Packaging Type Details as per PWM Rules**

Packaging type	Company name	Registration number	Thickness
Plastic Sheet	LG Electronics India Ltd	BO-13-000-07-AAACL1745Q-22	0.05 mm and above
Multilayered bag	LG Electronics India Ltd		N/A

LG Electronics India Ltd.

Phone	08069379999 1800 315 9999 [Toll Free]
WhatsApp No.	9711709999
Mobile Application	'LG Service India Mobile App' available at Google Play
SNS	www.facebook.com/LGIndiaPage www.twitter.com/LGIndia
Address	Regd. Office: LG Electronics India Ltd., A-24/6 Mohan Cooperative Industrial Estate, Mathura Road, New Delhi-110044 CIN No. L32107DL1997PLC220109

24 hours, 7 days a week (except National Holidays)