

[Manuals.plus](#) /

› [USHA](#) /

› USHA Bloom Magnolia 1250mm 85-Watt Goodbye Dust Ceiling Fan Instruction Manual

USHA Bloom Magnolia

USHA Bloom Magnolia 1250mm 85-Watt Goodbye Dust Ceiling Fan

Model: Bloom Magnolia | Instruction Manual

INTRODUCTION

Thank you for choosing the USHA Bloom Magnolia 1250mm 85-Watt Goodbye Dust Ceiling Fan. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read these instructions carefully before installation and retain them for future reference.



Image: USHA Bloom Magnolia Ceiling Fan. This image displays the overall design of the fan, featuring its three blades and central motor housing.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when installing, operating, and maintaining electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the main power supply is switched off at the circuit breaker before installation or maintenance.
- Installation must be performed by a qualified electrician and in accordance with all local electrical codes.
- The mounting structure must be capable of supporting the fan's weight (refer to specifications for weight).
- Do not insert fingers or any objects into the fan blades while the fan is operating.
- Ensure all connections are secure and properly insulated.
- This fan is designed for indoor use only.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation. If any parts are missing or damaged, contact customer support.

- Fan Motor Assembly
- Fan Blades (3 units, Aluminium)
- Downrod
- Canopy (Upper and Lower)
- Mounting Bracket
- Blade Holders/Brackets
- Hardware Pack (screws, washers, nuts)
- Remote Control (if included with your model)
- Instruction Manual

SETUP AND INSTALLATION

Follow these steps for proper installation. Professional installation is recommended.

1. **Turn Off Power:** Before starting, ensure the power supply to the installation area is completely disconnected at the main circuit breaker.
2. **Mounting Bracket Installation:** Securely attach the mounting bracket to the ceiling junction box or a suitable support structure. Ensure it can hold the fan's weight.
3. **Downrod Assembly:** Insert the downrod through the canopy and connect it to the fan motor assembly. Secure with the provided pin and screw.
4. **Hang the Fan:** Carefully lift the fan assembly and hang it onto the mounting bracket.
5. **Electrical Connections:** Connect the fan's electrical wires to the household wiring according to the wiring diagram provided in the separate wiring guide (if applicable) or by a qualified electrician. Ensure proper grounding.
6. **Secure Canopy:** Slide the canopy up to cover the mounting bracket and wiring connections. Secure it in place with the screws.
7. **Blade Attachment:** Attach each fan blade to its respective blade holder, then secure the blade holders

to the fan motor. Ensure all screws are tightened.

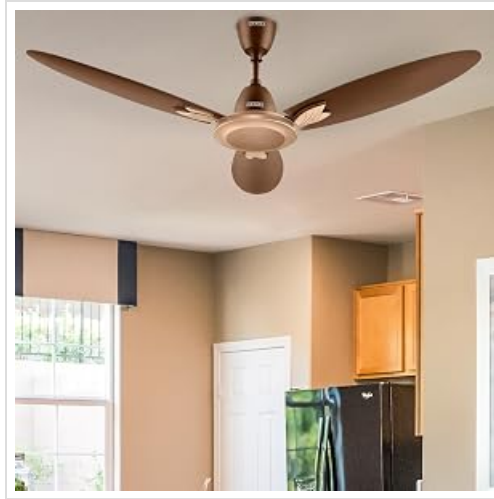


Image: Close-up of fan blade design. This image highlights the unique blade design, engineered for high air delivery and dust resistance.

OPERATING INSTRUCTIONS

Your USHA Bloom Magnolia ceiling fan is designed for ease of use.

- **Power On:** After installation, restore power to the fan at the main circuit breaker.
- **Speed Control:** The fan features 5 speed settings. Adjust the speed using the wall-mounted button control or the provided remote control (if applicable).
- **Remote Control (if applicable):** If your model includes a remote control, ensure batteries are installed correctly. Use the designated buttons to turn the fan on/off and adjust speed.
- **Airflow Direction:** This fan is designed to circulate air effectively in one direction. There is no reverse function for seasonal use.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your fan. Always turn off the power before cleaning or performing any maintenance.

- **Cleaning:** The fan features a "Goodbye Dust" anti-dust coating. To clean, gently wipe the blades and motor housing with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Blade Balance:** Periodically check that all blade screws are tight. Loose blades can cause wobbling and noise.
- **Motor Lubrication:** The fan motor is permanently lubricated and does not require additional oiling.
- **General Inspection:** Annually inspect all connections and mounting hardware for tightness.



Image: Anti-dust feature demonstration. This image illustrates the effectiveness of the fan's anti-dust coating, showing how dust accumulation is minimized.

TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Fan does not start	No power supply Loose wiring connection Remote control batteries dead	Check circuit breaker Verify all wiring connections (power off first) Replace remote control batteries
Fan wobbles	Loose blade screws Unbalanced blades Loose mounting bracket	Tighten all blade screws Ensure blades are correctly installed and balanced Check and tighten mounting bracket screws
Fan is noisy	Loose screws Motor issue Obstruction	Check and tighten all screws Ensure no objects are interfering with fan operation If motor noise persists, contact service
Low airflow	Incorrect speed setting Fan blades dirty	Increase fan speed Clean fan blades (power off first)

SPECIFICATIONS

Brand	USHA
Model Name	Bloom Magnolia
Colour	White
Electric Fan Design	Ceiling Fan
Power Source	Electric
Product Dimensions (D x W x H)	18D x 18W x 40H Centimeters

Special Feature	Dust Resistant & Unique Blade Design for high Air Delivery
Mounting Type	Downrod Mount
Controller Type	Button Control
Control Method	Remote
Number Of Speeds	5
Wattage	78 Watts
Number of Blades	3
Speed	380 RPM
Voltage	230 Volts
Indoor Outdoor Usage	Indoor
Material Type	Aluminium
Blade Material	Aluminium
Blade Length	1250 Millimetres
Motor	100% Copper Motor

WARRANTY AND SUPPORT

Your USHA Bloom Magnolia Ceiling Fan comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical assistance, or any product-related inquiries, please contact USHA customer support. Keep your purchase receipt as proof of purchase.

For more information, visit the official USHA website or refer to the contact details provided with your product packaging.