

TOWER FAN

Model Number: CRSF40WTFA017901

Croma Customer Care
Infiniti Retail Limited, Unit No. 701 and 702, 7th Floor Kaledonia,
Sahar Road, Andheri (East), Mumbai - 400069, Maharashtra, India.
Customer Care Number: 1800-572-7662
Email: customersupport@croma.com

USER MANUAL



WARRANTY DETAILS

Product Name : Croma Tower Fan

Model Number : CRSF40WTFQA017901

- This warranty is applicable on this product for a period of Twenty-Four (24) months from the date of purchase.
- In the case of commercial usage of this product, the warranty period would be limited to 90 days only.
- This warranty will be terminated automatically after Twenty-Four (24) months from the date of purchase, even if the product was not in use during the warranty period for any reason.

Infiniti Retail Limited ("IRL") guarantees the product purchased to be free from defects resulting from the use of faulty parts or poor workmanship during its manufacture, subject to the terms of the limited warranty ("Warranty").

The warranty becomes null and void in the following cases:

- a. Installation/Service/Repairs/Modification carried out by persons other than those authorized by Croma.
- b. Damage/alterd/tampered serial numbers on the product.
- c. Failure due to misuse/negligence/accident/action of pests/rodents/or act of God- lightning/flood/fire/earthquake.
- d. Failure due to the use of non-genuine parts.
- e. Damage to the product due to the use of harmful chemicals
- f. Defects resulting from accidents or damage while in transit.
- g. Commercial or professional use of Tower Fan.

These warranty instructions are detailed on our website and can be accessed through the QR Code-

If you experience any difficulty in operating this product or require any service assistance, please contact:

Croma Customer Care, Infiniti Retail Limited,
Unit No. 701 and 702, 7th Floor, Kaledonia,
Sahar Road, Andheri (East), Mumbai - 400069, Maharashtra, India.
Customer Care Number: 1800-572-7662
E-Mail: customersupport@croma.com



CONTENTS

PRODUCT DETAILS

Technical Specifications	01
What's in the Box?	01

KNOW YOUR TOWER FAN

Understanding Your Tower Fan	02
------------------------------	----

USING YOUR TOWER FAN

Assembly Instructions	03
Adding Essential Oil	04
Buttons on Fan Body / Panel Indication	05
Remote Controller	07
Batteries	08

CLEANING AND MAINTENANCE

Cleaning your Tower Fan	09
Cleaning Aromatherapy Box	09
Troubleshooting	10

REGULATIONS

E-Waste Management Policy	11
Product Packaging	11
Important Instructions	11

SAFETY INSTRUCTIONS

General Safety Instructions	12
Product Usage Instructions	12

WARRANTY DETAILS

14

CROMA TOWER FAN



**Actual product may vary from above image*

SAFETY INSTRUCTIONS

- Do not use a fan in a window; rain may create an electrical hazard.
- Household use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- When the fan is assembled, the rotor blade guard shall not be taken off anymore.
 - Prior to cleaning, unplug the fan.
 - The rotor guard shall not be disassembled/opened to clean the rotor blades.
 - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent, or a similarly qualified person to avoid a hazard.
- To protect against the risk of electrical shock, do not immerse the unit, cord, or plug in water or other liquid.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.

SAFETY INSTRUCTIONS

General Safety Instructions

- Before using the appliance, check for any damage. If there is any damage, do not use the appliance and immediately contact Croma Customer Care at 1800-572-7662.
- Do not operate the appliance if it has been dropped and damaged in any manner. If the product requires attention within the warranty period, please contact Croma Customer Care at 1800-572-7662.
- To protect against fire, electric shock, or injury, do not place a cord, plug, or appliance in water or any other liquid.
- Do not let the cord hang over the edge of a table or touch hot surfaces.
- Do not install the product in an area prone to combustible gas leaks, grease, or metal dust.
- This appliance is not intended to be used by people, including children, with reduced physical, sensory, or mental capabilities or a lack of experience and knowledge unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
- To protect against electric shock, always unplug from the outlet when not in use and before cleaning. To disconnect, remove the plug from the outlet. Do not yank on the cord, as it may damage the cord and eventually cause an electric shock.
- To avoid burns/cuts/risk of personal injury, use extreme caution while handling the appliance.
- To avoid an electrical overload, do not operate another high-wattage appliance on the same power socket. The use of accessories/ attachments/utilities not approved by the manufacturer may result in improper functioning of the appliance/fire/electric shock/injury and void the warranty.

Product Usage Instructions

- Read rules for safe operation and instructions carefully.
- Do not move the appliance whilst it is in use.
- Never insert fingers, pencils, or any other object through the grille when the fan is running.
- Disconnect the fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.

PRODUCT DETAILS

Technical Specifications

Feature/Specifications	Model No.: CRSF40WTFA017901
Power	40W
Voltage	220-240 V
Frequency	50Hz
Control	Digital
Remote	Yes
Product Size (W x D X H)	310 x 310 x 1052 mm
Packing Size (W x D X H)	212 x 234 x 1095 mm
Net Weight	4.5 kg
Gross Weight	5.8 kg


What's in the Box?

This package contains the items listed below. In case any of the listed items are missing, immediately contact Croma Customer Care at 1800-572-7662.

Items	Qty
Main Unit	1
User Manual	1
Remote	1
Plastic Nut	1
Base Set	1

KNOW YOUR TOWER FAN

Understanding Your Tower Fan

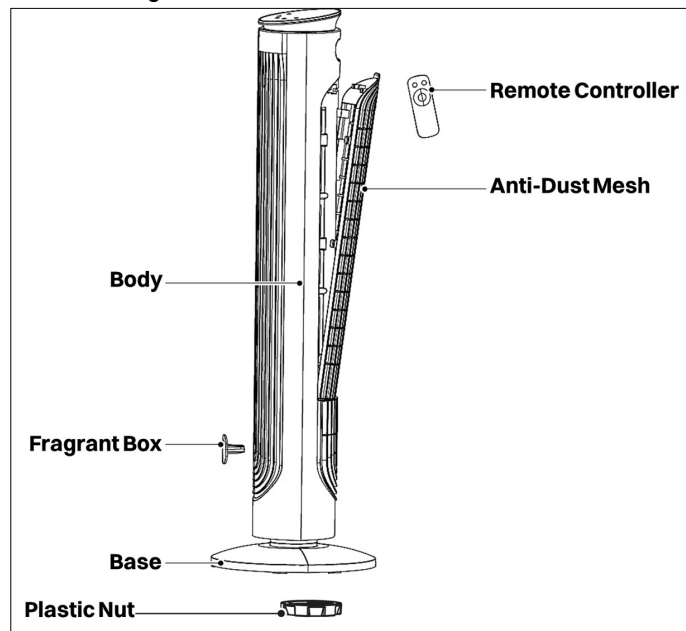

**Actual product may vary from above image*

REGULATIONS

E-Waste Management Policy



This symbol on the product and/or accompanying documents means that the used electrical and electronic products should not be mixed with general household waste. For proper treatment, recoveries, recycling, etc., this product needs to be taken to the designated collection points, where it will be accepted on a free-of-charge basis.

Alternatively, the user may be able to return the product to the Croma Store on the purchase of a new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effect on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact Croma Customer Care at 1800-572-7662 for further details on your nearest designated collection point. As per the Indian Legislation, penalties may be applicable for incorrect disposal of waste.

PWM EPR Regd. No.: BO-14-000-01-AACCV1726H-25

Product Packaging

Product packaging has the purpose of protecting an appliance from damage that might occur during transportation. The materials used for packaging are recyclable and are selected because of respect for the environment and ease of disposal, aiming for material reintegration into the product production cycles. This mechanism allows the reduction of the volume of waste and makes a more rational usage of non-renewable resources possible.

Important Instructions

- Read this manual and the warranty card carefully before operating your product. Retain this manual for future reference.
- Follow all instructions and explanations while handling and installing your product. Keep the manual handy for later use.
- All information in this manual is based on the latest product information available at the time of printing of this manual. However, due to improvements or other changes, there may be discrepancies between the information in this manual and the actual product.
- While due precautions are taken in printing this manual, Infiniti Retail Limited assumes no responsibility for any errors or omissions.

CLEANING & MAINTENANCE

Troubleshooting


The operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the table below carefully in order to save your time and money that may be spent on calling the service center.

Problem	Possible Cause	Solution
The machine does not work properly after installed	• The power cable is not plugged in or has poor contact	• Make sure the plug is properly inserted into the socket
	• The switch on the body is not turned on	• Turn on the switch on the body
The remote does not work	• The battery needs replacing	• Replace the battery
	• The remote is being used more than 5m away from the fan	• Use the remote closer to the fan and make sure it is pointing directly at the receptor on body


USING YOUR TOWER FAN

Assembly Instructions


1. Please place the machine on the package foam or other soft surfaces and invert it to avoid scratch mark when install the base.
2. Take out the two parts of the base from packing box. Then, align the centers of the two parts of the base and place them in a crossed form. Rotate one of the two bases to align its hole site and make it stuck correctly.

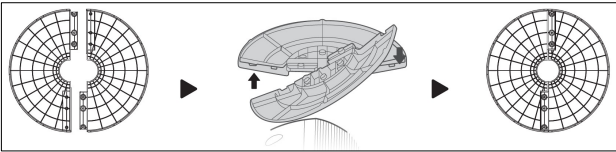

3. Detach the plastic nut from the fan body.

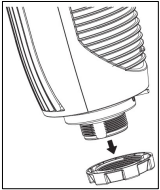


4. Directly fix the fan body to the base with a plastic nut.

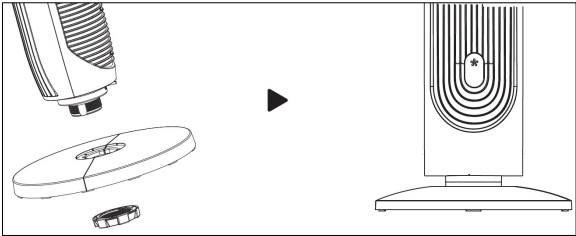


USING YOUR TOWER FAN

5. Place the remote control. When the remote control is not in use, it can be placed in the position of the handle in the back shell.

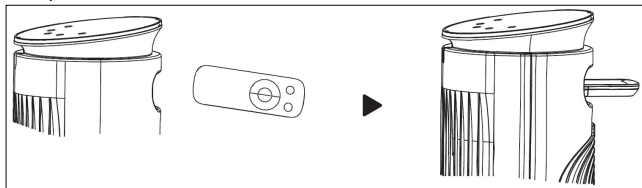


Adding Essential Oil

1. Take out the aromatherapy box and drip 3-4 drops of perfume or other essence liquid on the sponge in the aromatherapy box.

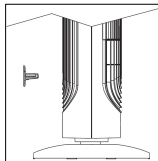

2. After adding the essential oil, push the aromatherapy box into the front shell of the product.

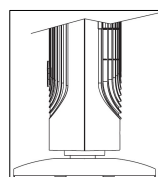

Overheat Protection of the Motor

The windings of the motor have a thermal-fuse that burns out and the fan switches off and temperature of the motor is no longer going up so that plastic parts of the fan don't subject to deformation so far so to be burned by the overheat if the motor is overheat for any unexpected reason.

Auto Off Function

After the machine is powered on and started, it will be shut down forcibly in case of no valid operation after 12h continuous operation with no timer.

CLEANING & MAINTENANCE


Cleaning Your Tower Fan

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.


1. Before cleaning and assembling, the fan must be unplugged.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
3. Please wipe the exterior parts with a soft cloth, soaking it in a mild detergent.
4. Do not use any abrasive detergents or solvents to avoid scratching the surface.
5. Do not use any of the following as a cleaner: gasoline, thinner, or benzene.
6. Do not allow water or any other liquid into the motor housing or interior parts.
7. Be sure to unplug from the electrical supply source before cleaning.
8. Plastic parts should be cleaned with a soft cloth moistened with mild soap. Thoroughly remove soap film with a dry cloth.

Cleaning Aromatherapy Box

1. Take out the aromatherapy box, rinse the box and the sponge in the box with water (a small amount of detergent or soap can be used to assist in cleaning).

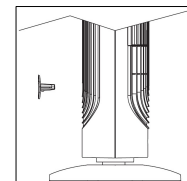

2. After cleaning, please place it in a well-ventilated place to dry naturally. Put the sponge back into the aromatherapy box, add the aromatherapy liquid, and put the box into the front shell of the product.

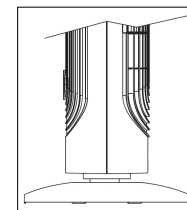


USING YOUR TOWER FAN

Keys	Function Description
 OSC/LOUVER KEY	After the fan has started, press this key to select oscillation mode.
 TIMER KEY	Press this timer key repeatedly to set the time for air delivery. Increase in increments up to "1-2-3-4-5-6-7-8-9" hours.

Batteries (Battery not included)

- Slide the battery compartment Cover.
- Insert the batteries, and make sure that the batteries are placed as shown.
- Slide back the battery cover.

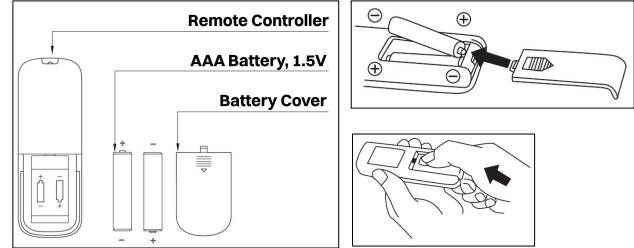


Battery Warning

- Do not dispose of batteries in fire, batteries may explode or leak.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- The batteries must be removed from the remote controller before it is scrapped and that they are disposed of safely.
- Use manganese or alkaline batteries of type "AAA". DO not use rechargeable batteries.

USING YOUR TOWER FAN

Buttons on Fan Body / Panel Indication

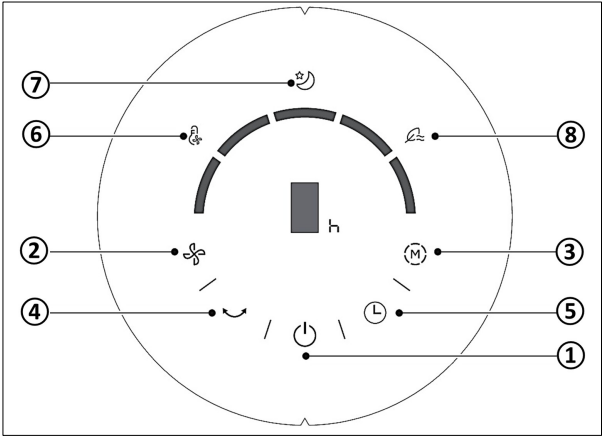

Keys	Function Description
 ON/OFF KEY	Press this key to switch on/switch off the fan.
 SPEED KEY	When the fan started, press this key repeated, the fan will work with "1-2-3-4-5-1" circulatory.
 MODE KEY	When the machine is on, short press this button to select "normal wind", "wind changes with temperature", "sleep wind", "natural wind". Circulating between the four wind classes.


USING YOUR TOWER FAN

Keys	Function Description
 OSC/LOUVER KEY	After the fan has started, press this key to select oscillation mode.
 TIMER KEY	Press this timer key repeatedly to set the time for air delivery. Increase in increments up to "1-2-3-4-5-6-7-8-9" hours.
 WIND CHANGES WITH TEMPERATURE LIGHT	The indicator light is on when the wind changes with temperature.
 SLEEP WIND LIGHT	Light on, start the sleep wind mode, and the fan will automatically adjust the gear cycle according to the established procedure.
 NATURAL WIND LIGHT	The light is on in natural wind mode.

USING YOUR TOWER FAN

Remote Controller

Point the remote controller at the receptor on body of the fan and press the desired button. The remote controller will work at distances of up to roughly five meters and the angle of 30 degree included between right and left from the receptor.

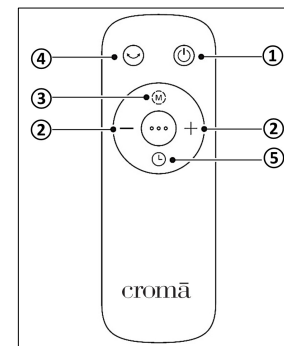

Keys	Function Description
 ON/OFF KEY	• The "ON" key is for switching on the fan. The fan will be started at breeze step. • Press the "OFF" key if the fan needs to switch off.
 SPEED KEY	• When the fan started, press "+" key repeated, the fan will work with "1-2-3-4-5-1" circulatory. Press "-" key repeated, the fan will work with "5-4-3-2-1-5" circulatory.
 MODE KEY	• When the machine is on, short press this button to select "normal wind", "wind changes with temperature", "sleep wind", "natural wind". Circulating between the four wind classes.