

NUTRI BLENDER

Model Number: CRSK450JCA183306

Croma Customer Care
Infiniti Retail Limited, Unit No. 701 and 702, 7th Floor Kaledonia,
Sahar Road, Andheri (East), Mumbai - 400069, Maharashtra, India.
Customer Care Number: 1800-572-7662
Email: customersupport@croma.com

USER MANUAL

WARRANTY DETAILS

Product Name : Croma Nutri Blender
Model Number : CRSK450JCA183306

- This warranty is applicable on this product for a period of Twenty-Four (24) months from the date of purchase.
- In the case of commercial usage of this product, the warranty period would be limited to 90 days only.
- This warranty will be terminated automatically after Twenty-Four (24) months from the date of purchase, even if the product was not in use during the warranty period for any reason.

Infiniti Retail Limited ("IRL") guarantees the product purchased to be free from defects resulting from the use of faulty parts or poor workmanship during its manufacture, subject to the terms of the limited warranty ("Warranty").

The warranty becomes null and void in the following cases:

- a. Installation/Service/Repairs/Modification carried out by persons other than those authorized by Croma.
- b. Damage/altered/tampered serial numbers on the product.
- c. Failure due to misuse/negligence/accident/action of pests/rodents/or act of God- lightning/flood/fire/earthquake.
- d. Failure due to the use of non-genuine parts.
- e. Damage to the product due to the use of harmful chemicals
- f. Defects resulting from accidents or damage while in transit.
- g. Commercial or professional use of Nutri Blender.

These warranty instructions are detailed on our website and can be accessed through the QR Code-

If you experience any difficulty in operating this product or require any service assistance, please contact:

Croma Customer Care, Infiniti Retail Limited,
Unit No. 701 and 702,7th Floor, Kaledonia,
Sahar Road, Andheri (East), Mumbai - 400069, Maharashtra, India.
Customer Care Number: 1800-572-7662
E-Mail: customersupport@croma.com



CONTENTS

PRODUCT DETAILS

Features	01
Technical Specifications	01
What's in the Box?	02

KNOW YOUR NUTRI BLENDER

Understanding Your Nutri Blender	03
----------------------------------	----

USING YOUR NUTRI BLENDER

Functions of Jar	04
Operating Your Blender	05

CLEANING AND MAINTENANCE

Cleaning	06
Storage	06
Troubleshooting	06

REGULATIONS

E-Waste Management Policy	07
Product Packaging	07
Important Instructions	07

SAFETY INSTRUCTIONS

General Safety Instructions	08
Product Usage Instructions	09

WARRANTY DETAILS

10

CROMA NUTRI BLENDER



**Actual product may vary from above image*

SAFETY INSTRUCTIONS

Product Usage Instructions

- Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the personal blender.
- This appliance should not be used by children aged 12 or below and by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the unit from the outlet when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug. If its main cord is damaged, it must be replaced. Please contact Croma Customer Care.
- Do not let the cord hang over the edge of the table or counter, or touch a hot surface.
- Do not use the appliance for anything other than its intended use.
- The appliance should be supervised while in operation.
- This appliance is intended to be used for household use.
- Disconnect, grasp the plug, and unplug the cord from the electrical outlet.
- To protect against the risk of electrical shock, do not immerse the cord, plug, or motor base in water or any other liquids.
- Handle the blade assembly with proper attention, as it has sharp blades.
- Do not attempt to bypass the interlock system that powers the unit on.
- Do not blend hot liquids in the blender.
- Always operate on a flat surface.
- Unplug the blender when not in use, before taking off or putting on parts, and before cleaning.
- Use this appliance for its intended use as described in this manual. The use of attachments not made by the manufacturer, including canning or ordinary jar and processing assembly parts, is not recommended by us and may cause a risk to persons.

SAFETY INSTRUCTIONS

General Safety Instructions

- Before using the appliance, check for any damage. If there is any damage, do not use the appliance and immediately contact Croma Customer Care at 1800-572-7662.
- Do not operate the appliance if it has been dropped and damaged in any manner. If the product requires attention within the warranty period, please contact Croma Customer Care at 1800-572-7662.
- Do not install the product in an area prone to combustible gas leaks, grease, or metal dust.
- This appliance is not intended to be used by people, including children, with reduced physical, sensory, or mental capabilities or a lack of experience and knowledge unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
- To protect against electric shock, always unplug from the outlet when not in use & before cleaning. To disconnect, remove the plug from the outlet. Do not yank on the cord, as it may damage the cord & eventually cause an electric shock.
- To avoid burns/cuts/risk of personal injury, use extreme caution while handling the appliance.
- If the socket outlets in your home are not suitable for the plug supplied with this appliance. The plug should be removed and the appropriate one fitted.
- If the supply cord is changed, it must be replaced by the manufacturer's service agent or similarly qualified person in order to avoid a hazard.
- The plug should be removed from the main lead if severed and must be destroyed as a plug with a bared flexible cord is hazardous when engaged into a live socket outlet.
- This appliance is intended to be used in households and similar applications such as staff kitchen areas in shops, offices, and other working environments; farm houses; by clients in hotels, motels, and other residential type environments; bed and breakfast type environments.
- To avoid an electrical overload, do not operate another high-wattage appliance on the same power socket. The use of accessories/ attachments/utilities not approved by the manufacturer may result in improper functioning of the appliance/fire/electric shock/injury and void the warranty.

PRODUCT DETAILS

Features

- 450W powerful motor for efficient blending
- Compact and convenient portable jars
- Quick and convenient one-touch operation
- Stainless Steel grinding and blending blades
- Non-skid rubber feet for steady use
- Comes with 3 Jars for blending, grinding and foaming
- Comes with additional Sprinkler Lid and Ring Lid

Technical Specifications

Specifications	Model No. - CRSK450JCA183306
Voltage / Frequency	230V AC, 50Hz
Motor Power	450W
Motor RPM (No Load)	18000-19000
Class of Motor Insulation	H Class
Timer	1 min ON, 2 min OFF
Material of Body	ABS
Material of Jars	PC
Blade Assembly	Steel
Speed Control	One Speed
Main Cord	PVC 2 core 2 pin 1.5mtr length
Liquidizer Capacity	500ml
Dry Grinder Capacity	75ml
Normal Loads	45gm Urad Dal well soaked in Water for 12hrs
Class of Appliances	Class II
Pollution Degree	2
Protection	IPXO
Country of Origin	India

**Not Suitable for whisking egg whites*

PRODUCT DETAILS

What's in the Box?

This package contains the items listed below. In case any of the listed items are missing, immediately contact Croma Customer Care at 1800-572-7662.

Items	Qty
Main Unit	1
Small Jar	1
Tall Jar	1
Sipper	1
Dry Grinding Blade	1
Lids	2
Ring	1
User Manual	1

REGULATIONS

E-Waste Management Policy



This symbol on the product and/or accompanying documents means that the used electrical and electronic products should not be mixed with general household waste. For proper treatment, recoveries, recycling, etc., this product needs to be taken to the designated collection points, where it will be accepted on a free-of-charge basis.

Alternatively, the user may be able to return the product to the Croma Store on the purchase of a new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effect on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact Croma Customer Care at 1800-572-7662 for further details on your nearest designated collection point. As per the Indian Legislation, penalties may be applicable for incorrect disposal of waste.

PWM EPR Regd. No.: BO-14-000-01-AACCV1726H-25

Product Packaging

Product packaging has the purpose of protecting an appliance from damage that might occur during transportation. The materials used for packaging are recyclable and are selected because of respect for the environment and ease of disposal, aiming for material reintegration into the product production cycles. This mechanism allows the reduction of the volume of waste and makes a more rational usage of non-renewable resources possible.

Important Instructions

- Read this manual and the warranty card carefully before operating your product. Retain this manual for future reference.
- Follow all instructions and explanations while handling and installing your product. Keep the manual handy for later use.
- All information in this manual is based on the latest product information available at the time of printing of this manual. However, due to improvements or other changes, there may be discrepancies between the information in this manual and the actual product.
- While due precautions are taken in printing this manual, Infiniti Retail Limited assumes no responsibility for any errors or omissions.

CLEANING & MAINTENANCE

Cleaning Your Nutri Blender

Before cleaning, unplug the power cord and let the appliance cool down. Do not immerse the blender base in water or any other Liquid.

- Use a damp soft sponge with mild detergent to clean the outside of the blender base. All parts except for the blender base are dishwasher-safe.
- You can also wash the parts, except the blender base, in warm, soapy water.
- Rinse well and dry.

Storing Your Blender

After cleaning, replace the blade assembly to the open end of the bottle and then place it in the blender base.

Troubleshooting

Problem	Cause	Solution
Blender does not start	Power plug or socket faulty	Check the power supply
	Switch faulty	Contact Authorised Service Center
Blender gets very hot	No power supply	Ensure Power Supply
	Blender has been used for too long continuously	Let the blender cool for a while and then restart

KNOW YOUR NUTRI BLENDER

Understanding Your Nutri Blender



USING YOUR NUTRI BLENDER

1. Main Unit: This unit is packed with a powerful 450W copper motor. It has push switch technology, which makes it easy and safe to use.



2. Small Jar (300 ml): This jar is ideal to make chutneys & grind dry food like spices, grains & dry fruits.



3. Tall Jar (500 ml): This jar is ideal to make chutneys & grind dry food like spices, grains & dry fruits.



4. Sipper: This can be used to carry the juice, smoothies, or protein shakes anywhere.



5. Dry Grinding Blade: This blade can be used for dry grinding of spices, dry fruits, etc.



6. Lids:

- Use lid to store the food after grinding.
- Use the ring to directly drink from the jar.
- Use the sprinkler lid to sprinkle freshly ground spices or dry fruits.



USING YOUR NUTRI BLENDER

Operating your Blender

1. Place the jar on a flat surface with the open end facing up.
2. Fill the jar with your desired ingredients. Please ensure the jar is not filled beyond the Max marking.
3. Select the appropriate blade according to the food type and twist to lock it on the jar.
4. Twist and lock the jar on the motor base.
5. Turn on the switch to start processing.
6. Once the desired consistency is reached, switch off the appliance & remove the jar.
7. Remove the blade and put it on the appropriate lid for use, storage, or remove the processed food in a separate storage box.

Note:

- Do not use the appliance continuously for more than 1 minute. After using it for 1 minute, let the appliance rest for 1 minute, then 2 minutes off for the motor to cool down.
- Do not insert the motor base or cord in water.
- Always unplug before cleaning or assembling.
- Do not grind hot liquids or food, as it can create air pressure and the jar can erupt or leak.
- Do not keep the device unattended while in use.
- Do not fill the jars more than 3/4" of the total capacity.
- Put liquids in the cup first, unless a recipe says otherwise.
- Cut fruits and vegetables into pieces no larger than 3/4 inch (1.8 cm) to 1 inch (2.5 cm)
- Don't overload the bottle. If the motor stalls, turn off the blender immediately, unplug the unit, and let it stay cool for at least 15 minutes. Then, remove some portion of the ingredient and continue.
- The blender will not mash potatoes, whip egg whites, or substitute dairy toppings, mix stiff dough, or grind raw meat.