

Manuals.plus / > Prestige / > Prestige Nutri-Mix 2.0 350W Mixer Grinder Instruction Manual

Prestige Nutri-Mix 2.0

Sign in to save this manual Sign in to bookmark this manual and keep private notes.

Prestige Nutri-Mix 2.0 350W Mixer Grinder Instruction Manual

Model: Nutri-Mix 2.0 (43150)

Advertisements

INTRODUCTION

Thank you for choosing the Prestige Nutri-Mix 2.0 350W Mixer Grinder. This appliance is designed for efficient grinding and blending, offering convenience and versatility in your kitchen. Please read this instruction manual carefully before using the appliance to ensure safe and optimal performance. Keep this manual for future reference.



Image: The Prestige Nutri-Mix 2.0 Mixer Grinder, showcasing its compact design and versatility for preparing various healthy drinks and ingredients.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before use.
- Do not immerse the motor unit in water or any other liquid.
- Always ensure the jar is properly locked onto the motor unit before operating. The Dual Safety Interlock System prevents operation if not correctly assembled.
- Keep hands and utensils out of the jar while blending to prevent severe injury to persons or damage to the appliance.
- Never operate the appliance with damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not use attachments not recommended or sold by the manufacturer.
- Be careful when handling sharp blades.
- This appliance is not dishwasher safe.

SETUP GUIDE

1. Unpacking

Carefully remove all components from the packaging. Retain the packaging for future storage or transport. Check for any damage during transit. If any damage is found, do not use the appliance and contact customer support.

2. Component Identification

Your Prestige Nutri-Mix 2.0 includes:

- Motor Unit (Base)
- 2 Multipurpose Jars with blade assemblies
- Extra Lids for storage



Image: All components of the Prestige Nutri-Mix 2.0 Mixer Grinder, including the motor base and two multipurpose jars with their respective lids.

3. Initial Cleaning

Before first use, wash the jars, lids, and blade assemblies with warm soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water.

4. Placement

Place the motor unit on a clean, dry, and stable surface, away from the edge of the counter and out of reach of children.

OPERATING INSTRUCTIONS

1. Assembling the Jar

1. Ensure the blade assembly is securely fitted into the bottom of the chosen multipurpose jar.
2. Add your ingredients to the jar. Do not overfill; ensure ingredients are below the maximum fill line.

3. Place the lid firmly on the jar.

2. Securing the Jar to the Motor Unit

Place the assembled jar onto the motor unit. Rotate the jar clockwise until it locks securely into place. The Dual Safety Interlock System ensures the appliance will not start unless the jar is correctly locked.



Image: The Prestige Nutri-Mix 2.0 Mixer Grinder demonstrating the secure locking mechanism of the jar onto the motor unit, highlighting the Dual Safety Interlock System.

3. Powering On and Speed Control

1. Plug the power cord into a suitable electrical outlet (230V).
2. Turn the knob control to select your desired speed. The appliance features 3 speed settings for various grinding and blending needs.
3. For short bursts, use the pulse function (if available, typically by turning the knob to a specific position and releasing).
4. Once processing is complete, turn the knob to the 'OFF' position and unplug the appliance.

4. Usage Tips

- For best results, process ingredients in small batches.
- When grinding dry ingredients, ensure they are completely dry to prevent clogging.
- For blending liquids, start with a lower speed and gradually increase.
- Do not operate continuously for more than 3 minutes. Allow a cooling period of 2-3 minutes between cycles.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your mixer grinder.

1. Cleaning the Motor Unit

- Always unplug the appliance before cleaning.
- Wipe the motor unit with a soft, damp cloth.
- Do not use abrasive cleaners or immerse the motor unit in water.

2. Cleaning Jars and Blades

- Carefully remove the blade assembly from the jar.
- Wash jars, lids, and blade assemblies with warm soapy water. Use a brush to clean around the blades carefully.
- Rinse thoroughly and dry all parts completely before reassembling or storing.
- **Note:** The jars and blades are **not dishwasher safe**.

Advertisements

3. Storage

Store the appliance in a clean, dry place. The extra lids provided allow you to store contents directly in the jars, keeping them fresh.

TROUBLESHOOTING

If you encounter any issues, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start	Power cord not plugged in; Jar not locked correctly; Overload protector activated.	Ensure power cord is securely plugged in. Lock the jar firmly onto the motor unit. If overloaded, switch off, unplug, remove some ingredients, and wait 2-3 minutes before restarting.
Unusual noise during operation	Jar not seated properly; Ingredients too hard or too much.	Ensure the jar is correctly locked. Reduce the quantity of ingredients or add some liquid if processing hard items.
Leakage from jar	Lid not properly secured; Gasket not fitted correctly; Jar overfilled.	Ensure the lid is tightly closed. Check if the gasket is properly seated in the lid or blade assembly. Do not overfill the jar.
Motor stops during operation	Overload protector activated.	Switch off, unplug, remove some ingredients, and wait 2-3 minutes for the motor to cool down before restarting.

If the problem persists after trying these solutions, please contact customer support.

Advertisements

PRODUCT SPECIFICATIONS

- **Brand:** Prestige
- **Model:** Nutri-Mix 2.0 (43150)
- **Power:** 350 Watts
- **Voltage:** 230 Volts
- **Number of Speeds:** 3
- **Controls Type:** Knob Control
- **Included Components:** 1 x Prestige Nutri-Mix 2.0 Mixer Grinder (Motor Unit, 2 Multipurpose Jars, Extra Lids)
- **Material:** Plastic (Body), Stainless Steel (Blade)
- **Product Dimensions (D x W x H):** 28D x 26W x 13.5H Centimeters
- **Item Weight:** 1.2 Kilograms

- **Special Features:** Compact Design, Dual Safety Interlock System, Portable
- **Country of Origin:** India

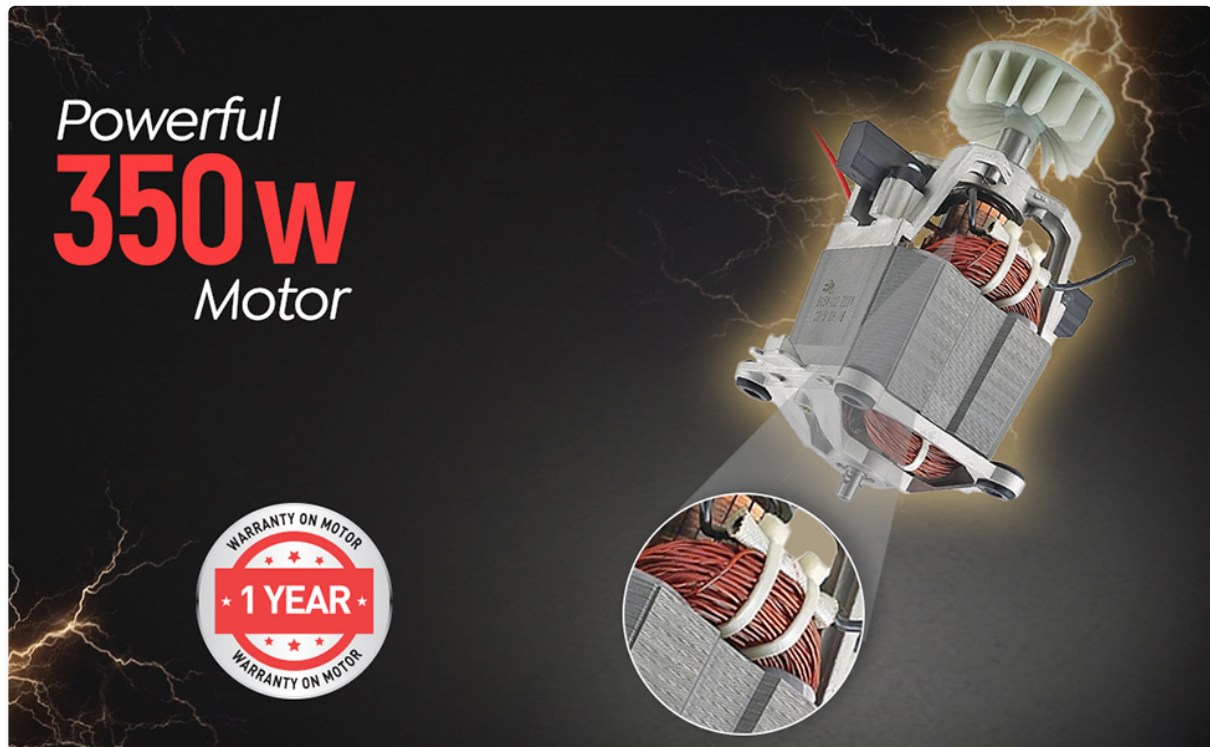


Image: An internal view of the Prestige Nutri-Mix 2.0 Mixer Grinder, highlighting its powerful 350W motor, designed for efficient performance.

WARRANTY INFORMATION

The Prestige Nutri-Mix 2.0 Mixer Grinder comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, negligence, accident, alteration, or unauthorized repair.

Advertisements

Please retain your purchase receipt as proof of purchase for warranty claims.

CUSTOMER SUPPORT

For any queries, service requests, or technical assistance, please contact Prestige customer support:

- **Manufacturer:** TTK PRESTIGE LIMITED
- **Registered Office:** PLOT NO. 38. SIPCOT INDUSTRIAL COMPLEX, HOSUR- 635126, INDIA
- Please refer to the official Prestige website or your purchase documentation for the most current contact details (phone number, email, etc.).

Advertisements