

Manuals.plus / > AGARO / > AGARO Royal Milk Frother (Model 34052) Instruction Manual

AGARO 34052

Sign in to save this manual Sign in to bookmark this manual and keep private notes.

AGARO Royal Milk Frother (Model 34052) Instruction Manual

Your guide to perfect frothing and whisking.

Advertisements

1. INTRODUCTION

The AGARO Royal Milk Frother is a versatile 3-speed electric frother designed for creating rich foam for coffee and milk, as well as efficiently whisking eggs. Its rechargeable design ensures convenience for daily use.



Image 1: AGARO Royal Milk Frother with attachments and a frothed beverage.

Advertisements



2. WHAT'S IN THE BOX

Your AGARO Royal Milk Frother package includes the following components:

- Main Frother Unit (Handle)
- Double-layered Milk Frother Head
- Egg Whisk Head
- Charging Cable (USB-C)
- Stand

3. PRODUCT FEATURES

- **Versatile Attachments:** Includes a double-layered milk frother head for beverages and an egg whisk head for whisking eggs or cream.
- **3 Adjustable Speeds:** Choose between Low, Medium, and High speeds to achieve desired consistency.
- **Durable Construction:** The frother wand and whisking heads are made from high-quality stainless steel.
- **Rechargeable:** Equipped with a built-in battery and USB-C charging for cordless convenience.
- **Waterproof Design:** The device features a waterproof rating, allowing for easy rinsing and cleaning.
- **Quiet Operation:** Engineered for minimal noise during use.

4. SETUP

4.1 Attaching the Whisk/Frother Head

1. Select the desired attachment (milk frother or egg whisk).
2. Align the attachment's shaft with the opening at the top of the main frother unit.
3. Gently push the attachment firmly into the unit until it clicks securely into place.



Image 2: Visual guide for attaching the head and initial use.

4.2 Charging the Device


Before first use, fully charge the frother. The device is rechargeable via a USB-C port.

1. Locate the USB-C charging port, usually at the bottom or top of the handle, often protected by a rubber cover.
2. Connect the provided USB-C cable to the frother and the other end to a compatible USB power source (e.g., wall adapter, computer USB port).
3. An indicator light will typically show the charging status. Refer to the specifications for estimated charging time.



**USB
Rechargeable**
Works up to **4** hours
in a single recharge

Image 3: USB-C charging port on the frother.

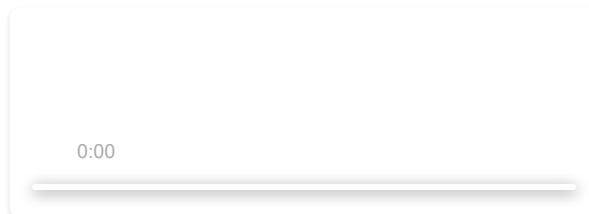

Video 1: Demonstrates switching between mixing heads, Type-C fast charging, one-click start, whisking eggs, frothing milk, and the waterproof feature.

5. OPERATING INSTRUCTIONS

5.1 Power ON/OFF and Speed Selection

- To turn the frother ON, press the power button once.
- To change the speed mode (Low, Medium, High), press the power button repeatedly.
- To turn the frother OFF, press and hold the power button for approximately 3 seconds.



Image 4: Illustration of the 3-speed settings and control button.

5.2 Frothing Milk

1. Attach the double-layered milk frother head to the main unit.
2. Pour cold or warm milk into a suitable container. For best results, use a narrow, tall container.
3. Insert the frother head into the milk, ensuring it is submerged but not touching the bottom.
4. Press the power button to turn on the frother and select your desired speed.
5. Move the frother up and down gently to create foam. Continue until the desired consistency is achieved.
6. Turn off the frother and remove it from the milk.




Image 5: Frothing milk for coffee.

5.3 Whisking Eggs or Cream

1. Attach the egg whisk head to the main unit.
2. Place eggs or cream in a bowl.
3. Insert the whisk head into the ingredients.
4. Press the power button to turn on the frother and select your desired speed.
5. Whisk until the desired consistency is achieved.
6. Turn off the frother and remove it from the bowl.



Image 6: Whisking eggs with the egg whisk attachment.

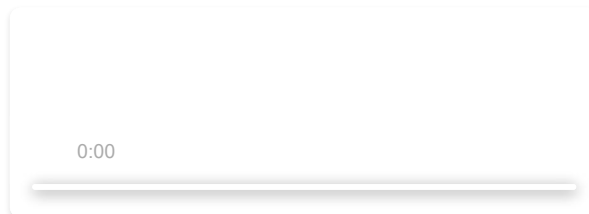

Video 2: Demonstrates stepless speed control for mixing matcha, milk, eggs, coffee, and cream, highlighting effortless cleaning and detachable whisk.

Advertisements

6. MAINTENANCE & CLEANING

Proper maintenance ensures the longevity and hygiene of your AGARO Royal Milk Frother.

- **Detachable Heads:** The whisk and frother heads are detachable for easy cleaning. Simply pull them out from the main unit.
- **Hand Wash Only:** The manufacturer recommends hand washing the attachments. Use warm, soapy water and rinse thoroughly.
- **Waterproof Handle:** The main unit is waterproof, allowing for easy rinsing under running water. Ensure the charging port cover is securely closed before rinsing.
- **Drying:** Allow all parts to air dry completely before reassembling or storing.

7. TROUBLESHOOTING

If you encounter any issues with your frother, please refer to the following common solutions:

Advertisements

- **Frother not turning on:** Ensure the device is fully charged. Connect it to the USB-C charger and check the indicator light.
- **Weak frothing/whisking:** Check the battery level. A low battery can reduce motor power. Ensure the attachment is securely fitted.
- **Attachments not spinning:** Verify that the attachment is correctly inserted and fully engaged with the motor shaft.
- **Device not charging:** Ensure the USB-C cable is properly connected to both the frother and the power source. Try a different USB power adapter if available.

For further assistance, please contact AGARO customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	AGARO
Model Name	Royal
Item Model Number	34052
Special Feature	Rechargeable
Material	Stainless Steel
Recommended Uses	Frothing
Included Components	Battery, Stand, Whisk
Item Weight	138 Grams (4.9 ounces)
Product Dimensions	1.5 x 1.18 x 9.76 inches
Power Source	Battery Powered
Number of Settings	3
Product Care Instructions	Hand Wash Only

© 2024 AGARO. All rights reserved.

Advertisements

Advertisements