

Havells Prolife LUXURIA

Havells Air Fryer Prolife LUXURIA

5.5L CAPACITY DIGITAL TOUCH PANEL AIR FRYER

[Important Safeguards](#) [Product Overview](#) [Specifications](#) [Setup](#) [Operating](#)
[Instructions](#) [Cleaning & Maintenance](#) [Troubleshooting](#) [Warranty & Support](#)

1. Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before use.

- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep the appliance and its cord out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Hot air is released through the air outlet opening during operation. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
- The surfaces may become hot during use. Do not touch hot surfaces. Use handles or knobs.
- This appliance is intended for household use only.

2. Product Overview

The Havells Air Fryer Prolife LUXURIA is designed for healthy cooking with minimal oil. It features a digital touch control panel for easy operation.



This image displays the Havells Air Fryer Prolife LUXURIA in black, featuring a digital touch control panel on the front. The dimensions are indicated as 36cm (depth) x 36cm (width) x 42cm (height).

Components:

- **Main Unit:** The primary housing of the air fryer, containing the heating element and fan.
- **Digital Touch Control Panel:** Located on the front, used for setting temperature, time, and selecting pre-set menus.
- **5.5L Frying Pan:** The outer pan that holds the frying basket.
- **Frying Basket:** The inner basket where food is placed for cooking.
- **Handle:** For safely pulling out the frying pan and basket.
- **Air Inlet & Outlet:** For proper air circulation during operation.

3. Specifications

Feature	Value
Model Name	Prolife LUXURIA
Capacity	5.5 litres
Wattage	1700 Watts
Max Temperature Setting	200 Degrees Celsius
Timer	Up to 60 minutes
Control Method	Digital Touch
Special Feature	Temperature Control, 7 Auto Pre-set Menu, Preheat Function, Auto Shut-Off
Product Dimensions (D x W x H)	36D x 36W x 42H Centimeters
Material	ABS plastic
Color	Black
Net Quantity	1.00 Count
Included Components	1 N Main Unit, 1 N Pan (5.5L), 1 N Frying Basket, 1 N Recipe Book

4. Setup and First Use

4.1 Unpacking

- Remove all packaging materials, stickers, and labels from the appliance.
- Check that all components listed in the 'Included Components' section are present.

4.2 Initial Cleaning

- Clean the frying pan and basket thoroughly with hot water, some dishwashing liquid, and a non-abrasive sponge.
- Wipe the inside and outside of the appliance with a moist cloth.
- Ensure all parts are completely dry before use.

4.3 Placement

- Place the appliance on a stable, horizontal, and level surface. Do not place the appliance on non-heat-resistant surfaces.
- Ensure there is adequate ventilation around the air fryer (at least 10 cm clearance on all sides and top).
- Plug the power cord into a grounded wall outlet.

5. Operating Instructions

5.1 Preparing for Cooking

1. Carefully pull the frying pan out of the air fryer.

2. Place the ingredients into the frying basket. Do not fill the basket beyond the MAX indication.
3. Slide the frying pan back into the air fryer. Ensure it is fully closed.

5.2 Using the Digital Touch Panel

The digital touch panel allows precise control over cooking settings.

- **Power Button:** Press to turn the appliance on/off.
- **Temperature Control:** Use the temperature up/down arrows to adjust the cooking temperature (up to 200°C).
- **Timer Control:** Use the timer up/down arrows to set the cooking time (up to 60 minutes).
- **Pre-set Menus:** Select from 7 auto pre-set menus for common dishes. Each pre-set has a default time and temperature, which can be adjusted manually.
- **Preheat Function:** The appliance includes a preheat function for optimal cooking results.

5.3 Cooking Process

1. Plug in the air fryer. The display will light up.
2. Place food in the frying basket.
3. Set the desired temperature and time using the touch controls, or select a pre-set menu.
4. Press the start button to begin cooking.
5. During cooking, you may pull out the pan to shake the ingredients for even cooking. The air fryer will pause automatically and resume when the pan is reinserted.
6. When the set time has elapsed, the air fryer will automatically shut off and beep.
7. Carefully pull out the pan and empty the contents. Use tongs to remove food.

5.4 Tips for Air Frying

- For best results, add a small amount of oil (1-2 tablespoons) to fresh ingredients.
- Shake smaller ingredients halfway through the cooking time to ensure even cooking.
- Use oven-safe dishes or molds if cooking delicate items.
- The air fryer can also be used to reheat food.

6. Cleaning and Maintenance

Clean the appliance after every use.

6.1 Before Cleaning

- Unplug the appliance and allow it to cool down completely before cleaning.

6.2 Cleaning the Frying Pan and Basket

- The frying pan and basket have a non-stick coating. Do not use metal kitchen utensils or abrasive cleaning materials to clean them, as this may damage the coating.
- Clean them with hot water, dishwashing liquid, and a non-abrasive sponge.
- For stubborn dirt, soak the pan and basket in hot water with some dishwashing liquid for approximately 10 minutes.

6.3 Cleaning the Main Unit

- Wipe the outside of the appliance with a moist cloth.
- Never immerse the main unit in water or any other liquid.
- Clean the heating element with a cleaning brush to remove any food residues.

7. Troubleshooting

Problem	Possible Cause	Solution
The air fryer does not work.	The appliance is not plugged in.	Plug the main plug into a grounded wall socket.
	The frying pan is not placed in the appliance correctly.	Slide the frying pan into the appliance correctly.
Food is not cooked evenly.	Some types of food need to be shaken halfway through the cooking time.	Shake the ingredients halfway through the cooking time.
White smoke comes out of the appliance.	Fat residues from previous use are burning.	Clean the frying pan and basket thoroughly after each use.
	The basket contains too much oil.	Remove excess oil from the basket.

8. Warranty and Support

The Havells Air Fryer Prolife LUXURIA comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use.

For warranty claims, technical support, or any product-related inquiries, please contact Havells customer service. Keep your purchase receipt as proof of purchase.

You can find contact information for Havells customer support on their official website or through your local retailer.