

[Manuals.plus](#) /

> [NINJA](#) /

> Ninja Double Stack Air Fryer, 2 Drawer Vertical Oil Free Deep Fryer, 4 Cooking Levels, 2 Drawers and 2 Racks, Compact Design, 7.6L Capacity, 6 Cooking Functions, 6 Portions, Black SL300EU

NINJA SL300EU

Ninja Double Stack Air Fryer User Manual

Model: SL300EU

Brand: NINJA

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Ninja Double Stack Air Fryer. Please read all instructions carefully before first use and retain this manual for future reference.

The Ninja Double Stack Air Fryer is designed for versatile cooking with its compact vertical design and dual drawers. It features 6 cooking functions and a 7.6L capacity, suitable for preparing meals for up to 6 people.

PRODUCT OVERVIEW



Figure 1: Front view of the Ninja Double Stack Air Fryer. The appliance is black with two vertical drawers, each featuring a silver handle. On the right side, a digital control panel displays time and temperature, along with buttons for various cooking functions like Air Fry, Max Crisp, Roast, Bake, Dehydrate, and Reheat. It also includes 'Sync' and 'Match' functions for dual-zone cooking, and power/start-stop buttons.

Components:

- Main Unit (with control panel)

- 2 x 3.8L Cooking Drawers
- 2 x Crisper Plates (Baking Plates)
- 2 x Double Stack Racks

SETUP AND FIRST USE

Unpacking:

1. Remove all packaging materials, including any stickers or labels.
2. Inspect the unit and accessories for any damage. Do not operate if damaged.

Initial Cleaning:

- Wash the cooking drawers, crisper plates, and double stack racks in warm, soapy water. Rinse thoroughly and dry completely.
- Wipe the main unit with a damp cloth. Do not immerse the main unit in water.

Placement:

- Place the air fryer on a clean, dry, level, and heat-resistant surface.
- Ensure there is adequate space around the unit for proper ventilation.
- Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Control Panel Overview:

The control panel features a digital display for time and temperature, drawer selection buttons (1 and 2), cooking function buttons, and control buttons for temperature, time, Sync, Match, Power, and Start/Stop.

Cooking Functions:

- **AIR FRY:** For crispy results with little to no oil.
- **MAX CRISP:** Ideal for foods requiring maximum crispiness.
- **ROAST:** For tender meats and roasted vegetables.
- **BAKE:** Perfect for baking cakes, pastries, and more.
- **DEHYDRATE:** To remove moisture from foods for snacks like jerky or dried fruit.
- **REHEAT:** To warm up leftovers without overcooking.

Using Dual Drawers (SYNC & MATCH):

- **SYNC:** Allows different foods to finish cooking at the same time across both drawers, even with different settings.
- **MATCH:** Applies the same cooking settings (function, temperature, time) to both drawers.

General Operation Steps:

1. Place food in the cooking drawer(s) with the crisper plate inserted. Use the double stack racks for multi-level cooking.
2. Insert the drawer(s) into the main unit.
3. Press the Power button () to turn on the unit.
4. Select the desired drawer (1 or 2) or use SYNC/MATCH for both.

5. Choose a cooking function (e.g., AIR FRY).
6. Adjust the temperature using the TEMP buttons and time using the TIME buttons.
7. Press START/STOP to begin cooking.
8. The unit will beep when cooking is complete. Carefully remove the drawers and food.

MAINTENANCE AND CLEANING

Cleaning After Each Use:

- Unplug the unit and allow it to cool completely before cleaning.
- The cooking drawers, crisper plates, and double stack racks are dishwasher safe. Alternatively, wash them in warm, soapy water using a non-abrasive sponge.
- For stubborn food residue, soak parts in warm, soapy water before cleaning.
- Wipe the exterior of the main unit with a clean, damp cloth. Do not use abrasive cleaners or scouring pads.
- Ensure all parts are completely dry before storing.

Storage:

Store the air fryer in a cool, dry place. Ensure the power cord is neatly wrapped and secured.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outlet issue.	Ensure power cord is securely plugged into a working outlet. Check circuit breaker.
Food not cooking evenly.	Overcrowding; insufficient shaking/flipping.	Do not overcrowd drawers. Shake or flip food halfway through cooking.
White smoke coming from unit.	Grease/oil residue; high-fat food.	Clean drawers and crisper plates thoroughly. For high-fat foods, use a small amount of water in the drawer to prevent smoke.
"E" error code on display.	Internal malfunction.	Unplug the unit, wait 10 minutes, then plug back in. If error persists, contact customer support.

SPECIFICATIONS

- **Model Number:** SL300EU
- **Capacity:** 7.6 liters (2 x 3.8L drawers)
- **Power/Wattage:** 1550 watts
- **Voltage:** 2.3E+2 Volts (AC)
- **Product Dimensions:** 42D x 28W x 38H Centimetres
- **Item Weight:** 10.9 kg
- **Colour:** Black
- **Special Features:** Dual Zone Features, Temperature Control, Timer, Programmable, SYNC & MATCH
- **Manufacturer:** Ninja

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Ninja website. Keep your purchase receipt as proof of purchase for warranty claims.

Online Resources: [Visit the Ninja Store on Amazon](#)